# Crescendo

# Instruction and Reference Guide

**Model BLCR** 



To register your machine warranty and receive Baby Lock product updates and offers, go to <u>babylock.com/profile</u>. If you have questions with registration, visit your Authorized Baby Lock Retailer.

Baby Lock Consumer Helpline: 800-313-4110 www.babylock.com

## **TRADEMARKS**

#### **IMPORTANT:**

#### READ BEFORE DOWNLOADING, COPYING, INSTALLING OR USING.

By downloading, copying, installing or using the software you agree to this license. If you do not agree to this license, do not download, install, copy or use the software.

#### **Intel License Agreement For Open Source Computer Vision Library**

Copyright © 2000, Intel Corporation, all rights reserved. Third party copyrights are property of their respective owners.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistribution's of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistribution's in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name of Intel Corporation may not be used to endorse or promote products derived from this software without specific prior written permission.

This software is provided by the copyright holders and contributors "as is" and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall Intel or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

All information provided related to future Intel products and plans is preliminary and subject to change at any time, without notice.

SD is a registered trademark or a trademark of SD-3C, LLC.

CompactFlash is a registered trademark or a trademark of Sandisk Corporation.

Memory Stick is a registered trademark or a trademark of Sony Corporation.

SmartMedia is a registered trademark or a trademark of Toshiba Corporation.

MultiMediaCard (MMC) is a registered trademark or a trademark of Infineon Technologies AG.

xD-Picture Card is a registered trademark or a trademark of Fuji Photo Film Co. Ltd.

IBM is a registered trademark or a trademark of International Business Machines Corporation.

Microsoft, Windows and Windows Vista are registered trademarks or trademarks of Microsoft Corporation.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brands and product names mentioned in this manual are registered trademarks of their respective companies. However, the explanations for markings such as  $^{\circ}$  and  $^{\top}$  are not clearly described within the text.

## **INTRODUCTION**

Thank you for purchasing this machine. Before using this machine, carefully read the "IMPORTANT SAFETY INSTRUCTIONS", and then study this manual for the correct operation of the various functions. In addition, after you have finished reading this manual, store it where it can quickly be accessed for future reference.

## **IMPORTANT SAFETY INSTRUCTIONS**

Please read these safety instructions before attempting to use the machine.

## **ADANGER** - To reduce the risk of electrical shock

f 1 Always unplug the machine from the electrical outlet immediately after using, when cleaning, making any user servicing adjustments mentioned in this manual, or if you are leaving the machine unattended.

## **AWARNING** - To reduce the risk of burns, fire, electrical shock, or injury to

persons.

- f 2 Always unplug the machine from the electrical outlet when making any adjustments mentioned in the instruction manual.
- To unplug the machine, switch the machine to the symbol "O" position to turn it off, then grasp the plug and pull it out of the electrical outlet. Do not pull on the cord.
- Plug the machine directly into the electrical outlet. Do not use an extension cord.
- Always unplug your machine if the power is cut.

## **3** Electrical Hazards:

- This machine should be connected to an AC power source within the range indicated on the rating label. Do not connect it to a DC power source or inverter. If you are not sure what kind of power source you have, contact a qualified electrician.
- This machine is approved for use in the country of purchase only.
- 4 Never operate this machine if it has a damaged cord or plug, if it is not working properly, has been dropped or damaged, or water is spilled on the unit. Return the machine to the nearest authorized retailer for examination, repair, electrical or mechanical adjustment.
- While the machine is stored or in use if you notice anything unusual, such as an odor, heat, discoloration or deformation, stop using the machine immediately and unplug the power cord.
- When transporting the sewing machine, be sure to carry it by its handle. Lifting the sewing machine by any other part may damage the machine or result in the machine falling, which could cause injuries.
- When lifting the sewing machine, be careful not to make any sudden or careless movements, otherwise you may injure your back or knees.

## **5** Always keep your work area clear:

- Never operate the machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the build up of lint, dust, and loose cloth.
- Do not store objects on the foot controller.
- Do not use extension cords. Plug the machine directly into the electrical outlet.
- Never drop or insert foreign objects into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the machine near a heat source, such as a stove or iron; otherwise, the machine, power cord or garment being sewn may ignite, resulting in fire or an electric shock.
- Do not place this sewing machine on an unstable surface, such as an unsteady or slanted table, otherwise the sewing machine may fall, resulting in injuries.

## **6** Special care is required when sewing:

- Always pay close attention to the needle. Do not use bent or damaged needles.
- Keep fingers away from all moving parts. Special care is required around the machine needle.
- Switch the sewing machine to the symbol "O" position to turn it off when making any adjustments in the needle area.
- Do not use a damaged or incorrect needle plate, as it could cause the needle to break.
- Do not push or pull the fabric when sewing, and follow careful instruction when free motion stitching so that you do not deflect the needle and cause it to break.

### 7 This machine is not a toy:

- Your close attention is necessary when the machine is used by or near children.
- The plastic bag that this sewing machine was supplied in should be kept out of the reach of children or disposed of. Never allow children to play with the bag due to the danger of suffocation.
- Do not use outdoors.

### **8** For a longer service life:

- When storing this machine, avoid direct sunlight and high humidity locations. Do not use or store the machine near a space heater, iron, halogen lamp, or other hot objects.
- Use only neutral soaps or detergents to clean the case. Benzene, thinner, and scouring powders can damage the case and machine, and should never be used.
- Always consult the operation manual when replacing or installing any assemblies, the presser feet, needle, or other parts to assure correct installation.

## **9** For repair or adjustment:

- If the light unit is damaged, it must be replaced by an authorized retailer.
- In the event a malfunction occurs or adjustment is required, first follow the troubleshooting table in the back of the operation manual to inspect and adjust the machine yourself. If the problem persists, please consult your local authorized Baby Lock retailer.

Use this machine only for its intended use as described in the manual.

Use accessories recommended by the manufacturer as contained in this manual.

Use only the interface cable (USB cable) included with this machine.

Use only a mouse designed specifically for this machine.

Use only the sensor pen included with this machine.

The contents of this manual and specifications of this product are subject to change without notice.

For additional product information and updates, visit our website at www.babylock.com

## SAVE THESE INSTRUCTIONS This machine is intended for household use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## FOR USERS IN THE UK, EIRE, MALTA AND CYPRUS ONLY

### **IMPORTANT**

- In the event of replacing the plug fuse, use a fuse approved by ASTA to BS 1362, i.e. carrying the mark, rating as marked on plug.
- Always replace the fuse cover. Never use plugs with the fuse cover omitted.
- If the available electrical outlet is not suitable for the plug supplied with this equipment, you should contact your authorized retailer to obtain the correct lead.

## Federal Communications Commission (FCC) Declaration of Conformity (For USA Only)

Responsible Party: Tacony Corporation

1760 Gilsinn Lane,

Fenton, Missouri 63026 USA

declares that the product

Product Name: Baby Lock Sewing Machine

Model Number: BLCR

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the retailer or an experienced radio/TV technician for help.
- The included interface cable should be used in order to ensure compliance with the limits for a Class B digital device.
- Changes or modifications not expressly approved by Tacony Corporation could void the user's authority to
  operate the equipment.

 
## Laser Notices (For U.S.A. only)

#### **Laser Safety**

This sewing machine is certified as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the sewing machine does not produce hazardous laser radiation.

#### **IEC 60825-1 Specification**

This sewing machine is a Class 1 laser product as defined in IEC 60825-1:2007 specifications.



The laser beam emitted by the laser unit installed in this machine is restricted to an output at a safe level. However, the machine contains 7-milliwat, 650-660nanometer wavelength, 6-12 degree at parallel divergence angle, 24-34 degree at perpendicular divergence angle, InGaAIP laser diodes. Therefore, eye damage may result from disassembling or altering this machine. Safety precautions have been designed to prevent any possible laser beam exposure to the operator.

### **FDA Regulations**

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown on the back of the sewing machine indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

Tacony Corporation 1760 Gilsinn Lane Fenton, Missouri 63026, U.S.A.

This product complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

 
## **A** CAUTION

• Use of controls, adjustments or the performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

## Laser Notices (For countries except U.S.A.)

### **IEC 60825-1 Specification**

This sewing machine is a Class 1 laser product as defined in IEC 60825-1:2007 specifications.



The laser beam emitted by the laser unit installed in this machine is restricted to an output at a safe level. However, the machine contains 7-milliwat, 650-660nanometer wavelength, 6-12 degree at parallel divergence angle, 24-34 degree at perpendicular divergence angle, InGaAIP laser diodes. Therefore, eye damage may result from disassembling or altering this machine. Safety precautions have been designed to prevent any possible laser beam exposure to the operator.

## **A** CAUTION

- This sewing machine has a Class 3B Laser Diode in the Laser Unit. The Laser Unit should not be opened under any circumstances.
- Use of controls, adjustments or the performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

## **OUTSTANDING FEATURES**

## Useful Sensor Function - Variety of Functions

When sewing, you can easily specify the guideline marker position, the needle drop position, the width/LR shift of the stitch and sewing end point, using the sensor pen.

See "USING SENSOR FUNCTIONS WITH SEWING STITCH" on page B-66.


## **Setting Laser Guideline Marker** as a Sewing Position Guide

The guideline marker shows the sewing position. You can adjust the sewing position by moving the guideline marker while checking the guideline marker on the fabric. You don't need to look for the needle drop point to check the sewing position.

Other various adjustments are available using the guideline marker.

See "USING SENSOR FUNCTIONS WITH SEWING STITCH" on page B-66.

## **Expanding Your Creativity with Dual Feed Foot**

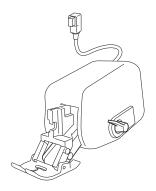

Do you feel like trying a new material, like thin fabric or nylon fabric?

Included dual feed foot works very effectively when sewing those difficult materials. This foot also works effectively when you sew different types of materials together, like thin fabric with thick fabric. You can adjust the feed length for the various fabric types.

See "Using the Dual Feed Foot" on page B-55.

## WHAT YOU CAN DO WITH THIS MACHINE

## **B** Basic operations

After purchasing your machine, be sure to read this section first. This section provides details on the initial setup procedures as well as descriptions of this machine's more useful functions.

## Chapter 1 Getting Ready

To learn the operation of the principal parts and the screens

**Page B-18** 

## Chapter 2 Sensor Functions

Try the new function using the supplied sensor pen  $Page\ B-60$ 

## **S** Sewing

This section describes procedures for using the various utility stitches as well as other functions. It provides details on basic machine sewing in addition to the more expressive features of the machine, from sewing tubular pieces and buttonholes to sewing the character and decorative stitch patterns and decorative bobbin work.

## **Chapter 1** Sewing Basics

To learn how to prepare for sewing and basic sewing operations

Page S-2

## **Chapter 3** Character/Decorative Stitches

The variety of stitches widen your creativity Page S-76

### Chapter 2 Utility Stitches

Pre-programmed with more than 100 frequently used stitches

Page S-20

## **Chapter 4** How to Create Bobbin Work (Sewing)

Wind medium to heavy weight thread on a bobbin for three-dimensional appearance.

**Page S-104** 

## A Appendix

This section provides important information for operating this machine.

## **Chapter 1** Maintenance and Troubleshooting

Find troubleshooting tips and pointers as well as how to keep your machine in the best working condition.  $Page\ A-2$ 

## CONTENTS

	TRADEMARKS INTRODUCTION
	FUNCTIONS       11         Machine       11         Needle and Presser Foot Section       12         Operation Buttons       13         Using the Flat Bed Attachment       13         Included Accessories       14         Options       15
В	
Ch	napter1 Getting Ready 18
	TURNING THE MACHINE ON/OFF 19
	Setting Your Machine for the First Time
	LCD SCREEN
	Using the Machine Setting Mode Key
	Using the Sewing Machine Help Key
	Using the Operation Guide Function
	Using the Pattern Explanation Function
	LOWER THREADING
	Winding the Bobbin
	Setting the Bobbin
	Pulling Up the Bobbin Thread
	UPPER THREADING 42
	Upper Threading 42
	Using the Twin Needle Mode
	Using Threads that Unwind Quickly
	CHANGING THE PRESSER FOOT 49
	Removing the Presser Foot
	Attaching the Presser Foot
	Attaching the Presser Foot with the Included Adapter 49
	CHANGING THE NEEDLE51
	ABOUT THE NEEDLE AND FABRIC 53
	About the Needle
	Fabric/Thread/Needle Combinations
	USING FUNCTIONS BY CONNECTING THE
	ACCESSORY TO THE MACHINE54
	Using USB Media
	Connecting the Machine to the Computer
	Using a USB Mouse
	Using the Dual Feed Foot
Ch	napter2 Sensor Functions 60
	CONVENIENT SEWING FEATURES BY USING
	THE SENSOR PEN61
	CONNECTING THE SENSOR PEN 61
	Using the Sensor Pen Holder
	USING THE SENSOR PEN 63
	Using the Sensor Pen
	Important Information about Sensor Pen
	Calibrating the Sensor Pen
	USING SENSOR FUNCTIONS WITH SEWING
	STITCH
	Sensor Function Area
	Specifying the Guideline Marker Position With the Sensor Pen 66
	Specifying the Needle Drop Position With the Sensor Pen 68
	Transfer of the control of the contr

	e Sensor Pen to Specify the Stitching Width and
	sition
	•
Sew	ving
Sharata ad	Continu Bodina
	Sewing Basics 2
	3 3
	Stitch
	Reinforcement Stitches
	c Reinforcement Stitching
0	g Sewing Direction
	Heavyweight Fabrics
	Hook-and-Loop Fastener 8
Sewing L	ightweight Fabrics
	tretch Fabrics
	SETTINGS 10
	ne Stitch Width
	ne Stitch Length
	ne "L/R SHIFT"
	FUNCTIONS
	ic Thread Cutting
	g the Needle Drop Position with the Guideline
	For models equipped with the guideline marker) 14
Using the	e Knee Lifter
	c Fabric Sensor System (Automatic Presser Foot
	he Screen 18
_	the Screen
Chapter2	Utility Stitches 20
Chapter2 SELECTI	Utility Stitches 20 NG UTILITY STITCHES 21
Chapter2 SELECTI Selecting	Utility Stitches20NG UTILITY STITCHES21a Stitch21
Chapter2 SELECTI Selecting Saving Yo	Utility Stitches20NG UTILITY STITCHES21a Stitch21our Stitch Settings22
Chapter2  SELECTI  Selecting Saving You SEWING	Utility Stitches         20           NG UTILITY STITCHES         21           a Stitch         21           our Stitch Settings         22           THE STITCHES         24
SELECTI Selecting Saving Y SEWINC Straight S	Utility Stitches20NG UTILITY STITCHES21a Stitch21our Stitch Settings22
SELECTI Selecting Saving You SEWING Straight S Dart Seal	Utility Stitches       20         NG UTILITY STITCHES       21         a Stitch       21         our Stitch Settings       22         THE STITCHES       24         Stitches       24
SELECTI Selecting Saving Y SEWINC Straight S Dart Seal Gatherin Flat Fell S	Utility Stitches         20           NG UTILITY STITCHES         21           ga Stitch         21           our Stitch Settings         22           G THE STITCHES         24           bittches         24           m         28           g         29           Seam         29
SELECTI Selecting Saving Y SEWINC Straight S Dart Seal Gatherin Flat Fell S Pintuck	Utility Stitches         20           NG UTILITY STITCHES         21           Ja Stitch         21           Sour Stitch Settings         22           G THE STITCHES         24           Stitches         24           Im         28           g         29           Seam         29           30         30
SELECTI Selecting Saving You SEWING Straight S Dart Seal Gatherin Flat Fell S Pintuck Zigzag Si	Utility Stitches       20         NG UTILITY STITCHES       21         Ja Stitch       21         Jour Stitch Settings       22         G THE STITCHES       24         Journal Stitches       24         Journal Stitches       24         Journal Stitches       24         Journal Stitches       29         Journal Stitches       31         Journal Stitches       31
SELECTI Selecting Saving Y: SEWINC Straight S Dart Sear Gatherin Flat Fell S Pintuck Zigzag St Elastic Zi	Utility Stitches         20           NG UTILITY STITCHES         21           Ja Stitch         21           Sour Stitch Settings         22           THE STITCHES         24           Stitches         24           M         28           g         29           Seam         29           citches         31           gzag Stitches         33
SELECTI Selecting Saving Y: SEWINC Straight S Dart Sear Gatherin Flat Fell S Pintuck Zigzag SI Elastic Zi Overcast	Utility Stitches         20           NG UTILITY STITCHES         21           Ja Stitch         21           Sour Stitch Settings         22           THE STITCHES         24           Stitches         24           M         28           g         29           Seam         29           Sitches         31           gzag Stitches         33           ing         33
SELECTI Selecting Saving You SEWING Straight S Dart Seal Gatherin Flat Fell S Pintuck Zigzag St Elastic Zi Overcast Quilting.	Utility Stitches         20           NG UTILITY STITCHES         21           Ja Stitch         21           Jour Stitch Settings         22           G THE STITCHES         24           Stitches         24           Jame         28           Jame         29           Jame         30           Litches         31           Jame         33           Litches         33           Jame         33
SELECTI Selecting Saving You SEWING Straight S Dart Sear Gatherin Flat Fell S Pintuck Zigzag St Elastic Zi Overcast Quilting. Blind He Appliqué	Utility Stitches         20           NG UTILITY STITCHES         21           Ja Stitch         21           Jour Stitch Settings         22           GITHE STITCHES         24           Stitches         24           Jame         28           Jame         29           Jame         30           Litches         31           Jame         33           Litches         33           Jame         33           Jame         33           Jame         33           Jame         34           Jame         35           Jame         35           Jame         35           Materials         45           Jame         48
SELECTI Selecting Saving Y: SEWINC Straight S Dart Sear Gatherin Flat Fell S Pintuck Zigzag SI Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck	Utility Stitches       20         NG UTILITY STITCHES       21         Ja Stitch       21         Jour Stitch Settings       22         LEATHE STITCHES       24         In       28         In       29         Seam       29         Seam       29         Sittches       31         Ingzag Stitches       33         ing       33         m Stitches       45         Ing       48         Stitches       49
SELECTI Selecting Saving Y: SEWINC Straight S Dart Sear Gatherin Flat Fell S Pintuck Zigzag SI Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S	Utility Stitches         20           NG UTILITY STITCHES         21           Ja Stitch         21           our Stitch Settings         22           THE STITCHES         24           m         28           g         29           Seam         29           citches         31           gzag Stitches         33           ing         33           m Stitches         45           ing         48           Stitches         49           titches         50
SELECTI Selecting Saving Y SEWINC Straight S Dart Sea Gatherin Flat Fell S Pintuck Zigzag St Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu	Utility Stitches         20           NG UTILITY STITCHES         21           Is a Stitch         21           our Stitch Settings         22           IS THE STITCHES         24           Is titches         24           Is titches         29           Seam         29           Seam         30           Is titches         31           Ingzag Stitches         33           ing         33           m Stitches         45           Inguity         48           Inguity         50
SELECTI Selecting Saving Y SEWINC Straight S Dart Seal Gatherin Flat Fell S Pintuck Zigzag SI Elastic Zi Overcast Quilting Blind He Appliqué Shelltuck Scallop S Crazy Qu Smocking	Utility Stitches         20           NG UTILITY STITCHES         21           Is a Stitch         21           our Stitch Settings         22           ETHE STITCHES         24           titches         24           m         28           g         29           Seam         29           scitches         31           gzag Stitches         33           ing         33           m Stitches         45           stitches         49           stitches         49           stitches         50           uilting         50           g Stitches         51
SELECTI Selecting Saving Yo SEWING Straight S Dart Seal Gatherin, Flat Fell S Pintuck S Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smocking Fagoting	Utility Stitches       20         NG UTILITY STITCHES       21         Is a Stitch       21         our Stitch Settings       22         5 THE STITCHES       24         istitches       24         m       28         g       29         Seam       29         seam       31         gzag Stitches       33         ing       33         m Stitches       45         stitches       49         stitches       49         stitches       50         gilling       50         g Stitches       51         52
SELECTI Selecting Saving You SEWINC Straight S Dart Sean Gatherin Flat Fell S Pintuck Zigzag Si Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smocking Fagoting Tape or E	Utility Stitches         NG UTILITY STITCHES       21         Is a Stitch       21         our Stitch Settings       22         Earthe STITCHES       24         istitches       24         m       28         ge       29         Seam       29         Seam       31         gragag Stitches       33         ing       33         m Stitches       45         stitches       49         stitches       49         stitches       50         g Stitches       51         Elastic Attaching       52
SELECTI Selecting Saving Yo SEWING Straight S Dart Seal Gatherin, Flat Fell S Pintuck SI Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smocking Fagoting Tape or E Heirloon One-step	Utility Stitches         20           NG UTILITY STITCHES         21           Is a Stitch         21           our Stitch Settings         22           5 THE STITCHES         24           intitches         24           m         28           g         29           Seam         29           Seam         31           gzag Stitches         31           ing         33           m Stitches         45           stitches         45           stitches         49           stitches         50           g Stitches         51           stitches         51           stitches         52           stitches         51           stitches         51           stitches         52           stitches         51           stitches         52           stitches         53           Buttonholes         55
SELECTI Selecting Saving Yo SEWING Straight S Dart Sean Gatherin, Flat Fell S Pintuck Zigzag Si Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smockin; Fagoting Tape or E Heirloon One-step Darning.	Utility Stitches         20           NG UTILITY STITCHES         21           a Stitch         21           our Stitch Settings         22           5 THE STITCHES         24           stitches         24           m         28           g         29           Seam         29           scitches         31           ing         33           ing         33           m Stitches         45           stitches         45           stitches         49           stitches         50           stitches         51           stitches         52           stitches         53           stitches         55           stitches         55
SELECTI Selecting Saving Yo SEWING Straight S Dart Sear Gatherin, Flat Fell S Pintuck SI Elastic Zi Overcast Quilting, Blind He Appliqué Shelltuck Scallop S Crazy Qu Smockin; Fagoting Tape or E Heirloom One-step Darning, Bar Tack	Utility Stitches         NG UTILITY STITCHES       21         Is a Stitch       21         our Stitch Settings       22         Earthe STITCHES       24         intitches       24         m       28         g       29         Seam       29         Seam       30         intitches       31         gzag Stitches       33         ing       33         m Stitches       45         stitches       49         intitches       50         intitiches       50         stitches       51         Elastic Attaching       52         Elastic Attaching       52         Buttonholes       55         58       59
SELECTI Selecting Saving Yo SEWING Straight S Dart Seal Gatherin, Flat Fell S Pintuck SI Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smocking Fagoting Tape or E Heirloom One-step Darning. Bar Tack Button Se	Utility Stitches         20           NG UTILITY STITCHES         21           g a Stitch         21           our Stitch Settings         22           5 THE STITCHES         24           tittches         24           m         28           g         29           Seam         29           seam         31           gzag Stitches         31           ing         33           m Stitches         45           stitches         49           stitches         49           stitches         50           g Stitches         51           stitches         51           stitches         51           stitches         52           stitches         51           stitches         52           stitches         53           stitches         55           stitches         55           stitches         55           stitches         59           swing         61
SELECTI Selecting Saving Yo SEWING Straight S Dart Sean Gatherin Flat Fell S Pintuck Zigzag St Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smocking Fagoting Tape or E Heirloom One-step Darning. Bar Tack Button Se Eyelet	Utility Stitches         20           NG UTILITY STITCHES         21           a Stitch         21           our Stitch Settings         22           5 THE STITCHES         24           stitches         24           m         28           g         29           Seam         29           Seam         30           sitches         31           gzag Stitches         33           ing         33           m Stitches         45           stitches         45           stitches         50           silting         50           g Stitches         51           stitches         52           statiches         53           stitches         55           stitches         55           stitches         55           stitches         59           stitches         59
SELECTI Selecting Saving Yo SEWINC Straight S Dart Sean Gatherin, Flat Fell S Pintuck Zigzag Si Elastic Zi Overcast Quilting. Blind He Appliqué Shelltuck Scallop S Crazy Qu Smockin; Fagoting Tape or E Heirloom One-step Darning. Bar Tack Button Se Eyelet Multi-dire	Utility Stitches         20           NG UTILITY STITCHES         21           g a Stitch         21           our Stitch Settings         22           5 THE STITCHES         24           tittches         24           m         28           g         29           Seam         29           seam         31           gzag Stitches         31           ing         33           m Stitches         45           stitches         49           stitches         49           stitches         50           g Stitches         51           stitches         51           stitches         51           stitches         52           stitches         51           stitches         52           stitches         53           stitches         55           stitches         55           stitches         55           stitches         59           swing         61

Chapter3 Character/Decorative Stitches 76
SELECTING STITCH PATTERNS
Selecting Decorative Stitch Patterns/7mm Decorative Stitch Patterns/Satin Stitch Patterns/7mm Satin Stitch
Patterns/Cross Stitch/Utility Decorative Stitch Patterns
Characters
SEWING STITCH PATTERNS
Sewing Attractive Finishes
Making Adjustments
EDITING STITCH PATTERNS 84
Changing the Size
Creating a Vertical Mirror Image
Creating a Horizontal Mirror Image
Sewing a Pattern Continuously
Returning to the Beginning of the Pattern
Checking the Image
COMBINING STITCH PATTERNS
Combining Various Stitch Patterns
Combining Large and Small Stitch Patterns
Combining Horizontal Mirror Image Stitch Patterns 92
Combining Stitch Patterns of Different Length
(for 7mm Satin Stitch Patterns Only)
USING THE MEMORY FUNCTION
Stitch Data Precautions
Saving Stitch Patterns to USB Media
Saving Stitch Patterns in the Computer
Retrieving Stitch Patterns from the Machine's Memory
Recalling from the Computer
Chapter4 How to Create Bobbin Work
Chapter4 How to Create Bobbin Work (Sewing) 104
(Sewing) 104
(Sewing) 104 ABOUT BOBBIN WORK
(Sewing) 104
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115
(Sewing) 104  ABOUT BOBBIN WORK 105  PREPARING FOR BOBBIN WORK 105  Required Materials 105  Upper Threading 106  Preparing the Bobbin Thread 107  CREATING BOBBIN WORK 111  Positioning the Fabric and Sewing 111  Bobbin Work Free Motion Sewing 113  ADJUSTING THE THREAD TENSION 114  TROUBLESHOOTING 115
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115         Appendix         Chapter1 Maintenance and Troubleshooting 2         CARE AND MAINTENANCE       3         Restrictions on oiling       3
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115         Appendix         Chapter1 Maintenance and Troubleshooting       2         CARE AND MAINTENANCE       3         Restrictions on oiling       3         Precautions on storing the machine       3
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115         Appendix         Chapter1 Maintenance and Troubleshooting 2         CARE AND MAINTENANCE       3         Restrictions on oiling       3
(Sewing) 104  ABOUT BOBBIN WORK 105  PREPARING FOR BOBBIN WORK 105  Required Materials 105  Upper Threading 106  Preparing the Bobbin Thread 107  CREATING BOBBIN WORK 111  Positioning the Fabric and Sewing 111  Bobbin Work Free Motion Sewing 113  ADJUSTING THE THREAD TENSION 114  TROUBLESHOOTING 115  Appendix  Chapter 1 Maintenance and Troubleshooting 2  CARE AND MAINTENANCE 3  Restrictions on oiling 3  Precautions on storing the machine 3  Cleaning the LCD Screen 3  Cleaning the Machine Casing 3  Cleaning the Race 3
(Sewing) 104  ABOUT BOBBIN WORK 105  PREPARING FOR BOBBIN WORK 105  Required Materials 105  Upper Threading 106  Preparing the Bobbin Thread 107  CREATING BOBBIN WORK 111  Positioning the Fabric and Sewing 111  Bobbin Work Free Motion Sewing 111  ADJUSTING THE THREAD TENSION 114  TROUBLESHOOTING 115  Appendix  Chapter Maintenance and Troubleshooting 2  CARE AND MAINTENANCE 3  Restrictions on oiling 3  Precautions on storing the machine 3  Cleaning the LCD Screen 3  Cleaning the Machine Casing 3  Cleaning the Race 3  Cleaning the Cutter in the Bobbin Case Area 5
(Sewing) 104  ABOUT BOBBIN WORK 105  PREPARING FOR BOBBIN WORK 105  Required Materials 105  Upper Threading 106  Preparing the Bobbin Thread 107  CREATING BOBBIN WORK 111  Positioning the Fabric and Sewing 111  Bobbin Work Free Motion Sewing 111  ADJUSTING THE THREAD TENSION 114  TROUBLESHOOTING 115  Appendix  Chapter Maintenance and Troubleshooting 2  CARE AND MAINTENANCE 3  Restrictions on oiling 3  Precautions on storing the machine 3  Cleaning the LCD Screen 3  Cleaning the Machine Casing 3  Cleaning the Race 3  Cleaning the Cutter in the Bobbin Case Area 5  About the Maintenance Message 5
ABOUT BOBBIN WORK
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115         Appendix     Chapter 1 Maintenance and Troubleshooting 2  CARE AND MAINTENANCE  3 Restrictions on oiling  3 Precautions on storing the machine  3 Cleaning the LCD Screen  3 Cleaning the Machine Casing  3 Cleaning the Machine Casing  3 Cleaning the Race  3 Cleaning the Race  3 Cleaning the Cutter in the Bobbin Case Area  5 About the Maintenance Message  5 ADJUSTING THE SCREEN  6 Adjusting the Brightness of the Screen Display  6 Touch Panel is Malfunctioning  6
ABOUT BOBBIN WORK
(Sewing)       104         ABOUT BOBBIN WORK       105         PREPARING FOR BOBBIN WORK       105         Required Materials       105         Upper Threading       106         Preparing the Bobbin Thread       107         CREATING BOBBIN WORK       111         Positioning the Fabric and Sewing       111         Bobbin Work Free Motion Sewing       113         ADJUSTING THE THREAD TENSION       114         TROUBLESHOOTING       115         Appendix     Chapter 1 Maintenance and Troubleshooting 2  CARE AND MAINTENANCE  3 Restrictions on oiling  3 Precautions on storing the machine  3 Cleaning the LCD Screen  3 Cleaning the Machine Casing  3 Cleaning the Machine Casing  3 Cleaning the Race  3 Cleaning the Race  3 Cleaning the Cutter in the Bobbin Case Area  5 About the Maintenance Message  5 ADJUSTING THE SCREEN  6 Adjusting the Brightness of the Screen Display  6 Touch Panel is Malfunctioning  6


Incorrect thread tension	. 1
Fabric is caught in the machine and cannot be removed	. 1
List of Symptoms	. 1
ERROR MESSAGES	1
SPECIFICATIONS	19
<b>UPGRADING YOUR MACHINE'S SOFTWARE</b>	20
Upgrade Procedure Using USB Media	. 20
Upgrade Procedure Using Computer	2
INDEX	

## NAMES OF MACHINE PARTS AND THEIR FUNCTIONS

The names of the various parts of the sewing machine and their functions are described below. Before using the sewing machine, carefully read these descriptions to learn the names of the machine parts.

#### **Machine**

#### **■** Front View

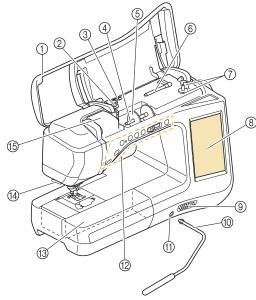

#### 1 Top cover

Open the top cover to thread the machine and wind the bobbin.

#### ② Pre-tension disk

Pass the thread around the pre-tension disk when winding the bobbin thread. (page B-34)

#### (3) Thread guide for bobbin winding

Pass the thread through this thread guide when winding the bobbin thread. (page B-34)

#### 4 Spool pin

Place a spool of thread on the spool pin. (page B-42)

#### (5) Spool cap

Use the spool cap to hold the spool of thread in place. (page B-42)

#### **6** Supplemental spool pin

Use this spool pin to wind the bobbin thread, or to sew with the twin needle. (page B-34, B-46)

#### 7 Bobbin winder

Use the bobbin winder when winding the bobbin. (page B-34)

#### LCD (liquid crystal display)

Settings for the selected stitch and error messages appear in the LCD. (page B-22)

#### 9 Speaker

#### **(10)** Knee lifter

Use the knee lifter to raise and lower the presser foot. (page S-15)

#### (f) Knee lifter slot

Insert the knee lifter into the slot. (page S-15)

## Operation buttons (7 buttons) and sewing speed controller

Use these buttons and the slide to operate the sewing machine. (page B-13)

#### (3) Flat bed attachment with accessory compartment

Store presser feet and bobbins in the accessory compartment of the flat bed attachment. When sewing cylindrical pieces, remove the flat bed attachment. (page B-13)


#### Thread cutter

Pass the threads through the thread cutter to cut them. (page B-44)

#### **5** Thread guide plate

Pass the thread around the thread guide plate when threading upper thread. (page B-42)

### ■ Right-side/Rear View

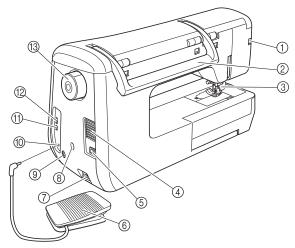

#### Connector for the dual feed foot

Connect the dual feed foot. (page B-55)

#### ② Handle

Carry the sewing machine by its handle when transporting the machine.

#### ③ Presser foot lever

Raise and lower the presser foot lever to raise and lower the presser foot. (page B-49)

#### Air vent

The air vent allows the air surrounding the motor to circulate. Do not cover the air vent while the sewing machine is being used.

#### **⑤** Main power switch

Use the main power switch to turn the sewing machine ON and OFF. (page B-19)

#### 6 Foot controller

Depress the foot controller to control the speed of the machine. (page S-4)

#### ⑦ Power cord receptacle

Insert the power cord into the machine receptacle. (page B-19)

#### Sensor pen holder connector

Connect the included sensor pen holder. The connector hole is covered with the protective cap when purchased. (page B-62)

#### 9 Sensor pen jack

Connect the sensor pen. (page B-61)

#### Foot controller jack

Insert the foot controller plug into its jack on the machine. (page S-4)

#### ① USB port for computer

In order to import/export patterns between a computer and the machine, plug the USB cable into the USB port. (page B-54, S-98)


#### 12 USB port for mouse / media

In order to send patterns from/to USB media, plug the USB media directly into the USB port. (page B-54, S-97) Connect the USB mouse to operate with mouse. (page B-54)

#### (3) Handwheel

Rotate the handwheel toward you (counterclockwise) to raise and lower the needle. The wheel should be turned toward the front of the machine.

### **Needle and Presser Foot Section**

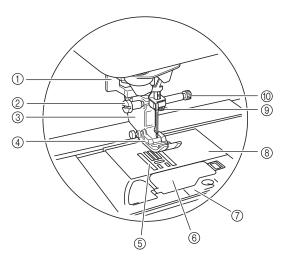

#### 1 Buttonhole lever

The buttonhole lever is used with the one-step buttonhole foot to create buttonholes. (page S-55)

#### ② Presser foot holder screw

Use the presser foot holder screw to hold the presser foot in place. (page B-49)

#### ③ Presser foot holder

The presser foot is attached to the presser foot holder. (page B-49)

#### (4) Presser foot

The presser foot consistently applies pressure to the fabric as sewing takes place. Attach the appropriate presser foot for the selected stitch. (page B-49)

#### ⑤ Feed dogs

The feed dogs feed the fabric in the sewing direction.

#### 6 Bobbin cover

Open the bobbin cover to set the bobbin. (page B-39, S-32)

#### ⑦ Needle plate cover

Remove the needle plate cover to clean the race. (page S-26)

#### 8 Needle plate

The needle plate is marked with guides to help sew straight seams. (page S-26)

#### Needle bar thread guide


Pass the upper thread through the needle bar thread guide. (page B-42)

#### Needle clamp screw

Use the needle clamp screw to hold the needle in place. (page B-49)


## Measurements on the needle plate, bobbin cover (with mark) and needle plate cover


The measurements on the needle plate and bobbin cover are references for patterns with a middle (center) needle position. The measurements on the needle plate cover are references for stitches with a left needle position.

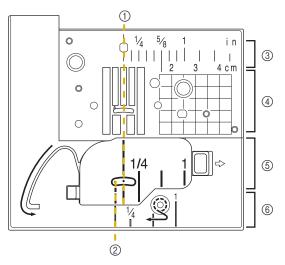

- (1) For stitches with a middle (center) needle position
- ② For stitches with a left needle position
- ③ Middle (center) needle position <inch>
- 4 Middle (center) needle position <cm>
- ⑤ Middle (center) needle position <inch>
- 6 Left needle position <inch>

## **Operation Buttons**

 

 

### (1) "Start/Stop" button START STOP



Press this button and the machine will sew a few stitches at a slow speed and then begin sewing at the speed set by the sewing speed controller. Press the button again to stop the machine. Hold the button in to sew at the machine's slowest speed. The button changes color according to the machine's operation mode.

Green: The machine is ready to sew or is sewing.

Red: The machine cannot sew.

#### ② "Reverse Stitch" button



For straight, zigzag, and elastic zigzag stitch patterns that take reverse stitches, the machine will sew reverse stitches at low speed only while holding down the "Reverse Stitch" button. The stitches are sewn in the opposite direction. For other stitches, use this button to sew reinforcement stitches at the beginning and end of sewing. Press and hold this button, and the machine sews 3 stitches in the same spot and stops automatically. (see page S-5)

#### ③ "Reinforcement Stitch" button



Use this button to sew a single stitch repeatedly and tie-off. For character/decorative stitches, press this button to end with a full stitch instead of at a mid-point. The LED light beside this button lights up while the machine is sewing a full motif, and automatically turns off when the sewing is stopped. (see page S-5)

#### 4 "Needle Position" button



Use this button when changing sewing direction or for detailed sewing in small areas. Press this button to raise or lower the needle position. With this button, you can lower and raise the needle to sew a single stitch.

#### ⑤ "Thread Cutter" button



Press this button after sewing to automatically trim the excess thread.

#### 6 "Presser Foot Lifter" button



Press this button to lower the presser foot and apply pressure to the fabric. Press this button again to raise the presser foot.

#### (7) Sewing Speed controller (



Use this controller to adjust the sewing speed. Move the slide to the left to sew at slower speeds. Move the slide to the right to sew at higher speeds. Beginners should sew at a slow speed.

#### "Automatic Threading" button




Use this button to automatically thread the needle.

## **A** CAUTION


 Do not press the thread cutter button after the threads have been cut. The needle may break and threads may become tangled, or damage to the machine may occur.

## **Using the Flat Bed Attachment**

Pull the top of the flat bed attachment to open the accessory compartment.

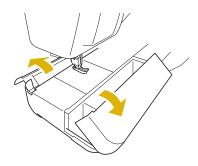


A presser foot storage tray is stored in the accessory compartment of the flat bed attachment.

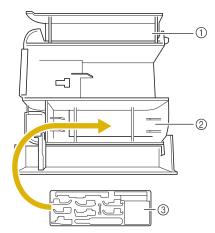

- ① Storage space of the flat bed attachment
- ② Presser foot storage space of the flat bed attachment
- ③ Presser foot storage tray There are also storage spaces for optional presser feet.

## **Included Accessories**

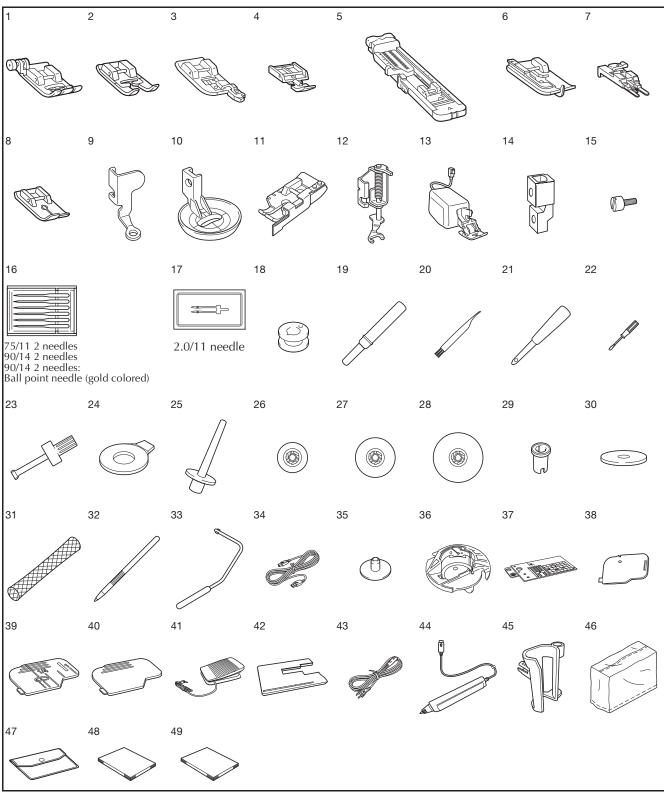

No.	Part Name	Part Code
1	Zigzag foot "J" (on machine)	XF3022-001
2	Monogramming foot "N"	X53840-351
3	Overcasting foot "G"	XC3098-051
4	Zipper foot "I"	X59370-051
5	Buttonhole foot "A"	X57789-251
6	Blind stitch foot "R"	X56409-051
7	Button fitting foot "M"	130489-001

No.	Part Name	Part Code
8	Straight stitch foot	XD0826-051
9	Free motion quilting foot "C"	XF4737-001
10	Free motion echo quilting foot "E"	XE0766-001
11	1/4" quilting foot with guide	XC6800-251
12	Free motion open toe quilting foot "O"	XF4873-001
13	Dual feed foot	XF4068-001

No.	Part Name	Part Code
14	Adapter	XF3613-001
15	Screw (small)	XA4813-051
16	Needle set	X58358-051
17	Twin needle	X59296-151
18	Bobbin × 10 (One is on machine.)	X52800-150
19	Seam ripper	XF4967-001
20	Cleaning brush	X59476-051
21	Eyelet punch	XZ5051-001
22	Screwdriver (small)	X55468-051
23	Screwdriver (large)	XC4237-021
24	Disc-shaped screwdriver	XC1074-051
25	Vertical spool pin	XC8619-052
26	Spool cap (small)	130013-154
27	Spool cap (medium) × 2 (One is on machine.)	X55260-153
28	Spool cap (large)	130012-054
29	Spool cap (mini insert)	XA5752-121
30	Spool felt (on machine)	X57045-051
31	Spool net × 2	XA5523-050
32	Touch pen (stylus)	XA9940-051
33	Knee lifter	XA6941-052
34	USB cable	XD0745-051
35	Bobbin center pin and instruction sheet	XC8661-251
36	Bobbin case (gray, for bobbin work)	XE8298-001

No.	Part Name	Part Code
37	Straight stitch needle plate	XF3076-001
38	Cord guide bobbin cover (with single hole)	XE8991-101
39	Bobbin cover (with mark) (on machine)	XF0750-101
40	Bobbin cover	XE8992-101
41	Foot controller	XC8816-051
42	Extension table	BLMA-ET
43	Power cord	XC6052-051
44	Sensor pen	XF4702-001
45	Sensor pen holder	XF2973-001
46	Dust cover	XF4694-001
47	Accessory bag	XC4487-021
48	Instruction and Reference Guide	XF3650-001
49	Quick Reference Guide	XF3651-001




#### Memo

- Foot controller: Model T
   This foot controller can be used on the machine model: BLCR.
- Always use accessories recommended for this machine.
- Included accessories may vary depending on the country or region.

## **Options**

The following are available as optional accessories to be purchased separately from your authorized Baby Lock retailer.

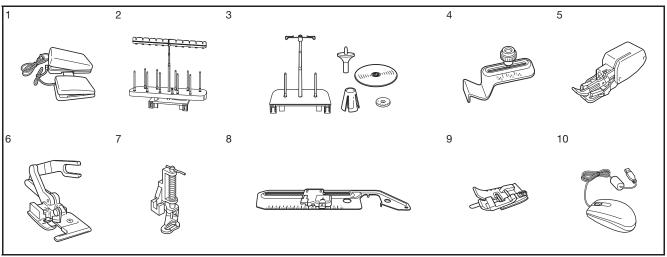

No.	Part Name	Part Code
1	Multi function foot controller	BLMA-MFC
2	10 spool stand	BLMA-TS
3	2-spool thread stand	BLMA-STS
4	Seam guide	BLG-SG
5	Walking foot	XA8320-103
6	Side cutter foot	BLG-SCF
7	Free-motion quilting foot	F005
8	Circular attachment	BL-CSA
9	Edge joining foot	ESG-EJF
10	USB mouse	XE4904-101



#### Memo

 All specifications are correct at the time of printing. Please be aware that some specifications may change without notice.



This section provides details on the initial setup procedures as well as descriptions of this machine's more useful functions.

Page number starts with "B" in this section.

Chapter1 Getting Ready	B-18
Chapter2 Sensor Functions	B-60

## **B**Basic operations

# Chapter *I*Getting Ready

TURNING THE MACHINE ON/OFF19
Setting Your Machine for the First Time20
LCD SCREEN22
■ Utility Stitch Screen
■ Choosing the Display Language
LOWER THREADING34
Winding the Bobbin
Upper Threading
Removing the Presser Foot49
Attaching the Presser Foot
ABOUT THE NEEDLE AND FABRIC53
About the Needle
Using USB Media       .54         Connecting the Machine to the Computer       .54         Using a USB Mouse       .54         ■ Clicking a Key       .55         ■ Changing Pages       .55         Using the Dual Feed Foot       .55         ■ Attaching the Dual Feed Foot       .55         ■ Replacing the Sole Part of the Dual Feed Foot       .57         ■ Using the Dual Feed Position Lever       .57         ■ Adjusting the Amount of Fabric Feeding of the Dual Feed Foot       .57

B

## **TURNING THE MACHINE ON/OFF**

## **▲** WARNING

- Use only regular household electricity for the power source. Using other power sources may result in fire, electric shock, or damage to the machine.
- Make sure that the plugs on the power cord are firmly inserted into the electrical outlet and the power cord receptacle on the machine.
- Do not insert the plug on the power cord into an electrical outlet that is in poor condition.
- Turn the main power to OFF and remove the plug in the following circumstances:

When you are away from the machine

After using the machine

When the power fails during use


When the machine does not operate correctly due to a bad connection or a disconnection

**During electrical storms** 

## **A** CAUTION

- Use only the power cord included with this machine.
- Do not use extension cords or multi-plug adapters with many other appliances plugged in to them. Fire or electric shock may result.
- Do not touch the plug with wet hands. Electric shock may result.
- When unplugging the machine, always turn the main power to OFF first. Always grasp the plug to remove it from the outlet. Pulling on the cord may damage the cord, or lead to fire or electric shock.
- Do not allow the power cord to be cut, damaged, modified, forcefully bent, pulled, twisted, or bundled. Do not place heavy objects on the cord. Do not subject the cord to heat. These things may damage the cord, or cause fire or electric shock. If the cord or plug is damaged, take the machine to your authorized retailer for repairs before continuing use.
- Unplug the power cord if the machine is not to be used for a long period of time. Otherwise, a fire may result.
- When leaving the machine unattended, either the main switch of the machine should be turned to OFF or the plug must be removed from the socket-outlet.
- When servicing the machine or when removing covers, the machine must be unplugged.
- For U.S.A. only
  - This appliance has a polarized plug (one blade wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.
  - If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

Insert the power supply cord into the power cord receptacle, then insert the plug into a wall outlet.

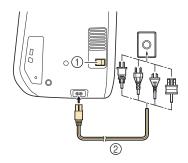

- 1 Main power switch
- ② Power supply cord
- Turn the main power switch to "I" to turn on the machine.



- ① OFF
- ② ON



#### Note

 When the straight stitch needle plate is on the machine, the needle will automatically move to the middle position.



#### Memo

- When the machine is turned on, the needle and the feed dogs will make sound when they move; this is not a malfunction.
- When the machine is turned on, the opening movie is played. Touch anywhere on the screen to display the sewing screen.

## **A** CAUTION

 Only touch the screen with your finger or the included touch pen. Do not use a sharp pencil, screwdriver, or other hard or sharp object. It is not necessary to press hard on the screen.
 Pressing too hard or using a sharp object may damage the screen.



Turn the main power switch to "O" to turn off the machine.



#### Memo

 If the machine is turned off in the middle of sewing in the "Sewing" function, the operation will not continued after turning the power on again.

## **Setting Your Machine for the First Time**

When you first turn on the machine, set the language and time/date to your language and local time/date. Follow the procedure below when the settings screen appears automatically.

1 Pre


Press **and** to set your local language.



- Press ok.
- The message screen, confirming if you want to set time/date, appears. To set the time/date, press ok; to cancel the setting, press CANCEL.
  - ightarrow The screen to set time/date appears.



## Press — or + to set time/date.

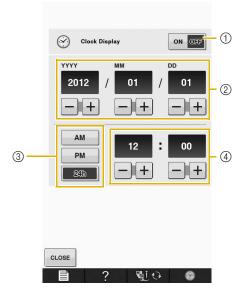

- ① Press to display the time on the screen.
- ② Set the year (YYYY), month (MM) and date (DD).
- 3 Select whether 24h or 12h setting to display.
- ④ Set the current time.



Press | CLOSE | to start using your machine.

 $\rightarrow$  The clock starts from 0 second of the time you set.



#### **Note**

• The time/date you set may be cleared, if you don't turn on the machine for a certain period.


## **LCD SCREEN**

## **A** CAUTION

• Only touch the screen with your finger or the included touch pen. Do not use a sharp pencil, screwdriver, or other hard or sharp object. It is not necessary to press hard on the screen. Pressing too hard or using a sharp object may damage the screen.

### **■** Utility Stitch Screen

Press a key with your finger to select the stitch pattern, to select a machine function, or to select an operation indicated on the key. When the key display is light gray, the function is not currently available.

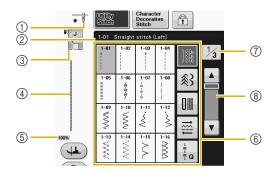


No.	Display	Key Name	Explanation	Page
1	<b>◆</b> IJ	Needle position setting display	Shows single or twin needle mode setting, and the needle stop position.  Single needle/down position  Twin needle/down position  Twin needle/down position	-
2	1-01 Straight stitch (Left)	Selected stitch display	Shows the name and code number of the selected stitch.	S-3
3		Presser foot display	Shows the presser foot code. Attach the presser foot indicated in this display before sewing.	B-49
4	100%	Stitch preview	Shows a preview of the selected stitch. When shown at 100%, the stitch appears in the screen at nearly its actual size.	S-21
(S)	100%	Pattern display size	Shows the approximate size of the pattern selected.  100%: Nearly the same size as the sewn pattern  50%: 1/2 the size of the sewn pattern  25%: 1/4 the size of the sewn pattern  * The actual size of the sewn pattern may differ depending on the type of fabric and thread that is used.	S-21
6	1-00 1-00 1-00 1-00 1-00 1-00 1-00 1-00	Stitch selection screen	Press the key for the pattern you want to sew. Use	S-21
7	1/3	Page display	Shows additional pages that can be displayed. (Illustration shows page 1 of 3.)	_

No.	Display	Key Name	Explanation	Page
8	<b>A</b>		Press ▲ or ▼, to move one page at a time, or touch anywhere on the bar to jump ahead for additional pages of stitches.	-

<sup>\*</sup> All key functions of the LCD are explained in the "Key Functions" table on the following page.

## **■** Key Functions

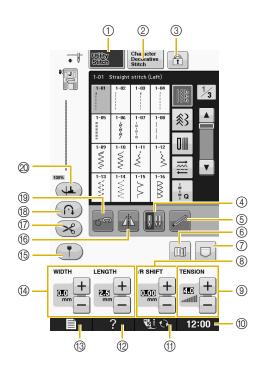

No.	Display	Key Name	Explanation	Page
1	Utility Stitch	"Utility Stitch" key	Press this key to select a straight stitch, zigzag stitch, buttonhole, blind hem stitch, or other stitches commonly used in garment construction.	
2	Character Decorative Stitch	"Character/ Decorative Stitch" key	Press this key to select character or decorative stitch patterns.	
3		Screen lock key	Press this key to lock the screen. When the screen is locked, the various settings, such as the stitch width and stitch length, are locked and cannot be changed. Press this key again to unlock the settings.	
4	[ U   ! !	Needle mode selection key (Single/Double)	Press this key to select twin needle sewing mode. The sewing mode changes between single needle mode and twin needle mode each time you press the key. If the key display is light gray, the selected stitch pattern cannot be sewn in the twin needle mode.	
(5)		Sensor function key	Press this key to use the sensor function.	
6		Image key	Press this key to display an enlarged image of the selected stitch pattern.	
7		Machine's memory key	Press this key to select from 3 memory functions; retrieving, storing or reset.	S-22, S-96, S-98
8	L/R SHIFT	"L/R SHIFT" key	Shows the tendency of Left/Right of the center line of the original zigzag stitch currently selected stitch pattern.	
9	TENSION +	Thread tension key	Shows the automatic thread tension setting of the currently selected stitch pattern. You can use the plus and minus keys to change the thread tension settings.	

No.	Display	Key Name	Explanation	
10	12:00	Clock key	Press this key to set the clock to your local time.	
11)		Presser foot/Needle exchange key	Press this key before changing the needle, the presser foot, etc. This key locks all key and button functions to prevent operation of the machine.	
12	?	Sewing machine help key	Press this key to see explanations on how to use the machine.	
13		Machine setting mode key	Press this key to change the needle stop position, change the volume of operation sound, adjust the pattern or screen, and change other machine settings.	
(4)	WIDTH LENGTH  OKO + 285 + mm -	Stitch width and stitch length key	Shows the zigzag width and stitch length settings of the currently selected stitch pattern. You can use the plus and minus keys to adjust the zigzag width and stitch length settings.	
15		Guideline marker key	Press this key to display the guideline marker along the sewing line. The guideline marker makes it easier to sew stitches that align with the fabric edge or other marker on the fabric.	
16		Mirror image key	Press this key to create a mirror image of the selected stitch pattern. If the key display is light gray, a mirror image of the selected stitch pattern cannot be sewn.	
1	X	Automatic thread cutting key	Press this key to set the automatic thread cutting function. Set the automatic thread cutting function before sewing to have the machine automatically sew reinforcement stitches at the beginning and end of sewing (depending on the pattern, the machine may sew reverse stitches) and trim the threads after sewing.	
(8)	(A)	Automatic reverse/reinforcement stitch key	Press this key to use the automatic reverse/reinforcement stitching setting.  If you select this setting before sewing, the machine will automatically sew reverse stitches or reinforcement stitches depending on the pattern, at the beginning and end of sewing.	
19	(G)	Free motion mode key	Press this key to enter free motion sewing mode.  The presser foot is raised to an appropriate height and the feed dog is lowered for free motion quilting.	
<b>20</b>	4	Pivot key	Press this key to select the pivot setting. When the pivot setting is selected, stopping the machine lowers the needle and slightly raises the presser foot automatically. In addition, when sewing is restarted, the presser foot is automatically lowered.	S-15
			<ul> <li>If this key appears as , the pivot function cannot be used.</li> <li>Be sure the needle position on page B-26 of Machine Settings is set to the down position.</li> </ul>	

For additional operational information, refer to page reference number listed above.


## Using the Machine Setting Mode Key

Press to change the default machine settings (needle stop position, opening display, etc.).





#### Memo

• Press or next to the page numbers, to display a different settings screen.

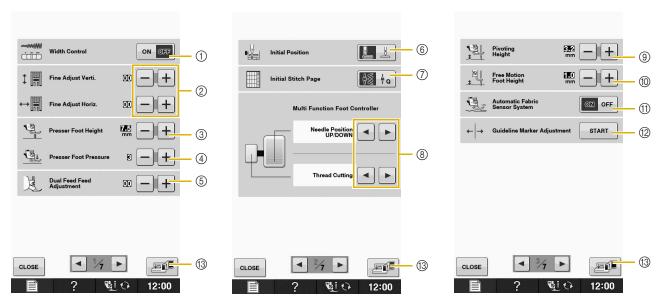

- (1) Select whether to use the sewing speed controller to determine the zigzag width (see page S-39).
- 2 Make adjustments to character or decorative stitch patterns (see page S-82).
- 3 Adjust the presser foot height. (Select the height of the presser foot when the presser foot is raised.)
- 4 Adjust the presser foot pressure. (The higher the number, the greater the pressure will be. Set the pressure at "3" for normal sewing.) (see page S-17)
  If the dual feed foot is installed and its roller is lowered, the pressure setting is fixed at "2" and cannot be changed.
- ⑤ Fine tune the feed of the dual feed foot (see page B-55).
- (§) Select whether "1-01 Straight stitch (Left)" or "1-03 Straight stitch (Middle)" is the utility stitch that is automatically selected when the machine is turned on. (see page S-21)
- Select whether "Utility Stitch" or "Quilt Stitch" displayed first on the stitch selection screen when the "Utility and Decorative Stitches" is selected.
- (8) You can activate this setting after connecting the optional multi-function foot controller. (These settings are not operable unless the optional multi-function foot controller is attached to the machine.)
- (9) Change the height of the presser foot when sewing is stopped when the pivot setting is selected (see page S-15). Adjust the presser foot to one of the three heights (3.2 mm, 5.0 mm and 7.5 mm). (see page S-15)
- © Change the height of the presser foot when the machine is set to free motion sewing mode (see page S-40).
- (f) When set to "ON", the thickness of the fabric is automatically detected by an internal sensor while sewing. This enables the fabric to be fed smoothly (see pages S-8 and S-17).
- ② Adjust the guideline marker position and brightness (see page S-14).
- Press to save the current settings screen image to USB media (see page B-29)

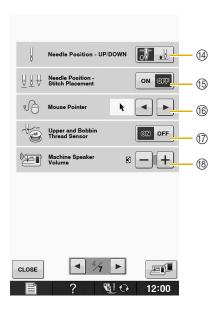


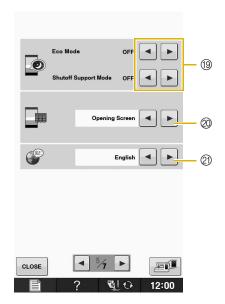


- Select the needle stop position (the needle position when the machine is not operating) to be up or down. Select
   the down position when using the pivot key. (see page S-15)
- (§) Select the operation of the "Needle Position Stitch Placement" button from the following two sequences (see page S-18).
  - Each press of the "Needle Position Stitch Placement" button:
  - "ON" raises the needle, stops it at a nearly lowered position, then lowers it
  - "OFF" raises the needle, then lowers it
- (6) Change the shape of the pointer when a USB mouse is used (see page B-28).
- Turn the "Upper and Bobbin Thread Sensor" "ON" or "OFF". If it is turned "OFF", the machine can be used without thread. (see page S-4, see Caution note at bottom of page)
- (B) Change the speaker volume. Increase the number for louder volume, decrease for softer volume.
- (9) Select to save the machine power by setting the "Eco Mode" or the "Shutoff Support Mode" (see page B-28).
- ② Select the initial screen that is displayed when the machine is turned on (see page B-29).
- ② Change the display language (see page B-29).

## **A** CAUTION

• If "Upper and Bobbin Thread Sensor" is set to "OFF", remove the upper thread. If the machine is used with the upper thread threaded, the machine will not be able to detect if the thread has become tangled. Continuing to use the machine with tangled thread may cause damage.

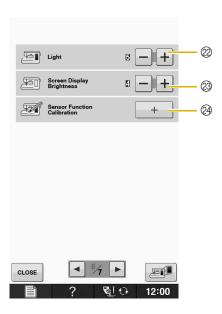

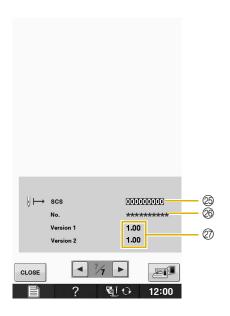

- 22 Change the brightness of the needle area and work area lights.
- ② Change the screen display brightness (see page A-6).
- ② Calibrate the sensor function (see page B-64).
- Display the total number of stitches sewn on this machine, which is a reminder to take your machine in for regular servicing. (Contact your authorized retailer for details.)
- The "No." is the internal machine number for the sewing machine.
- ② Display the program version. "Version 1" shows the program version of the LCD panel, "Version 2" shows the program version of the machine.



#### Memo

• Check with your local authorized Baby Lock retailer or at " <a href="www.babylock.com">www.babylock.com</a> " for the current version update (see page A-20).

## ■ Selecting the "Eco Mode" or "Shutoff Support Mode"

You can save the machine power by setting the eco mode or the shutoff support mode.

If you leave the machine without using for a specified period of time, the machine enters in one of these modes.

#### "Eco Mode";

Machine will enter a sleep mode. Touch the screen or any operational button to continue sewing.

#### "Shutoff Support Mode";

 
Machine will turn off after set period of time. Turn machine off and then back on to restart sewing.

Condition	Eco Mode	Shutoff Support Mode
Available time	0 - 120 (minute)	1 - 12 (hour)
"Start/Stop" button	Green flashing	Green slow flashing
Suspended function	Machine light, Screen display, Guideline marker	All functions
After recovering	The machine starts from the previous operation.	You need to turn off the machine.


Press the "Start/Stop" button or touch the screen display to recover from these modes.



→ The settings screen appears.





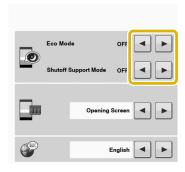



#### **Note**

 If you turn off the machine while the machine is in the "Eco Mode" or the "Shutoff Support Mode", wait for about 5 seconds before turning on the machine again.

## ■ Changing the Pointer Shape When a USB Mouse Is Used


In the settings screen, the shape can be selected for the pointer that appears when a USB mouse is connected.



ightarrow The settings screen appears.

Use or to choose the pointer shape from the three settings available ( , , ) and ).

Display page 4 of the settings screen.

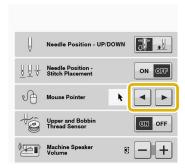

Press CLOSE to return to the original screen.



#### Memo


• The setting remains selected even if the machine is turned off.

B

### ■ Selecting the Initial Screen Display

The Initial screen that appears on the machine can be changed.


- Press
  - → The settings screen appears.
- Display page 5 of the settings screen.
- Use **◄** or **▶** to select the setting for the initial screen display.

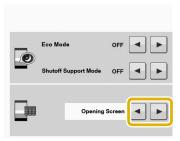

- Opening Screen: When the machine is turned on, the sewing screen appears after the opening movie screen is touched.
- Sewing Screen: When the machine is turned on, the sewing screen appears.
- Press CLOSE to return to the original screen.

### ■ Choosing the Display Language

- Press
  - → The settings screen appears.
- Display page 5 of the settings screen.
- Use **■** and **▶** to choose the display language.
  - Select from "English", "Deutsch (German)", "Français (French)", "Italiano (Italian)", "Nederlands (Dutch), "Español (Spanish)", "日本語 (Japanese)", "Dansk (Danish)", "Norsk (Norwegian)", "Suomi (Finnish)", "Svenska (Swedish)", "Português (Portuguese)", and "Русский (Russian)".

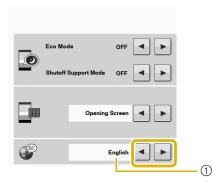

- Display language
- **CLOSE** to return to the original screen.

### ■ Saving a Settings Screen Image to **USB** Media

An image of the settings screen can be saved as a BMP file.

A maximum of 100 images can be saved on a single USB media at one time.

Insert the USB media into the USB port on the right side of the machine.




- ① USB port
- ② USB media
- Press
  - → The settings screen appears. Select the settings screen page, make the changes that you want, and then save the screen image.
- Press .
  - → The image file will be saved to the USB media.
- Remove the USB media, and then for future reference, check the saved image using a computer.

The files for Settings screen images are saved with the name "S##.BMP".

"##" in the name "S##.BMP" will automatically be replaced with a number between S00 and S99.




 If 100 image files have already been saved on the USB media, the following message appears. In this case, delete a file from the USB media or use different USB media.

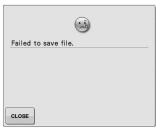

## Using the Sewing Machine Help Key ?


Press to open the sewing machine help screen. Three functions are available from the screen shown below.

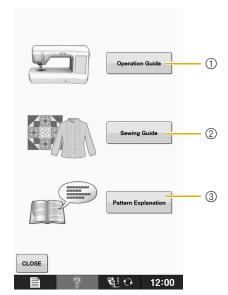

- ① Press this key to see explanation for upper threading, winding the bobbin, changing the presser foot, how to use the machine, troubleshooting and maintenance (see page B-31).
- ② Press this key to select utility stitches when you are not sure which stitch to use or how to sew the stitch (see page B-32).
- ③ Press this key to see an explanation of the stitch selected (see page B-33).

## **Using the Operation Guide Function**

Press Operation Guide to open the screen shown below. Five categories are displayed at the top of the screen. Press a key to see more information about that category.

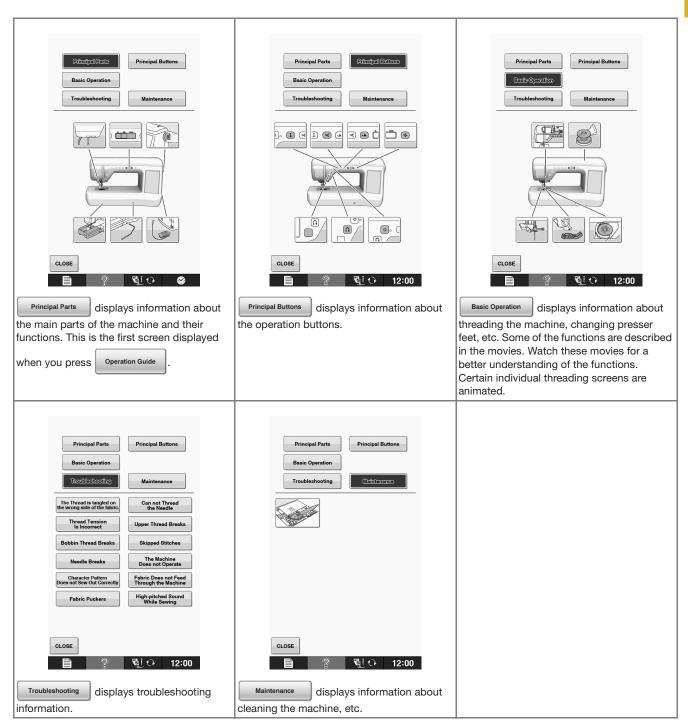


**Example:** Displaying information about upper threading





- Press Basic Operation .
  - → The lower half of the screen will change.



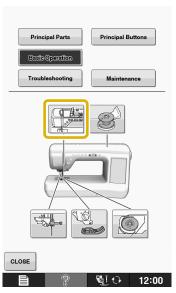

→ The screen shows instructions for threading the machine.

## Read the instructions.

- \* To view video, press of the displayed instructions.

  Press under movie to go back to the beginning. Press to pause. Press to restart after pause. Press to close out the movie.
- \* To scroll through instructional pages. Press **\rightarrow** to view the next page. Press **\rightarrow** to view the previous page.
- 6 Press CLOSE to return to the original screen.

## **Using the Sewing Guide Function**

The sewing guide function can be used to select patterns from the Utility Stitch screen.


Use this function when you are not sure which stitch to use for your application, or to get advice about sewing particular stitches. For example, if you want to sew overcasting, but you do not know which stitch to use or how to sew the stitch, you can use this screen to get advice. We recommend that beginners use this method to select stitches.



→ The advice screen is displayed.



- Press the key of the category whose sewing instructions you wish to view.
  - \* Press CLOSE to return to the original screen.

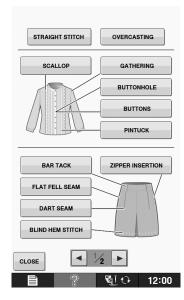

### Read the explanations and select the appropriate stitch.

- → The screen displays directions for sewing the selected stitch. Follow the directions to sew the stitch.
- Press **b** to view the next page.
- to view the previous page.
- to return to the original screen.

## **Using the Pattern Explanation Function**

If you want to know more about the uses of a stitch pattern, select the pattern and press ?

then Pattern Explanation | to see an explanation of the stitch selection.



- Descriptions are displayed for each pattern in the Utility Stitch screen. Description for the Character/Decorative Stitch category is also displayed.
- If the Pattern Explanation | key is not applicable for the selected stitch, the warning "This key cannot be used at this time" will appear.

Press | CLOSE | twice and then enter the Utility and Decorative Stitch category.

 
**Example:** Displaying information about







**Press** 





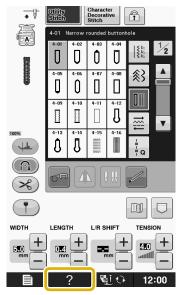

**Press** Pattern Explanation

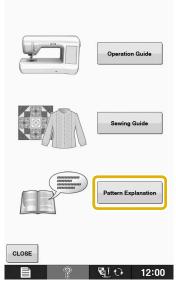

→ The screen shows information.



Press | CLOSE | to return to the original screen.



#### Memo

• The settings remain displayed to allow you to fine tune the stitch.

## LOWER THREADING


## Winding the Bobbin



example of bobbin winding on the LCD (see page B-33). Follow the steps explained below to complete the operation.

## **A** CAUTION


 The included bobbin was designed specifically for this sewing machine. If bobbins from other models are used, the machine will not operate correctly. Use only the included bobbin or bobbins of the same type (part code: X52800-150).

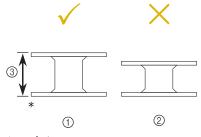

- \* Actual size
- 1) This model
- ② Other models
- ③ 11.5 mm (approx. 7/16 inch)

### **■** Using the Supplemental Spool Pin

With this machine, you can wind the bobbin without unthreading the machine. While using the main spool pin to sew, you can conveniently wind the bobbin using the supplemental spool pin.

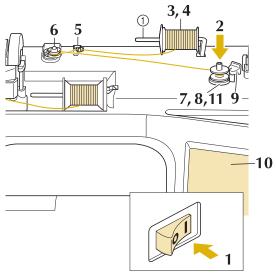


- Supplemental spool pin
- Turn the main power to ON and open the top cover.
- Align the groove in the bobbin with the spring on the bobbin winder shaft, and set the bobbin on the shaft.




- (1) Groove in the bobbin
- ② Spring on the shaft

Set the supplemental spool pin in the "up" position.

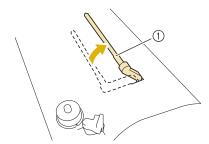

- ① Supplemental spool pin
- Place the spool of thread on the supplemental spool pin, so that thread unrolls from the front. Push the spool cap onto the spool pin as far as possible to secure the thread spool.

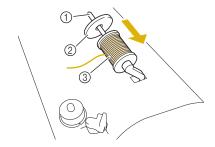

- ① Spool pin
- ② Spool cap
- ③ Thread spool


## **A** CAUTION

 - If the thread spool and/or spool cap are set incorrectly, the thread may tangle on the spool pin and cause the needle to break.
- Use the spool cap (large, medium, or small)
  that is closest in size to the thread spool. If a
  spool cap smaller than the thread spool is
  used, the thread may become caught in the slit
  on the end of the spool and cause the needle
  to break.




#### Memo


 When sewing with fine, cross-wound thread, use the small spool cap, and leave a small space between the cap and the thread spool.



 - 1) Spool cap (small)
- ② Thread spool (cross-wound thread)
- 3) Space
- If a spool of thread whose core is 12 mm (1/2 inch) in diameter and 75 mm (3 inches) high is inserted onto the supplemental spool pin, use the mini spool insert.




- ① Spool cap (mini insert)
- ② 12 mm (1/2 inch)
- ③ 75 mm (3 inches)
- With your right hand, hold the thread near the thread spool. With your left hand, hold the end of the thread, and use both hands to pass the thread through the thread guide.

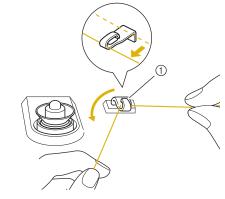


① Thread guide




Pass the thread around the pre-tension disk making sure that the thread is under the pre-tension disk.

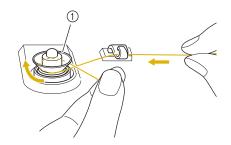

 
- 1) Pre-tension disk
- → Make sure that the thread passes under the pre-tension disk.



- ② Pre-tension disk
- ③ Pull it in as far as possible.
- → Check to make sure thread is securely set between pre-tension disks.
- Wind the thread clockwise around the bobbin 5-6 Times.

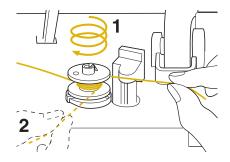


Pass the end of the thread through the guide slit in the bobbin winder seat, and pull the thread to the right to cut the thread with the cutter.

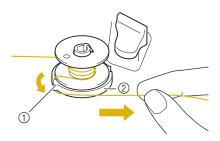

- ① Guide slit (with built-in cutter)
- ② Bobbin winder seat

## **A** CAUTION

 - Be sure to follow the process described. If the thread is not cut with the cutter, and the bobbin is wound, when the thread runs low it may tangle around the bobbin and cause the needle to break.
- Set the bobbin winding switch to the left, until it clicks into place.



① Bobbin winding switch



#### Memo

- Sliding the bobbin winding switch to the left switches the machine into bobbin winding mode.
- → The bobbin winding window appears.

## Press START

→ Bobbin winding starts automatically. The bobbin stops rotating when bobbin winding is completed. The bobbin winding switch will automatically return to its original position.





 
#### Note

- start changes to stop while the bobbin is winding.
- Stay near the machine while winding the bobbin to make sure the bobbin thread is being wound correctly. If the bobbin thread is wound incorrectly, press STOP immediately to stop the bobbin winding.
- The sound of winding the bobbin with stiff thread, such as nylon thread for quilting, may be different from the one produced when winding normal thread; however, this is not a sign of a malfunction.




#### Memo

 You can change the winding speed by pressing (to decrease) or + (to increase) in the bobbin winding window.




- Press | CLOSE | to minimize the bobbin winding window. Then, you can perform other operations, such as selecting a stitch or adjusting the thread tension, while the bobbin is being wound.
- Press | (in top right of the LCD screen) to display the bobbin winding window again.

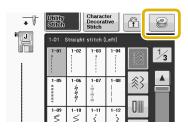



#### Cut the thread with scissors and remove the bobbin.

 




When removing the bobbin, do not pull on the bobbin winder seat. Doing so could loosen or remove the bobbin winder seat, and could result in damage to the machine.


## CAUTION

 Setting the bobbin improperly may cause the thread tension to loosen, breaking the needle and possibly resulting in injury.




## **■** Using the Spool Pin


You can use the main spool pin to wind the bobbin before sewing. You cannot use this spool pin to wind the bobbin while sewing.

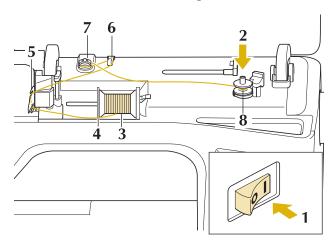


- Turn the main power to ON and open the top cover.
- Align the groove in the bobbin with the spring on the bobbin winder shaft, and set the bobbin on the shaft.

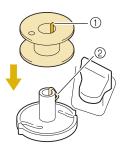

- ① Groove in the bobbin
- ② Spring on the shaft
- Pivot the spool pin so that it angles upward. Set the thread spool on the spool pin so that the thread unwinds from the front of the spool.

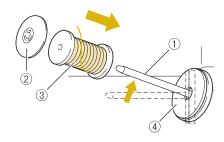


- ① Spool pin
- Spool cap
- ③ Thread spool
- 4 Spool felt
- Push the spool cap onto the spool pin as far as possible, then return the spool pin to its original position.
- While holding the thread with both hands, pull the thread up from under the thread guide plate.

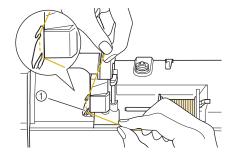


1 Thread guide plate

6 Pass the thread through the thread guide.

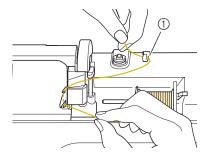

- ① Thread guide
- Pass the thread around the pre-tension disk making sure that the thread is under the pre-tension disk.

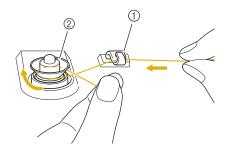


- 1 Thread guide
- ② Pre-tension disk
- Follow steps 7 through 11 on page B-36 through B-37.

# ■ Untangling Thread from Beneath the Bobbin Winder Seat

 If the bobbin winding starts when the thread is not passed through the pre-tension disk correctly, the thread may become tangled beneath the bobbin winder seat.

Wind off the thread according to the following procedure.




- ① Thread
- ② Bobbin winder seat

## **A** CAUTION

 
 Do not remove the bobbin winder seat even if the thread becomes tangled under the bobbin winder seat. It may result in injuries. If the thread becomes tangled under the bobbin winder seat, press STOP once to stop the bobbin winding.




Cut the thread with scissors near the pre-tension disk.



 - Pre-tension disk
- Push the bobbin winder switch to the right, and then raise the bobbin at least 10 cm (4 inches) from the shaft.



Cut the thread near the bobbin and hold the thread end with your left hand. Unwind the thread clockwise near the bobbin winder seat with your right hand as shown below.

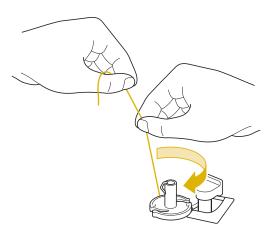


Wind the bobbin again.



#### **Note**

  Make sure that the thread passes through the pre-tension disk correctly (page B-36).


## **Setting the Bobbin**




example of the operation on the LCD (see page B-33). Follow the steps explained below to complete the operation.

## **A** CAUTION

 Use a bobbin thread that has been correctly wound. Otherwise, the needle may break or the thread tension will be incorrect.




The included bobbin was designed specifically for this sewing machine. If bobbins from other models are used, the machine will not operate correctly. Use only the included bobbin or bobbins of the same type (part code: X52800-150).

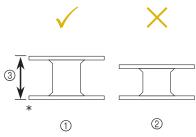

- Actual size
- This model
- 2 Other models
- ③ 11.5 mm (approx. 7/16 inch)
- Before inserting or changing the bobbin, be sure to press in the LCD, otherwise injuries may occur if the "Start/Stop" button or any other button is pressed and the machine starts sewing.
- Press 📲 🗘




 Slide the bobbin cover latch to the right.



 - 1 Bobbin cover
- ② Latch
- → The bobbin cover opens.
- Remove the bobbin cover.
- Insert the bobbin with your right hand so that the end of the thread is on the left, and then, after pulling the thread firmly around the tab with your left hand as shown, lightly pull the thread to guide it through the slit.





- ① Tab
- \* Be sure to insert the bobbin correctly.


## **A** CAUTION

  Be sure to install the bobbin so that the thread unwinds in the correct direction, otherwise the thread may break or the thread tension will be incorrect.



#### Memo

 The order that the bobbin thread should be passed through the bobbin case is indicated by marks around the bobbin case.
 Be sure to thread the machine as indicated.






While lightly holding down bobbin with your right hand as shown, guide the thread through the slit (1) and 2).


\* At this time, check that the bobbin easily rotates counterclockwise.

Then, pull the thread toward you to cut it with the cutter (3).

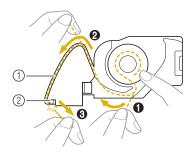

- ① Slit
- 2 Cutter (Cut the thread with the cutter.)
- → The cutter cuts the thread.

Make sure that the thread is correctly passed through the flat spring of the bobbin case. If it is not inserted correctly, reinstall the thread.

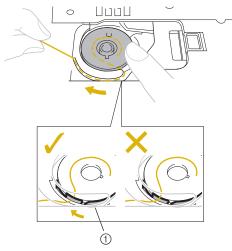


1) Flat spring

## **A** CAUTION

 Be sure to hold down the bobbin with your finger and unwind the bobbin thread correctly. Otherwise, the thread may break or the thread tension will be incorrect.

Insert the tab in the lower-left corner of the bobbin cover (1), and then lightly press down on the right side to close the cover **(2)**.




## **Pulling Up the Bobbin Thread**

There may be some sewing applications where you want to pull up the bobbin thread; for example, when making gathers, darts, or doing free motion quilting.




#### Memo

 - You can pull up the bobbin thread after threading the upper thread ("UPPER THREADING" on page B-42).
- Guide the bobbin thread through the groove, following the arrow in the illustration.
  - Do not cut the thread with the cutter.
  - Do not replace the bobbin cover.




While holding the upper thread, press the "Needle Position" button to lower the needle.

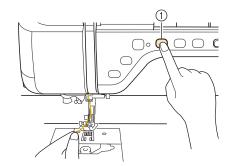


1) "Needle Position" button


- Press the "Needle Position" button to raise the needle.
- Gently pull the upper thread. A loop of the bobbin thread will come out of the hole in the needle plate.

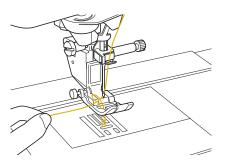

Pull up the bobbin thread, pass it under the presser foot and pull it about 100 mm (approx. 4 inches) toward the back of the machine, making it even with the upper thread.

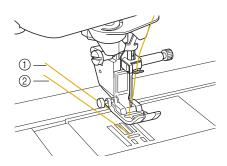


 - (1) Upper thread
- ② Bobbin thread
- Replace the bobbin cover.



## **UPPER THREADING**
 
## **Upper Threading**



example of the operation on the LCD (see page B-33). Follow the steps explained below to complete the operation.


## **A** CAUTION

- Be sure to thread the machine properly.
   Improper threading can cause the thread to tangle and break the needle, leading to injury.
- When using the walking foot, the side cutter or accessories not included with this machine, attach the accessory to the machine after threading the machine.




#### Memo


- The automatic threading function can be used with sewing machine needle sizes 75/11 through 100/16.
- Thread such as transparent nylon monofilament thread and thread with a thickness of 130/20 or thicker cannot be used with the automatic threading function.
- The automatic threading function cannot be used with the wing needle or the twin needle.

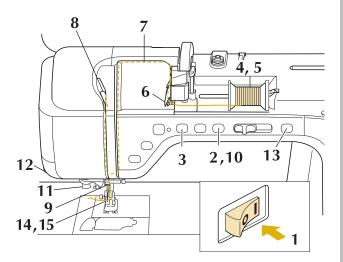

 - Turn the main power to ON.
- Press the "Presser Foot Lifter" button to raise the presser foot.



→ The upper thread shutter opens so the machine can be threaded.

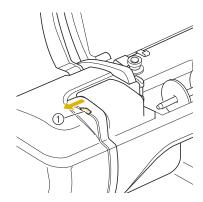


Upper thread shutter



#### Memo

  This machine is equipped with an upper thread shutter, allowing you to check that the upper threading is performed correctly.








#### Note

 If you try to thread the needle automatically without raising the needle, the thread may not thread correctly. Pivot the spool pin so that it angles upward. Set the thread spool on the spool pin so that the thread unwinds from the front of the spool.

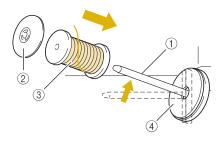


- Spool pin
- ② Spool cap
- ③ Thread spool
- ④ Spool felt
- Push the spool cap onto the spool pin as far as possible, then return the spool pin to its original position.

## **A** CAUTION

 
- If the thread spool and/or spool cap are set incorrectly, the thread may tangle on the spool pin and cause the needle to break.
- Use the spool cap (large, medium, or small) that is closest in size to the thread spool. If a spool cap smaller than the thread spool is used, the thread may become caught in the slit on the end of the spool and cause the needle to break.




When sewing with fine, cross-wound thread, use the small spool cap, and leave a small space between the cap and the thread spool.



 - 1) Spool cap (small)
- ② Thread spool (cross-wound thread)
- ③ Space
  - If a spool of thread whose core is 12 mm (1/2 inch) in diameter and 75 mm (3 inches) high is inserted onto the supplemental spool pin, use the mini spool insert.




- 1) Spool cap (mini insert)
- ② 12 mm (1/2 inch)
- ③ 75 mm (3 inches)
- While holding the thread with both hands, place the thread behind the thread guide plate.

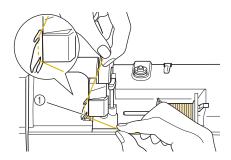



① Thread guide plate



 While holding the thread in your right hand, pass the thread through the thread guide in the direction indicated.

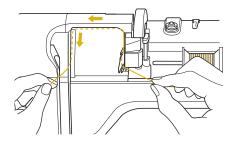




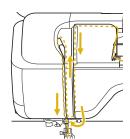





#### Memo

  Look in the upper groove area to check if the thread catches on the take-up lever visible inside the upper groove area.





① Look in the upper groove area

 

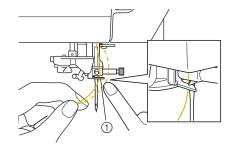


① Needle bar thread guide

 


 


Pass the thread through the thread guide disks (marked "7"). Make sure that the thread passes through the groove in the thread guide.

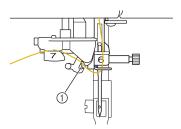

① Groove in thread guide

 

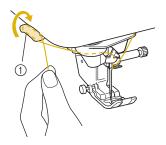


Thread cutter



#### Note

  When using thread that quickly winds off the spool, such as metallic thread, it may be difficult to thread the needle if the thread is cut


Therefore, instead of using the thread cutter, pull out about 80 mm (approx. 3 inches) of thread after passing it through the thread guide disks (marked "7").



1) 80 mm (approx. 3 inches) or more



 Press the "Automatic Threading" button to have the machine automatically thread the needle.




→ The thread passes through the eye of the needle.



#### Memo

- When the "Automatic Threading" button is pressed, the presser foot will be automatically lowered. After threading is finished, the presser foot moves back to the position before the "Automatic Threading" button was pressed.
- Carefully pull the end of the thread that was passed through the eye of the needle.
  - If a loop was formed in the thread passed through the eye of the needle, carefully pull on the loop of thread through to the back of the needle.

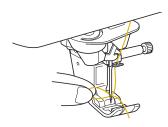



- Pulling the loop of thread gently will avoid needle breakage.
- Pull out about 10-15 cm (approx. 4-6 inches) of the thread, and then pass it under the presser foot toward the rear of the machine.
  - → Raise the presser foot lever if the presser foot is lowered.



1) About 10-15 cm (approx. 4-6 inches)




 If the needle could not be threaded or the thread was not passed through the needle bar thread guides, perform the procedure again starting from step 3. Then, pass the thread through the eye of the needle after step (3).



#### Note

 Some needles cannot be threaded with the needle threader. In this case, instead of using the needle threader after passing the thread through the needle bar thread guide (marked "6"), manually pass the thread through the eye of the needle from the front to the back.

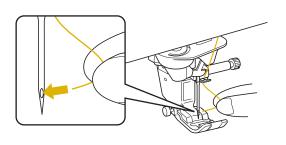


## **Using the Twin Needle Mode**


The twin needle can only be used for patterns that show after being selected. Before you select a stitch pattern, make sure the stitch can be sewn in the twin needle mode (refer to the "STITCH SETTING CHART" on page S-68).

## **A** CAUTION


- Twin needle (part code X59296-151) is recommended for this machine. Contact your authorized retailer for replacement needles (size 2.0/11 is recommended).
- Be sure to set the twin needle mode when using the twin needle. Using the twin needle while the machine is in single needle mode could cause the needle to break, resulting in damage.
- Do not sew with bent needles. The needle could break and cause injury.
- When using the twin needle, it is recommended to use presser foot "J".
- When the twin needle is used, bunched stitches may occur depending on the types of fabric and thread that are used.
   Use monogramming foot "N" for decorative stitches.
- Before changing the needle or threading the machine, be sure to press on the LCD Screen, otherwise injuries may occur if the "Start/Stop" button or any other button is pressed and the machine starts sewing.
- Press and install the twin needle ("CHANGING THE NEEDLE" on page B-51).

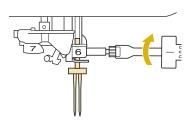

Thread the machine for the first needle according to the procedure for threading a single needle ("Upper Threading" on page B-42).

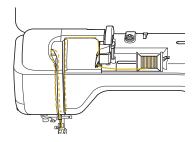

 Pass the thread through the needle bar thread guides on the needle bar, then thread the needle on the left side manually.




1) Needle bar thread guide




#### **Note**

- The "Automatic Threading" button cannot be used. Manually thread the twin needle from front to back. Using the "Automatic Threading" button may result in damage to the machine.
- Pull up the supplemental spool pin and set it in the up position.

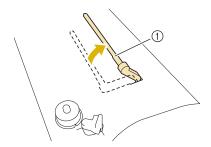


(1) Supplemental spool pin


Place the additional spool of thread on the supplemental spool pin, so that the thread unwinds from the front. Push the spool cap onto the spool pin as far as possible to secure the thread spool.

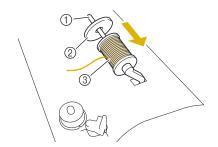


- ① Spool pin
- ② Spool cap
- ③ Thread spool
- Hold the thread from the spool with both hands, and place the thread in the thread guide.
  - \* Do not place the thread in the pre-tension disks.

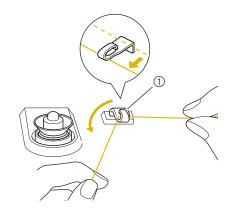

- ① Thread guide
- While holding the thread from the spool, pull the thread through the lower notch in the thread guide plate, then through the upper notch. Hold the end of the thread with your left hand, and then guide the thread through the groove, following the arrows in the illustration.

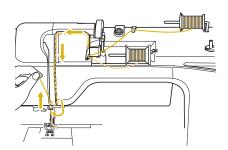

 Continue threading however do not pass the thread in the needle bar thread guide "6" on the needle bar. Thread the needle on the right side.




- ① Needle bar thread guide
- Press .
- Select a stitch pattern. (Example:
  - \* Refer to the "STITCH SETTING CHART" on page S-68 for the proper stitch to use with presser foot "J".
  - → The selected stitch is displayed.



#### Note

- If the Www key is light gray after selecting the stitch, the selected stitch cannot be sewn in the twin needle mode.
- Press IIII to select the twin needle mode.

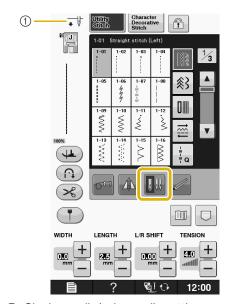

- ① Single needle/twin needle setting
- → **w** appears.


## **A** CAUTION

 Be sure to set the twin needle mode when using the twin needle. Using the twin needle while the machine is in single needle mode could cause the needle to break, resulting in damage.



#### Start sewing.

Sample of Twin Needle Sewing

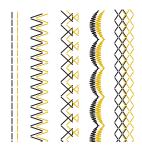



#### Memo


• To change direction when sewing with the twin needle, raise the needle from the fabric, raise the presser foot lever, and then turn the fabric.

# Using Threads that Unwind Quickly

## **■** Using the Spool Net

If using transparent nylon monofilament thread, metallic thread, or other strong thread, place the included spool net over the spool before using it. When using specialty threads, threading must be done manually.

If the spool net is too long, fold it once to match it to the spool size before placing it over the spool.

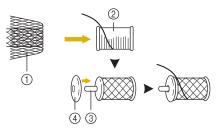



- ② Thread spool
- ③ Spool pin
- ④ Spool cap





#### Memo

 - When threading the spool with the spool net on, make sure that 5 cm - 6 cm (approx. 2 inches - 2-1/2 inches) of thread are pulled out.
- It may be necessary to adjust the thread tension when using the spool net.

## **■** Using the Vertical Spool Pin

Use the vertical spool pin when using an irregularly shaped thread spool, and when sewing with metallic thread.



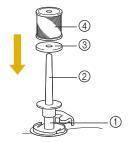

- Bobbin winder shaft
- ② Vertical spool pin
- ③ Spool felt
- 4 Thread spool



Install the spool felt and the thread spool in that order, and then thread the upper thread.



#### Memo

- When setting the thread spool, set it so that the thread winds off from the front of the spool.
- If using metallic thread, we recommend that you use a 90/14 home sewing machine needle.
- Using the vertical spool pin with certain types of threads will keep the thread from twisting as it comes off the spool pin.

 
## **CHANGING THE PRESSER FOOT**

## **A** CAUTION


- Always press on the screen before changing the presser foot. If with is not pressed and the "Start/Stop" button or another button is pressed, the machine will start and may cause injury.
- Always use the correct presser foot for the selected stitch pattern. If the wrong presser foot is used, the needle may strike the presser foot and bend or break, and may cause injury.
- Only use presser feet made for this machine. Using other presser feet may lead to accident or injury.

## **Removing the Presser Foot**


Press the "Needle Position" button to raise the needle.



- Press 📳 .
  - \* If the message "OK to automatically lower the presser foot?" appears on the LCD screen, press OK to continue
  - → The entire screen becomes white, and all keys and operation buttons are locked.
- Raise the presser foot lever.

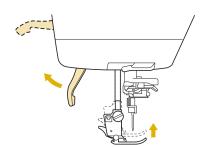

Press the black button on the presser foot holder and remove the presser foot.

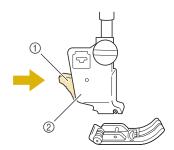


- Black button
- Presser foot holder

## **Attaching the Presser Foot**
 
## **A** CAUTION

- Make sure that the presser foot is installed in the correct direction, otherwise the needle may strike the presser foot, breaking the needle and causing injuries.
- Place the new presser foot under the holder, aligning the foot pin with the notch in the holder. Lower the presser foot lever so that the presser foot pin snaps into the notch in the holder.



- ① Notch
- ② Pin
- Press to unlock all keys and buttons.
- Raise the presser foot lever.

# Attaching the Presser Foot with the Included Adapter

You can attach the free motion echo quilting foot "E" and the optional walking foot, the optional free motion quilting foot and so on, using the included adapter and small screw.


The following procedure shows how to attach the free motion echo quilting foot "E" as an example.






# ■ Attaching the Free Motion Echo Quilting Foot "E"


- Follow the steps in "Removing the Presser Foot" in the previous page.
- Loosen the screw of the presser foot holder to remove the presser foot holder.

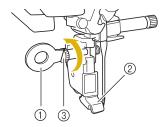

- ① Disc-shaped screwdriver
- ② Presser foot holder
- ③ Presser foot holder screw
- Remove the screw of the presser foot completely from the presser foot shaft.

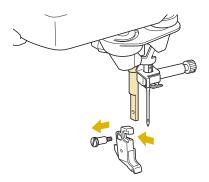


Set the adapter on the presser foot bar, aligning the flat side of the adapter opening with the flat side of the presser bar. Push it up as far as possible, and then tighten the screw securely with the screwdriver.

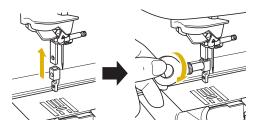

Attach the free motion echo quilting foot "E" on the left side of the adapter with the holes in the quilting foot and adapter aligned.



Tighten the screw with the included screwdriver.

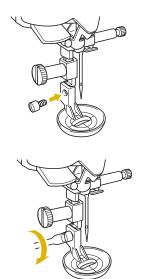

## **A** CAUTION

 Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.

## **CHANGING THE NEEDLE**

 
## **A** CAUTION

- Always press on the screen before changing the needle. If with is not pressed and the Start/Stop button or another operation button is pressed accidentally, the machine will start and injury may result.
- Use only sewing machine needles made for home use. Other needles may bend or break and may cause
- Never sew with a bent needle. A bent needle will easily break and may cause injury.




#### Memo

• To check the needle correctly, place the flat side of the needle on a flat surface. Check the needle from the top and the sides. Throw away any bent needles.



 - 1 Parallel space
- (2) Level surface (bobbin cover, glass, etc.)
- Press the "Needle Position" button to raise the needle.





#### Press Q O

- If the message "OK to automatically lower the presser foot? " appears on the LCD screen, press OK
- → The entire screen becomes white, and all keys and operation buttons are locked.




#### Note

• Before replacing the needle, cover the hole in the needle plate with fabric or paper to prevent the needle from falling into the machine.



Use the screwdriver to turn the screw toward the front of the machine and loosen the screw. Remove the needle.

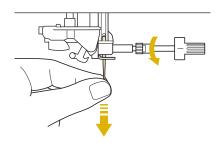




#### **Note**

 Do not apply pressure to the needle clamp screw. Doing so may damage the needle or machine.





With the flat side of the needle facing the back, insert the new needle all the way to the top of the needle stopper (viewing window) in the needle clamp. Use a screwdriver to securely tighten the needle clamp screw.

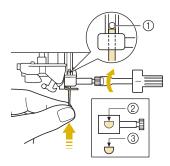

- ① Needle stopper
- ② Hole for setting the needle
- ③ Flat side of needle

## **A** CAUTION

- Be sure to push in the needle until it touches the stopper, and securely tighten the needle clamp screw with a screwdriver. If the needle is not completely inserted or the needle clamp screw is loose, the needle may break or the machine may be damaged.
- Press to unlock all keys and buttons.

## ABOUT THE NEEDLE AND FABRIC

#### About the Needle

The sewing machine needle is probably the most important part of the sewing machine. Choosing the proper needle for your sewing project will result in a beautiful finish and fewer problems. Below are some things to keep in mind about needles.

- The smaller the needle number, the finer the needle. As the numbers increase, the needles get thicker.
- Use fine needles with lightweight fabrics, and thicker needles with heavyweight fabrics.
- To avoid skipped stitches, use ball point needle (golden colored) 90/14 with stretch fabrics.
- To avoid skipped stitches, use ball point needle (golden colored) 90/14 when sewing character or decorative stitches.



#### **Note**

• Never use a thread of weight 20 or lower. It may cause malfunctions.

## **Fabric/Thread/Needle Combinations**

The following table provides information concerning the appropriate thread and needle for various fabrics. Please refer to this table when selecting a thread and needle for the fabric you wish to use.

Fabric type/Application		Thread		Size of needle
		Туре	Size	
Medium weight fabrics	Broadcloth	Cotton thread	60 - 90	75/11 - 90/14
	Taffeta	Synthetic thread		
	Flannel, Gabardine	Silk thread	50	1
Thin fabrics	Lawn	Cotton thread	60 - 90	65/9 - 75/11
	Georgette	Synthetic thread	1	
	Challis, Satin	Silk thread	50	1
Thick fabrics	Denim	Cotton thread	30	90/14 - 100/16
			50	1
	Corduroy	Synthetic thread	50 - 60	1
	Tweed	Silk thread	1	
Stretch fabrics	Jersey	Thread for knits	50 - 60	Ball point needle
	Tricot			(gold colored) 75/11 - 90/14
Easily frayed fabrics		Cotton thread	50 - 90	65/9 - 90/14
		Synthetic thread		
		Silk thread	50	1
For top-stitching		Synthetic thread	30	100/16
		Silk thread	50 - 60	90/14 - 100/16



#### Memo

 
• For transparent monofilament nylon thread, always use needle sizes 90/14 or 100/16. The same thread is usually used for the bobbin thread and upper thread.

## **A** CAUTION

• Be sure to follow the needle, thread, and fabric combinations listed in the table. Using an improper combination, especially a heavyweight fabric (i.e., denim) with a small needle (i.e., 65/9 - 75/11), may cause the needle to bend or break, and lead to injury. Also, the seam may be uneven, the fabric may pucker, or the machine may skip stitches.

# USING FUNCTIONS BY CONNECTING THE ACCESSORY TO THE MACHINE

## **Using USB Media**



- ① USB port for mouse / media (USB 2.0)
- ② USB media




#### Memo

- USB media is widely used, however some USB media may not be usable with this machine. Please visit our website for more details.
- Depending on the type of USB media being used, either directly plug the USB device into the machine's USB port or plug the USB media Reader/Writer into the machine's USB port.

# Connecting the Machine to the Computer

Using the included USB cable, the sewing machine can be connected to your computer.

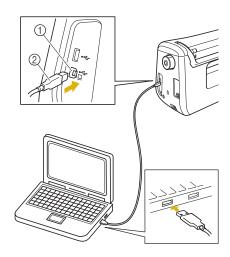

- ① USB port for computer
- ② USB cable connector



#### Note

- The connectors on the USB cable can only be inserted into a port in one direction. If it is difficult to insert the connector, do not insert it with force. Check the orientation of the connector.
- For details on the position of the USB port on the computer (or USB hub), refer to the instruction manual for the corresponding equipment.


## **Using a USB Mouse**

The USB mouse, connected to the sewing machine, can be used to perform a variety of operations in the screens.



#### Note

 If a mouse other than the optional USB mouse is used, it may not perform as described in this guide.

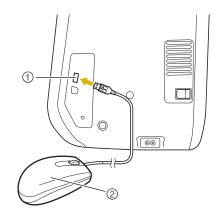

- (1) USB port for mouse / media
- ② USB mouse



#### Note

- Do not perform operations with the mouse at the same time that you are touching the screen with your finger or the included touch pen.
- A USB mouse can be connected or disconnected at any time.
- Only the left mouse button and its wheel can be used to perform operations. No other buttons can be used.


#### ■ Clicking a Key

When the mouse is connected, the pointer appears on the screen. Move the mouse to position the pointer over the desired key, and then click the left mouse button.



#### Memo

• Double-clicking has no effect.

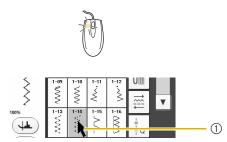


① Pointer

## **■** Changing Pages

Rotate the mouse wheel to switch through the tabs of the pattern selection screens.



 If page numbers and a vertical scroll bar for additional pages are displayed, click the left mouse button with the pointer on <a> /</a> / or ▲ / ▼ to display the previous or next page.

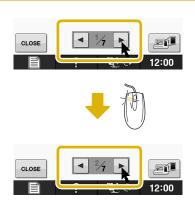

## **Using the Dual Feed Foot**

Dual feed foot enables you to have best fabric control when sewing difficult fabrics that slip easily, such as quilted fabrics, or fabrics that tend to stick to the bottom of a presser foot, such as vinyl, leather or synthetic leather.



#### **Note**

· When sewing with the dual feed foot, sew at medium to low speeds.



 
#### Memo

- The dual feed foot can only be used with straight or zigzag stitch patterns.
- When selecting stitches to be used with the dual feed foot, only the stitches that can be used will be activated on the display.
- When sewing fabric that easily sticks together, a more attractive finish can be achieved by basting the beginning of sewing.

## ■ Attaching the Dual Feed Foot



Press the "Needle Position" button to raise the needle.






#### Press U

The entire screen becomes white, and all keys and operation buttons are locked.


## **A** CAUTION

• When attaching a presser foot, always press on the screen. You may accidentally press the "Start/Stop" button and possibly cause injury.


Raise the presser foot lever.

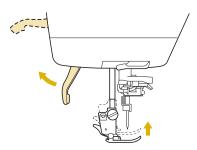

Push the black button on the presser foot holder and remove the presser foot.

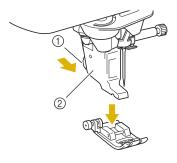


- ① Black button
- ② Presser foot holder
- → Remove the presser foot from the presser foot holder.
- Use the included screwdriver to loosen the screw of the presser foot holder, then remove the presser foot holder.

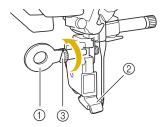

- Screwdriver
- ② Presser foot holder
- ③ Presser foot holder screw
- → Remove the presser foot holder.
- Position the dual feed foot to the presser foot bar by aligning the notch of the dual feed foot to the large screw.

 Side view




Hold the dual feed foot in place with your right hand, then using the included screwdriver securely tighten the large screw.



## **A** CAUTION

- Use the included screwdriver to firmly tighten the screw. If the screw is loose, the needle may strike the presser foot and possibly cause injury.
- Plug the connector of the dual feed foot into the jack on the back of your machine.

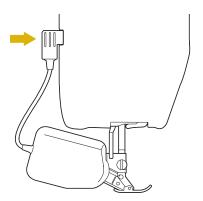


Press to unlock all keys and buttons.


→ All keys and operation buttons are unlocked, and the previous screen is displayed.

## **■** Replacing the Sole Part of the Dual **Feed Foot**

If you push down on the front part of the dual feed foot, the sole part of the dual feed foot will snap off.

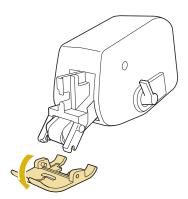

Attach the sole by aligning the pins with the notches and snap it into place.

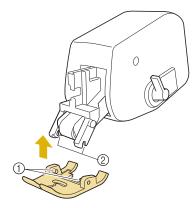

- 1) Pins
- 2 Notches

## ■ Using the Dual Feed Position Lever

When the feed position lever is up, the black roller belt on the dual feed is not engaged.



When the feed position lever is down, the black roller belt on the dual feed is engaged.





• Do not operate the lever while sewing.

## ■ Adjusting the Amount of Fabric **Feeding of the Dual Feed Foot**

The dual feed mechanism pulls the top fabric according to the set stitch length. With troublesome fabrics, fine tune the set length, by changing the dual feed feed adjustment in the settings screen.



#### **Note**

As a default, some keys mentioned in the following procedures appear in light gray and are not available. To enable the keys for specifying the settings, attach the dual feed foot and connector to the machine. The keys are enabled after the dual feed foot is detected.



→ The settings screen appears.

Display page 1 of the settings screen.



## Use or to increase or decrease the feeding of the top fabric.

- \* Select "00" for sewing in most cases.
- \* If the feed amount for the top fabric is too little, causing the fabric to be longer than the bottom fabric, press + to increase the feed amount for the
  - fabric, press  $\boxed{+}$  to increase the feed amount for the top fabric.
- \* If the feed amount for the top fabric is too much, causing the fabric to be shorter than the bottom

fabric, press — to decrease the feed amount for the top fabric.





Press CLOSE to return to the original screen.

# **B** Basic operations

# Chapter 2 Sensor Functions

CONVENIENT SEWING FEATURES BY USING THE SENSOR PEN61
CONNECTING THE SENSOR PEN61
Using the Sensor Pen Holder62
USING THE SENSOR PEN63
Using the Sensor Pen
Sensor Function Area

## CONVENIENT SEWING FEATURES BY USING THE SENSOR PEN

#### By using the sensor pen, you have the option of four separate functions

- Setting the guideline as a reference for your sewing position.
- Set the needle position of straight stitch.
- Adjust the width and "L/R SHIFT" position of a zigzag stitch.
- Set the ending point of a stitch pattern sequence.


## **A** CAUTION

The guideline marker is a laser; therefore, do not stare at the laser light directly. Otherwise it may cause blindness.



#### Note


 When the guideline does not appear clearly, set the brightness of the machine light dimmer to see them clearly. Refer to "Using the Machine Setting Mode Key" on page B-25.

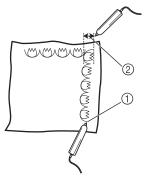

- ① When specifying the end point of your sewing, this function adjusts your pattern or stitch so that you end up with a complete or half pattern.
- ② It is easy to set the pattern width and position.

## **CONNECTING THE SENSOR PEN**

When connecting the sensor pen to the machine, make sure that the arrow on the sensor pen connector faces up, aligns with the arrow on the machine, and that the connector is firmly inserted into the jack.

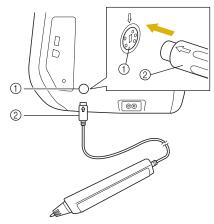

- Sensor pen jack
- ② Sensor pen connector

## CAUTION

- When connecting the sensor pen, make sure that the arrow on the sensor pen connector faces up and lines up with the arrow above the sensor pen jack, otherwise the connector pins will not align correctly and the connector will be damaged.
- When connecting or disconnecting the sensor pen, grab the connector, and then slowly push it straight in or pull it straight out.
- When disconnecting the sensor pen from the machine, do not pull on the cord, otherwise the sensor pen may be damaged.

## **Using the Sensor Pen Holder**


When connecting the sensor pen to the machine, attach the sensor pen holder to keep the sensor pen with the machine.

The right side of the holder can be used to hold the touch pen.




Sensor pen holder

- Using the point end of the cleaning brush or the seam ripper point, remove the protective cap covering the hole on the right side of the machine.
  - → Insert the point of the seam ripper or cleaning brush into the hole in the protective cap, and then lightly pull out the protective cap to remove it.

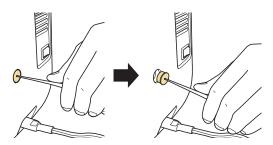


Firmly insert the sensor pen holder into the hole where the protective cap was removed.

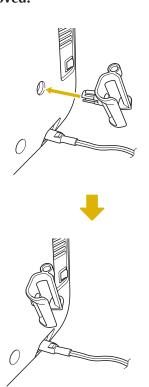



Set the sensor pen in the sensor pen holder with the pen tip pointing downward, and then connect the sensor pen to the machine.

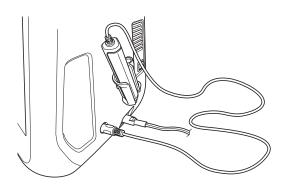


## **USING THE SENSOR PEN**

## **Using the Sensor Pen**

Hold the sensor pen, and then touch the point to be specified. When the tip of the sensor pen is pushed in, the position information is sent to the machine.

When using the sensor pen, touch slowly and gently for the definite operation.

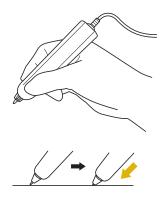

#### 2 Touch Functions

- 1) **Touch:** Touch a point with the sensor pen, then immediately lift up the pen.
- 2) Long touch: Touch a point with the sensor pen and hold it down for at least one second to activate the functions that you just selected.



- Once a point is touched with the sensor pen and the entered information is applied in the screen, perform the next operation. Repeatedly touching a point with the sensor pen may prevent the information from being correctly read.
- Do not drag the sensor pen tip on the machine, otherwise the sensor pen tip may be chipped off.
- If there is any problem with the guideline marker, the sensor function may not operate correctly.




#### Memo

 The sensor pen can be used to touch on the screen as a touch pen.

## **Important Information about** Sensor Pen

The sensor pen emits the signal to the machine, and then the sensor pen receiver receives the signal to specify the position.

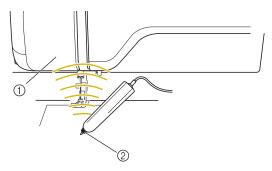

- 1) Sensor pen receiver inside the machine
- 2 Signal is waved out from the sensor pen

## CAUTION

Do not insert any object into the sensor pen and the receiver, otherwise the machine may be damaged.

## **A** IMPORTANT

- Do not put your hand, the fabric or any object between the machine and the sensor pen, otherwise the sensor pen receiver may not receive the ultrasonic wave.
- Do not use the machine close to any other unit which produces ultrasonic wave or a vibration sound, otherwise interference may occur.

## **Calibrating the Sensor Pen**

Before using the sensor pen for the first time be sure to calibrate it to the screen. Doing so allows the machine to learn the position you usually hold a pen.

Hold the sensor pen at a comfortable angle and then calibrate the machine according to the procedure below.

Be sure to keep the sensor pen at the same angle while calibrating the first and second points.




- Press .
  - → The settings screen appears.
- **2** Display page 6 of the settings screen.




- Press \_\_\_\_\_ after connecting the sensor pen to the machine.
  - → The Sensor Function Calibration screen appears.



## First, touch the green dot marking on the needle plate using the sensor pen.

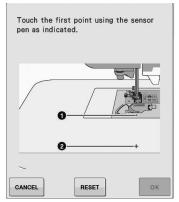


\* Touch on the needle plate cover.

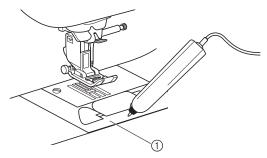

- 1) Needle plate cover
- \* A beep will sound and the ① will change to red. (If you cannot hear the beep, check that the volume setting on page 4/10 of your settings is 1 or higher.)
- \* Press CANCEL to redo the first point by starting over from step 3.



## Touch the second point of center of cross-hair using the sensor pen.

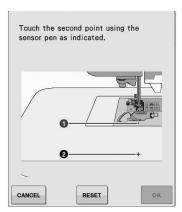


\* Touch on the point in the illustrations.



1 Flat bed attachment



Press ok to finish the calibration. To repeat the calibration touch the first point again using the sensor pen, and continue with step 5.

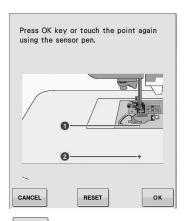

- \* Press CANCEL to return to the original screen without finishing the calibration.
- \* Press RESET to reset the calibration.


## **USING SENSOR FUNCTIONS WITH SEWING STITCH**

Before using the sensor functions, carefully read "Utility Stitches" chapter to familiarize yourself with the machine operations.

The sensor functions are performed using the sensor pen.

### **Sensor Function Area**

When using the sensor pen with utility stitches, the operations may differ depending on the area to be touched.

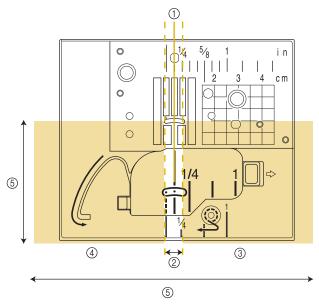

	1.5	Ta
1	Center needle	Sewing position for stitch patterns sewn
	position	with the center needle position
2	Setting area	Area 3.5 mm to the left and right of ①. Touch this area with the sensor pen to specify a position.  Area 7 mm, when positioning the guideline marker.
3	Adjustment area (right)	Touch: With each touch, the setting increases by 0.5 mm. This allows fine adjustments to be made after touching within ② to specify a position.  Long touch: After touching ② to specify a position or adjusting the position by touching within ③ or ④, long touch to apply the setting.
4	Adjustment area (left)	Touch: With each touch, the setting decreases by 0.5 mm. This allows fine adjustments to be made after touching within ② to specify a position.  Long touch: Apply the setting in the same way as a long touch within ③.
(5)	The sensor pen touch range extends approximately 200 mm (7-7/8 inches) toward you from the needle drop point and 130 mm (approx. 5 inches) to either side of the middle (center) needle position.	



#### Memo

- There is a narrow space between the setting area and the adjustment area, when touched will allow the setting to be changed to the maximum increased or decreased setting.
- The borderline areas are respectively 6.5 mm (approx. 1/4 inch) wide when positioning the guideline marker, and 10 mm (approx. 3/8 inch) wide in other cases.


# **Specifying the Guideline Marker Position With the Sensor Pen**

The sewing position will be indicated by a red guideline marker.

The position of the guideline marker can be adjusted to your desired location.






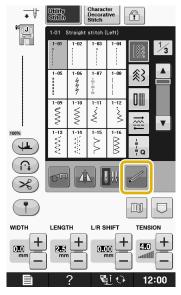

→ The sensor functions screen appears.




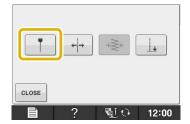

→ The guideline marker position setting screen appears and the guideline marker flashes.

# With the sensor pen, touch the location to be specified as the guideline marker position.

- → The machine's guideline marker moves to the touched position and flashes.
- → The distance from the left reference line to the touched position appears in the guideline marker position setting screen.
- → The stitch preview on the upper left side of the screen is updated according to the specified setting.

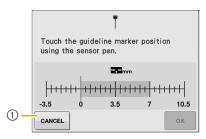

 Press to stop specifying a setting with the sensor pen.



#### **Note**

• The following error message appears if the area outside of the sensor pen touch range is touched. Press CLOSE, and then touch within the sensor pen touch range.




#### Memo

- The position can be precisely adjusted by touching the adjustment areas with the sensor pen.
- When using the sensor pen to specify the guideline marker position, it may not be possible to specify exactly the desired location. In this case, use either of the following operations to make fine adjustments.
  - Touch an adjustment area with the sensor pen to adjust the position in 0.5 mm increments.
  - Adjust the position with the guideline marker scale shown in step 5.



## Press ok to apply the guideline marker position setting.

\* The setting can also be applied by a long touch of the sensor pen within the adjustment area.

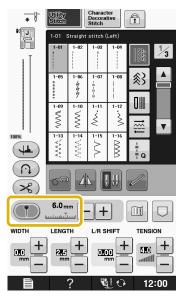

- → The stitch selection screen appears again, and the setting in the guideline marker scale changes to the setting specified with the sensor pen.
- → The guideline marker stops flashing.




#### **Note**

• If you set the needle drop position, the stitch width or stitch position after specifying the guideline marker position, the guideline marker may move while setting. The guideline marker moves back to the specified position after the needle drop position, stitch width or stitch position is set and the original screen appears.


# **Specifying the Needle Drop Position With the Sensor Pen**

- Turn on the machine.
- **2** Select a stitch pattern.
- 3 Press .

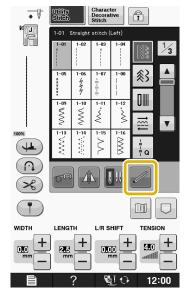

 $\rightarrow$  The sensor functions screen appears.



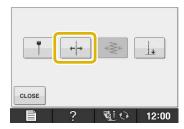


→ The reference position setting screen appears, and the red guideline marker flashes at the machine's sewing position.




#### Note

 • If is not available, the sewing reference position cannot be specified with the selected stitch pattern. Select a different stitch pattern.



- → The guideline marker moves to the touched position and flashes.
- → The distance from the left reference line to the touched position appears in the reference position setting screen.
- → The stitch preview on the upper left side of the screen is updated according to the specified setting.

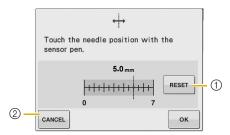

- ① Press to return the needle drop position to its default setting.
- ② Press to stop specifying a setting with the sensor pen.



#### **Note**

 
• The following error message appears if the area outside of the sensor pen touch range is touched. Press CLOSE, and then touch within the sensor pen touch range.






#### Memo

- The position can be precisely adjusted by touching the adjustment areas with the sensor pen.
- To change the setting, use the sensor pen to touch the desired location for the reference position.




 - The setting can also be applied by long touching an adjustment area with the sensor pen.
- → The needle moves to the specified position to start sewing.
- → The stitch selection screen appears again, and the stitch width changes to the setting specified with the sensor pen.
- → The guideline marker stops flashing.




## **Using the Sensor Pen to Specify** the Stitching Width and Stitch **Position**

 The zigzag width and "L/R SHIFT" value can be specified.




- Original stitching width/position
- ② Adjusted stitching width/position
- Turn on the machine.
- Select a stitch pattern.



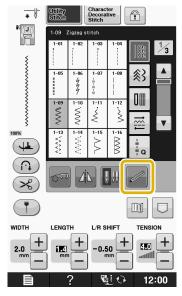

→ The sensor functions screen appears.




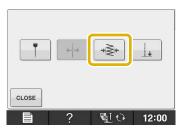

→ The stitching width setting screen appears, and the guideline marker flashes at the present left side of the stitch width.

#### Note

- If → is not available, the stitching width cannot be specified with the selected stitch pattern. Select a different stitch pattern.
- With the sensor pen, touch the first point for the stitching width.
  - → The distance from the left reference line to the touched position appears in the stitching width setting screen.

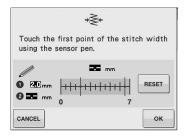

→ The guideline marker moves to the touched position and flashes.



#### Note

 
 The following error message appears if the area outside of the sensor pen touch range is touched. Press CLOSE, and then touch within the sensor pen touch range.





#### Memo


 The position can be precisely adjusted by touching the adjustment areas with the sensor pen.



\* The setting can also be applied by long touching an adjustment area with the sensor pen.

## With the sensor pen, touch the second point for the stitching width.

- → The distance from the left reference line to the touched position appears in the stitching width setting screen.
- → The stitch preview on the upper left side of the screen is updated according to the specified setting.
- → The guideline marker moves to the touched position and flashes.

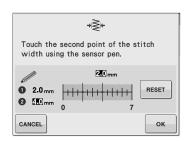




#### Note

- If the distance between the specified first and second points is wider than the maximum stitch width for the selected stitch pattern, the second point cannot be specified. Specify a location closer to the first point.
- If the distance between the specified first and second points is narrower than the minimum stitch width for the selected stitch pattern, the second point cannot be specified. Specify a location further away from the first point.



## Press ok to apply the second point of the stitching width.

- \* The setting can also be applied by long touching an adjustment area with the sensor pen.
- → The needle moves to the specified position to start sewing.
- → The stitch selection screen appears again, and the stitch width and "L/R SHIFT" change according to the settings specified with the sensor pen.

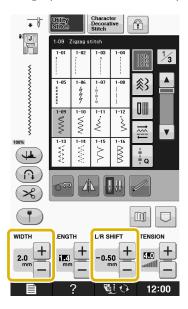




#### Note

- With multiple patterns that have been combined, the specified stitching width is applied to the pattern with the largest stitch width. With patterns other than combined patterns, the stitch width is adjusted to the stitching width specified for the pattern with the largest stitch width.
- With multiple patterns that have been combined, the settings specified for the stitch width and "L/R SHIFT" in the stitch selection screen are for the first pattern to be sewn. The value may differ from the stitch width setting.
- With twin needle sewing, the stitching width is specified with the left needle as the reference.

# **Using the Sensor Pen to Specify** the Sewing End Point


Before start sewing, test the pattern first from steps 1 to 5 to see if the stitch can be used with this function.

- Turn on the machine.
- Select a stitch pattern.
- Start sewing, and then stop the machine when the desired sewing end point enters the sensor pen touch range.
- **Press**

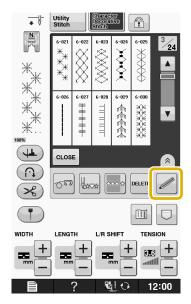

→ The sensor functions screen appears.



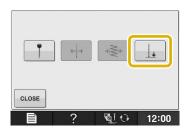


→ The sewing end point setting screen appears.

### **Note**

is not available, the sewing end point cannot be specified with the selected stitch pattern. Select a different stitch pattern.

With the sensor pen, touch the location to be specified as the sewing end point.

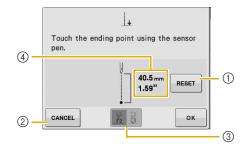


- 1) Press to erase the specified sewing end point.
- ② Press to stop specifying a setting with the sensor pen.
- Press to select whether or not sewing is ended with a complete pattern when a decorative stitch is selected.
- 4) The distance from the current needle position to the touched location appears.
- See "Decorative Stitch End Setting Key" on page B-72.



### **Note**

 The displayed distance is not the length of a straight line connecting the current needle position and the location touched with the sensor pen. It is the length of a perpendicular intersection for the location touched with the sensor pen and the sewing line.

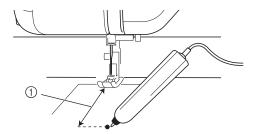

- 1 Displayed distance
- The following error message appears if the area outside of the sensor pen touch range is touched. Press CLOSE, and then touch within the sensor pen touch range.



- When sewing with this setting, be sure to feed the fabric straight, otherwise the actual end point may be different from the point you set.
- When using the sensor pen to specify the sewing end point, the sewing end point may be slightly different than the specified location, depending on where the sewing machine is stopped in order to specify the setting.

### **Decorative Stitch End Setting Key**

R	The end of stitching is not adjusted. When the end point is reached, sewing stops immediately, even if the stitch pattern is not complete.	(m)~(m)
333	The length of the stitch pattern is adjusted so that sewing will stop at the specified end point with a complete pattern.	




#### Note

- The decorative stitch end setting key is not available with the following situations.
  - When selecting the Utility Stitch patterns.
  - When the decorative stitch end setting key is grayed out.
  - When specifying the sewing end point at the point that needs adjustment more than 10% of the length of a pattern, to finish a pattern completely.



# Press ok to apply the sewing end point setting.

- \* The setting can also be applied by long touching an adjustment area with the sensor pen.
- → When a sewing end point setting is specified, ↓↓ appears in the upper-left corner of the screen.

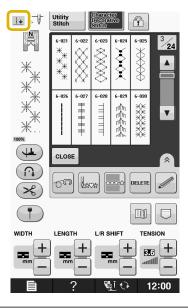



### Note

 If a different pattern is selected after the sewing end point has been specified, the end point setting is erased.



### Start sewing again.

\* The machine stops at the specified end point automatically.



This section describes procedures for using the various utility stitches as well as other functions. It provides details on basic sewing in addition to the more expressive features of the machine, from sewing tubular pieces and buttonholes to sewing the character and decorative stitch patterns. Page number starts with "S" in this section.

The screen display and machine illustration may vary slightly, depending on the countries or regions.

Chapter1 Sewing Basics	S-2
Chapter2 Utility Stitches	S-20
Chapter3 Character/Decorative Stitches	S-76
Chapter4 How to Create Bobbin Work (Sewing)	S-104

# **S** Sewing

# Chapter *I*Sewing Basics

SEWING3
Sewing a Stitch3
■ Using the Foot Controller
Sewing Reinforcement Stitches5
Automatic Reinforcement Stitching5
Sewing Curves7
Changing Sewing Direction7
■ Sewing a Seam Allowance of 0.5 cm or Less
Sewing Heavyweight Fabrics7
■ If the Fabric does not Fit under the Presser Foot
■ If the Fabric does not Feed8
Sewing Hook-and-Loop Fastener8
Sewing Lightweight Fabrics9
Sewing Stretch Fabrics9
STITCH SETTINGS10
Setting the Stitch Width10
Setting the Stitch Length10
Setting the "L/R SHIFT"11
Setting the Thread Tension12
Proper Thread Tension
■ Upper Thread is Too Tight
■ Upper Thread is Too Loose
USEFUL FUNCTIONS13
Automatic Thread Cutting13
Adjusting the Needle Drop Position with the Guideline Marker
(For models equipped with the guideline marker)14
Adjusting the Guideline Marker Position14 Adjusting the Brightness of the Guideline Marker14
Using the Knee Lifter15
Pivoting15
Automatic Fabric Sensor System
(Automatic Presser Foot Pressure)17
Needle Position – Stitch Placement18


# **SEWING**

# **A** CAUTION

- To avoid injury, pay special attention to the needle while the machine is in operation. Keep your hands away from moving parts while the machine is in operation.
- Do not stretch or pull the fabric during sewing. Doing so may lead to injury.
- Do not use bent or broken needles. Doing so may lead to injury.
- Do not attempt to sew over basting pins or other objects during sewing. Otherwise, the needle may break and cause injury.
- If stitches become bunched, lengthen the stitch length setting before continuing sewing. Otherwise, the needle may break and cause injury.

# **Sewing a Stitch**


- Turn the main power to ON and display the utility stitches, and push the "Needle Position" button to raise the needle.
- Press the key of the stitch you want to sew.

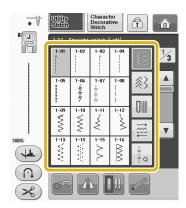


- → The symbol of the correct presser foot will be displayed in the upper left corner of the LCD screen.
- Install the presser foot ("CHANGING THE PRESSER FOOT" of "Basic operations").

# **A** CAUTION

  Always use the correct presser foot. If the wrong presser foot is used, the needle may strike the presser foot and bend or break, possibly resulting in injury.
 Refer to page S-68 for presser foot recommendations.




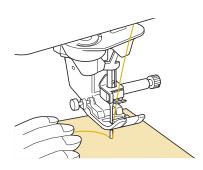



 The black button on the left side of presser foot "J" should be pressed only if the fabric does not feed or when sewing thick seams (see page S-8). Normally, you can sew without pressing the black button.

 - **G** Lower the presser foot.
  - \* You do not have to pull up the bobbin thread.
- Adjust the sewing speed with the speed control slide.
  - \* You can use this slide to adjust sewing speed during sewing.




- (1) Slow
- ② Fast



# Press the "Start/Stop" button to start sewing.


\* Guide the fabric lightly by hand.

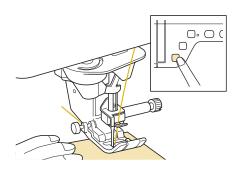




### Memo

- When the foot controller is being used, you cannot start sewing by pressing the "Start/Stop" button.
- Press the "Start/Stop" button again to stop sewing.

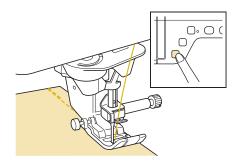

 Press the "Thread Cutter" button to trim the upper and lower threads.



→ The needle will return to the up position automatically.


# **A** CAUTION

 - Do not press the "Thread Cutter" button after the threads have been cut. Doing so could tangle the thread or break the needle and damage the machine.
- Do not press the "Thread Cutter" button when there is no fabric set in the machine or during machine operation. The thread may tangle, possibly resulting in damage.



#### Note

 When cutting thread thicker than #30, nylon monofilament thread, or other decorative threads, use the thread cutter on the side of the machine.



10

When the needle has stopped moving, raise the presser foot and remove the fabric.



#### Memo

• This machine is equipped with a bobbin thread sensor that warns you when the bobbin thread is almost empty. When the bobbin thread is nearly empty, the machine automatically stops. However, if the "Start/Stop" button is pressed, a few stitches can be sewn. When the warning displays, re-thread the machine immediately.

### **■** Using the Foot Controller

You can also use the foot controller to start and stop sewing.

# **A** CAUTION

 Do not allow fabric pieces and dust to collect in the foot controller. Doing so could cause a fire or an electric shock.




### Memo

 When the foot controller is being used, you cannot start sewing by pressing the "Start/Stop" button.

(For embroidery and sewing machine only)

- The foot controller cannot be used when embroidering.
- The foot controller can be used for sewing utility and decorative stitches when the embroidery unit is attached.

Insert the foot controller plug into its jack on the machine.

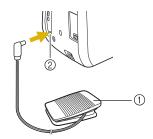

- Foot controller
- ② Foot controller jack
- Slowly depress the foot controller to start sewing.






### Memo

 - The speed that is set using the sewing speed controller is the foot controller's maximum sewing speed.
- Release the foot controller to stop the machine.

# **Sewing Reinforcement Stitches**


Reverse/reinforcement stitches are generally necessary at the beginning and end of sewing. You can use the "Reverse Stitch" button to sew reverse/reinforcement stitches.

When you keep pressing the "Reinforcement Stitch" button, the machine will sew reinforcement stitch at that point 3 to 5 stitches, and then stop.



- ① "Reverse Stitch" button
- ② "Reinforcement Stitch" button

If the automatic reinforcement stitch is selected on the screen, reverse stitches (or reinforcement stitches) will be sewn automatically at the beginning of sewing when the "Start/Stop" button is pressed. Press the "Reverse Stitch" button or "Reinforcement Stitch" button to sew reverse stitches or reinforcement stitches automatically at the end of sewing.

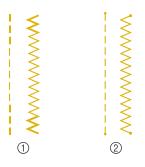

- 1 Reverse stitch
- ② Reinforcement stitch

The operation performed when the button is pressed differs depending on the selected pattern. (Refer to the table in "Automatic Reinforcement Stitching" on page S-5.)



### Memo

- When you press the "Reinforcement Stitch" button while sewing character/decorative stitch pattern, you can end sewing with a full stitch instead of at a mid-point.
- The green light on the right of the "Reinforcement Stitch" button lights up while the machine is sewing a full motif, and it automatically turns off when the sewing is stopped.

# Automatic Reinforcement Stitching


After selecting a stitch pattern, turn on the automatic reinforcement stitching function before sewing, and the machine will automatically sew reinforcement stitches (or reverse stitches, depending on the stitch pattern) at the beginning and end of sewing.



Select a stitch pattern.



# Press ( ) to set the automatic reinforcement stitching function.

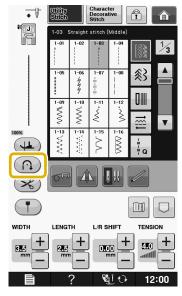


 $\rightarrow$  The key will display as  $\bigcirc$ .





### Memo

- Some stitches, such as buttonholes and bar tacks, require reinforcement stitches at the beginning of sewing. If you select one of these stitches, the machine will automatically turn on this function (the key appears as when the stitch is selected).
- Set the fabric in the start position and start sewing.

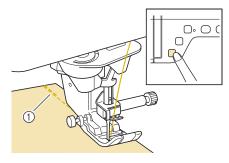

- 1) Reverse stitches (or reinforcement stitches)
- → The machine will automatically sew reverse stitches (or reinforcement stitches) and then continue sewing.




### Memo

• If you press the "Start/Stop" button to pause sewing, press it again to continue. The machine will not sew reverse/reinforcement stitches again.



### Press the "Reverse Stitch" button or "Reinforcement Stitch" button.

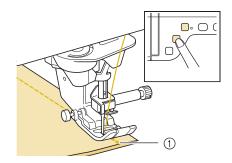

- ① Reverse stitches (or reinforcement stitches)
- → The machine will sew reverse stitches (or reinforcement stitches) and stop.



### Memo

• To turn off the automatic reinforcement stitching function, press (a) again, so it appears as ( ? ).


The operation performed when the button is pressed differs depending on the selected pattern. Refer to the following table for details on the operation that is performed when the button is pressed.

	"Reverse Stitch"	"Reinforcement Stitch" button
Utility   +	Machine starts sewing the stitches and only sews reverse stitches while holding the "Reverse Stitch" button.	Machine starts sewing the stitches and sews 3 - 5 reinforcement stitches while holding the "Reinforcement Stitch" button.
Utility   +	Machine starts sewing the stitches and only sews reverse stitches while holding the "Reverse Stitch" button.	Machine starts sewing the stitches and sews 3 - 5 reinforcement stitches while holding the "Reinforcement Stitch" button.
Utility   +	Machine sews reverse stitches at the beginning and end of sewing.	Machine sews reverse stitches at the beginning and reinforcement stitches at the end of sewing.
Utility   +	Machine sews reinforcement stitches at the beginning and reverse stitches at the end of sewing.	Machine sews reinforcement stitches at the beginning and end of sewing.

	"Reverse Stitch"	"Reinforcement
	button 🔒	Stitch" button
Character Decorative Stritch	Machine starts sewing and then sews reinforcement stitches while holding the "Reverse Stitch" button.	Machine starts sewing at the beginning, then completes the pattern and sews reinforcement stitches at the end of sewing.
Character Decorative Stitch	Machine sews reinforcement stitches at the beginning and sews reinforcement stitches when the "Reverse Stitch" button is touched.	Machine sews reinforcement stitches at the beginning, then completes the pattern and sews reinforcement stitches at the end of sewing.


# **Sewing Curves**

Sew slowly while keeping the seam parallel with the fabric edge as you guide the fabric around the curve.

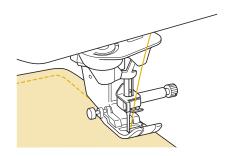

# **Changing Sewing Direction**


Stop the machine. Leave the needle in the fabric, and press the "Presser Foot Lifter" button to raise the presser foot. Using the needle as a pivot, turn the fabric so that you can sew in the new direction. Press the "Presser Foot Lifter" button to lower the presser foot and start sewing.

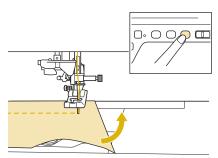

The pivot setting is useful when changing the sewing direction. When the machine is stopped at the corner of the fabric, the machine stops with the needle in the fabric and the presser foot is automatically raised so the fabric can easily be rotated ("Pivoting" on page S-15).

# ■ Sewing a Seam Allowance of 0.5 cm or Less


Baste the corner before sewing, and then, after changing the sewing direction at the corner, pull the basting thread toward the back while sewing.

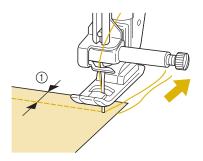

① 5 mm (approx. 3/16 inch)

# **Sewing Heavyweight Fabrics**

The sewing machine can sew fabrics up to 6 mm (approx. 1/4 inch) thick. If the thickness of a seam causes sewing to occur at an angle, help guide the fabric by hand and sew on the downward slope.

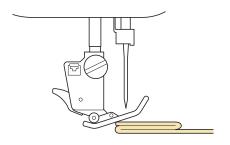


# **A** CAUTION

- Do not forcefully push fabrics more than 6 mm (approx. 1/4 inch) thick through the sewing machine. This may cause the needle to break and cause injury.
- Thicker fabrics require a larger needle ("CHANGING THE NEEDLE" of "Basic operations").

# ■ If the Fabric does not Fit under the Presser Foot

If the presser foot is in the up position, and you are sewing heavyweight or multiple layers of fabric which do not fit easily under the presser foot, use the presser foot lever to raise the presser foot to its highest position. The fabric will now fit under the presser foot.

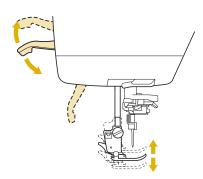




### Memo

 You cannot use the presser foot lever after the presser foot has been raised using the "Presser Foot Lifter" button.

### ■ If the Fabric does not Feed


If the fabric does not feed when starting to sew or when sewing thick seams, press the black button on the left side of presser foot "J".

- Raise the presser foot.
- While keeping the black button on the left side of presser foot "J" pressed in, press the "Presser Foot Lifter" button to lower the presser foot.

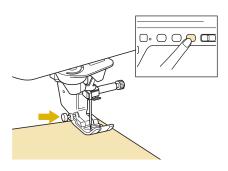



### Release the black button.

 

→ The presser foot remains level, enabling the fabric to be fed.



### Memo

- Once the trouble spot has been passed, the foot will return to its normal position.
- When "Automatic Fabric Sensor System" (Automatic Presser Foot Pressure) in the machine settings screen is set to "ON", the thickness of the fabric is automatically detected by the internal sensor so the fabric can be fed smoothly for best sewing results. (see page S-17 for details.)

# **Sewing Hook-and-Loop Fastener**

# **A** CAUTION


- Do not use adhesive backed hook-and-loop fastener designed for sewing. If the adhesive sticks to the needle or the bobbin hook race, it may cause malfunction.
- If the hook-and-loop fastener is sewn with a fine needle (65/9-75/11), the needle may bend or break.



### **Note**

 Before starting to sew, baste the fabric and hook-and-loop fastener together.


Make sure that the needle passes through the hook-and-loop fastener by rotating the handwheel and lower the needle into the hook-and-loop fastener before sewing. Sew the edge of the hook-and-loop fastener at a slow speed. If the needle does not pass through the hook-and-loop fastener, replace the needle with the needle for thick fabrics ("Fabric/Thread/Needle Combinations" of "Basic operations").

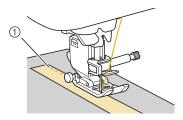

1) Edge of the hook-and-loop fastener

# **Sewing Lightweight Fabrics**

Place thin paper or tear away embroidery stabilizer under thin fabrics to make sewing easier. Gently tear off the paper or the stabilizer after sewing.

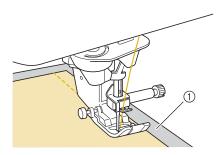

1 Thin paper

# **Sewing Stretch Fabrics**


First, baste together the pieces of fabric, and then sew without stretching the fabric.

In addition, a better result can be achieved by using thread for knits or a stretch stitch.



### Memo

• For best results when sewing stretch fabrics, decrease the pressure of the presser foot ("Using the Machine Setting Mode Key" of "Basic operations").

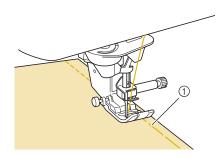

Basting stitching

# **STITCH SETTINGS**

When you select a stitch, your machine automatically selects the appropriate stitch width, stitch length, "L/R SHIFT", and upper thread tension. However, if needed, you can change any of the individual settings.



#### Note

- Settings for some stitches cannot be changed (refer to the "STITCH SETTING CHART" on page S-68).
- If you turn off the machine or select another stitch without saving stitch setting changes ("Saving Your Stitch Settings" on page S-22), the stitch settings will return to their default settings.

# **Setting the Stitch Width**

Follow the steps below when you want to change the zigzag stitch pattern width.






### Memo

 For an alternate method of changing the stitch width using the speed controller, see page S-39.


### **Example:**

Press — to narrow the zigzag stitch pattern width.

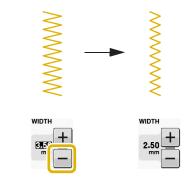

→ The value in the display gets smaller.

Press + to widen the zigzag stitch pattern width.

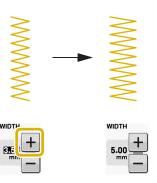

→ The value in the display gets bigger.



### Memo

Press after pressing to return to the original setting.

 


### Note

 After adjusting the stitch width, slowly rotate the handwheel toward you (counterclockwise) and check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may bend or break.


# **Setting the Stitch Length**

Follow the steps below when you want to change the stitch pattern length.




### **Example:**

Press \_ to shorten the stitch length.

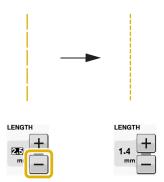

 $\rightarrow$  The value in the display gets smaller.

Press + to lengthen the stitch length.

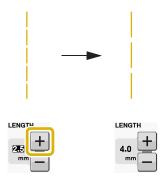

→ The value in the display gets bigger.



### Memo

- Press uto check changes made to the stitch.
- Press reser after pressing to return to the original setting.

# **A** CAUTION

• If the stitches get bunched together, lengthen the stitch length and continue sewing. Do not continue sewing without lengthening the stitch length. Otherwise, the needle may break and cause injury.


# Setting the "L/R SHIFT"

Follow the steps below when you want to change the placement of the zigzag stitch pattern by moving it left and right.




### **Example:**

Press — to shift the pattern to the left.

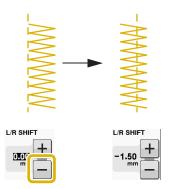

 $\rightarrow$  The value in the display appears with a minus sign.

Press + to shift the pattern to the right side of the left needle position.

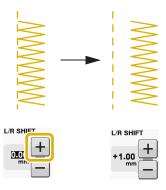

→ The value in the display appears with a plus sign.



### Memo

• Press after pressing to return to the original setting.

 


### Note

 After adjusting the "L/R SHIFT", slowly rotate the handwheel toward you (counterclockwise) and check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may bend or break.


# **Setting the Thread Tension**

You may need to change the thread tension, depending on the fabric and thread being used. Follow the steps below to make any necessary changes.



# **■** Proper Thread Tension

The upper thread and the bobbin thread should cross near the center of the fabric. Only the upper thread should be visible from the right side of the fabric, and only the bobbin thread should be visible from the wrong side of the fabric.

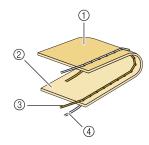

- ① Wrong side
- ② Surface
- ③ Upper thread
- (4) Bobbin thread


# ■ Upper Thread is Too Tight

 If the bobbin thread is visible on the right side of the fabric, the upper thread is too tight.



### Note

If the bobbin thread was incorrectly threaded, the upper thread may appear to be too tight. In this case, refer to "Setting the Bobbin" of "Basic operations" and rethread the bobbin thread.




- Bobbin thread
- ② Upper thread
- ③ Surface
- (4) Locks appear on surface of fabric



Press \_\_\_\_, to loosen the upper thread.

 When you finish sewing, remove the bobbin cover and then make sure that the thread is shown as below. If the thread is not shown as below, the thread is not inserted through the tension-adjusting spring of the bobbin case correctly. Reinsert the thread correctly. For details, refer to "Setting the Bobbin" of "Basic operations".

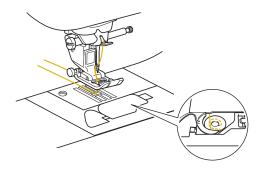


### **■** Upper Thread is Too Loose

If the upper thread is visible from the wrong side of the fabric, the upper thread is too loose.



### **Note**

• If the upper thread was incorrectly threaded, the upper thread may appear to be too loose. In this case, refer to "Upper Threading" of "Basic operations" and rethread the upper thread.

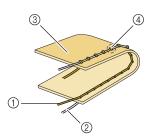

- 1 Upper thread
- ② Bobbin thread
- ③ Wrong side
- 4 Locks appear on wrong side of fabric

Press + , to tighten the upper thread.




• Press after pressing to return to the original setting.

# **USEFUL FUNCTIONS**


# **Automatic Thread Cutting**


After selecting a stitch pattern, turn on the automatic thread cutting function before sewing, and the machine will automatically sew reinforcement stitches (or reverse stitches, depending on the stitch pattern) at the beginning and end of sewing, and trim the threads at the end of sewing. This function is useful when sewing buttonholes and bar tacks.

- Select a stitch pattern.
- Press of to set the automatic thread cutting function.

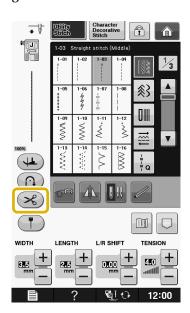

  $\rightarrow$  The key will display as %.



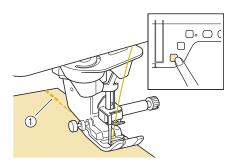


- ① Reverse stitches (or reinforcement stitches)
- → The machine will automatically sew reverse stitches (or reinforcement stitches) and then continue sewing.



### Memo

- If you press the "Start/Stop" button to pause sewing, press the same button again to continue. The beginning reverse/reinforcement stitches will not be sewn again.
- Press the "Reverse Stitch" button or "Reinforcement Stitch" button.

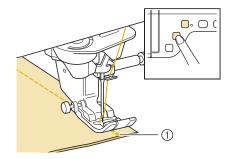

- ① Reverse stitches (or reinforcement stitches)
- → The machine will sew reverse stitches (or reinforcement stitches), then trim the thread.



### Memo

• To turn off the automatic thread cutting function, press again, so it appears




# Adjusting the Needle Drop Position with the Guideline Marker (For models equipped with the guideline marker)

The red guideline marker indicates the sewing position on the fabric.

You can adjust the sewing position by moving the guideline marker while checking the guideline marker on the fabric.

# **A** CAUTION

- The guideline marker is a laser; therefore, do not stare at the laser light directly. Otherwise it may cause blindness.
- Press to display the guideline marker.

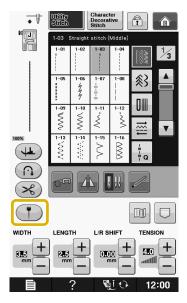


- → The guideline marker scale appears.
- \* Depending on the setting of "Initial Position" in the settings screen, the initial needle drop position is scaled as either 0.0 mm or 3.5 mm.
- Use or + to move the needle drop position.
  - → Adjust the position from 10.5 mm (3/8 inch) to the right of the left needle to -3.5 mm (-1/8 inch) to the left of the left needle.



- Press again to stop using the guideline marker.
- Adjusting the Guideline Marker Position

If the guideline marker indicates the position incorrectly in the center needle position, adjust the initial position in the settings screen.

- Press to display "Guideline Marker Adjustment" in the settings screen.
- Display settings screen.

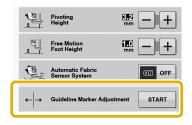


- Press START
  - → The "Guideline Marker Adjustment" screen appears.
- 4. Use or + to adjust the guideline marker position.



- ① Press to move the guideline marker to the left
- 2) Press to move the guideline marker to the right
- Press CLOSE twice to return to the original screen.
- Adjusting the Brightness of the Guideline Marker
- Follow steps from 1 to 3 to display the "Guideline Marker Adjustment" screen.

 - Use or + to adjust the brightness of the guideline marker.
  - → Set the brightness of the guideline marker from "1" for a dim marker, to "5" for the brightest marker, on the fabric.




Press CLOSE twice to return to the original screen.

# **Using the Knee Lifter**

Using the knee lifter, you can raise and lower the presser foot with your knee, leaving both hands free to handle the fabric.

Align the tabs on the knee lifter with the notches in the knee lifter slot on the front of the machine. Insert the knee lifter bar as far as possible.

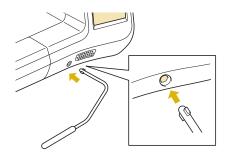

# **A** CAUTION

 Only change position of the knee lifter handle when knee lifter is not on the machine, otherwise the presser foot will go up, and then the knee lifter may damage the mounting slot on front of the machine.




### Note

 If the knee lifter bar is not pushed into the mounting slot as far as possible, it may come out during use.



Use your knee to move the knee lifter bar to the right in order to raise the presser foot. Release the knee lifter to lower the presser foot.

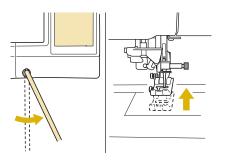

# **A** CAUTION

 Be sure to keep your knee away from the knee lifter during sewing. If the knee lifter is pushed during machine operation, the needle may break or the thread tension may loosen.



### Memo

 When the presser foot is in the up position, move the knee lifter to the far right and then release to return the presser foot to the down position.

# **Pivoting**

If the pivot setting is selected, the machine stops with the needle lowered (in the fabric) and the presser foot is automatically raised to an appropriate height when the "Start/Stop" button is pressed. When the "Start/Stop" button is pressed again, the presser foot is automatically lowered and sewing continues. This function is useful for stopping the machine to rotate the fabric.

# **A** CAUTION

 When the pivot setting is selected, the machine starts when the "Start/Stop" button is pressed or the foot controller is pressed down even if the presser foot has been raised. Be sure to keep your hands and other items away from the needle, otherwise injuries may occur.



#### Memo

• When the pivot setting is selected, the height of the presser foot when sewing is stopped can be changed according to the type of fabric being sewn. Press display "Pivoting Height" in the settings screen. Press or to select one of the three heights (3.2 mm, 5.0 mm or 7.5 mm). To raise the presser foot further, increase the setting. (Normally, 3.2 mm is set.)







### Note

- The "Needle Position UP/DOWN" in the settings screen, must be set in the down position for the pivot function to be used. When "Needle Position UP/DOWN" is set in the raised position, appears as light gray and cannot be used.
- The pivot function can only be used with stitches where presser foot J or N is indicated in the upper-left corner of the screen. If any other stitch is selected, appears as light gray and is not available.
- Use the "Presser Foot Lifter" button to make sure the presser foot is lowered, and then press the "Start/Stop" button to continue sewing.
- If the pivot setting is selected, and + beside "Presser Foot Height" in the settings screen are not available and the setting cannot be changed.

- Select a stitch.
- Press uto select the pivot setting.

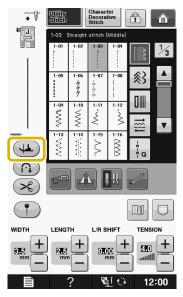


- → The key appears as •
- Place the fabric under the presser foot with the needle at the starting point of the stitching, and then press the "Start/Stop" button. The machine will begin sewing.

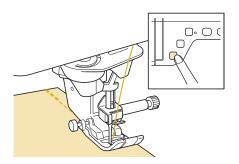




### Memo

 If you press the "Start/Stop" button to pause sewing, press it again to continue, reverse stitches (or reinforcement stitches) will not be sewn. Press the "Start/Stop" button to stop the machine at the point where the sewing direction changes.

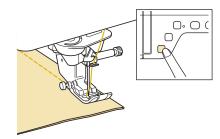


- → The machine stops with the needle in the fabric, and the presser foot is raised.
- Rotate the fabric, and then press the "Start/Stop" button.

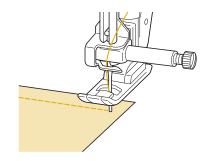


→ The presser foot is automatically lowered, and sewing continues.

# Automatic Fabric Sensor System (Automatic Presser Foot Pressure)

 The thickness of the fabric is automatically detected and the presser foot pressure is automatically adjusted with an internal sensor while sewing, to insure that your fabric is fed smoothly. The fabric sensor system works continuously while sewing. This function is useful for sewing over thick seams (see page S-8), or quilting (see page S-35).



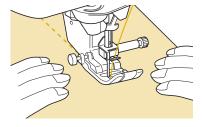

- Press to display "Automatic Fabric Sensor System" in the settings screen.
- Set "Automatic Fabric Sensor System" to "ON".




Press CLOSE to return to the original screen.


# Needle Position – Stitch Placement

 When the "Needle Position – Stitch Placement" is on, the needle will be partially lowered for precise stitch placement and then press the "Needle Position" button again to lower the needle completely. Each press of the "Needle Position" button changes the needle to the next position. When the "Needle Position – Stitch Placement" is turned off, each press of the "Needle Position" button simply raises and then lowers the needle.


- ① Pointing needle mode is "ON"
- ② Pointing needle mode is "OFF"



 \* When the needle is nearly lowered by pressing the "Needle Position" button, the feed dogs are lowered. At this time, the fabric can be shifted to finely adjust the needle drop position.



- Press to display "Needle Position Stitch Placement" in the settings screen.
- Set "Needle Position Stitch Placement" to "ON" or "OFF".

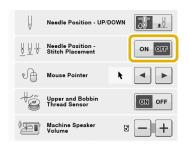

Press CLOSE to return to the original screen.

# **Locking the Screen**

If the screen is locked before starting to sew, the various settings such as the stitch width and stitch length are locked and cannot be changed. This prevents screen settings from accidentally being changed or the machine from being stopped while large pieces of fabric or projects are being sewn. The screen can be locked when sewing utility stitches and character decorative stitches.

- Select a stitch pattern.
- If necessary, adjust any settings such as the stitch width and stitch length.
- Press 🗈 to lock the screen settings.
  - $\rightarrow$  The key appears as  $\bigcirc$  .
- A Sew your project.
- When you are finished sewing, press again to unlock the screen settings.

# **A** CAUTION

- If the screen is locked ( ), unlock the screen by pressing . While the screen is locked, no other key can be operated.
- The settings are unlocked when the machine is turned off and on.

# **S** Sewing

# Chapter 2 Utility Stitches

SELE	CTING UTILITY STITCHES21
Sele	ecting a Stitch21
	Using the Mirror Image Key21
	Using the Image Key
	ing Your Stitch Settings22
	Saving Settings
	ING THE STITCHES24
SEVV	ING THE STITCHES24
	ight Stitches24
	Changing the Needle Position (Left or Middle Needle Position
-	Stitches Only)
	Cover (with Mark)
	Stitch Foot
	Basting
	t Seam
	hering
	Fell Seam
	tuck
-	Overcasting (Using a Zigzag Stitch)
	Appliqué (Using a Zigzag Stitch)
	Patchwork (for Crazy Quilt)
	Sewing Curves (Using a Zigzag Stitch)
	Cord Guide Bobbin Cover (Using a Zigzag Stitch)
	tic Zigzag Stitches
	Overcasting
	ercasting33
	Overcasting Using Presser Foot "G"
	Overcasting Using Presser Foot "J"
	Ilting
	Piecing Using the 1/4" Quilting Foot with Guide
	(optional with some models)
	Quilting with Satin Stitches
	Echo Quilting Using the Free Motion Echo Quilting Foot "E"
	(optional with some models)
Blin	d Hem Stitches45
	If the Needle does not Catch the Hem Fold47  Iliqué48
	Appliqué Sharp Curves
	Appliqué Corners
She	Iltuck Stitches49
Sca	llop Stitches50
	zy Quilting50
Smo	ocking Stitches51
_	oting52
	e or Elastic Attaching52
Hei	rloom
-	Hemstitching (1)
	Hemstitching (2) (Drawn Work (1))
	e-step Buttonholes55
	Sewing Stretch Fabrics
	Odd Shaped Buttons/Buttons that do Not Fit into the Button
_	Holder Plate


Darning	58
Bar Tacks	59
■ Bar Tacks on Thick Fabrics	61
Button Sewing	61
■ Attaching 4 Hole Buttons	62
■ Attaching a Shank to the Button	62
Eyelet	62
Multi-directional Sewing (Straight Stitch and Zigzag Stitch)	63
Zipper Insertion	64
■ Centered Zipper	64
■ Inserting a Side Zipper	65
TITCH SETTING CHART	68

# **SELECTING UTILITY STITCHES**

# **Selecting a Stitch**

There are 5 categories of Utility Stitches.

- Turn the main power to ON and display the utility stitches.
  - → Either "1-01 Straight stitch (Left)" or "1-03 Straight stitch (Middle)" is selected, depending on the setting selected in the settings screen.
- Use S to select the category you want.
  - \* Press view the next page.
  - \* Press **\( \Lambda \)** to view previous page.

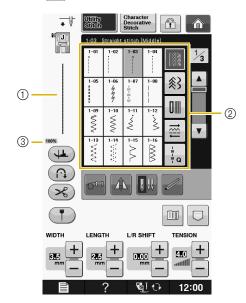

- Preview of the selected stitch
- ② Stitch selection screen
- ③ Percentage size of view
- **3** Press the key of the stitch you want to sew.



### Memo

 For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.

# ■ Using the Mirror Image Key

Depending on the type of utility stitch you select, you may be able to sew a horizontal mirror image of the stitch.

If is lit when you select a stitch, it will be possible to make a mirror image of the stitch.




### **Note**

 If is light gray after you select a stitch, you cannot create a horizontal mirror image of the selected stitch due to the type of stitch or type of presser foot recommended (this is true of buttonholes, multi-directional sewing, and others).

Press 1 to create a horizontal mirror image of the selected stitch.

The key will display as

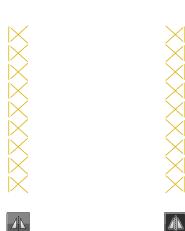

### **■** Using the Image Key


You can display an image of the selected stitch. You can check and change the colors of the image of the screen.



→ An image of the selected stitch is displayed.

# Press to change the thread color of the stitch on the screen.

\* Press Press to display an enlarged image of the stitch.

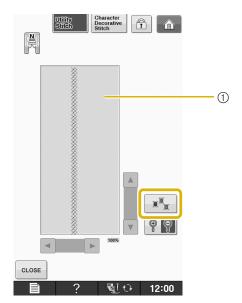

1 Stitch screen



### Memo

• The color changes every time you press



### **Note**

 If stitches are wider or larger than display, press darkened arrows to move the stitch pattern for better visibility.




# **Saving Your Stitch Settings**

The settings for the zigzag stitch width, stitch length, thread tension, automatic thread cutting, automatic reinforcement stitching, etc., are preset in the machine for each stitch. However, if you have specific settings that you wish to reuse later for a stitch, you can change the settings so that they can be saved for that stitch. Five sets of settings can be saved for a single stitch.

# **■** Saving Settings

Select a stitch. (Example:



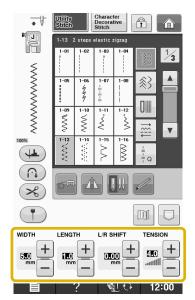

- Press .
  - → The memory function screen appears.





→ The settings are saved. Touch CLOSE and the original screen automatically appears.



### Memo

 If you try to save settings when there are already 5 sets of settings saved for a stitch, the message "The pockets are full. Delete a pattern." will appear. Close the message and delete a setting referring to page S-23.


# **■** Retrieving Saved Settings

Select a stitch.



### Memo

- When a stitch is selected, the last settings retrieved are displayed. The last settings retrieved are retained even if the machine was turned off or a different stitch was selected.
- Press .
  - → The memory function screen appears.
- Press RETRIEVE
- Press the numbered key of the settings to be retrieved.
  - Press **CLOSE** to return to the original screen without retrieving settings.

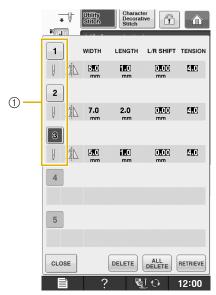

Numbered keys



→ The selected settings are retrieved. Touch CLOSE and the original screen automatically appears.




- To save new settings when there are already 5 sets of settings saved for a stitch, press RETRIEVE in the memory function screen. Press the numbered key of the setting to be deleted. Press DELETE and then OK . Press close , MEMORY , and then RETRIEVE . The new setting will be saved in place of the recently deleted setting.
- You can delete all the saved settings by pressing | ALL |

# **SEWING THE STITCHES**


# **Straight Stitches**

See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
1-01	Straight stitch (Left)	•41
1-02	Straight stitch (Left)	•41
1-03	Straight stitch (Middle)	10
1-04	Straight stitch (Middle)	
1-05	Triple stretch stitch	41
1-06	Stem stitch	•41
1-07	Decorative stitch	
1-08     	Basting stitch	

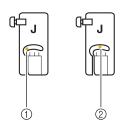

- ① Left needle position
- ② Middle needle position

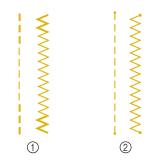


- 1 Reverse stitch
- ② Reinforcement stitch



### Memo


- Refer to "Sewing Reinforcement Stitches" on page S-5 for the detailed information of reverse stitches and reinforcement stitches.
- Select a stitch.

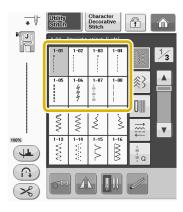

- Attach presser foot "J".
  - \* Attach presser foot "N" when you select




Hold the thread tail and fabric with your left hand, and rotate the handwheel with your right hand to insert the needle into the fabric.

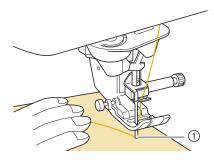

- Sewing start position
- 4 Lower the presser foot, and hold the "Reverse Stitch" or "Reinforcement Stitch" button to sew 3-4 stitches.
  - → The machine sews reverse stitches (or reinforcement stitches).


### Press the "Start/Stop" button to sew forward.

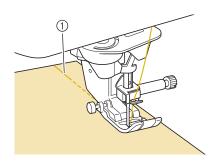


- Reverse stitches
- → The machine will begin sewing slowly.

# CAUTION

- Be sure the needle does not strike a basting pin, or any other objects, during sewing. The thread could tangle or the needle could break, causing injury.
- When sewing is completed, hold the "Reverse Stitch" or "Reinforcement Stitch" button to sew 3-4 reverse stitches (or reinforcement stitches) at the end of the seam.

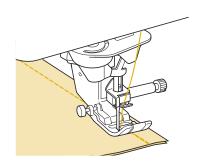

 After sewing, press the "Thread Cutter" button to trim the threads.




### Memo

 When the automatic thread cutting and automatic reinforcement stitch keys on the screen are selected, reverse stitches (or reinforcement stitches) will be sewn automatically at the beginning of sewing when the "Start/Stop" button is pressed. Press the "Reverse Stitch" or "Reinforcement Stitch" button to sew reverse stitches (or reinforcement stitches) and trim the thread automatically at the end of sewing.


# ■ Changing the Needle Position (Left or Middle Needle Position Stitches Only)

When you select left or middle needle position stitches, you can use \_ and + in the stitch width display to change the position of the needle. Match the distance from the right edge of the presser foot to the needle with the stitch width, then align the edge of the presser foot with the edge of the fabric during sewing for an attractive finish.

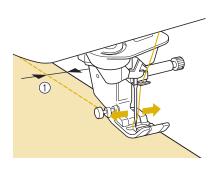

1) Stitch width


**Example:** Left/Middle needle position stitches

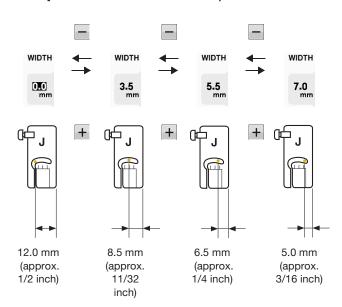

### ■ Aligning the Fabric with a Mark on the Needle Plate or Bobbin Cover (with Mark)


While sewing, align the edge of the fabric with the 16 mm (approx. 5/8 inch) mark on the needle plate or bobbin cover (with mark) depending on the needle position (left or middle (center) needle position stitches only).

# For stitches with a left needle position (Stitch width: 0.0 mm)

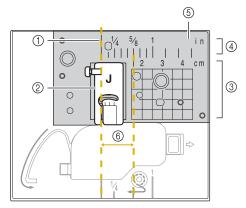

- 1) Seam
- 2 Presser foot
- ③ Centimeters
- (4) Inches
- ⑤ Needle plate
- ⑥ 16 mm (5/8 inch)

# For stitches with a middle (center) needle position (Stitch width: 3.5 mm)

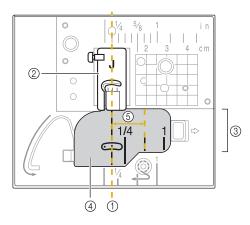


- ① Seam
- Presser foot
- ③ Inches
- 4 Bobbin cover (with mark)
- ⑤ 16 mm (5/8 inch)

# ■ Using the Straight Stitch Needle Plate and the Straight Stitch Foot

 The straight stitch needle plate and the straight stitch foot can only be used for straight stitches (middle needle position stitches). Use the straight stitch needle plate and the straight stitch foot when sewing thin fabrics or when sewing small pieces which tend to sink into the hole of the regular needle plate during sewing. The straight stitch foot is perfect to reduce puckering on lightweight fabrics. The small opening on the foot provides support for the fabric as the needle travels through the fabric.








- ① 2.25 mm (1/8 inch)
- ② 4.25 mm (3/16 inch)
- ③ 6.25 mm (1/4 inch)
- ④ 8.5 mm (5/16 inch)


# **A** CAUTION

 - Always use the straight stitch foot in combination with the straight stitch needle plate.
- Press the "Needle Position" button to raise the needle and turn the main power to OFF or press
- Remove the needle and the presser foot holder ("CHANGING THE NEEDLE" of "Basic operations").
- Remove the flat bed attachment.
- Grasp both sides of the needle plate cover, and then slide it toward you.



Needle plate cover

 Grasp the bobbin case, and then pull it out.



- 1) Bobbin case
- Use the disc-shaped screwdriver included with the machine to unscrew and remove the regular needle plate.



Set the straight stitch needle plate in place and use the disc-shaped screwdriver to tighten the plate.



① Round hole



### Note

 Align the two screw holes on the needle plate with the two holes on the machine.
 Use the disc-shaped screwdriver included with the machine to secure the screws in the needle plate.

- Insert the bobbin case in its original position, and then attach the needle plate cover.
- After reinstalling the needle plate cover, select any of the straight stitches.



### Memo

- When using the straight stitch needle plate, all straight stitches become middle needle position stitches. You cannot change the needle position using the width display.
- Always secure the needle plate before inserting the bobbin case into its original position.
- "L/R SHIFT" does not work when straight stitch needle plate is on the machine.

# **A** CAUTION

- Selecting other stitches will cause an error message to be displayed.
- Slowly rotate the handwheel toward you (counterclockwise) before sewing and make sure that the needle is not contacting the straight stitch foot and straight stitch needle plate.
- Insert needle and attach the straight stitch foot.



- ① Notch
- ② Pin



### Start sewing.

\* After sewing, make sure to remove the straight stitch needle plate and the straight stitch foot, and reinstall the regular needle plate, the needle plate cover and the presser foot "J".



### Memo

 
 To prevent puckering on fine fabrics, use a fine needle, size 75/11, and a short stitch length. For heavier fabrics, use a heavier needle, size 90/14, and longer stitches.

### Basting

Select

and attach presser foot "J".


Press the "Reverse Stitch" button to sew reinforcement stitches, then continue sewing.





### Memo

 - · When you use the basting stitch for gathering, do not use a reinforcement stitch at the beginning; you should lift the presser foot, rotate the handwheel toward you (counterclockwise), pull up the bobbin thread and pull a length of top and bobbin thread out from the rear of the machine.
- You can set the stitch length between 5 mm (approx. 3/16 inch) and 30 mm (approx. 1-3/16 inches)



- ① Between 5 mm (approx. 3/16 inch) and 30 mm (approx. 1-3/16 inches)
- Sew while keeping the fabric straight.



End the basting with reinforcement stitches.


### **Dart Seam**



 
Select




and attach presser foot "J".




If automatic reinforcement stitching is preset, a reinforcement stitch will automatically be sewn at the beginning of sewing.

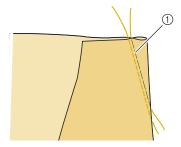


- ① Basting
- Cut the thread at the end leaving 50 mm (approx. 1-15/16 inches), and then tie both ends together.
  - Do not sew a reverse stitch at the end.

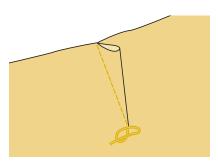

Insert the ends of the thread into the dart with a hand sewing needle.

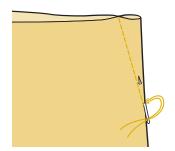


Iron the dart to one side so that it is flat.

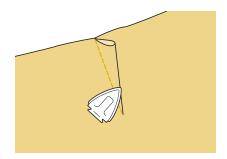


# **Gathering**

Use on waists of skirts, sleeves of shirts, etc.

Select a straight stitch and attach presser foot "J".

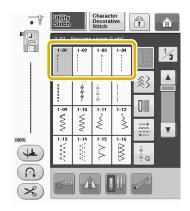


- Set the stitch length to 4.0 mm (approx. 3/16 inch) and the thread tension to approximately 2.0 (weaker tension).
  - If you press Sewing Guide after pressing and then gathering , the stitch length will be set automatically to 4.0 mm (approx. 3/16 inch) and the thread tension will be automatically set to 2.0.
- Pull the bobbin and upper threads out by 50 mm (approx. 1-15/16 inches) ("Pulling Up the Bobbin Thread" of "Basic operations").

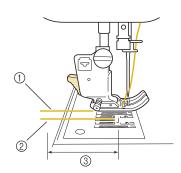


- Upper thread
- ② Bobbin thread
- 3 About 50 mm (approx. 1-15/16 inches)

 
Sew two rows of straight stitches parallel to the seam line, then trim excess thread leaving 50 mm (approx. 1-15/16 inches).



- (1) Seam line
- ② 10 mm to 15 mm (approx. 3/8 inch to 9/16 inch)
- 3 About 50 mm (approx. 1-15/16 inches)
- Pull the bobbin threads to obtain the desired amount of gather, then tie the threads.

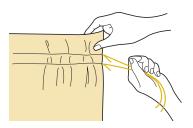

Smooth the gathers by ironing them.

 


Sew on the seam line and remove the basting stitch.

### **Flat Fell Seam**


Use for reinforcing seams and finishing edges neatly.

- Select and attach presser foot "J".
- Sew the finish line, then cut half of the seam allowance from the side on which the flat fell seam will lie.
  - When the automatic thread cutting and automatic reinforcement stitching are preset, reinforcement stitches will be sewn automatically at the beginning of sewing. Press the "Reverse Stitch" button to sew a


reinforcement stitch and trim the thread automatically at the end of sewing.

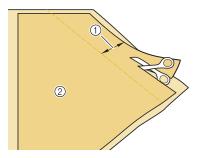


- ① About 12 mm (approx. 1/2 inch)
- ② Wrong side
- Spread the fabric out along the finish line.

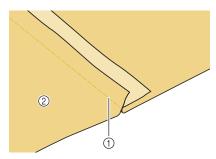

- ① Finish line
- ② Wrong side
- Lay both seam allowances on the side of the shorter seam (cut seam) and iron them.

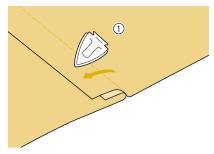


- ① Wrong side
- Fold the longer seam allowance around the shorter one, and sew the edge of the fold.

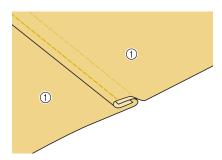

① Wrong side


Finished flat fell seam

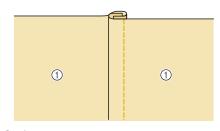


① Surface

### **Pintuck**

Mark along the folds on the wrong side of the fabric.

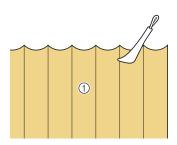


- ① Wrong side
- Turn the fabric and iron the folded parts only.

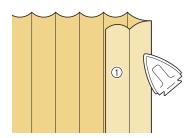

- ① Surface
- Select and attach presser foot "I".

### Sew a straight stitch along the fold.


\* When the automatic thread cutting and automatic reinforcement stitching are preset, reinforcement stitches will be sewn automatically at the beginning of sewing. Press the "Reverse Stitch" button to sew a reinforcement stitch and trim the thread automatically at the end of sewing.

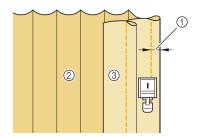

- ① Width for pintuck
- ② Wrong side
- ③ Surface



Iron the folds in the same direction.

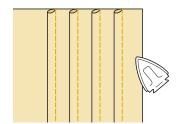

# **Zigzag Stitches**

Zigzag stitches are useful for overcasting, appliqué, patchwork, and many other applications.


Select a stitch, and attach presser foot "J".

See page S-5 for the detailed information of reverse stitches and reinforcement stitches.

See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
1-09	Zigzag stitch	
1-10	Zigzag stitch	
1-11	Zigzag stitch (Right)	
1-12	Zigzag stitch (Left)	




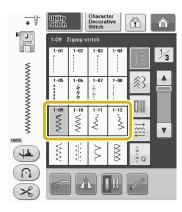

Attach presser foot "J".

# ■ Overcasting (Using a Zigzag Stitch)

Sew the overcasting along the edge of the fabric while positioning the right-hand side needle drop point just outside the edge of the fabric.

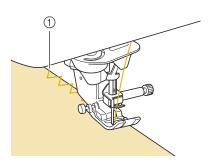


1 Needle drop position

# ■ Appliqué (Using a Zigzag Stitch)


Attach the appliqué material using a temporary spray adhesive or basting, and then sew it.

\* Sew a zigzag stitch while positioning the right-hand side needle drop point just outside the edge of the fabric.

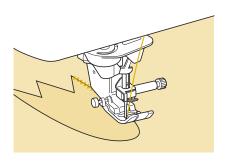


# ■ Patchwork (for Crazy Quilt)

Turn back the desired width of fabric and position it over the lower fabric, then sew so that the stitch bridges both pieces of fabric.

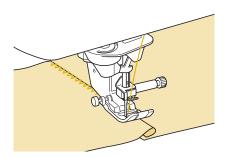


# ■ Sewing Curves (Using a Zigzag Stitch)

Shorten the stitch length setting to obtain a fine stitch. Sew slowly, keeping the seams parallel with the fabric edge as you guide the fabric around the curve.

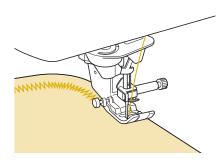


# ■ Cord Guide Bobbin Cover (Using a Zigzag Stitch)

- Remove the bobbin cover from the machine ("Setting the Bobbin" of "Basic operations").
- Thread the gimp thread through the hole in the cord guide bobbin cover from top to bottom. Position the thread in the notch at the back of the cord guide bobbin cover.

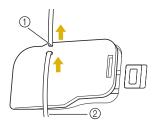


- 1) Notch
- ② Gimp thread


- Snap the cord guide bobbin cover into place, making sure that the gimp thread can be fed freely.
  - \* Make sure there are no restrictions when feeding the thread.

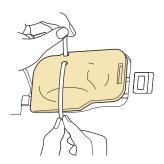

- Set the zigzag width from 2.0 mm 2.5 mm (approx. 1/16 inch 3/32 inch).
- Attach presser foot "N".
- Position the fabric right side up on top of the cord and place the cord to the rear of the machine under the presser foot.

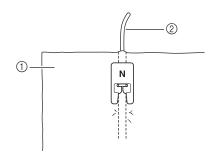

 - ① Fabric (right side)
- ② Gimp thread
- Lower the presser foot and start sewing to make a decorative finish.




# **Elastic Zigzag Stitches**

Use elastic zigzag stitches for tape attaching, overcasting, darning, or a wide variety of other uses.

See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
1-13 <br <br </td <td>2 steps elastic zigzag</td> <td>•41</td>	2 steps elastic zigzag	•41
1-14	3 steps elastic zigzag	


Select a stitch.

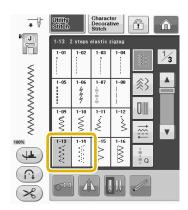

Attach presser foot "J".

# **■** Tape Attaching

Stretch the tape flat. While stretching the tape flat, sew the tape to the fabric.

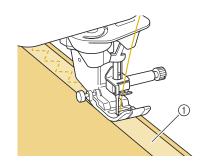

① Tape

### Overcasting

Use this stitch to sew overcasting on the edge of stretch fabrics. Sew the overcasting along the edge of the fabric while positioning the right-hand side needle drop point just outside the edge of the fabric.




# **Overcasting**


Use for the edge of seams in skirts or trousers, and the edge of all cuttings. Use presser foot "G", presser foot "J", or the optional side cutter attachment depending on the kind of overcasting stitch you select.

# ■ Overcasting Using Presser Foot "G"


Stitch	Stitch name	Presser foot
1-15	Overcasting stitch	G
1-16	Overcasting stitch	G
1-17	Overcasting stitch	G

### Select a stitch and attach presser foot "G".

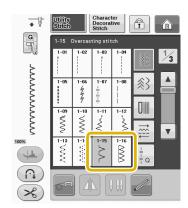


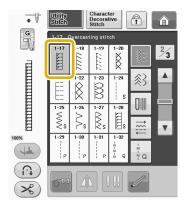

Lower the presser foot so that the presser foot guide is set flush against the edge of the fabric.

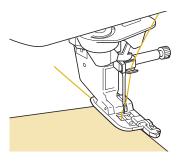

Sew along the presser foot guide.

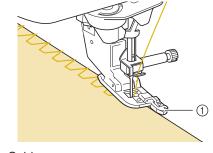

① Guide

# **A** CAUTION

 After the stitch width is adjusted, rotate the handwheel toward you (counterclockwise).
 Check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may break and cause injury.




- ① The needle should not touch the center bar
- If the presser foot is raised to its highest level, the needle may strike the presser foot.

### ■ Overcasting Using Presser Foot "J"

See page S-68 for the detailed information of stitches.


Stitch	Stitch name	Presser foot
1-18	Overcasting stitch	
1-19	Overcasting stitch	941
1-20	Overcasting stitch	941
1-21  	Overcasting stitch	•¶J
1-22	Single diamond overcast	
1-23	Single diamond overcast	

Select a stitch and attach presser foot "J".

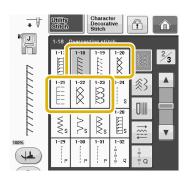



Sew with the needle dropping slightly off the edge of the fabric.

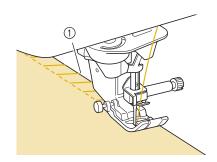

① Needle drop position



### **Note**

 Use the "L/R SHIFT" setting for fine tuning the placement of the stitch. Be sure to sew trial stitches using the same conditions as the real sewing.

### Quilting

You can make beautiful quilts quickly and easily with this machine. When making a quilt, you will find it convenient to use the knee lifter and foot controller to free your hands for other tasks ("Using the Foot Controller" on page S-4 and /or "Using the Knee Lifter" on page S-15).


The 30 quilting stitches Q-01 through Q-30 and the utility stitches with "P" or "Q" indicated on their key are useful for quilting.

The "P" or "Q" at the bottom of the key display indicates that these stitches are intended for ("Q") quilting and ("P") piecing.

See page S-68 for the detailed information of stitches.

		Presser foot			
Stitch	Stitch name				
Q-01	Piecing stitch (Middle)		C		
Q-02	Piecing stitch (Right)		Ó		
Q-03	Piecing stitch (Left)		Ó		
Q-04	Hand-look quilting (Middle)		ó		
Q-05   	Basting stitch (Middle)		Ś		

		Presser foot			
Stitch	Stitch name	CO.	<u> </u>		
Q-06	Stem stitch		Ó		
Q-07	Quilting appliqué zigzag stitch		Ó		
₹ 6-08	Zigzag stitch (Right)		Ó		
Q-09	Zigzag stitch (Left)		Ó		
Q-10 < ' ' < ' ' < ' '	2 steps elastic zigzag		Ó		
Q-11	3 steps elastic zigzag		Ó		
Q-12	Quilting appliqué stitch		Ó		
Q-13	Shell tuck edge		Ó		
Q-14	Blanket stitch		O		
Q-15	Quilting stippling		Ó		
Q-16	Overcasting stitch		Ó		
Q-17	Tape attaching		Ó		
Q-18	Serpentine stitch		Ó		
Q-19	Feather stitch		Ó		
Q-20	Fagoting cross stitch		Ó		
Q-21	Couching stitch		Ó		
Q-22	Patchwork double overlock stitch		Ó		
Q-23	Smocking stitch		Š		

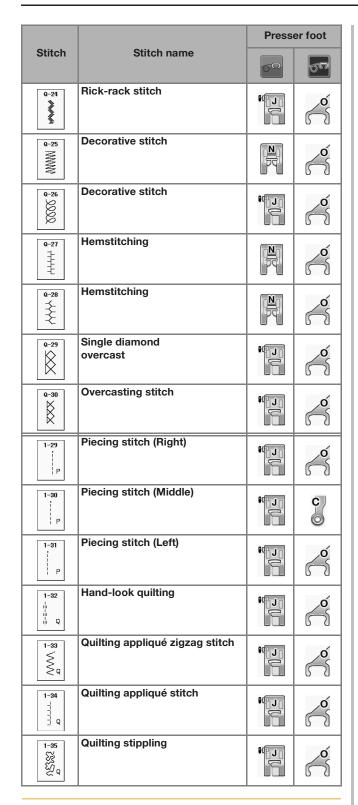



#### Memo

 When a stitch pattern in the Quilting Stitches category (Q-02 through Q-30) is selected, a finer stitch width can be set than is available with stitch patterns in other categories.

For example: Stitch Q-03 has 57 needle positions and stitch Q-19 has 29 width selections.




#### Note

 The width range of stitch setting is only available in the Quilting stitch "Q" quilting category.


### **■** Piecing

Sewing two pieces of fabric together is called piecing. When cutting pieces for quilt blocks, make sure the seam allowance is 6.5 mm (approx. 1/4 inch).


- Select or and attach presser foot
- Align the edge of the fabric with the edge of the presser foot, and start sewing.
  - \* To sew a 6.5 mm (approx. 1/4 inch) seam allowance along the right edge of the presser foot with selected, the width should be set to 5.50 mm (approx. 7/32 inch).

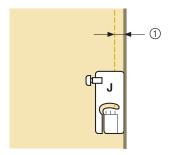

- ① 6.5 mm (approx. 1/4 inch)
- \* To sew a 6.5 mm (approx. 1/4 inch) seam allowance along the left edge of the presser foot with selected, the width should be set to 1.50 mm (approx. 1/32 inch).

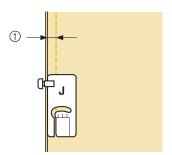

 - ① 6.5 mm (approx. 1/4 inch)
- \* To change the needle position, use + or in the width display.





#### Memo

- Using a straight stitch (middle needle position) makes it easier to sew smoothly (see page S-24).
- For models equipped with the guideline marker:


In the case Q-01(center, at width 3.5 mm) is selected, if the guideline marker is set at 10.0 mm (3.5 mm plus 6.5 mm, close to 1/4 inch), you can sew piecing with referring the guideline marker.

# ■ Piecing Using the 1/4" Quilting Foot with Guide (optional with some models)


This quilting foot can sew an accurate 1/4 inch or 1/8 inch seam allowance.

It can be used for piecing together a quilt or for topstitching.

Press , and then attach the 1/4" quilting foot with guide.

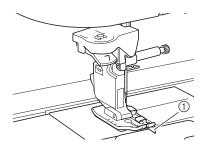


① Guide

 

### Piecing a 1/4 inch seam allowance

 Sew keeping the edge of the fabrics against the guide.



- ① Guide
- ② 1/4 inch




### Memo

  For accurate fabric placement, refer to "Aligning the Fabric with a Mark on the Needle Plate or Bobbin Cover (with Mark)" on page S-26.

### Creating an accurate seam allowance

Use the mark on the foot to begin, end, or pivot 1/4 inch from edge of fabric.



- ① Align this mark with edge of fabric to begin.
- ② Beginning of stitching
- 3 End of stitching
- 4) Opposite edge of fabric to end or pivot
- (5) 1/4 inch




#### Memo

 For details on pivoting, refer to "Pivoting" on page S-15.

### Topstitching quilting, 1/8 inch


Sew with the edge of the fabric aligned with the left side of the presser foot toe.

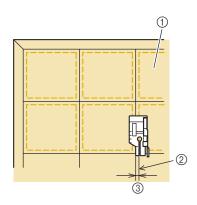

- 1) Surface of fabric
- ② Seam
- ③ 1/8 inch

### **■** Appliqué


Trace the pattern onto the appliqué fabric and then cut around it, leaving a 3 mm to 5 mm (approx. 1/8 inch to 3/16 inch) seam allowance.

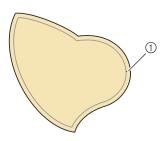

- ① Seam allowance: 3 mm to 5 mm (approx. 1/8 inch to 3/16 inch)
- Place a piece of stabilizer cut to the finished size of the appliqué design onto the fabric, and then fold over the seam margin using an iron. Clip curves when necessary.




Turn the appliqué over, and attach the stabilizer with basting pins or a basting stitch.

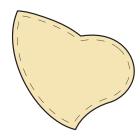

A Select and attach presser foot "J".

Use the quilting appliqué stitch to attach the appliqué. Sew around the edge while dropping the needle as close to the edge as possible.

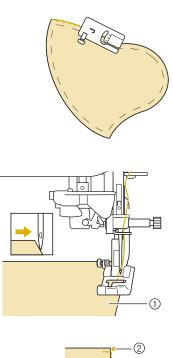



- ① Appliqué
- ② Needle drop position

## **A** CAUTION

 Be careful that the needle does not strike a basting pin during sewing. Striking a pin can cause the needle to break, resulting in injury. You can use the appliqué technique to attach appliqué designs like the three pictured below.




- ① Dresden plate
- ② Stained glass
- ③ Sunbonnet sue

### **■** Quilting with Satin Stitches

For better fabric control, use the foot controller to sew with satin stitches. Set the speed control slide to control the stitch width to make subtle changes in the stitch width during sewing.


- Attach the foot controller (see page S-4).
- Select  $\begin{bmatrix} \circ & 0 \\ \stackrel{\circ}{\lessgtr} \\ \stackrel{\circ}{\lessgtr} \end{bmatrix}$  and attach presser foot "J".
- Press in the length display to shorten the stitch length.

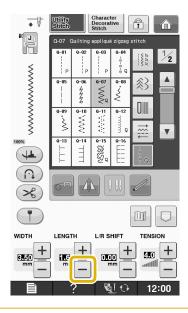

### Memo

- The setting will vary according to the kind of fabric and the thickness of the thread, but a length of 0.3 mm to 0.5 mm (approx. 1/64 inch to 1/32 inch) is best for satin stitches.
- Press to use the speed control slide to control the stitch width.



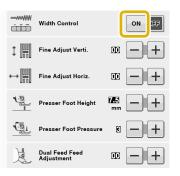



#### Memo

 
 You can use the speed control slide to adjust the stitch width. Use the foot controller to adjust the sewing speed.



→ The display will return to the original screen.


### Start sewing.

\* You can adjust the stitch width during sewing by moving the sewing speed controller. Slide the lever to the left, and the stitch width becomes narrower. Slide it to the right, the stitch width becomes wider. The size of the width changes equally on both sides of the middle needle position.



- 1) narrower
- ② wider

**Example:** Changing the width

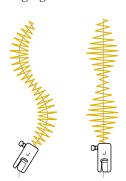

When you are finished sewing, set the "Width Control" back to "OFF".

### **■** Free Motion Quilting

With free motion quilting, the feed dogs can be

lowered by pressing , so that the fabric can be moved freely in any direction.

In this mode, the presser foot is raised to the necessary height for free motion sewing. We recommend attaching the foot controller and sewing at a consistent speed. You can adjust the sewing speed with the speed control slide on the machine.

## **A** CAUTION

 With free motion quilting, control the feeding speed of the fabric to match the sewing speed.
 If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.

### Using free motion open toe quilting foot "O"

The free motion open toe quilting foot "O" is used for free motion quilting with zigzag or decorative stitches or for free motion quilting of straight stitches on fabric with an uneven thickness. Various stitches can be sewn using free motion open toe quilting foot "O". For details on the stitches that can be used, refer to the "STITCH SETTING CHART" on page S-68.



Free motion open toe quilting foot "O"

With free motion quilting, control the feeding speed of the fabric to match the sewing speed. If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.



#### Memo

 
 When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press


to display "Free Motion Foot
Height" of the settings screen. Press — or

+ to change the height that the quilting foot is raised above the fabric. Increase the setting by pressing +, when sewing fluffy or thick fabric, so that the fabric passes easily under the quilting foot. Decrease the height by pressing -, when sewing thinner fabrics.



 In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension (see page S-12). Test with a sample piece of quilting fabric.



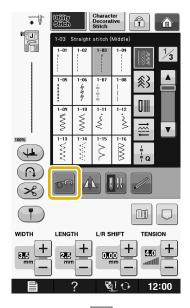


→ The key appears as , the quilting foot is raised to the necessary height, and then the feed dogs are lowered for free motion sewing.



Remove the presser foot holder.



Attach free motion open toe quilting foot "O" by positioning the pin of the quilting foot above the needle clamp screw and aligning the lower-left of the quilting foot and the presser bar.

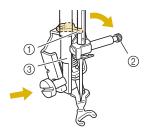


- ① pin
- ② Needle clamp screw
- ③ Presser bar



### **Note**

  Make sure that the quilting foot is not slanted.







1) Presser foot holder screw

## **A** CAUTION

 - Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.
- Use both hands to stretch the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches roughly 2.0 mm 2.5 mm (approx. 1/16 inch 3/32 inch) in length.



① Stitch

 

→ Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.



#### Memo

 Do not be discouraged with your initial results. The technique requires practice.

# Using free motion quilting foot "C" (optional with some models)

Use the free motion quilting foot "C" with straight stitch needle plate for free motion sewing.



Free motion quilting foot "C"

## **A** CAUTION

 When using free motion quilting foot "C", be sure to use the straight stitch needle plate and sew with the needle in middle (center) needle position. If the needle is moved to any position other than the middle (center) needle position, the needle may break, which may result in injuries.



#### Memo

fabrics.

- When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press
  - to display "Free Motion Foot

 
Height" of the settings screen. Press — or + to change the height that the quilting foot is raised above the fabric. Increase the setting by pressing +, when sewing fluffy or thick fabric, so that the fabric passes easily under the quilting foot. Decrease the height by pressing —, when sewing thinner



 In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension. Test with a sample piece of fabric that is similar to your chosen fabric.



Attach the straight stitch needle plate (see page S-26).



1) Round hole




#### Memo


• Notice this needle plate has a round hole for the needle.




Press to set the machine to free motion sewing mode.

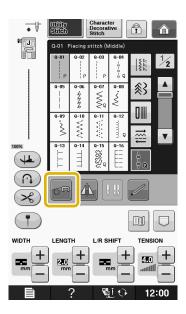

→ The key appears as , the quilting foot is raised to the necessary height, and then the feed dogs are lowered for free motion sewing.

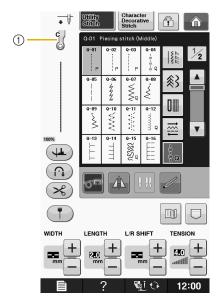

 - 1) Free motion quilting foot "C"
- → When stitch Q-01 or 1-30 is selected, free motion quilting foot "C" is indicated in the upper-left corner of the screen.
- 4 Attach free motion quilting foot "C" at the front with the presser foot holder screw aligned with the notch in the quilting foot.





- ① Presser foot holder screw
- ② Notch



### Note

   Make sure that the quilting foot is attached properly and not slanted.






1 Presser foot holder screw

## **A** CAUTION

- Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.
- Use both hands to stretch the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches roughly 2.0 mm - 2.5 mm (approx. 1/16 inch - 3/32 inch) in length.

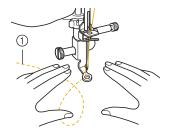

- Stitch
- Press to cancel the free motion sewing mode.
  - → Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.
- After sewing, make sure to remove the straight stitch needle plate and presser foot "C", and reinstall the regular needle plate and the needle plate cover.



#### Note

- Free motion open toe quilting foot "O" can also be used with the straight stitch needle plate. We recommend using free motion open toe quilting foot "O" with free motion sewing of fabrics of uneven thicknesses.
- When using the straight stitch needle plate, all straight stitches become middle needle position stitches. You cannot change the needle position using the width display.



### Memo


- Normally, the feed dogs are raised for regular sewing.
- Do not be discouraged with your initial results. The technique requires practice.

### **■** Echo Quilting Using the Free Motion Echo Quilting Foot "E" (optional with some models)

Sewing quilting lines at equal distances around a motif is called echo quilting. The quilting lines, which appear as ripples echoing away from the motif, are the distinguishing characteristic of this quilting style. Use the free motion echo quilting foot "E" for echo quilting. Using the measurement on the presser foot as a guide, sew around the motif at a fixed interval. We recommend attaching the foot controller and sewing at a consistent speed.



Free motion echo quilting foot "E" measurement

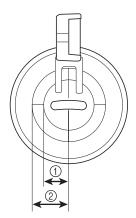

- ① 6.4 mm (approx. 1/4 inch)
- ② 9.5 mm (approx. 3/8 inch)

## CAUTION

With free motion quilting, control the feeding speed of the fabric to match the sewing speed. If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.



#### Memo

 When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press

to display "Free Motion Foot Height" of the settings screen (see page S-15). Press — or + to change the height that the quilting foot is raised above the fabric. To create a greater distance between the foot and needle plate for sewing thick, fluffy fabrics, increase the setting by pressing +. To create a lesser distance


pressing +. To create a lesser distance between foot and needle plate for sewing thin fabrics, decrease the setting by pressing -.



 In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension (see page S-12). Test with a sample piece of quilting fabric.



Press to set the machine to free motion sewing mode.

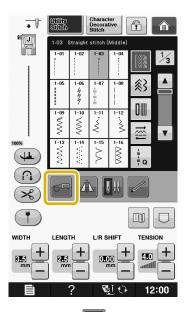


→ The key appears as , the quilting foot is raised to the necessary height, then the feed dogs are lowered for free motion sewing.

- Attach the adapter ("Attaching the Presser Foot with the Included Adapter" of "Basic operations").
- Attach the free motion echo quilting foot "E" on the left side of the adapter with the holes in the quilting foot and adapter aligned.




Tighten the screw with the included screwdriver.

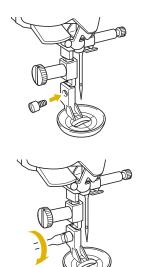


# **A** CAUTION

 Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.

# Using the measurement on the quilting foot as a guide, sew around the motif.

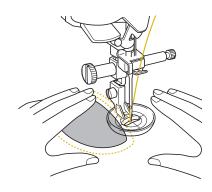

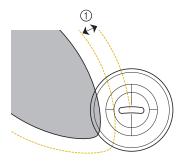

① 6.4 mm (approx. 1/4 inch)

### Finished project



- Press to cancel the free motion sewing mode.
  - → Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

### **Blind Hem Stitches**

Secure the bottoms of skirts and pants with a blind hem. Two stitches are available for blind hem stitching.

Stitch	Stitch name	Presser foot
2-01	Blind hem stitch	R
2-02	Blind hem stitch stretch	




### Memo

- When the size of cylindrical pieces is too small to slide onto the arm or the length is too short, the fabric will not feed and desired results may not be achieved.
- Turn the skirt or pants wrong side out.





- ① Wrong side of fabric
- ② Right side of fabric
- 3 Edge of fabric
- ④ Bottom side
- Fold the fabric along the desired edge of the hem, and press.

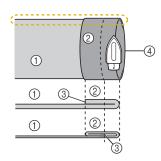


- ① Wrong side of fabric
- ② Right side of Fabric
- 3 Edge of fabric
- 4 Desired edge of hem
- <Thick fabric>
- <Normal fabric>

 
<Seen ( from the side>



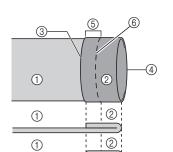

 
- ① Wrong side of fabric
- ② Right side of fabric
- 3 Edge of fabric
- ④ Desired edge of hem
- ⑤ 5 mm (3/16 inch)
- 6 Basting
- <Thick fabric>
- <Normal fabric>
- <Seen from the side>




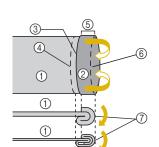

- ① Wrong side of fabric
- ② Right side of fabric
- 3 Edge of fabric
- 4 Desired edge of hem
- ⑤ 5 mm (3/16 inch)
- 6 Basting
- Basting point
- <Thick fabric>
- <Normal fabric>

 
<Seen from the side>



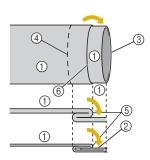



- 1) Wrong side of fabric
- ② Right side of fabric
- 3 Edge of fabric
- 4 Desired edge of hem
- ⑤ Basting point
- 6 Basting
- <Thick fabric>
- <Normal fabric>
  
<Seen from the side>









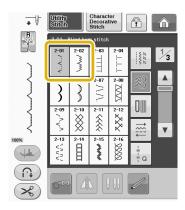

- Remove the flat bed attachment to use the free-arm.
- Slide the item that you wish to sew onto the free arm, make sure that the fabric feeds correctly, and then start sewing.

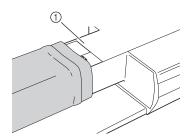


- ① Free arm
- Position the fabric with the edge of the folded hem against the guide of the presser foot, and then lower the presser foot lever.

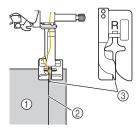

- ① Wrong side of fabric
- ② Fold of hem
- ③ Guide


### Adjust the stitch width until the needle slightly catches the fold of the hem.

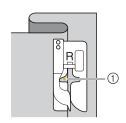

### ① Needle drop point

When you change the needle drop point, raise the needle, and then change the stitch width.

### <Stitch width>

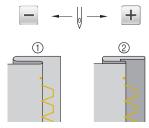

- 1 Thick fabric
- ② Normal fabric



### Memo

• Blind hem stitches cannot be sewn if the left needle drop point does not catch the fold. If the needle catches too much of the fold, the fabric cannot be unfolded and the seam appearing on the right side of the fabric will be very large, leaving an unattractive finish. If you experience either of these cases, follow the instructions below to solve the problem.


### ■ If the Needle Catches Too Much of the Hem Fold

The needle is too far to the left.


Press + to decrease the stitch width so that the needle slightly catches the fold of the hem.



### <Thick fabric>

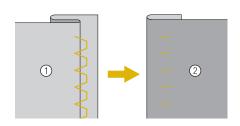

### <Normal fabric>

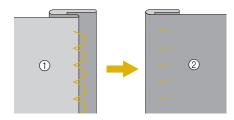

- ① Wrong side of fabric
- ② Right side of fabric


### ■ If the Needle does not Catch the Hem Fold

The needle is too far to the right.


Press — to increase the stitch width so that the needle slightly catches the fold of the hem.




### <Thick fabric>

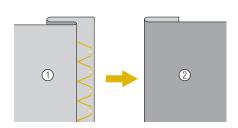

### <Normal fabric>

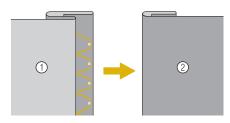


 - ① Wrong side of fabric
- ② Right side of fabric
- Sew with the fold of the hem against the presser foot guide.
- Remove the basting stitching and reverse the fabric.




- ① Wrong side of fabric
- ② Right side of fabric

## **Appliqué**

 

 This will keep the fabric from moving during sewing.

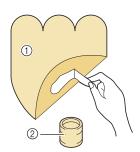

- Appliqué
- ② Fabric glue




\* Adjust the stitch length and width to correspond to the appliqué shape, size, and quality of material (see page S-10).




### Memo

 For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68. Attach presser foot "J". Check that the needle drops slightly off the edge of the appliqué, then start sewing.

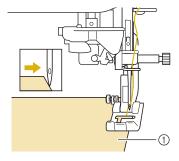


Appliqué material

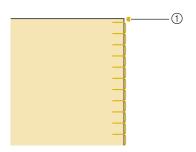

① Needle drop position


### **■** Appliqué Sharp Curves


Stop the machine with the needle in the fabric outside the appliqué. Raise the presser foot and turn the fabric a little bit at a time while sewing for an attractive finish to the seam.

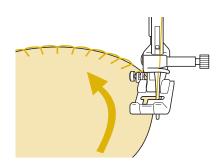

### **■** Appliqué Corners

Stop the machine with the needle in the right position of the outside (or inside) corner of the appliqué. Raise the presser foot and pivot the fabric to align the fabric edge. Lower the presser foot and continue stitching.

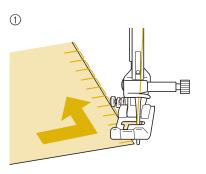

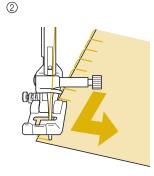

- 1 Outside corner
- Inside corner



### Memo

 Placing a lightweight tear away stabilizer beneath the stitching area will improve the stitch placement along the edge of the appliqué fabric.

### **Shelltuck Stitches**

Shelltuck stitches give an attractive appearance of shells along the curve of a collar. This stitch pattern can be used for edging the neckline or sleeves of dresses and blouses.



Select





 
### Memo


- For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.
- Increase the upper thread tension for an attractive scallop finish to the shelltuck stitches (see page S-12).



### Memo

• If the upper thread tension is too weak, the shelltuck stitches will not scallop.




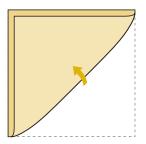





### Memo

  • Use a thin fabric.



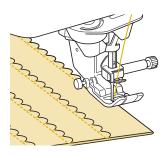




① Needle drop position



Unfold the fabric, and iron the tucks to one side

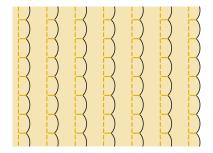



#### Memo

 To make shell tucks at the edge of a collar or neckline, follow the pattern's instructions and then use this stitch to make a decorative finish on the collar or neckline.

### **Scallop Stitches**

This wave-shaped satin stitch is called the scallop stitch. Use this stitch to decorate the edges of blouse collars and handkerchiefs or use it as a hem accent.



### Memo

 A temporary spray adhesive may be necessary for lightweight fabrics. Test sew the fabric before sewing a project.



Select






### Memo

 For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.




Attach presser foot "N". Sew scallop stitches along the edge of the fabric.

\* Do not sew directly on the edge of the fabric.

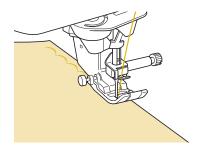

Trim along the seam, making sure not to cut the stitches.

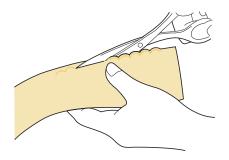





#### Memo


 Use a seam sealant to secure the edges of the scallop stitches.

### **Crazy Quilting**

  For a decorative look called "Crazy Quilting", the following stitches can be sewn on top of a pressed seam allowance.





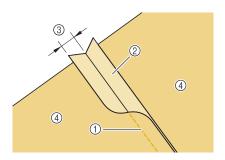

- Straight stitch
- ② Seam margins
- ③ 6.5 mm (approx. 1/4 inch)
- 4 Wrong side


Select a stitch for top stitching.







Place the fabric right side up in the machine, and center the presser foot over the seam when sewing.

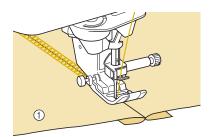


① Right side of fabric

## **Smocking Stitches**


Use smocking stitches for decorative sewing on clothes, etc.

- Select a straight stitch and attach presser foot "I".
- Set the stitch length to 4.0 mm (approx. 3/16 inch) and loosen the upper thread tension to approximately 2.0 (see "Setting the Stitch Length" on page S-10 and "Setting the Thread Tension" on page S-12).
- Pull the bobbin and upper threads out by 50 mm (approx. 1-15/16 inches).
- Sew the seams, leaving approximately 10 mm (approx. 3/8 inch) between the seams, then trim excess thread, leaving 50 mm (approx. 1-15/16 inches).

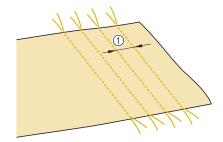

① Approximately 10 mm (approx. 3/8 inch)

Pull the bobbin threads to obtain the desired amount of gather, and then smooth the gathers by ironing them.

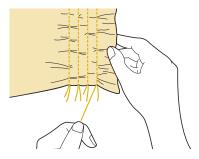

Select











- For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.
- Sew the spaces between the straight seams.

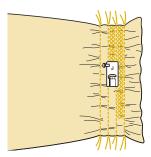


Pull out the straight stitch threads.

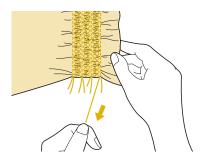


### **Fagoting**

 When there is a space between two fabrics with thread sewn over the space to join the fabrics together, it is called fagoting. Use this stitch when sewing blouses or children's clothes.



 If you draw a line down the middle of the thin paper or water-soluble stabilizer, sewing is easier.

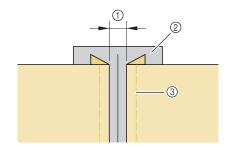



- ① 4.0 mm (approx. 3/16 inch)
- ② Paper
- ③ Basting stitches





  For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.



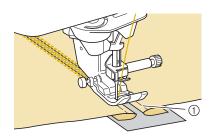

① Basting stitches



Use a thick thread.


When sewing is finished, gently tear the paper away.

## **Tape or Elastic Attaching**

- Select a straight stitch and attach presser foot "J".
  - Set the stitch length to 4.0 mm (approx. 3/16 inch), and loosen the upper thread tension to 2.0 (see "Setting the Stitch Length" on page S-10 and "Setting the Thread Tension" on page S-12).


### Memo

- Be sure that neither automatic reinforcement nor automatic thread cutting selected.
- Sew two rows of straight stitches on the right side of the fabric, then pull the bobbin thread to create the necessary gather.

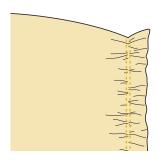

### Memo

- Before sewing the straight stitch, rotate the handwheel toward you (counterclockwise) and pull up the bobbin thread. Holding the top and bobbin thread, pull a length of thread out from the rear of the machine. (Be sure that the presser foot is raised.)
- Place the tape over the gather, and hold it in place with basting pins.

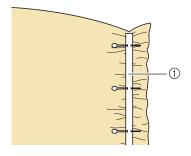


① Tape






### Memo


- · For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.
- Sew over the tape (or elastic).

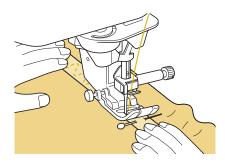

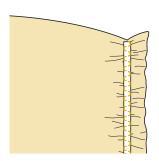

# **A** CAUTION

- Be sure the needle does not strike a basting pin, or any other objects, during sewing. The thread could tangle or the needle could break, causing injury.
- Pull out the straight stitch threads.

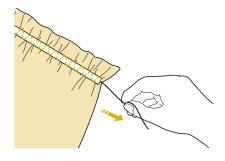

### Heirloom

### **■** Hemstitching (1)

Use for sewing tablecloths, decorative hems, and decorative stitching on shirt fronts.




### Memo

- Use a light to medium weight homespun fabric with a little stiffness.
- Insert a type 130/705H, size 100/16 Wing needle.
  - This specialty sewing needle is not furnished with your machine. Must be purchased separately.

## **CAUTION**

- The "Automatic Threading" button cannot be used. Thread the wing needle by hand, from front to back. Using the "Automatic Threading" button may result in damage to the machine.
- A more attractive finish can be obtained if you use a "130/705H Wing" needle when sewing these patterns. If using a wing needle and the stitch width has been set manually, check that the needle will not touch the presser foot by carefully rotating the handwheel toward you (counterclockwise) before starting to sew.
- Select a stitch and attach presser foot "N".
  - Select any stitch between 3-01 and 3-22.

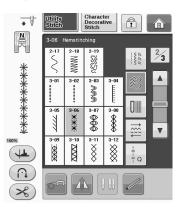



#### Memo

For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.




**Example:** Illustration of finished product



### ■ Hemstitching (2) (Drawn Work (1))

- Pull out several threads from one area on a piece of fabric to open the area.
  - \* Pull out 5 or 6 threads to leave a 3 mm (approx. 1/8 inch) area open.

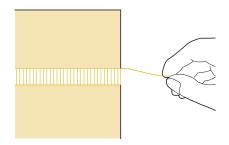




• Loosely woven fabrics work best for this.






- For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.
- Attach presser foot "N". With the right side of the fabric facing up, sew one edge of the open area.

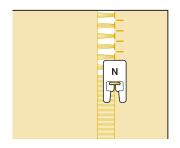


- Press to create a mirror image of the stitch.
- Match beginning needle drop points on the opposite edge of the open area to keep the stitching symmetrical.

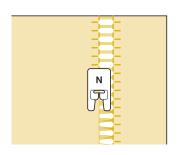

### ■ Hemstitching (3) (Drawn Work (2))

- Pull out several threads from both sides of the 4 mm (approx. 3/16 inch) area which are not yet open.
  - \* Pull out four threads, leave five threads, and then pull out four threads. The width of five threads is approximately 4 mm (approx. 3/16 inch) or less.

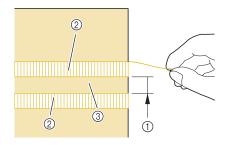

- ① Approx. 4 mm (approx. 3/16 inch) or less
- ② Four threads (pull out)
- ③ Five threads (leave)






### Memo

• For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.



Sew the decorative stitch in the center of the five threads created above.

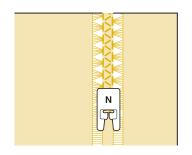



• A wing needle can be used for Hemstitching

## **One-step Buttonholes**


With one-step buttonholes, you can make buttonholes appropriate to the size of your button.

See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-01	Narrow rounded buttonhole	A
4-02	Wide round ended buttonhole	A
4-03	Tapered round ended buttonhole	A
4-04	Round ended buttonhole	
4-05	Round ended buttonhole	
<del>4-06</del>	Round double ended buttonhole	
4-07	Narrow squared buttonhole	A
4-08	Wide squared buttonhole	A
4-09	Stretch buttonhole	A
4-10	Heirloom buttonhole	A


Stitch	Stitch name	Presser foot
4-11	Bound buttonhole	
J 4-12	Keyhole buttonhole	4
4-13	Tapered keyhole buttonhole	A
J	Keyhole buttonhole	A

One-step buttonholes are sewn from the front of the presser foot to the back, as shown below.

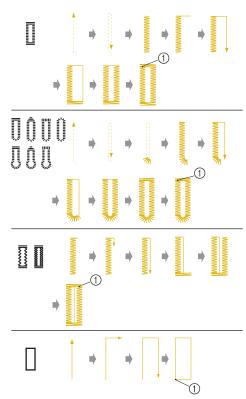

Reinforcement stitching

- Select a buttonhole stitch, and attach buttonhole foot "A".
- Mark the position and length of the buttonhole on the fabric.

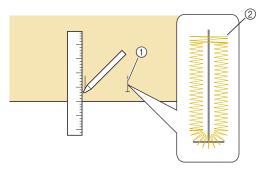


- 1 Marks on fabric
- ② Buttonhole sewing



#### Memo

- The maximum buttonhole length is about 28 mm (approx. 1-1/16 inches) (diameter + thickness of the button).
- Pull out the button holder plate on the presser foot, and insert the button that will be put through the buttonhole. Then tighten the button holder plate around the button.

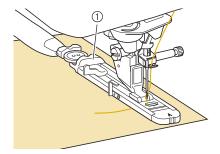


① Button holder plate



#### Memo

- The size of the buttonhole is determined by the size of the button in the button holder plate.
- Align the presser foot with the mark on the fabric, and lower the presser foot.

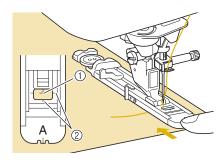

- 1) Mark on the fabric
- ② Marks on the presser foot




#### Note


- Pass the thread underneath the presser foot
- Slide the outside frame of the buttonhole foot backward as far as possible as shown in the illustration, making sure that there is no gap behind the part of the foot marked "A". If the buttonhole foot is not slid back as far as possible, the buttonhole will not be sewn at the correct size.




Lower the buttonhole lever so that it is positioned behind the metal bracket on the buttonhole foot.

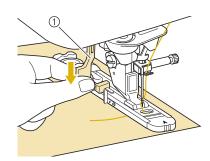


1 Buttonhole lever

 

Metal bracket

 


\* Feed the fabric carefully by hand while the buttonhole is sewn.

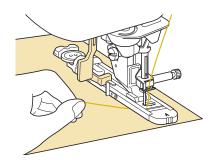

→ Once sewing is completed, the machine automatically sews reinforcement stitches, and then stops.



- If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.
- Insert a pin along the inside of one of the bar tacks, and then insert the seam ripper into the center of the buttonhole and cut towards the pin.

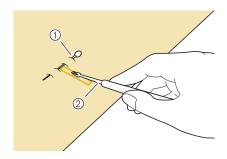

- Basting pin
- ② Seam ripper


# CAUTION

When using the seam ripper to open the buttonhole, do not put your hand or finger in the path of the ripper. The ripper may slip and cause injury. Do not use the seam ripper in any other way than how it is intended.



#### Memo


 For keyhole buttonholes, use the eyelet punch to make a hole in the rounded end of the buttonhole. Then insert a pin along the inside of one of the bar tacks, insert a seam ripper into the hole made with the eyelet punch, and cut towards the pin.

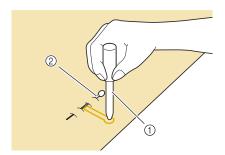


- 1 Eyelet punch
- ② Basting pin


### ■ Sewing Stretch Fabrics

 When sewing on stretch fabric with sew the buttonhole stitches over a gimp thread.



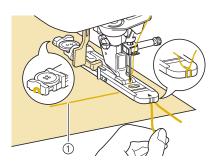


- 1 Upper thread
- Lower the presser foot and start sewing.

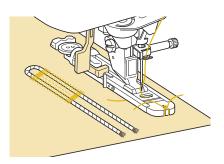



### Memo

- Set the width of the satin stitches to the width of the gimp thread, and set the buttonhole width to be 2-3 times the width of the gimp thread.
- Once sewing is completed, gently pull the gimp thread to remove any slack, and trim off any excess.

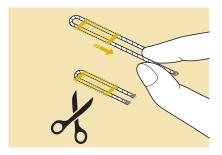




 After using the seam ripper to cut open the threads over the buttonhole, trim off the threads.

### ■ Odd Shaped Buttons/Buttons that do Not Fit into the Button Holder Plate

Use the markings on the presser foot scale to set the size of the buttonhole. One mark on the presser foot scale equals 5 mm (approx. 3/16 inch).

Add the button diameter and thickness together, and then set the plate at the calculated value.

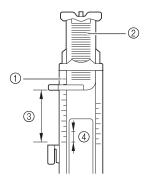

- Presser foot scale
- ② Button holder plate
- 3 Completed measurement of diameter + thickness
- 4 5 mm (approx. 3/16 inch)



### Memo

 For example, for a button with a diameter of 15 mm (approx. 9/16 inch) and a thickness of 10 mm (approx. 3/8 inch), the scale should be set at 25 mm (approx. 1 inch).



- ① 10 mm (approx. 3/8 inch)
- ② 15 mm (approx. 9/16 inch)


## **Darning**

Use darning stitches for mending and other applications.


See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-15 	Darning	A
4-16	Darning	A

Darning is performed by sewing from the front of the presser foot to the back as shown below.

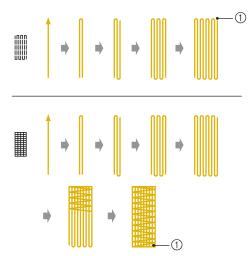

- ① Reinforcement stitches
- Select a stitch, and attach buttonhole foot "A".
- Set the scale to the desired length of the darning.

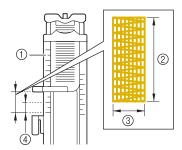


- Presser foot scale
- ② Completed length measurement
- ③ Width 7 mm (approx. 1/4 inch)
- ④ 5 mm (approx. 3/16 inch)



### Memo

 The maximum length for darning is 28 mm (approx. 1-1/16 inches). Check that the needle drops at the desired position and lower the presser foot, making sure the upper thread passes underneath the buttonhole foot.

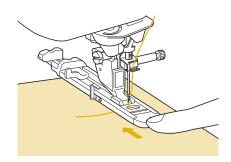




#### Note


- Pass the thread underneath the presser foot
- Set the presser foot so that there is no gap behind the section marked with an "A" (the shaded area in the illustration below). If there is a gap, the size of the darning will not be correct.



Lower the buttonhole lever so that it is positioned behind the metal bracket on the buttonhole foot.

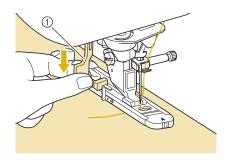


① Buttonhole lever

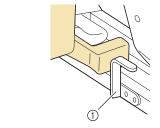

Metal bracket

Gently hold the end of the upper thread, and then press the "Start/Stop" button to start the machine.

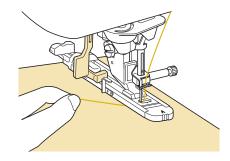

→ Once sewing is completed, the machine automatically sews reinforcement stitches, and then stops.



#### Memo

 If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

 
### **Bar Tacks**


Use bar tacks to reinforce areas that will be subject to strain, such as pocket corners.

See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-17	Bar tack	A





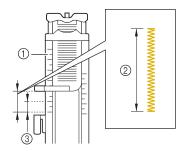


- Presser foot scale
- ② Completed length measurement
- ③ 5 mm (approx. 3/16 inch)



#### Memo

- Bar tacks can be between 5 mm (approx. 3/16 inch) and 28 mm (approx. 1-1/16 inches). Bar tacks are usually between 5 mm (approx. 3/16 inch) and 10 mm (approx. 3/8 inch).
- Set the fabric so that the pocket moves toward you during sewing.

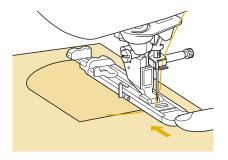





- Pass the thread underneath the presser
- Slide the outside frame of the buttonhole foot backward as far as possible as shown in the illustration, making sure that there is no gap behind the part of the foot marked "A". If the buttonhole foot is not slid back as far as possible, the bar tack will not be sewn to the correct size.




Check the first needle drop point and lower the presser foot.

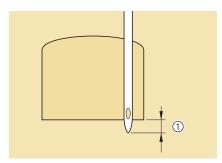


① 2 mm (approx. 1/16 inch)

 


 Lower the buttonhole lever so that it is positioned behind the metal bracket on the buttonhole foot.

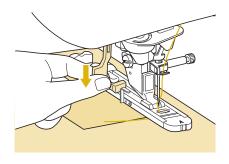




- Metal bracket
- Gently hold the end of the upper thread and begin sewing.

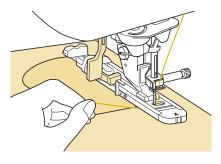

→ When sewing is completed, the machine will sew reinforcement stitches and stop automatically.

### ■ Bar Tacks on Thick Fabrics

Place a piece of folded fabric or cardboard beside the fabric being sewn to level the buttonhole foot and allow for easier and even feeding.

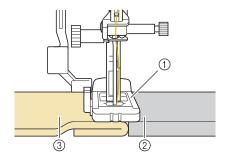

- 1) Presser foot
- (2) Thick paper
- ③ Fabric



#### Memo

 If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

## **Button Sewing**

Buttons with 2 or 4 holes can be attached, using the machine.

See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-18	Button sewing	M



#### **Note**

 Do not use the automatic thread cutting function when sewing buttons. Otherwise, you will lose the thread ends.




Select



- → The feed dogs are lowered automatically.
- Raise the presser foot.


Attach button sewing foot "M", slide the button along the metal plate and into the presser foot, and lower the presser foot.

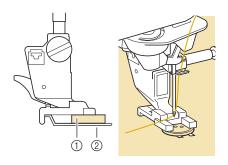

- ① Button
- ② Metal plate
- Rotate the handwheel toward you (counterclockwise) to check that the needle goes into each hole correctly.
  - If the needle does not reach the holes on the left side, adjust the stitch width.
  - \* To attach the button more securely, repeat the process.
- Gently hold the end of the upper thread and start sewing.
  - → The machine stops automatically when sewing is finished.

# **A** CAUTION

 
- Make sure the needle does not strike the button during sewing. The needle may break and cause injury.
- From the wrong side of the fabric, pull the end of the bobbin thread to pull the upper thread through to the wrong side of the fabric. Tie the two thread ends together and cut the threads.



After the button is attached, select another stitch and rotate the handwheel toward you (counterclockwise) to raise the feed dogs.


### ■ Attaching 4 Hole Buttons

 Sew the two holes closest to you. Then raise the presser foot and move the fabric so that the needle goes into the next two holes, and sew them in the same way.




### ■ Attaching a Shank to the Button

Pull the shank lever toward you before sewing.

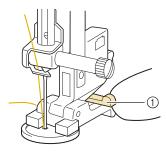

 - Shank lever
- Pull the two ends of the upper thread between the button and the fabric, wind them around the shank, and then tie them firmly together.



Tie the ends of the bobbin thread from the beginning and end of sewing together on the wrong side of the fabric.



#### Note

- When sewing is completed, be sure to select the other stitch and rotate the handwheel toward you (counterclockwise) to raise the feed dogs.
- Cut off any excess thread.


## **Eyelet**

Use this stitch for making belt holes and other similar applications.


See page S-68 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-19	Eyelet	79

- Select 6-19
  - Use or + in either the stitch width display or the stitch length display to choose the size of the eyelet.

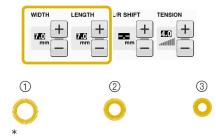

- \* Actual size
- ① Large 7 mm (approx. 1/4 inch)
- 2 Medium 6 mm (approx. 15/64 inch)
- ③ Small 5 mm (approx. 3/16 inch)
- Attach monogramming foot "N", then rotate the handwheel toward you (counterclockwise) to check the needle drop position.

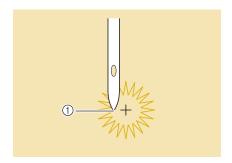


- ① Needle drop position
- 4 Lower the presser foot and start sewing.
  - → When sewing is finished, the machine sews reinforcement stitches and stops automatically.



### Note


 If the stitch pattern comes out poorly, make adjustments to "SEWING STITCH PATTERNS" on page S-81. Use the eyelet punch to make a hole in the center of the stitching.

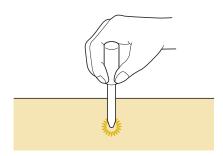

## **Multi-directional Sewing** (Straight Stitch and Zigzag Stitch)


Use these stitch patterns to attach patches or emblems to pant legs, shirt sleeves, etc.

 
Remove the flat bed attachment to use the free-arm.






  • Insert the tubular piece of fabric onto the free-arm, and then sew in the order shown in the illustration.






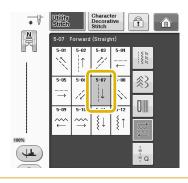




### Memo


- For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.
- Set the needle in the fabric at the sewing start point, and sew seam "1" as shown.

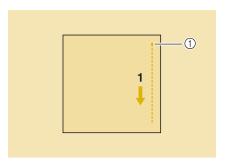

① Start Point

 

The fabric will move sideways, guide the fabric by hand to keep sewing straight.

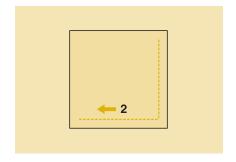




Select



and sew seam "3" as shown.

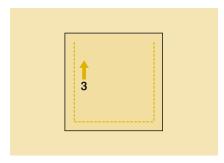


→ The fabric feeds forward while stitching backward.



Select



and sew seam "4" as shown.

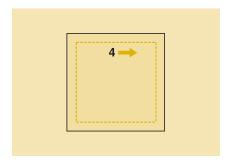

→ The seam will be connected to the starting point of seam 1.

## **Zipper Insertion**

### **■** Centered Zipper

Use for bags and other such applications.



Select





### Memo

 For details on each stitch, refer to the "STITCH SETTING CHART" on page S-68.




### **Note**


 Make sure you sew using the middle needle position.




Attach presser foot "J" and sew straight stitches up to the zipper opening. Change to a basting stitch (see page S-28) and sew to the top of the fabric.

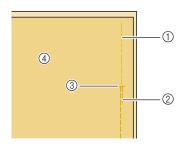

- Basting stitches
- ② Reverse stitches
- 3 End of zipper opening
- 4 Wrong side
- Press the seam allowance open and attach the zipper with a basting stitch in the middle of each side of the zipper tape.

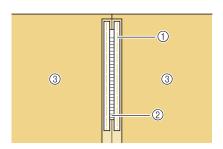


- Basting stitches
- ② Zipper
- ③ Wrong side
- Remove presser foot "J". Align the right side of the pin in zipper foot "I" with the presser foot holder, and attach the zipper foot.

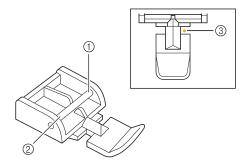

- ① Right
- ② Left
- 3 Needle drop position

# **A** CAUTION

- When using zipper foot "I", make sure the straight stitch, middle needle position is selected. Rotate the handwheel toward you (counterclockwise) to make sure the needle does not strike the presser foot. If another stitch is selected, the needle will strike the presser foot, causing the needle to break and possibly causing injury.
- Topstitch 7 mm to 10 mm (approx. 1/4 inch to 3/8 inch) from the seamed edge of the fabric, then remove the basting.

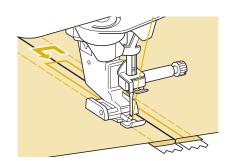

# **A** CAUTION

Make sure the needle does not strike the zipper during sewing. If the needle strikes the zipper, the needle may break, leading to injury.

### ■ Inserting a Side Zipper


Use for side zippers in skirts or dresses.






 Make sure you sew using the middle needle position.


Attach presser foot "J" and sew straight stitches up to the zipper opening. Change to a basting stitch and sew to the top of the fabric.

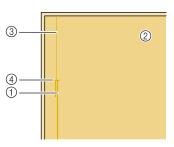


- 1) Reverse stitches
- ② Wrong side of fabric
- ③ Basting stitches
- 4 End of zipper opening
- Press the seam allowance open and align the folded hem along the teeth of the zipper, while maintaining 3 mm (approx. 1/8 inch) of sewing space.

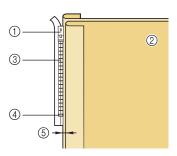

 - 1 Zipper pull tab
- ② Wrong side of fabric
- 3 Zipper teeth
- 4 End of zipper opening
- (5) 3 mm (approx. 1/8 inch)
- Remove presser foot "J".




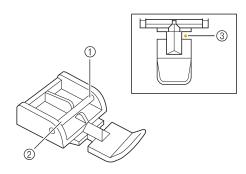

- 1 Right
- ② Left
- ③ Needle drop position

## **A** CAUTION


- When using zipper foot "I", make sure the straight stitch, middle needle position is selected. Rotate the handwheel toward you (counterclockwise) to make sure the needle does not strike the presser foot. If another stitch is selected, the needle will strike the presser foot, causing the needle to break and possibly causing injury.
- Set the presser foot in the 3 mm (approx. 1/8 inch) margin.
- Starting from the end of the zipper opening, sew to a point about 50 mm (approx. 2 inches) from the edge of the fabric, then stop the machine.
- Pull down the zipper slider, then continue sewing to the edge of the fabric.

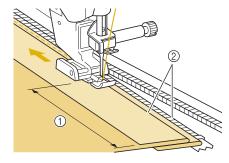


- ① 50 mm (approx. 2 inches)
- ② 3 mm (approx. 1/8 inch)

## **A** CAUTION

- Make sure the needle does not strike the zipper during sewing. If the needle strikes the zipper, the needle may break, leading to injury.
- Close the zipper, turn the fabric over, and sew a basting stitch.

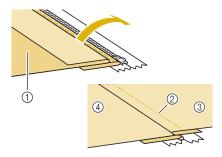


- ① Front of the skirt (wrong side of fabric)
- ② Basting stitches
- 3 Front of the skirt (right side of fabric)
- 4 Back of the skirt (right side of fabric)
- Remove the presser foot, and reattach it so that the left side of the pin is attached to the presser foot holder.
  - \* When sewing the left side of the zipper, the needle should drop on the right side of the presser foot. When sewing the right side of the zipper, the needle should drop on the left side of the presser foot.

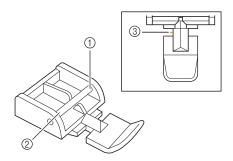

- ① Right
- ② Left
- ③ Needle drop position
- Set the fabric so that the left edge of the presser foot touches the edge of the zipper teeth.
- Sew reverse stitches at the top of the zipper, then continue sewing.
- Stop sewing about 50 mm (approx. 2 inches) from the edge of the fabric, leave the needle in the fabric, and remove the basting stitches.

### Open the zipper and sew the rest of the seam.

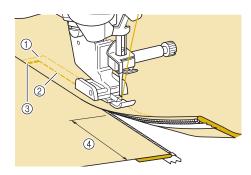

- ① Basting stitches
- ② 7 mm to 10 mm (approx. 1/4 inch to 3/8 inch)
- ③ Reverse stitches
- ④ 50 mm (approx. 2 inches)

# STITCH SETTING CHART

The following chart shows information for each utility stitch concerning applications, stitch lengths, stitch widths, and whether or not the twin needle mode can be used.

Stitch	Stitch name	Press	er foot	- Applications		h width n (inch)]		h length n (inch)]	Twin
Stiten	Sutchhame	QO	₽ E	Applications	Auto.	Manual	Auto.	Manual	needle
1-01	Straight stitch (Left)		Ó	General sewing, gather, pintuck, etc.	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-02	Straight stitch (Left)		ó	General sewing, gather, pintuck, etc.	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-03	Straight stitch (Middle)		Š	General sewing, gather, pintuck, etc.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-04	Straight stitch (Middle)		Ó	General sewing, gather, pintuck, etc.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-05	Triple stretch stitch		Ó	General sewing for reinforcement and decorative topstitching	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-06 4 4	Stem stitch		Ó	Reinforced stitching, sewing and decorative applications	1.0 (1/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-07	Decorative stitch	N N	Ó	Decorative stitching, top stitching	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-08	Basting stitch		Ó	Basting	0.0 (0)	0.0 - 7.0 (0 - 1/4)	20 (3/4)	5 - 30 (3/16 - 1-3/16)	NO
1-09	Zigzag stitch		Ó	For overcasting, mending.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	OK (J)
1-10	Zigzag stitch		Ó	For overcasting, mending.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	OK (J)
1-11	Zigzag stitch (Right)		Ó	Start from right needle position, zigzag sew at left.	3.5 (1/8)	2.5 - 5.0 (3/32 - 3/16)	1.4 (1/16)	0.3 - 5.0 (1/64 - 3/16)	OK (J)
1-12	Zigzag stitch (Left)		Ó	Start from left needle position, zigzag sew at right.	3.5 (1/8)	2.5 - 5.0 (3/32 - 3/16)	1.4 (1/16)	0.3 - 5.0 (1/64 - 3/16)	OK (J)
1-13 -	2 steps elastic zigzag		ó	Overcasting (medium weight and stretch fabrics), tape and elastic	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-14	3 steps elastic zigzag		ó	Overcasting (medium, heavyweight and stretch fabrics), tape and elastic	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-15	Overcasting stitch		G	Reinforcing of light and medium weight fabrics	3.5 (1/8)	2.5 - 5.0 (3/32 - 3/16)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Press	er foot	Applications		h width (inch)]		h length n (inch)]	NO  NO  OK (J)  OK (J)
Suton	Suton name	QQ.	₽ To	Applications	Auto.	Manual	Auto.	Manual	needle
1-16	Overcasting stitch		G	Reinforcing of heavyweight fabric	5.0 (3/16)	2.5 - 5.0 (3/32 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-17	Overcasting stitch	S	G	Reinforcing of medium, heavyweight and easily friable fabrics or decorative stitching.	5.0 (3/16)	3.5 - 5.0 (1/8 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-18	Overcasting stitch		Ó	Reinforced seaming of stretch fabric	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	
1-19	Overcasting stitch		Ó	Reinforcing of medium stretch fabric and heavyweight fabric, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	
1-20	Overcasting stitch		Ó	Reinforcement of stretch fabric or decorative stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	_
1-21 	Overcasting stitch		Ó	Stretch knit seam	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	NO
1-22	Single diamond overcast		Ó	Reinforcement and seaming stretch fabric	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-23	Single diamond overcast		ó	Reinforcement of stretch fabric	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.8 (1/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-24	With side cutter	Üs		Straight stitch while cutting fabrics	0.0 (0)	0.0 - 2.5 (0 - 3/32)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	NO
1-25	With side cutter		S	Zigzag stitch while cutting fabrics	3.5 (1/8)	3.5 - 5.0 (1/8 - 3/16)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	NO
1-26 > \$	With side cutter		S	Overcasting stitch while cutting fabrics	3.5 (1/8)	3.5 - 5.0 (1/8 - 3/16)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
1-27	With side cutter		S	Overcasting stitch while cutting fabrics	5.0 (3/16)	3.5 - 5.0 (1/8 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-28	With side cutter		S	Overcasting stitch while cutting fabrics	5.0 (3/16)	3.5 - 5.0 (1/8 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-29 : :   P	Piecing stitch (Right)		ó	Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	5.5 (7/32)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
1-30	Piecing stitch (Middle)		C	Piecework/patchwork	-	-	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
1-31	Piecing stitch (Left)		Ó	Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	1.5 (1/16)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
1-32	Hand-look quilting		Ó	Quilting stitch made to look like hand quilting stitch	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-33 \$\infty \Q	Quilting appliqué zigzag stitch		Ó	Zigzag stitch for quilting and sewing on appliqué quilt pieces	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	NO

Stitch	Stitch name	Presser foot		- Applications		h width (inch)]		ch length n (inch)]	Twin needle  NO  NO  NO  NO  OK (J)  OK (J)  OK (J)  OK (J)  OK (J)  OK (J)
Stitch	Suton name	O.O.	(Solution)	Applications	Auto.	Manual	Auto.	Manual	needle
1-34	Quilting appliqué stitch		Ó	Quilting stitch for invisible appliqué or attaching binding	1.5 (1/16)	0.0 - 7.0 (0 - 1/4)	1.8 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
1-35 2%\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Quilting stippling		ó	Background quilting	7.0 (1/4)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-01	Blind hem stitch	8	R	Hemming woven fabrics	00	3← - →3	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-02	Blind hem stitch stretch		R	Hemming stretch fabric	00	3← - →3	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-03	Blanket stitch		ó	Appliqués, decorative blanket stitch	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	
2-04	Shell tuck edge		ó	Shell tuck edge finish on fabrics	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	
3	Satin scallop stitch	N	ó	Decorating collar of blouse, edge of handkerchief	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	0.5 (1/32)	0.1 - 5.0 (1/64 - 3/16)	
2-06	Scallop stitch	N	ó	Decorating collar of blouse, edge of handkerchief	7.0 (1/4)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-07	Patchwork join stitch		ó	Patchwork stitches, decorative stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.2 (1/16)	0.2 - 5.0 (1/64 - 3/16)	
2-08	Patchwork double overlock stitch		Ó	Patchwork stitches, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	
2-09	Couching stitch		Ó	Decorative stitching, attaching cord and couching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.2 (1/16)	0.2 - 5.0 (1/64 - 3/16)	
2-10	Smocking stitch		Ó	Smocking, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	
2-11	Feather stitch		Ó	Fagoting, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
2-12   X	Fagoting cross stitch		ó	Fagoting, bridging and decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
2-13 < \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	Tape attaching		ó	Attaching tape to seam in stretch fabric	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
2-14	Ladder stitch		Ó	Decorative stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
2-15	Rick-rack stitch		Ó	Decorative top stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
2-16	Decorative stitch		ó	Decorative stitching	5.5 (7/32)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)

Stitoh	Stitch Stitch name		Presser foot	Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin
Sutch	Sutch hame	QQ.	₽ To	Applications	Auto.	Manual	Auto.	Manual	needle
2-17	Serpentine stitch	N	ó	Decorative stitching and attaching elastic	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
2-18 WWW	Decorative stitch	N	ó	Decorative stitching and appliqué	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
2-19 2-19 2-19	Decorative stippling stitch	N	Ó	Decorative stitching	7.0 (1/4)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
3-01	Hemstitching	N	Ó	Decorative hems, triple straight at left	1.0 (1/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-02	Hemstitching	N	Ó	Decorative hems, triple straight at center	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-03	Hemstitching zigzag	N	Ó	Decorative hems, top stitching	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-04 E	Hemstitching	Ň	Ó	Decorative hems, lace attaching pin stitch	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
3-05	Hemstitching	N	Ó	Decorative hems	3.0 (1/8)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-06 ** **	Hemstitching	N	ó	Decorative hems daisy stitch	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-07	Hemstitching	N	ó	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-08	Hemstitching	N	Ó	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-09	Hemstitching	N	Ó	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-10	Hemstitching	N	Ó	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-11	Hemstitching	Ň	Ó	Heirloom, decorative hems	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-12	Honeycomb stitch	N	Ó	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-13	Honeycomb stitch	N	Ó	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-14	Hemstitching	N	Ó	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-15	Hemstitching	N	Ó	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Presser foot		- Applications		ch width n (inch)]	Stite [mn	Twin	
Otton	Outon name	QQ	<u> </u>	Applications	Auto.	Manual	Auto.	Manual	needle
3-16	Hemstitching	N	Ó	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-17	Hemstitching	N	ó	Heirloom, decorative hems	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
3-18	Hemstitching	N N	Ó	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-19	Hemstitching	N N	Ó	Decorative hems and bridging stitch	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-20	Hemstitching	Ž	Ó	Decorative hems. Fagoting, attaching ribbon	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
3-21 7-2-4-4-4-4-4-4-4-4-4-4-4-4-4-4-4-4-4-4-	Hemstitching	Ž	Ó	Decorative hems, smocking	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
3-22 7-4-7-4-7-4-1	Hemstitching	Ň	Ó	Decorative hems, smocking	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
<del>4-01</del>	Narrow rounded buttonhole		A	Buttonhole on light to medium weight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
<del>1-02</del>	Wide round ended buttonhole		A	Buttonholes with extra space for larger buttons	5.5 (7/32)	3.5 - 5.5 (1/8 - 7/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-03	Tapered round ended buttonhole		A	Reinforced waist tapered buttonholes	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-04 U	Round ended buttonhole	4	A	Buttonholes with vertical bar tack in heavyweight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-05	Round ended buttonhole		A	Buttonholes with bar tack	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
<del>4-06</del>	Round double ended buttonhole		A	Buttonholes for fine, medium to heavyweight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-07	Narrow squared buttonhole		A	Buttonholes for light to medium weight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-08	Wide squared buttonhole		A	Buttonholes with extra space for larger decorative buttons	5.5 (7/32)	3.5 - 5.5 (1/8 - 7/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-09	Stretch buttonhole		A	Buttonholes for stretch or woven fabrics	6.0 (15/64)	3.0 - 6.0 (1/8 - 15/64)	1.0 (1/16)	0.5 - 2.0 (1/32 - 1/16)	NO
4-10	Heirloom buttonhole		A	Buttonholes for heirloom and stretch fabrics	6.0 (15/64)	3.0 - 6.0 (1/8 - 15/64)	1.5 (1/16)	1.0 - 3.0 (1/16 - 1/8)	NO
4-11	Bound buttonhole		A	The first step in making bound buttonholes	5.0 (3/16)	0.0 - 6.0 (0 - 15/64)	2.0 (1/16)	0.2 - 4.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Presser foot		Applications		Stitch width [mm (inch)]		Stitch length [mm (inch)]	
Sutch		QQ	50	Applications	Auto.	Manual	Auto.	Manual	needle
4-12	Keyhole buttonhole	7	Ā	Buttonholes in heavyweight or thick fabrics for larger flat buttons	7.0 (1/4)	3.0 - 7.0 (1/8 - 1/4)	0.5 (1/32)	0.3 - 1.0 (1/64 - 1/16)	NO
1-13	Tapered keyhole buttonhole		A	Buttonholes in medium to heavy weight fabrics for larger flat buttons	7.0 (1/4)	3.0 - 7.0 (1/8 - 1/4)	0.5 (1/32)	0.3 - 1.0 (1/64 - 1/16)	NO
<del>4-14</del>	Keyhole buttonhole		A	Buttonholes with vertical bar tack for reinforcement in heavyweight or thick fabrics	7.0 (1/4)	3.0 - 7.0 (1/8 - 1/4)	0.5 (1/32)	0.3 - 1.0 (1/64 - 1/16)	NO
4-15	Darning		A	Darning of medium weight fabric	7.0 (1/4)	2.5 - 7.0 (3/32 - 1/4)	2.0 (1/16)	0.4 - 2.5 (1/64 - 3/32)	NO
4-16	Darning		A	Darning of heavyweight fabric	7.0 (1/4)	2.5 - 7.0 (3/32 - 1/4)	2.0 (1/16)	0.4 - 2.5 (1/64 - 3/32)	NO
4-17	Bar tack		A	Reinforcement at opening of pocket, etc.	2.0 (1/16)	1.0 - 3.0 (1/16 - 1/8)	0.4 (1/64)	0.3 - 1.0 (1/64 - 1/16)	NO
4-18	Button sewing			Attaching buttons	3.5 (1/8)	2.5 - 4.5 (3/32 - 3/16)	-	_	NO
4-19	Eyelet	N	ó	For making eyelets, holes on belts, etc.	7.0 (1/4)	7.0 6.0 5.0 (1/4 15/64 3/16)	7.0 (1/4)	7.0 6.0 5.0 (1/4 15/64 3/16)	NO
5-01	Diagonally left up (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	-	_	NO
5-02	Reverse (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	_	_	NO
5-03	Diagonally right up (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	_	_	NO
5-04 	Sideways to left (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric	_	-	_	_	NO
5-05 	Sideways to right (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric	_	-	_	_	NO
5-06	Diagonally left down (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	_	_	NO
5-07	Forward (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	_	_	_	NO
5-08	Diagonally right down (Straight)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	_	-	_	NO
5-09 ~~~	Sideways to left (Zigzag)	N	ó	For attaching appliqué on tubular pieces of fabric	_	_	_	-	NO
5-10 ~~~ —>	Sideways to right (Zigzag)	N	ó	For attaching appliqué on tubular pieces of fabric	_	-	_	-	NO

Stitch	Stitch name	Press	er foot	- Applications		ch width n (inch)]		h length n (inch)]	Twin
Stiton	Sutch hame	QQ	<b>O</b> CO	Applications	Auto.	Manual	Auto.	Manual	needle
5-11 { \	Forward (Zigzag)	N	Ó	For attaching appliqué on tubular pieces of fabric and mitering corners	-	-	-	-	NO
5-12 { }	Reverse (Zigzag)	N	ó	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	-	-	NO
<b>Q-01</b>	Piecing stitch (Middle)		C	Piecework/patchwork	_	-	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-02	Piecing stitch (Right)		ó	Piecework/patchwork 6.5 mm (approx. 1/4 inch) right seam allowance	5.50 (7/32)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-03	Piecing stitch (Left)		ó	Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	1.50 (1/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-04	Hand-look quilting		ó	Quilting stitch made to look like hand quilting stitch	3.50 (1/8)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-05     	Basting stitch		ó	Basting	3.50 (1/8)	0.00 - 7.00 (0 - 1/4)	20 (3/4)	5 - 30 (3/16 - 1-3/16)	NO
Q-06	Stem stitch		ó	Reinforced stitching, sewing and decorative applications	1.00 (1/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-07      	Quilting appliqué zigzag stitch		ó	Zigzag stitch for quilting and sewing on appliqué quilt pieces	3.50 (1/8)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.0 - 5.0 (0 - 3/16)	NO
Ğ-08	Zigzag stitch (Right)		ó	Start from right needle position, zigzag sew at left	3.50 (1/8)	2.50 - 5.00 (3/32 - 3/16)	1.6 (1/16)	0.3 - 5.0 (1/64 - 3/16)	NO
Q-09	Zigzag stitch (Left)		Ó	Start from left needle position, zigzag sew at right	3.50 (1/8)	2.50 - 5.00 (3/32 - 3/16)	1.6 (1/16)	0.3 - 5.0 (1/64 - 3/16)	NO
Q-10	2 steps elastic zigzag		ó	Overcasting (medium weight and stretch fabrics), tape and elastic	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-11	3 steps elastic zigzag		ó	Overcasting (medium, heavyweight and stretch fabrics), tape and elastic	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-12	Quilting appliqué stitch		ó	Quilting stitch for invisible appliqué or attaching binding	2.00 (1/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-13	Shell tuck edge		ó	Shell tuck edge finish on fabrics	4.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-14	Blanket stitch		ó	Appliqués, decorative blanket stitch	3.50 (1/8)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-15	Quilting stippling		ó	Background quilting	7.00 (1/4)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-16	Overcasting stitch		Š	Stretch knit seam	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Press	er foot	Applications		h width (inch)]		Stitch length [mm (inch)]	
Otton	outon name	CO	QC	Applications	Auto.	Manual	Auto.	Manual	needle
Q-17	Tape attaching		Ó	Attaching tape to seam in stretch fabric	5.50 (7/32)	0.00 - 7.00 (0 - 1/4)	1.4 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-18	Serpentine stitch	Ň	Ó	Decorative stitching and attaching elastic	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-19 \$\hat{\hat{\hat{\hat{\hat{\hat{\hat{	Feather stitch		Ó	Fagoting, decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-20	Fagoting cross stitch		Ó	Fagoting, bridging and decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-21	Couching stitch		Ó	Decorative stitching, attaching cord and couching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.2 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-22	Patchwork double overlock stitch		Ó	Patchwork stitches, decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-23	Smocking stitch		Ó	Smocking, decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-24	Rick-rack stitch		Ó	Decorative top stitching	4.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-25 NNWW	Decorative stitch	N 77	Ó	Decorative stitching and appliqué	6.00 (15/64)	0.00 - 7.00 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-26 XXXX	Decorative stitch		Ó	Decorative stitching	5.50 (7/32)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-27	Hemstitching	N	Ó	Heirloom, decorative hems	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-28	Hemstitching	N T	Ó	Decorative hems and bridging stitch	6.00 (15/64)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-29	Single diamond overcast		ó	Reinforcement and seaming stretch fabric	6.00 (15/64)	0.00 - 7.00 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
Ø-30	Overcasting stitch		Ó	Reinforcement of stretch fabric or decorative stitching	4.00 (3/16)	0.00 - 7.00 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	NO




# Chapter 3 Character/Decorative Stitches

SELECTING STITCH PATTERNS77
Selecting Decorative Stitch Patterns/7mm Decorative Stitch Patterns/Satin Stitch Patterns/7mm Satin Stitch
Patterns/Cross Stitch/Utility Decorative Stitch Patterns
■ Deleting Characters
Adjusting the Character Spacing 80
SEWING STITCH PATTERNS81
Sewing Attractive Finishes81
Basic Sewing         81           Making Adjustments         82
EDITING STITCH PATTERNS84
■ Key Functions84
Changing the Size86 Changing the Length (for 7mm Satin Stitch Patterns Only)87
Creating a Vertical Mirror Image87
Creating a Horizontal Mirror Image87
Sewing a Pattern Continuously87
Changing Thread Density (for Satin Stitch Patterns Only)88
Returning to the Beginning of the Pattern
COMBINING STITCH PATTERNS90
Before Combining90
Combining Various Stitch Patterns 90
Combining Various Stitch Patterns90 Combining Large and Small Stitch Patterns91
· ·
Combining Large and Small Stitch Patterns91 Combining Horizontal Mirror Image Stitch Patterns92 Combining Stitch Patterns of Different Length92
Combining Large and Small Stitch Patterns

# **SELECTING STITCH PATTERNS**

Press Press to display the screen below. There are 7 categories of Character/Decorative stitch patterns.

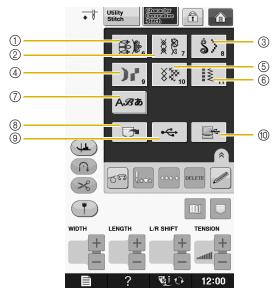

- ① Decorative stitch patterns
- ② 7mm decorative stitch patterns. You can set stitch length and width.
- ③ Satin stitch patterns
- ④ 7mm satin stitch patterns. You can set stitch length and width.
- ⑤ Cross stitch
- 6 Utility decorative stitch patterns
- ① Characters (Gothic font, Handwriting font, Outline, Cyrillic font, Japanese font)
- ® Patterns saved in the machine's memory (see page S-99)
- 9 Patterns saved in USB media (see page S-100)
- Patterns saved on the computer (see page S-101)


# Ÿ

#### **Note**

• If the screen is locked ( ), unlock the screen by pressing . While the screen is locked, no other key can be operated.

# Selecting Decorative Stitch Patterns/7mm Decorative Stitch Patterns/Satin Stitch Patterns/7mm Satin Stitch Patterns/Cross Stitch/Utility Decorative Stitch Patterns

- Select the category of the pattern you want to sew.
- Press the key of the stitch pattern you want to sew.
  - \* Press ▼ to view the next page.
  - \* Press **\( \Lambda \)** to view the previous page.
  - \* Touch the bar that appears between value and leap multiple pages at one time.
  - \* To select a different stitch pattern, press When the current stitch pattern is erased, select the new stitch pattern.

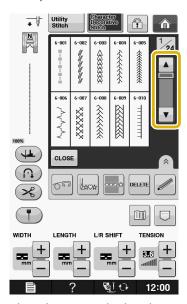


→ The selected pattern is displayed.


#### **Characters**

 **Example:** Entering "Blue Sky".







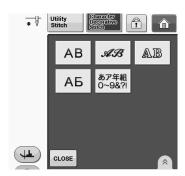

#### Memo

- There are four fonts for alphabet character stitching, and a font for Japanese character stitching. Refer to the Quick Reference Guide for the details about the different font selections available.
- Press a tab to change the selection screens.



Press ABC and then enter "B".




Press abc and then enter "lue".



6 Press \_\_\_ to enter a space.



Press ABC again and enter "S".

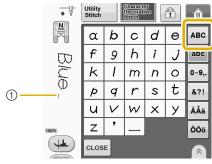

- ① Space is a jumping stitch
- \* Remove the jumping stitches after sewing.


Press abc and then enter "ky".



If you want to continue entering characters in a different font, press CLOSE, and then repeat from step 2.

## **■** Deleting Characters

Press DELETE to delete the last character.

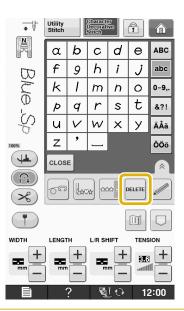



• Characters are deleted individually starting with the last character entered.

Select the correct character.

\* Continually press and all characters will be deleted.




#### ■ Adjusting the Character Spacing

The space between the characters can be adjusted.




\* Press \( \hat{\alpha}\) to display spacing on the screen.

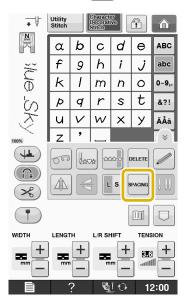

→ The character spacing window appears.



Press – or + to adjust character spacing.

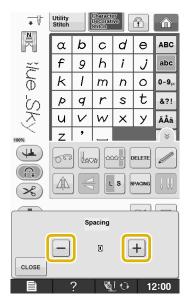

\* Press + to increase the character spacing and press - to decrease the character spacing.

#### **Example:**

\* Each setting equals a specific distance between characters.

■ Blue Sky

Value	mm
0	0
1	0.18
2	0.36
3	0.54
4	0.72
5	0.9
6	1.08
7	1.26
8	1.44
9	1.62
10	1.8



#### Memo

- The default setting is "0". No number less than "0" can be set.
- Changing character spacing by this method, pertains to all characters. Spacing changes are valid not only while entering characters but also before and after the entering of characters.

# **SEWING STITCH PATTERNS**


## **Sewing Attractive Finishes**

To achieve attractive results when sewing character/decorative stitches, check the table below for the proper fabric/thread/needle combinations.




#### Note

- · Other factors, such as fabric thickness, stabilizer material, etc., also have an effect on the stitch, so you should always sew a few trial stitches before beginning your project.
- When sewing satin stitch patterns, there may be shrinking or bunching of stitches, so be sure to attach a stabilizer material.
- Guide the fabric with your hand to keep the fabric feeding straight and even during sewing.

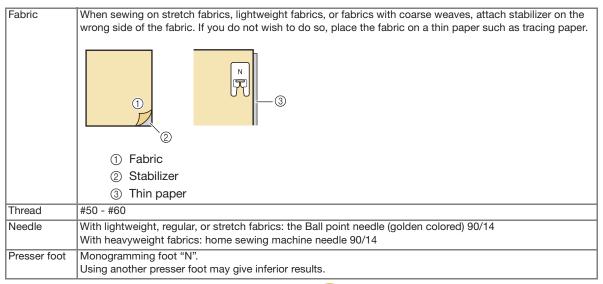


## **Basic Sewing**

- Select a stitch pattern.
- Attach monogramming foot "N".
- Place the fabric under the presser foot, pull the upper thread out to the side, and then lower the presser foot.

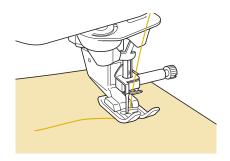



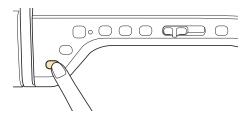


# **CAUTION**

When sewing 7 mm satin stitch patterns and the stitches are bunched, lengthen the stitch length. If you continue sewing when the stitches are bunched, the needle may bend or break ("Setting the Stitch Length" on page S-10).



#### Memo


- If the fabric is pulled or pushed during sewing, the pattern may not turn out correctly. Also, depending on the pattern, there may be movement to the left and right as well as front and back. Guide the fabric with your hand to keep the fabric feeding straight and even during sewing.
- Press the "Start/Stop" button to stop sewing.
- Press the "Reverse Stitch" button or "Reinforcement Stitch" button to sew reinforcement stitches.

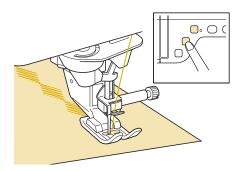



#### Memo

 When sewing character stitches, the machine automatically sews reinforcement stitches at the beginning and end of each character.

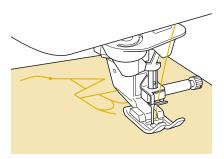

• When sewing is completed, trim any excess thread between letters.





#### **Note**

• When sewing some patterns, the needle will temporarily pause in the raised position while the fabric is fed due to the operation of the needle bar separation mechanism which is used in this machine. At such times, a clicking sound different from the sound generated during sewing will be heard. This sound is normal and is not the sign of a malfunction.

## **Making Adjustments**

Your stitch pattern may sometimes turn out poorly, depending on the type or thickness of fabric, the stabilizer material used, sewing speed, etc. If your sewing does not turn out well, sew trial stitches using the same conditions as the real sewing, and adjust the stitch pattern as explained below. If the pattern does not turn out well even after making


adjustments based on the pattern, make adjustments for each pattern individually.




Press simple and select



on 19/24.

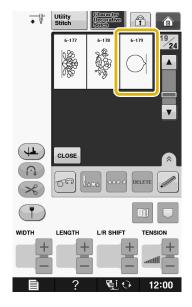


Attach monogramming foot "N" and sew the pattern.

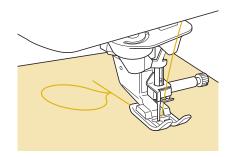

Compare the finished pattern to the illustration of the correct pattern below.



Press \_\_\_\_\_, and then adjust the pattern with the "Fine Adjust Verti." or "Fine Adjust Horiz." displays.

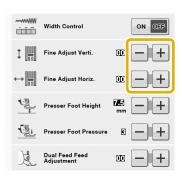

- \* If the pattern is bunched:
  - Press + in the "Fine Adjust Verti." display.
- → The displayed value increases each time the button is pressed and the pattern will lengthen.







- \* If the pattern has gaps:
  - Press in the "Fine Adjust Verti." display.
  - → The displayed value decreases each time the button is pressed and the pattern will shorten.







- \* If the pattern is skewed to the left:
  - Press + in the "Fine Adjust Horiz." display.
- → The displayed value increases each time the button is pressed and the pattern will slide to the right.







- If the pattern is skewed to the right:
  - Press in the "Fine Adjust Horiz." display.
- → The displayed value decreases each time the button is pressed and the pattern will slide to the left.







- Sew the stitch pattern again.
  - If the stitch pattern still comes out poorly, make adjustments again. Adjust until the stitch pattern comes out correctly.



#### Memo

- You can sew with the setting screen on the display.
- Press CLOSE to return to the original screen.

# **EDITING STITCH PATTERNS**


#### **■** Key Functions


You can create just the finish you want using the editing functions. Make patterns larger or smaller, make mirror images, etc.




#### **Note**

 Some editing functions cannot be used with certain stitch patterns. Only the functions for the displayed keys are available when a pattern is selected.

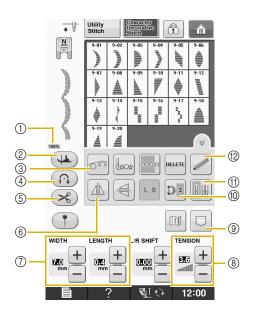

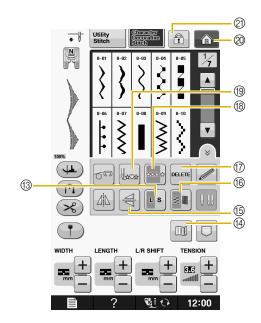

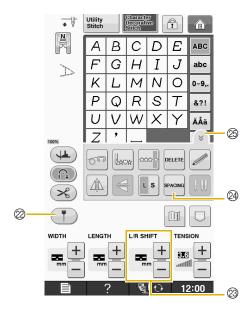

No.	Display	Key Name	Explanation	Page
1	100%	Pattern display size	Show the approximate size of the pattern selected.	S-21
			100%: Nearly the same size as the sewn pattern	
			50%: 1/2 the size of the sewn pattern	
			25%: 1/4 the size of the sewn pattern	
			* The actual size of the sewn pattern may differ depending on the type of fabric and thread that is used.	
2	4	Pivot key	Press this key to select the pivot setting. When the pivot setting is selected, stopping the machine lowers the needle and slightly raises the	S-15
			presser foot automatically. In addition, when sewing is restarted, the presser foot is automatically lowered.	
			If this key appears as , the pivot function cannot be used.	
			Be sure the "Needle Position - UP/DOWN" of Machine Settings is set to the down position.	
3		Free motion mode	Press this key to enter free motion sewing mode.	S-40
	(Oct)	key	The feed dog is lowered and presser foot is raised to a height appropriate for free motion quilting.	
4	$\bigcirc$	Automatic reinforcement stitch key	Press this key to turn on the automatic reinforcement stitching mode.	S-5
(5)	<b>%</b> )	Automatic thread cutting key	Press this key to turn on the automatic thread cutting mode.	S-13
6		Horizontal mirror	After selecting the stitch pattern, use this key to create a horizontal mirror	S-87
		image key	image of the stitch pattern.	
7	WIDTH LENGTH	Stitch width and stitch length key	Shows the stitch width and stitch length of the selected stitch pattern. The machine default settings are highlighted.	S-10 to S-12
8	TENSION	Thread tension key	Shows the thread tension setting for the selected stitch pattern. The machine default settings are highlighted	S-12
9		Memory key	Use this key to save stitch pattern combinations.	S-96 to S-97
10	<b>(1)</b>	Elongation key	When 7mm satin stitch patterns are selected, press this key to choose from 5 automatic length settings, without changing the stitch zigzag width or stitch length settings.	S-87
11)		Needle mode selection key (Single/Double)	Press this key to choose single needle sewing or twin needle sewing.	"Basic operations"
12		Sensor function key	Press this key to use the sensor function.	
13	Ls	Size selection key	Use this key to select the size of the stitch pattern (large, small).	S-86
14)		Image key	Press this key to display an enlarged image of the selected stitch pattern.	S-89
15		Vertical mirror image key	After selecting the stitch pattern, use this key to create a vertical mirror image of the stitch pattern.	S-87
16	N N	Thread density key	After selecting the stitch pattern, use this key to change the thread density of the pattern.	S-88
17	DELETE	Delete key	When you make a mistake selecting a stitch pattern, use this key to delete the mistake. When you make a mistake in combining stitch patterns, use this key to delete stitch patterns.	S-78, S-79
18		Single/Repeat sewing key	Press this key to choose single stitches or continuous stitches.	S-87
19	Laca	Back to beginning key	When sewing is stopped, press this key to return to the beginning of the pattern.	S-88
20		Home page screen key	(For embroidery and sewing machine only) Press this key to return to the home page screen.	-
21	Fi	Screen lock key	Press this key to lock the screen. When the screen is locked, the various settings, such as the stitch width and stitch length, are locked and cannot be changed. Press this key again to unlock the settings.	S-18

No.	Display	Key Name	Explanation	Page
2		Guideline marker key (For models equipped with the guideline marker)	Press this key to display the guideline marker along the sewing line. The guideline marker makes it easier to align stitches with the fabric edge or other marker on the fabric.	S-14
<b>3</b>	L/R SHIFT	"L/R SHIFT" key	Press + to shift the stitch pattern to the right or press to shift the pattern to the left. This feature is not available on all patterns. Only those applicable will be shifted. The machine default setting is highlighted.	S-11
24	SPACING	Character spacing key	Press this key to change the spacing of character patterns.	S-80
25	<u> </u>	Function page key	Press this key to show all the functions available in this screen.	S-80

# **Changing the Size**

Select a stitch pattern, then press to change the size of the stitch pattern. The stitch pattern will be sewn in the size highlighted on the key.






#### Memo

- If you continue entering stitch patterns after changing the size, those patterns will also be sewn in that size.
- You cannot change the size of combined stitch patterns once the stitch pattern is entered.


#### **Actual Stitch Pattern Size**

\* The size differs depending on the fabric and threads.

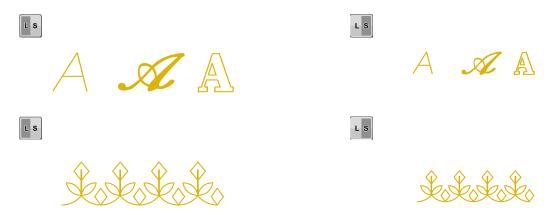


# **Changing the Length (for 7mm Satin Stitch Patterns Only)**

When 7mm satin stitch patterns are selected, press to choose from 5 automatic length settings, without changing the stitch zigzag width or stitch length settings.

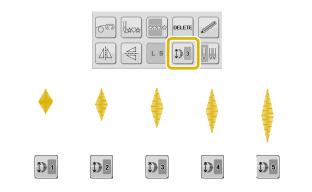


# **Creating a Vertical Mirror Image**

To create a vertical mirror image, select a stitch pattern then press .

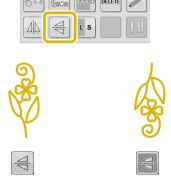


# **Creating a Horizontal Mirror Image**

To create a horizontal mirror image, select a stitch pattern then press .

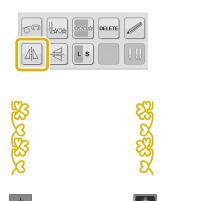

# **Sewing a Pattern Continuously**

Press to select continuous sewing or single stitch sewing.

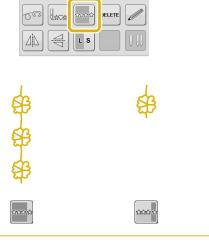



#### Memo


 To finish a complete motif while sewing the pattern continuously, you can press the

key while sewing. The machine will automatically stop when the motif is finished.

# **Changing Thread Density** (for Satin Stitch Patterns Only)

After selecting a satin stitch pattern, press to select your preferred thread density.



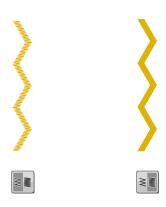

# **A** CAUTION

• If the stitches bunch when thread density is changed to [3], return the thread density to

If you continue sewing when the stitches are bunched, the needle may bend or break.



#### Memo

- Even if you select a new pattern after changing the thread density, the thread density remains the same until you change it
- You cannot change thread density for a combined pattern after additional patterns are added.

# Returning to the Beginning of the Pattern

When sewing character/decorative stitches, you can return to the beginning of the pattern after trial sewing or when the stitching is sewn incorrectly.

Press the "Start/Stop" button to stop the machine, and then press



→ Sewing returns to the beginning of the selected pattern ("W") from the point where sewing was stopped.



#### Memo

 If this key is pressed when sewing is stopped, patterns can be added at the end of a combined stitch pattern. (In this example, "!" is added.)




Press the "Start/Stop" button to continue sewing.


# **Checking the Image**

You can display an approximate size image of the selected stitch pattern. You can also check and change the colors of the image on the screen.


- Press .
  - → An image of the selected pattern is displayed.
- Press to change the thread color in the image to red, blue, or black.

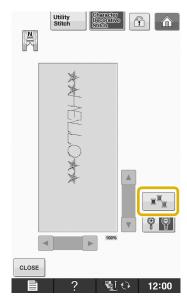

- $\rightarrow$  The color changes every time you press the button.
- Press Press to display the enlarged image.

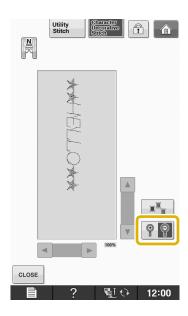

Use \( \lambda / \( \bullet / \) to view any part of the image that extends out of the viewable display area.

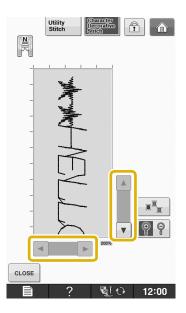

Press CLOSE to return to the original screen.



#### Memo

- You can also sew from this screen when the presser foot symbol is displayed.
- Image of some patterns will display in default size only.


# **COMBINING STITCH PATTERNS**

You can combine many varieties of stitch patterns, such as character stitches, cross stitches or satin stitches. You can also combine stitch patterns of different sizes, mirror image stitch patterns, and others.


## **Before Combining**

Single stitch sewing is automatically selected for sewing combined patterns. If you want to sew the pattern continuously, press after finishing the stitch pattern combination.


When changing sizes, creating mirror images, or making other adjustments to a combined stitch pattern, be sure to edit the selected stitch pattern before selecting the next one. You cannot edit a stitch pattern once the next stitch pattern is selected.

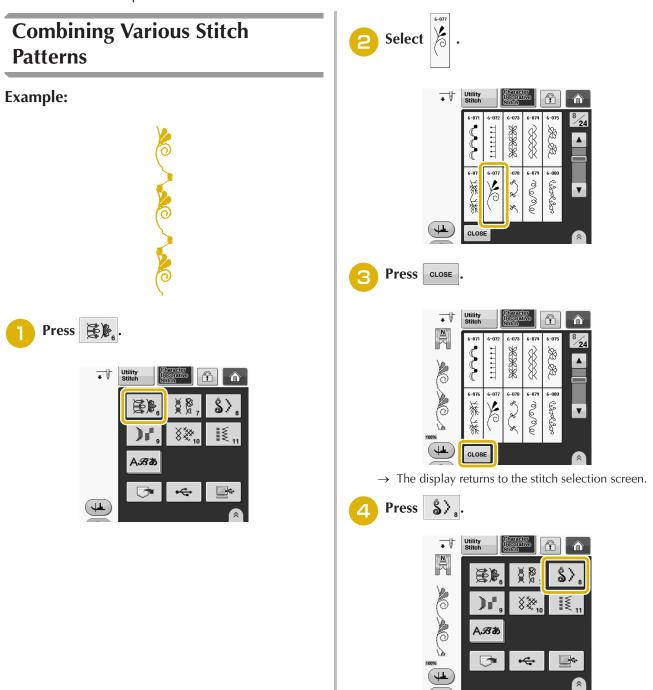



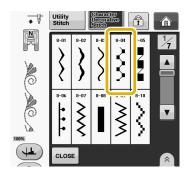

- Press to sew the pattern continuously.
- **Press** CLOSE

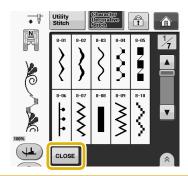

 Patterns are deleted individually starting with the last pattern entered by pressing



# **Combining Large and Small Stitch Patterns**


#### **Example:**






- → The large size stitch will be selected.
- **Press** again, then press Ls to select

the small size.

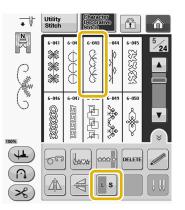

- → The pattern is displayed in a smaller size.
- Press to sew continuously.

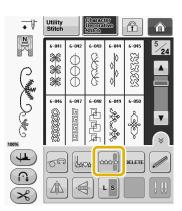


→ The entered pattern is repeated.

# **Combining Horizontal Mirror Image Stitch Patterns**

#### **Example:**




- Press 3.
- Press again, then press .

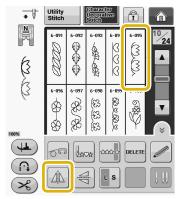

 $\rightarrow$  The pattern is flipped along a vertical axis.



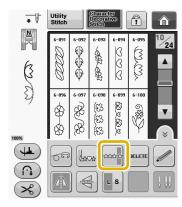


 $\rightarrow$  The entered pattern is repeated.

# **Combining Stitch Patterns of Different Length**


#### **Example:**



- Press , then press once.
  - $\rightarrow$  The length of the image is set to 1.
- Select again, then press 3 times.

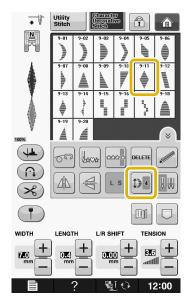



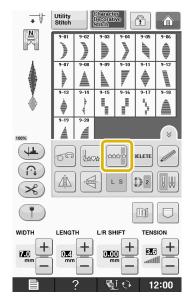


 $\rightarrow$  The entered pattern is repeated.

# Making Step Stitch Patterns (for 7mm Satin Stitch Patterns Only)

You can use the keys with 7mm satin stitch patterns to create a step effect.

Stitch patterns sewn so that they create a step effect are called step stitch patterns.

- \* Press to move the stitch pattern a distance equal to half of the stitch pattern's size to the left.
- \* Press to move the stitch pattern a distance equal to half of the stitch pattern's size to the right.

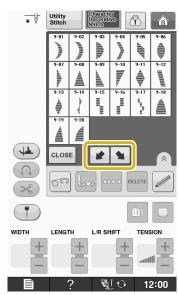

#### **Example:**



- Press 9-11
- Press 1.



 $\rightarrow$  The next stitch pattern will move to the right.








Press .



→ The next stitch pattern will move to the left.

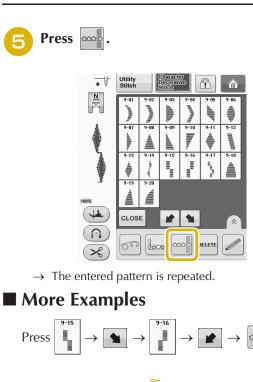

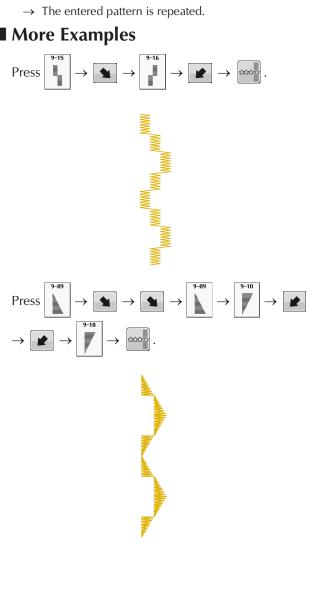

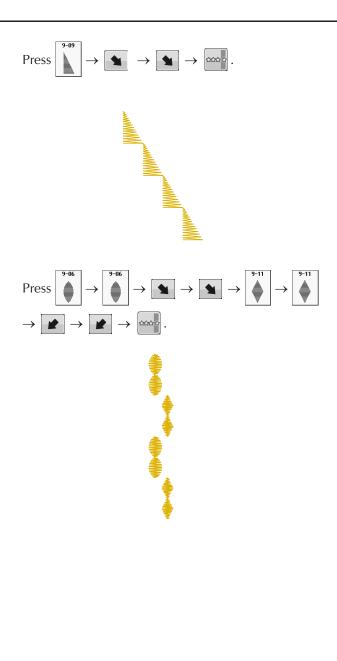

# **USING THE MEMORY FUNCTION**

#### **Stitch Data Precautions**

Observe the following precautions when using stitch data other than that created and saved in this machine.

#### ■ Types of Stitch Data that can be Used

• In the Character/Decorative Stitch memory, ".pmv", ".pmv" and ".pmu" stitch data files can be used with this machine. ".pmu" stitch data files can be retrieved; however, when the machine is used to save the file, it is saved as a ".pmv" stitch data file. Using data other than that created using this machine or the machine which create ".pmu" data file, may cause the machine to malfunction.

#### ■ Types of USB Devices/Media that can be Used

Stitch data can be saved to or recalled from USB external media. Use external media that meets the following specifications.

- USB Flash drive (USB Flash memory)
- USB Floppy disk drive

Stitch data can be recalled only from;

• USB CD-ROM, CD-R, CD-RW drives

You can also use the following types of media with the USB Memory Card Reader/USB card writer module.

- Secure Digital (SD) Card
- CompactFlash
- Memory Stick
- Smart Media
- Multi Media Card (MMC)
- xD-Picture Card



#### Note

- Some USB media may not be usable with this machine. Please visit our website for more details.
- The access lamp will begin blinking after inserting USB Devices/Media, and it will take about 5 to 6 seconds to recognize the Devices/Media. (Time will differ depending on the USB Device/Media).
- To create file folders, use a computer.

# ■ Computers and Operating Systems with the Following Specifications can be Used

- Compatible models:
   IBM PC with a USB port as standard equipment
   IBM PC-compatible computer equipped with a USB port as standard equipment
- Compatible operating systems: Microsoft Windows XP, Windows Vista, Windows 7

## ■ Precautions on Using the Computer to Create and Save Data

- If the name of the stitch data file/folder cannot be identified, for example, because the name contains special characters, the file/folder is not displayed. If this occurs, change the name of the file/folder. We recommend using the 26 letters of the alphabet (uppercase and lowercase), the numbers 0 through 9, "-", and "\_".
- Stitch data in a folder created in USB media can be retrieved.
- Do not create folders in "Removable Disk" on a computer. If stitch data is stored in a folder in "Removable Disk", that stitch data cannot be retrieved by the machine.

# Saving Stitch Patterns in the Machine's Memory

You can save often used stitch patterns in the machine's memory. A total of about 1 MB of stitch patterns can be saved in the machine's memory.



#### **Note**


 Do not turn the main power to OFF while the "Saving" screen is displayed. You will lose the stitch pattern you are saving.



#### Memo

- It takes a few seconds to save a stitch pattern.
- See page S-99 for information on retrieving a saved stitch pattern.



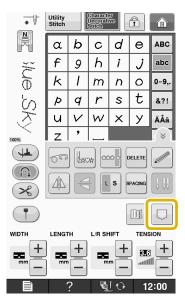



\* Press close to return to the original screen without saving.



→ The "Saving" screen is displayed. When the pattern is saved, the display returns to the original screen automatically.


#### ■ If the Memory is Full

If the following screen appears while you are trying to save a pattern on the machine's memory, the memory is too full to hold the currently selected stitch pattern. To save the stitch pattern in the machine's memory, you have to delete a previously saved stitch pattern.




#### Press DELETE .

\* Press CANCEL to return to the original screen without saving.

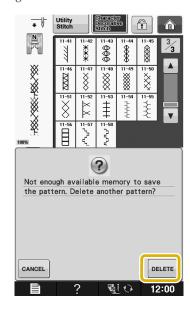


# 2 Choose a stitch pattern to delete.

\* Press CLOSE if you decide not to delete the stitch pattern.

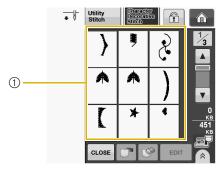

Pockets holding saved stitch patterns




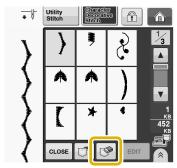

→ A confirmation message appears.



If you decide not to delete the stitch pattern, press

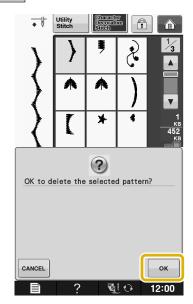

The machine deletes the stitch pattern, then automatically saves the new stitch pattern.

## **Saving Stitch Patterns to USB** Media


When sending stitch patterns from the machine to USB media, plug the USB media into the machine's top USB port.



#### Memo


- USB media is commercially available, but some USB media may not be usable with this machine. Please visit our website for more details.
- Depending on the type of USB media being used, either directly plug the USB device into the machine's USB port or plug the USB media Reader/Writer into the machine's USB port.
- The USB media can be inserted or removed at any time except when saving or deleting.



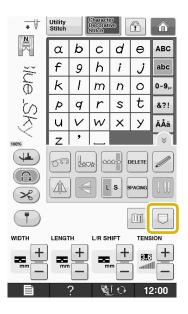



# Insert the USB media into the USB port on the machine.

 

- 1 USB port
- ② USB media



#### Note

- The processing speed may vary by quantity of data.
- Two USB media cannot be used with this machine at the same time. If two USB media are inserted, only the USB media inserted first is detected.



\* Press CLOSE to return to the original screen without saving.



→ The "Saving" screen is displayed. When the pattern is saved, the display returns to the original screen automatically.



#### Note

Do not insert or remove USB media while "Saving" screen is displayed. You will lose some or all of the pattern you are saving.


# Saving Stitch Patterns in the Computer

Using the included USB cable, the machine can be connected to your computer, and the stitch patterns can be temporarily retrieved from and saved in the "Removable Disk" folder in your computer. A total of about 3 MB of stitch patterns can be saved in the "Removable Disk", but the saved stitch patterns are deleted when the machine is turned OFF.

# Ö

#### **Note**

- Do not turn the main power to OFF while the "Saving" screen is displayed. You will lose the stitch pattern you are saving.
- Plug the USB cable connector into the corresponding USB ports for the computer and for the machine.
- Turn on your computer and select "Computer (My computer)".
  - \* The USB cable can be plugged into the USB ports on the computer and machine whether or not they are turned on.

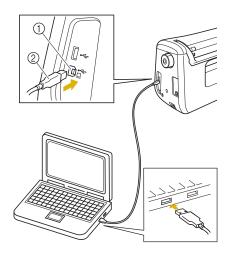


- ① USB port for computer
- ② USB cable connector
- → The "Removable Disk" icon will appear in "Computer (My computer)" on the computer.



#### Note

- The connectors on the USB cable can only be inserted into a port in one direction. If it is difficult to insert the connector, do not insert it with force and check the orientation of the connector.
- For details on the position of the USB port on the computer (or USB hub), refer to the instruction manual for the corresponding equipment.


# Press .

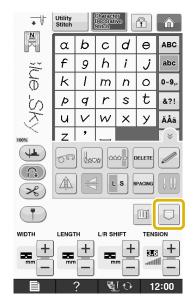

- **Press** 
  - close to return to the original screen without saving.



- → The stitch pattern will be temporarily saved to "Removable Disk" under "Computer (My computer)".
- Select the stitch pattern's .pmv file and copy the file to the computer.

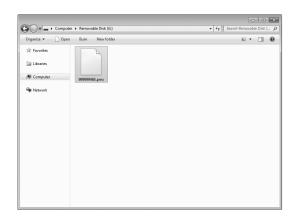

#### **Note**


Do not turn off the machine while the "Saving" screen is showing. You may lose the data.

# **Retrieving Stitch Patterns from** the Machine's Memory


**Press** 



- → The pocket selection screen appears.
- Choose a stitch pattern to retrieve.
  - If the entire saved stitch pattern is not displayed, press the thumbnail.
  - Press | CLOSE | to return to the original screen without saving.

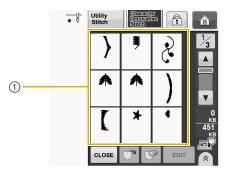

- Saved stitch patterns
- Press .
  - Press of to delete the stitch pattern.

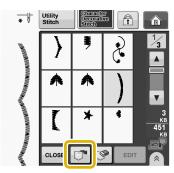


→ The selected stitch pattern is retrieved and the sewing screen will be displayed.

# **Recalling from USB Media**

 You can recall a specific stitch pattern from either direct USB media or a folder in the USB media. If the stitch pattern is in a folder, check each folder to find the stitch pattern.

Insert the USB Media into the USB port on the machine (see page S-97).




- ① USB port
- ② USB media






→ Stitch patterns and a folder in a top folder are displayed.

- Press when there is a subfolder to sort two or more stitch patterns to USB media, the stitch pattern in the subfolder is displayed.
  - \* Press CLOSE to return to the original screen without recalling.

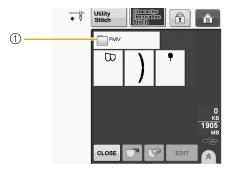


→ Stitch patterns and a subfolder within a folder are displayed. Select the folder to display the patterns in it.

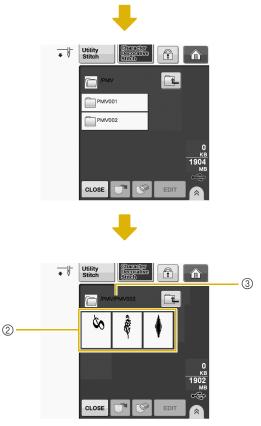

- 1) Folder name
- Stitch patterns in a folder show only the first pattern of any combined patterns.
- ③ Path
- \* Press to return to the previous folder.
- \* Use the computer to create folders. Folders cannot be created with the machine.
- Press the key of the stitch pattern you want to recall.




\* Press of to delete the stitch pattern. The pattern will be deleted from the USB media.

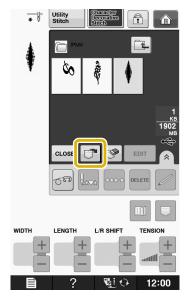

→ The selected stitch pattern is recalled and the sewing screen will be displayed.

# **Recalling from the Computer**

- Plug the USB cable connector into the corresponding USB ports for the computer and for the machine (see page S-98).
- On the computer, open "Computer (My computer)" then go to "Removable Disk".

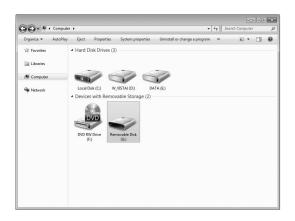

Move/copy the pattern data to "Removable Disk".



→ Stitch pattern data in "Removable Disk" is written to the machine.



#### **Note**

- While data is being written, do not disconnect the USB cable.
- Do not create folders within "Removable Disk". Since folders are not displayed, stitch pattern data within folders cannot be recalled.






→ The stitch patterns in the computer are displayed on the selection screen.

- Press the key of the stitch pattern you want to recall.
  - \* Press CLOSE to return to the original screen without recalling.





\* Press of to delete the stitch pattern. The pattern will be deleted from the "Removable Disk" folder in your computer.

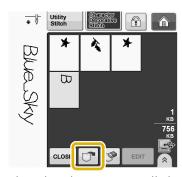

ightarrow The selected stitch pattern is recalled and the sewing screen will be displayed.



• The pattern recalled from the computer is only temporarily written to the machine. It is erased from the machine when the machine is turned off. If you wish to keep the stitch pattern, store it in the machine ("Saving Stitch Patterns in the Machine's Memory" on page S-96).




# Chapter 4 How to Create Bobbin Work (Sewing)

ABOUT BOBBIN WORK105
PREPARING FOR BOBBIN WORK105
Required Materials105
■ Bobbin case and bobbin cover105
■ Lower thread
■ Upper thread106
■ Needle
■ Presser foot
■ Fabric
Upper Threading106
Preparing the Bobbin Thread107
■ When tension is applied to the bobbin thread109
■ When tension is not applied to the bobbin thread 110
CREATING BOBBIN WORK111
Positioning the Fabric and Sewing111
Finishing the thread ends
Bobbin Work Free Motion Sewing113
ADJUSTING THE THREAD TENSION114
■ Adjusting the upper thread tension
■ Adjusting the tension of the bobbin thread114
TROUBLESHOOTING115
■ The thread was activated and the bobbin thread is caught
inside the machine115
■ Correcting bobbin work tension115
■ The bobbin thread catches on the tension spring
of the bobbin case115

# **ABOUT BOBBIN WORK**


Beautiful embroidery work, with a three-dimensional appearance, can be created by winding the bobbin with medium to heavy weight thread or ribbon, which is too thick to be threaded through the machine's needle. The decorative thread or ribbon will stitch out on the underneath side of fabric while sewing with the fabric wrong side facing up.

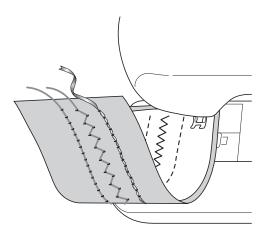

#### 1. Utility stitches



#### 2. Decorative stitches

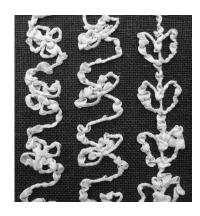

#### 3. Free motion sewing



# PREPARING FOR BOBBIN WORK

# **Required Materials**

#### **■** Bobbin case and bobbin cover



Bobbin case (gray) There is a notch at the location indicated by the letter "A".



Bobbin cover

There are two small v-shaped tabs on the back of the bobbin cover as indicated by the letter "B". The tabs help hold the bobbin in place so it does not lift up while thick thread is being pulled through.

#### ■ Lower thread

We recommend the following types of threads for bobbin work.



No.5 or finer hand embroidery thread or decorative thread



Flexible woven ribbon



Fine embroidery ribbon (silk or silk-like material) (3.5 mm (approx. 1/8 inch) or less is recommended)

\* When wide ribbon or heavy weight threads are being used, we recommend test sewing with the thread through and also bypassing the bobbin case tension to see which gives the best stitching results.

If wide ribbon such as 3.5mm (approx. 1/8 inch) is to be used, we recommend that bobbin case tension not be applied. Refer to page S-110 for more detailed instructions.



#### **Note**

- Do not use thread heavier than No.5 hand embroidery thread.
- Some threads may not be appropriate for bobbin work. Be sure to sew trial stitches before sewing on your project.

## **■** Upper thread

Sewing machine embroidery thread (polyester thread) or monofilament (transparent nylon) thread. If you do not wish for the upper thread to be visible, we recommend using transparent nylon monofilament thread or polyester light weight thread (50wt. or above) that is the same color as the lower thread.

#### ■ Needle

Use a needle appropriate for the upper thread and fabric being used. Refer to "Fabric/Thread/Needle Combinations" of "Basic operations".

#### **■** Presser foot

Utility stitches or decorative stitches: Monogramming foot "N"



Free motion sewing: Free motion open toe quilting foot "O"



#### **■** Fabric

Be sure to sew trial stitches on a piece of scrap fabric, which includes the same threads and fabric as what is being used in your project.



#### **Note**

 The sewing results may be affected by the type of fabric used. Before sewing your project, be sure to sew trial stitches on a piece of scrap fabric that is the same as the fabric used in the project.

# **Upper Threading**

Install a needle appropriate for the upper thread and fabric to be used.

For details on installing the needle, refer to "CHANGING THE NEEDLE" of "Basic operations".

- Attach the presser foot.
- 3 Thread the machine with the upper thread.

 
For details on threading the machine, refer to "Upper Threading" of "Basic operations".

### **Preparing the Bobbin Thread**


In order to create bobbin work, the bobbin case must be replaced with the one for bobbin work.

Before creating bobbin work, clean the bobbin case and the race.


- Raise the needle and presser foot, and then turn off the machine.
- Remove the flat bed attachment.
- Grasp both sides of the needle plate cover, and then slide it toward you to remove it.



 - Needle plate cover
- **A** Remove the bobbin case.




- Bobbin case
- Use the cleaning brush included with the machine or a vacuum cleaner to remove any lint and dust from the race and its surrounding area.

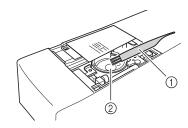

- ① Cleaning brush
- ② Race

 - Wipe the bobbin case (gray) with a soft lint free cloth to clean it.
- Insert the bobbin case so that the ▲ mark on the bobbin case aligns with the mark on the machine.





\* Align the ▲ and ● marks.



- ① **A** mark on the bobbin case
- (2) mark on the machine
- ③ Bobbin case

## Ö

#### Note

 The bobbin case (gray) cannot be used for sewing in any way other than bobbin work.
 After sewing bobbin work, refer back to the steps in "Preparing the Bobbin Thread" on page S-107 for removing and cleaning the bobbin case (gray), and then reinstall the standard bobbin case.


### **A** CAUTION

- Be sure to use the bobbin case (gray) when creating bobbin work. Using any other bobbin case may result in the thread becoming tangled or damage to the machine.
- Make sure that the bobbin case is correctly installed. If the bobbin case is incorrectly installed, the thread may become tangled or the machine may be damaged.




#### Install the needle plate cover.

For details on installing the needle plate cover, refer to "Cleaning the Race" of "Appendix".

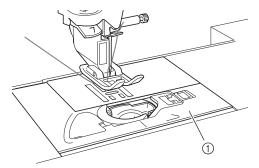

 - 1 Needle plate cover
- Install the flat bed attachment.
- Insert the thread tail from the spool of thread through the hole in the bobbin from the inside to the outside. Hold the thread tail while winding the thread around the bobbin by hand. After winding the bobbin so it is filled as shown below (about 80%), cut the thread.




### **A** CAUTION

 Use a bobbin thread that has been correctly wound. Otherwise, the needle may break or the thread tension will be incorrect.





 The included bobbin was designed specifically for this sewing machine. If bobbins from other models are used, the machine will not operate correctly. Use only the included bobbin or bobbins of the same type (part code: X52800-150).

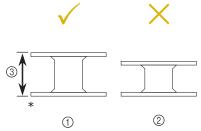


- \* Actual size
- 1) This model
- ② Other models
- ③ 11.5 mm (approx. 7/16 inch)



#### Note

- Slowly and evenly wind the thread around the bobbin.
- For best results, wind the bobbin so the thread is snug and not twisted.
- Using scissors carefully trim the thread tail as close to the bobbin as possible.

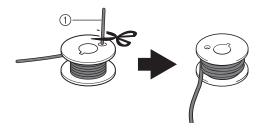

Beginning of wound thread

## **A** CAUTION

 If thread extends beyond the top of the bobbin too much, the thread may become tangled or the needle may break.



#### Memo

 If inserting thread tail through bobbin hole is difficult, bobbin can be wound by holding the tail and wrapping thread around inside base. Then carefully trim thread tail so it does not extend from the side of the bobbin.




#### Install the bobbin wound with thread.

 
Whether or not tension should be applied to the bobbin thread depends on the type of thread being used

## ■ When tension is applied to the bobbin thread

Insert bobbin into bobbin case so the thread unwinds from the left side.

Then correctly pass the thread through the tension spring as shown below.

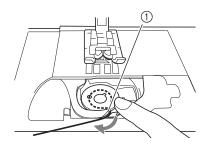




1 Tension spring

### **A** CAUTION


- When winding the bobbin, make sure the thread is not frayed. Sewing with frayed thread may result in the thread catching on the tension spring of the bobbin case, the thread completely becoming tangled or damage to the machine.
- Do not guide the bobbin thread completely through the groove in the needle plate cover, otherwise the lower threading cannot be done correctly. Thread only as far as shown below.

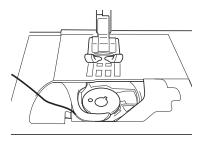


## ■ When tension is not applied to the bobbin thread


If the bobbin thread in the trial stitching is too tight and adjusting the bobbin case tension does not help, do not pass the thread through the tension spring.

Hold the bobbin with your left hand so the thread unwinds from the right side and hold the end of the thread with your right hand.

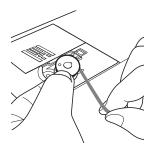


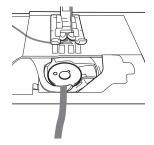

- Pull out about 8 cm (approx. 3 inches) of bobbin thread.
- Lightly hold the end of the upper thread while turning the handwheel toward you (counterclockwise) until the mark on the handwheel aligns with the center top of machine.

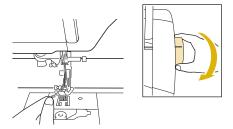


Gently pull the upper thread to bring the bobbin thread up through the needle plate.

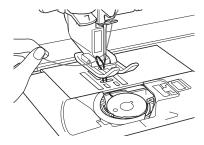


→ A loop of the bobbin thread comes out through the hole in the needle plate.

- Insert tweezers through bobbin thread loop and pull bobbin thread above the needle plate.
- Align the upper thread and bobbin thread, and then pull out about 10 cm (approx. 4 inches) of the threads and pass them under the presser foot toward the rear of the machine.

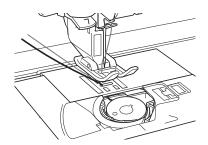

18 Install the bobbin cover with tabs.

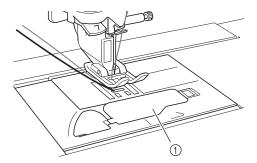

- Bobbin cover
- → This completes the upper and lower threading.

### **A** CAUTION

 When creating bobbin work, use the bobbin cover with tabs, otherwise the thread may become tangled or the needle may break.

### **CREATING BOBBIN WORK**

### **Positioning the Fabric and Sewing**



#### Note

- Recommended stitches for bobbin work are open "airy" type stitches.
- Be sure to sew trial stitches using same fabric and threads as project in order to check the sewing results.
- The bobbin thread may become tangled due to the type of pattern and thread that are being used. Since this may cause the needle to break, immediately stop sewing if this occurs. Turn off the machine and cut out the tangled thread with scissors. Then, clean the race and bobbin case as described in "Fabric is caught in the machine and cannot be removed" of "Appendix".
- Turn on the machine.
- Select a stitch in the Utility and Decorative

Stitches mode. For this example, press





#### Memo

 For best results, select a longer stitch length and a wider stitch width. Depending on the selected stitch, it may not be possible to change the stitch length and stitch width settings.



 Depending on the fabric, bunched stitches may result. We recommend selecting a simple stitch and sewing trial stitches to check the sewing results.

Examples of simple stitches:





Increase the upper thread tension. Upper thread tension setting between 6 and 8 is recommended for bobbin work.

 
> For details on adjusting the upper thread tension, refer to "Setting the Thread Tension" on page S-12.





#### **Note**

Before sewing, check that there is enough thread on the bobbin.



### CAUTION

- Before sewing, make sure the automatic thread cutting has been turned off. If sewing is started with automatic thread cutting turned on, the thread may become tangled or the machine may be damaged.
- Place stabilizer on top (wrong side) of the fabric.



#### **Note**


- Type and weight of stabilizer will depend on fabric and thread being used.
- If thread is too thick to pull through fabric to machine surface use an awl to punch a small hole in the fabric at the beginning of stitching so the bobbin thread can be fed through the opening.






The screen changes, and all keys and operation buttons are locked.


- Use the presser foot lever to raise the presser foot.
- With the wrong side facing up, place the fabric under the presser foot.

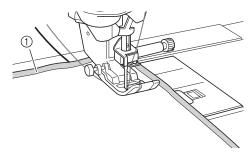

- ① Wrong side of fabric
- Turn the handwheel toward you (counterclockwise) to feed the needle into the fabric or punched hole. Position the upper thread over the presser foot and lightly hold, and then lower the presser foot lever.

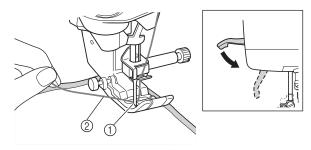

- 1 Punched hole
- ② Upper thread over the presser foot
- Pulling the upper thread gently, turn the handwheel toward you (counterclockwise) until the mark on the handwheel aligns with the center top of machine.

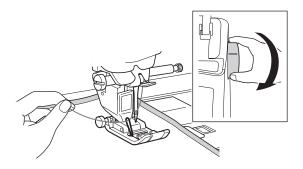

→ A loop of the bobbin thread comes out through the hole in the fabric.



#### Note

 If the bobbin thread does not come up, hold the upper thread as shown below to pull up the bobbin thread.




- 1 Upper thread
- Raise the presser foot lever, and then use tweezers to pull up the bobbin thread and bring the end of the thread to the top of the fabric.




#### **Note**

- Pull the thread while holding down the fabric so it does not move out of place.
- Align the upper thread and bobbin thread, and then pass them under the presser foot toward the rear of the machine.

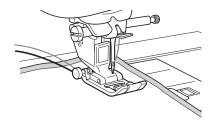

- While gently holding threads at the rear of the machine, turn the handwheel to feed the needle into the fabric or punched hole again, and then lower the presser foot lever.
- Press on lower part of LCD screen.
  - → All keys and operation buttons are unlocked, and the previous screen is displayed.
- Select a low speed, gently hold the threads behind the presser foot and start sewing. Threads can be released after several stitches have been made.

 




When you have reached the end of the stitching area, stop the machine.



#### **Note**

- Do not sew reverse or reinforcement stitches at the end of the stitching, otherwise the threads may become tangled or the needle may break. In addition, it will be difficult to pull the bobbin thread up to the wrong side of the fabric.
- Raise the needle and presser foot.
- Leaving about 10 cm (approx. 4 inches) of thread at the ends, use scissors to cut the threads.

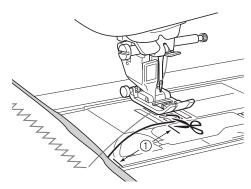

① 10 cm (approx. 4 inches)




#### **Note**

 Do not press the "Thread Cutter" button to cut the threads, otherwise the machine may be damaged.

### **■** Finishing the thread ends

At the end of the stitching, use a hand sewing needle to bring the bobbin thread up to the wrong side of the fabric.

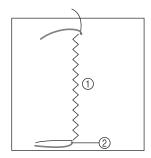



- 1) Wrong side of fabric
- ② Bobbin thread



#### Note

- If it is difficult to place bobbin thread through the eye of a hand sewing needle, use a ribbon embroidery needle to pull the thread to the wrong side of the fabric.
   Otherwise, use an awl to pull up the bobbin thread.
- Working from the wrong side of the fabric, tie the bobbin and upper threads together by hand. Cut away excess threads with scissors.

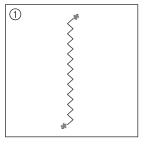

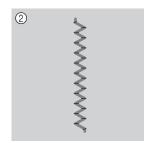

- ① Wrong side of fabric
- ② Right side of fabric



#### Note

 To ensure threads do not come undone after being tied place a drop of fabric glue on knots.

If the desired results could not be achieved, adjust the tension of the bobbin thread and of the upper thread, and then try sewing the stitching again.

For more details, refer to "ADJUSTING THE THREAD TENSION" on page S-114.

# **Bobbin Work Free Motion Sewing**

If so desired, use a template or draw your design on the stabilizer to allow for ease of stitching. Remember, your stitches with your decorative thread will be on the underneath right side of your fabric and the stabilizer will be on the top wrong side of your fabric.

\* For information about using free motion open toe quilting foot "O", refer to "Free Motion Quilting" on page S-40.

### ADJUSTING THE THREAD TENSION

After sewing trial stitches and checking the sewing results, adjust the thread tensions if necessary. After adjusting the tensions, be sure to sew trial stitches again in order to check the sewing results.

### ■ Adjusting the upper thread tension

We recommend a setting between 6 and 8 for the upper thread tension when sewing bobbin work. Refer to "Setting the Thread Tension" on page S-12.

 
## ■ Adjusting the tension of the bobbin thread

If the desired stitching cannot be achieved after adjusting the upper thread tension, adjust the tension of the bobbin thread. The tension of the bobbin thread can be adjusted by turning the slotted-head (–) screw on the bobbin case (gray) for bobbin work.




- ① Do not turn the phillips screw (+).
- 2 Adjust with a small screwdriver.

To increase the tension of the bobbin thread, turn the slotted-head (–) screw 30° to 45° clockwise.



 To decrease the tension of the bobbin thread, turn the slotted-head (–) screw 30° to 45° counterclockwise.






#### **Note**

 Turning the screw on the bobbin case (gray) may push up the spring plate, as shown below.

 If this occurs, gently press down the spring plate with a screwdriver so it is lower than the top surface of the bobbin case (gray), and then insert the bobbin case into the machine.



① Spring plate

### **A** CAUTION

- DO NOT adjust the position of the phillips (+) screw on the bobbin case (gray) as this may result in damage to the bobbin case, rendering it useless.
- If the slotted-head screw (-) is difficult to turn, do not use force. Turning the screw too much or providing force in either (rotational) direction may cause damage to the bobbin case. Should damage occur, the bobbin case may not maintain proper tension.




#### Note

 If the bobbin thread tension is tight, the thread cannot be passed through the tension spring when the bobbin is installed in the bobbin case. (Refer to "When tension is not applied to the bobbin thread" on page S-110.)

### **TROUBLESHOOTING**


Several solutions for minor problems are described below. If the problem persists, contact your nearest authorized Baby Lock retailer.

- The thread was activated and the bobbin thread is caught inside the machine
- Cut the thread near the fabric above the needle plate, and then remove the fabric.

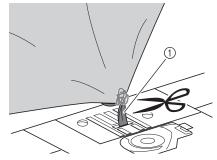


① Thread

Remove the bobbin, and then hold it out toward the left side of the machine.

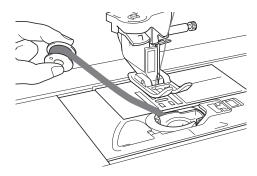

Lower the presser foot.

Apply slight tension on bobbin thread by holding thread out to the left side of presser foot. Press the "Thread Cutter" button again.

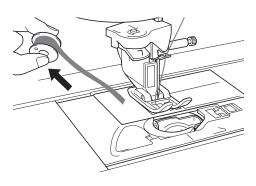


Do not pull on the thread with excessive force, otherwise the machine may be damaged.

### **■** Correcting bobbin work tension

- If the top thread shows on the bobbin side of the fabric, increase the upper tension (Refer to "ADJUSTING THE THREAD TENSION" on page S-114).
- If the top thread still shows on the bobbin side of the fabric, reduce the tension of the bobbin thread or bypass the bobbin tension. (Refer to "ADJUSTING THE THREAD TENSION" on page S-114.)
- Some bobbin threads are too coarse to pass through to wrong side of fabric. In this case, be sure to color match top thread with bobbin threads.

Example: Decorative Stitch

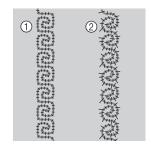

- Correct tension
- The upper thread tension is too loose, or the bobbin thread tension is too tight.

### ■ The bobbin thread catches on the tension spring of the bobbin case

Sew with no tension applied to the bobbin thread. (Refer to "When tension is not applied to the bobbin thread" on page S-110.)



This section provides important information for operating this machine. Please read this section to find troubleshooting tips and pointers as well as how to keep your machine in the best working order. Page number starts with "A" in this section.

The screen display and machine illustration may vary slightly, depending on the country or region.

Chapter1	<b>Maintenance and</b>	<b>Troubleshooting</b>		<b>A</b> -	2
----------	------------------------	------------------------	--	------------	---

# A Appendix

# Chapter I

# Maintenance and Troubleshooting

CARE AND MAINTENANCE3
Restrictions on oiling       3         Precautions on storing the machine       3         Cleaning the LCD Screen       3         Cleaning the Machine Casing       3         Cleaning the Race       3         Cleaning the Cutter in the Bobbin Case Area       5         About the Maintenance Message       5
ADJUSTING THE SCREEN6
Adjusting the Brightness of the Screen Display
Frequent troubleshooting topics
SPECIFICATIONS19
UPGRADING YOUR MACHINE'S SOFTWARE20
Upgrade Procedure Using USB Media

### CARE AND MAINTENANCE

### **A** CAUTION

• Be sure to unplug the machine before cleaning it. Otherwise, electric shock or injury may result.

### **Restrictions on oiling**

In order to prevent damaging this machine, it must not be oiled by the user. This machine was manufactured with the necessary amount of oil applied to ensure correct operation, making periodic oiling unnecessary.

If problems occur, such as difficulty turning the handwheel or an unusual noise, immediately stop using the machine, and contact your nearest authorized retailer.

# Precautions on storing the machine

Do not store the machine in any of the locations described below, otherwise damage to the machine may result, for example, rust caused by condensation.

- \* Exposed to extremely high temperatures
- \* Exposed to extremely low temperatures
- \* Exposed to extreme temperature changes
- \* Exposed to high humidity or steam
- \* Near a flame, heater or air conditioner
- \* Outdoors or exposed to direct sunlight
- \* Exposed to extremely dusty or oily environments



#### **Note**

 In order to extend the life of this machine, periodically turn it on and use it. Storing this machine for an extended period of time without using it may reduce its efficiency.

### **Cleaning the LCD Screen**

If the screen is dirty, gently wipe it with a soft, dry cloth. Do not use organic solvents or detergents.



#### Note

 Do not wipe the LCD screen with a damp cloth.



#### Memo

 Occasionally, condensation may form on the LCD screen or it may become fogged up; however, this is not a malfunction. After a while, the cloudiness will disappear.


### **Cleaning the Machine Casing**

If the surface of the machine is dirty, lightly soak a cloth in a neutral detergent, squeeze it out firmly, and wipe the surface. Then wipe again with a dry cloth


### **Cleaning the Race**

If dust or bits of dirt collect in the race or bobbin case, the machine will not run well, and the bobbin thread detection function may not operate. Keep the machine clean for best results.

- Press the "Needle Position" button to raise the needle.
- Turn the main power to OFF.
- Remove the needle, presser foot, and presser foot holder (see page B-49 through B-51).
- Remove the flat bed attachment.
- Grasp both sides of the needle plate cover, and then slide it toward you.

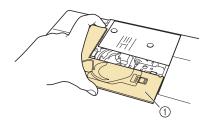

 
- ① Needle plate cover
- $\rightarrow$  The needle plate cover is removed.
- 6 Grasp the bobbin case, and then pull it out.



① Bobbin case



Use the cleaning brush or a vacuum cleaner to remove any lint and dust from the race and bobbin thread sensor and the surrounding area.

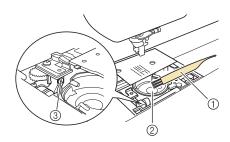



- 1 Cleaning brush
- ② Race
- ③ Bobbin thread sensor




#### Note

 - Do not apply oil to the bobbin case.
- If lint or dust collects on the bobbin thread sensor, the sensor may not operate correctly.
- Insert the bobbin case so that the ▲ mark on the bobbin case aligns with the mark on the machine.

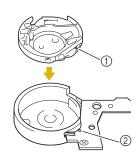



\* Align the ▲ and ● marks.

 


- ① **A** mark on the bobbin case
- ② mark on the machine
- ③ Bobbin case

\* Make sure that the indicated points are aligned before installing the bobbin case.

### **A** CAUTION

- Never use a bobbin case that is scratched; otherwise, the upper thread may become tangled, the needle may break, or sewing performance may suffer. For a new bobbin case (part code: XE5342-101 (green marking on the screw), XE8298-001 (gray, for bobbin work)), contact your nearest authorized retailer.
- Make sure that you fit the bobbin case properly, otherwise the needle may break.
- Insert the tabs on the needle plate cover into the needle plate, and then slide the cover back on.

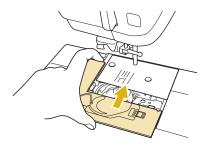



#### **Note**

 If the needle plate has been removed it is especially important to reinstall the needle plate and tighten the screws prior to installing the bobbin case.


# **Cleaning the Cutter in the Bobbin Case Area**

The cutter below the needle plate should be cleaned. If dust or lint accumulate on the cutter, it will be difficult to cut the thread when the "Thread Cutter" button is pressed or the automatic thread cutting function is used. Clean the cutter when the thread is not easily cut.

- Follow steps 1 through 5 in "Cleaning the Race" to remove the needle plate cover.
- Use the screwdriver included with the machine to unscrew and remove the needle plate.



Use the cleaning brush or a vacuum cleaner to remove any lint and dust from the cutter in the bobbin case area.

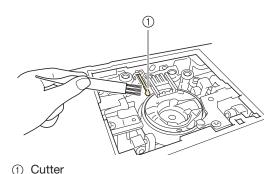

### **A** CAUTION

• Do not touch the cutter, otherwise injuries may result.



Use the screwdriver included with the machine to screw and attach the needle plate.



Insert the tabs on the needle plate cover into the needle plate, and then slide the cover back on.

### **About the Maintenance Message**




Once this message appears, it is recommended to take your machine to your nearest authorized retailer for a regular maintenance check. Although this message will disappear and the machine will continue to function once you press ok, the message will display several more times until the appropriate maintenance is performed. Please take the time to arrange the maintenance your machine requires once this message appears. Such steps will help to ensure you receive continued, uninterrupted hours of machine operation for the future.

## ADJUSTING THE SCREEN

# Adjusting the Brightness of the Screen Display

Under certain lighting conditions, the brightness of the LCD screen may need to be adjusted.

- Press
  - → The settings screen appears.
- Display page 6 of the settings screen.
- Press or + to adjust the brightness of the screen display.

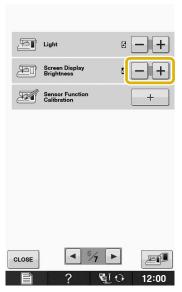


\* The screen appears dim as the number on the settings screen decreases. The screen appears brighter as the number increases.

### **Touch Panel is Malfunctioning**

 If the screen does not respond correctly when you touch a key (the machine does not perform the operation or performs a different operation), follow the steps below to make the proper adjustments.

Holding your finger on the screen, turn the main power switch to OFF and back to ON.



- → The touch panel adjustment screen is displayed.
- Using the included touch pen, lightly touch the center of each +, in order from 1 to 5.



#### **Note**

 Only use the included touch pen to touch the screen. Do not use a mechanical pencil, pin, or other sharp object. Do not press too hard on the screen. Otherwise, damage may result.



Turn the main power to OFF, then turn it back to ON.



#### Note

 If you finish the screen adjustment and the screen still does not respond, or if you cannot do the adjustment, contact your authorized retailer.

### **TROUBLESHOOTING**

If the machine stops operating correctly, check the following possible problems before requesting service. You can solve most problems by yourself. Visit us at " <a href="www.babylock.com">www.babylock.com</a>". If the problem persists, contact your nearest authorized retailer.

### **Frequent troubleshooting topics**


Detailed causes and remedies for common troubleshooting topics are described below. Be sure to refer to this before contacting your retailer.

■ Upper thread is too tight	page A-7
■ Tangled thread on wrong side of fabric	page A-8
■ Incorrect thread tension	page A-10
■ Fabric is caught in the machine and cannot be removed	page A-11

### Upper thread is too tight

#### Symptom

- \* The upper thread appears as a single continuous line.
- \* The lower thread is visible from the upper side of the fabric. (Refer to the illustration below.)
- \* The upper thread has tightened up, and comes out when pulled.
- \* The upper thread has tightened up, and wrinkles appear in the fabric.
- \* The upper thread tension is tight, and the results do not change even after the thread tension is adjusted.

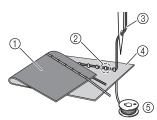

- ① Lower side of fabric
- ② Lower thread visible from upper side of fabric
- ③ Upper thread
- ④ Upper side of fabric
- (5) Bobbin thread

#### **■** Cause

#### **Incorrect lower threading**

If the lower thread is incorrectly threaded, instead of the appropriate tension being applied to the lower thread, it is pulled through the fabric when the upper thread is pulled up. For this reason, the thread is visible from the upper side of the fabric.

#### ■ Remedy

Correctly install the lower thread.

- Turn off the sewing machine.
- Remove the bobbin from the bobbin case.
- Place the bobbin in the bobbin case so that the thread unwinds in the correct direction.
  - \* Hold the bobbin with your right hand with the thread unwinding to the left, and hold the end of the thread with your left hand. Then, with your right hand, place the bobbin in the bobbin case.




If the bobbin is inserted with the thread unwinding in the wrong direction, sewing will be done with an incorrect thread tension.




# While holding the bobbin in place with your finger, pass the thread through the slit in the needle plate.

\* Hold down the bobbin with your right hand, and then pull the end of the thread around the tab with your left hand.

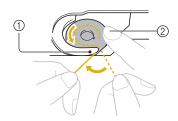

- ① Tab
- ② Hold down the bobbin with your right hand.

Pull the thread to pass it through the slit in the needle plate, then cut it with the cutter.

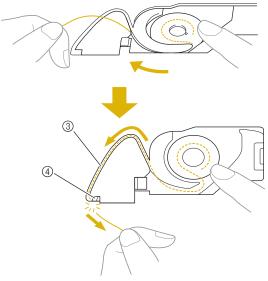


- ③ Slit
- 4 Cutter

Sewing with the correct thread tension is possible after the bobbin has been correctly installed in the bobbin case.


# Tangled thread on wrong side of fabric

#### **■** Symptom

\* The thread becomes tangled on the lower side of the fabric.

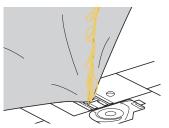

- \* After starting sewing, a rattling noise is made and sewing cannot continue.
- \* Looking under the fabric, there is tangled thread in the bobbin case.

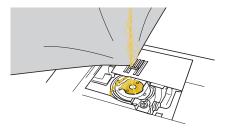

#### **■** Cause

#### **Incorrect upper threading**


If the upper thread is incorrectly threaded, the upper thread passed through the fabric cannot be firmly pulled up and the upper thread becomes tangled in the bobbin case, causing a rattling noise.

### **■** Remedy

Remove the tangled thread, and then correct the upper threading.


- Remove the tangled thread. If it cannot be removed, cut the thread with scissors.
  - \* Refer to "Cleaning the Race" in "CARE AND MAINTENANCE" on page A-3.
- Remove the upper thread from the machine.
- Refer to the following steps to correct the upper threading.
  - \* If the bobbin was removed from the bobbin case, refer to "LOWER THREADING" on page B-34 and "Remedy" in the section "Upper thread is too tight" on page A-7 to correctly install the bobbin.

Raise the presser foot using the presser foot

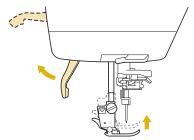


 - If the presser foot is not raised, the sewing machine cannot be threaded correctly.
- Raise the needle by turning the handwheel toward you (counterclockwise) so that the mark on the wheel points up, or press "Needle Position" button once or twice to raise the needle.






- ① Mark
- While holding the thread with both hands, place the thread behind the thread guide plate.

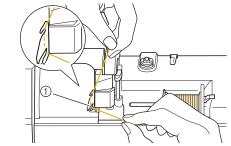


① Thread guide plate

While holding the thread in your right hand, pass the thread through the thread guide in the direction indicated.

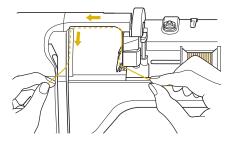


Guide the thread down, up, then down through the groove, as shown in the illustration.

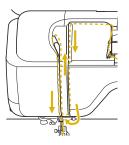




 Look in the upper groove area to check if the thread catches on the take-up lever visible inside the upper groove area.



- ① Look in the upper groove area
- Pass the thread through the needle bar thread guide (marked "6") by holding the thread with both hands and guiding it as shown in the illustration.

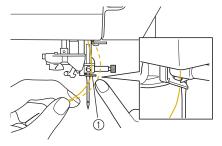


- ① Needle bar thread guide
- Thread the needle according to steps (1) and in "Upper Threading" on page B-42.

### **Incorrect thread tension**

  
#### **■** Symptoms

- Symptom 1: The lower thread is visible from the upper side of the fabric.
- Symptom 2: The upper thread appears as a straight line on the upper side of the fabric.
- Symptom 3: The upper thread is visible from the lower side of the fabric.
- Symptom 4: The lower thread appears as a straight line on the lower side of the fabric.
- Symptom 5: The stitching on the lower side of the fabric is loose or has slack.

#### **☐** Symptom 1/2







- 1) Lower side of fabric
- ② Lower thread visible on upper side of fabric
- ③ Upper thread
- ④ Upper side of fabric
- (5) Lower thread
- ⑤ Upper thread visible from lower side of fabric

### **■** Cause/Remedy

#### ☐ Cause 1

#### The machine is not correctly threaded.

<With symptoms 1 and 2 described above>

The lower threading is incorrect.

Adjust the upper thread tension and then refer to "Upper Thread is Too Tight" on page S-12.

<With symptoms 3 through 5 described above>

The upper threading is incorrect.

Adjust the upper thread tension and then refer to "Tangled thread on wrong side of fabric" on page A-8 to correct the upper threading.

#### ☐ Cause 2

#### A needle and thread appropriate for the fabric are not being used.

The sewing machine needle that should be used depends on the type of fabric sewn and the thread thickness. If a needle and thread appropriate for the fabric are not being used, the thread tension will not be adjusted correctly, causing wrinkles in the fabric or skipped stitches.

\* Refer to "Fabric/Thread/Needle Combinations" on page B-53 to check that a needle and thread are appropriate for the fabric being used.

#### □ Cause 3

#### An appropriate upper tension is not selected.

Adjust the upper thread tension to select an appropriate thread tension.

The appropriate thread tension differs according to the type of fabric and thread being used.

\* Adjust the thread tension while test sewing on a piece of scrap fabric that is the same as that used in your project.



#### **Note**

- If the upper threading and lower threading are incorrect, the thread tension cannot be adjusted correctly, even by adjusting the upper thread tension. Check the upper threading and lower threading first, and then adjust the thread tension.
- \* When the lower thread is visible on the upper side of the fabric. Set the upper thread tension to a lower number. (Loosen the thread tension.)
- \* When the upper thread is visible on the lower side of the fabric. Set the upper thread tension to a higher number. (Tighten the thread tension.)



# Fabric is caught in the machine and cannot be removed

If the fabric is caught in the sewing machine and cannot be removed, the thread may have become tangled under the needle plate. Follow the procedure described below to remove the fabric from the machine. If the operation could not be completed according to the procedure, instead of attempting to complete it forcefully, contact your nearest authorized retailer.

## ■ Removing the fabric from the machine


- Immediately stop the sewing machine.
- **2** Turn off the sewing machine.
- Remove the needle.

If the needle is lowered into the fabric, turn the handwheel away from you (clockwise) to raise the needle out of the fabric, and then remove the needle.

- \* Refer to "CHANGING THE NEEDLE" on page B-51.
- Remove the presser foot and presser foot holder.
  - \* Refer to "CHANGING THE PRESSER FOOT" on page B-49.
- Lift up the fabric and cut the threads below it.

If the fabric can be removed, remove it. Continue with the following steps to clean the race.

Remove the needle plate cover.

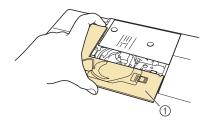


- Needle plate cover
- Cut out the tangled threads, and then remove the bobbin.




Remove the bobbin case.

 If threads remain in the bobbin case, remove them.



- Bobbin case
- Use the cleaning brush or a vacuum cleaner to remove any dust or loose threads from the race and its surrounding area.

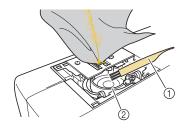

- (1) Cleaning brush
- ② Race

If the fabric could be removed

Continue with step 15.

If the fabric could not be removed

Continue with step 10.

Use the enclosed disc-shaped screwdriver to loosen the two screws on the needle plate.





#### Note

 Be careful not to drop the removed screws in the machine. Slightly lift up the needle plate, cut any tangled threads, and then remove the needle plate.

Remove the fabric and threads from the needle plate.




If the fabric cannot be removed, even after completing these steps, contact your nearest authorized retailer.

- Remove any threads in the race and around the feed dogs.
- 13 Turn the handwheel to raise the feed dogs.
- Align the two screw holes in the needle plate with the two holes at the needle plate mounting base, and then fit the needle plate onto the machine.
- Lightly finger-tighten the screw on the right side of the needle plate. Then, use the disc-shaped screwdriver to firmly tighten the screw on the left side. Finally, firmly tighten the screw on the right side.



Turn the handwheel to check that the feed dogs move smoothly and do not contact the edges of the slots in the needle plate.

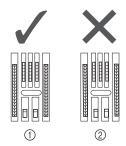


- ① Correct position of feed dogs
- ② Incorrect position of feed dogs




#### Note

  Be careful not to drop the removed screws in the machine. Insert the bobbin case so that the ▲ mark on the bobbin case aligns with the ● mark on the machine.





\* Align the ▲ and ● marks.

 


- 1) A mark on the bobbin case
- ② mark on the machine
- ③ Bobbin case
- \* Make sure that the indicated points are aligned before installing the bobbin case.

### **A** CAUTION

- Never use a bobbin case that is scratched; otherwise, the upper thread may become tangled, the needle may break, or sewing performance may suffer. For a new bobbin case (part code: XE5342-101 (green marking on the screw), XE8298-001 (gray, for bobbin work)), contact your nearest authorized retailer.
- Make sure that you fit the bobbin case properly, otherwise the needle may break.

Insert the tabs on the needle plate cover into the needle plate, and then slide the cover back on.

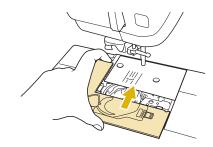



#### **Note**

 If the needle plate has been removed it is especially important to reinstall the needle plate and tighten the screws prior to installing the bobbin case.

Check the condition of the needle, and then install it.

If the needle is in a poor condition, for example, if it is bent, be sure to install a new needle.

\* Refer to "CHANGING THE NEEDLE" on page B-51.

## **A** CAUTION

 Never use bent needles. Bent needles can easily break, possibly resulting in injuries.



#### Note

 After completing this procedure, continue with the following procedure in "Checking machine operations" to check that the machine is operating correctly.



#### Memo

 Since the needle may have been damaged when the fabric was caught in the machine, we recommend replacing it with a new one.

### **■** Checking machine operations

If the needle plate has been removed, check machine operations to confirm that installation has been completed correctly.

Turn on the machine.



Select





#### Note

 Do not install the presser foot and thread at this time. Slowly turn the handwheel toward you (counterclockwise), and look from all sides to check that the needle falls at the center of the hole in the needle plate.

If the needle contacts the needle plate, remove the needle plate, and then install it again, starting with step 13 in "Removing the fabric from the machine" on page A-12.



- 1 Hole in the needle plate
- ② Handwheel
- 4. Select zigzag stitch [ ]. At this time, increase the stitch length and width to their maximum settings.
- Slowly turn the handwheel toward you (counterclockwise) and check that the needle bar and feed dogs operate correctly.

If the needle or feed dogs contact the needle plate, the machine may be malfunctioning; therefore, contact your nearest authorized retailer.

- Turn off the machine, and then install the bobbin and presser foot.
  - \* Refer to "Setting the Bobbin" and "CHANGING THE PRESSER FOOT" on page B-49.
- Correctly thread the machine.
  - \* For details on the machine, refer to "Upper Threading" on page B-42.



#### Note

 The thread may have become tangled as a result of incorrect upper threading. Make sure that the machine is correctly threaded.

**8** Perform trial sewing with normal fabric.



#### **Note**

 Incorrect sewing may be the result of incorrect upper threading or sewing thin fabrics. If there are poor results from the trial sewing, check the upper threading or the type of fabric being used.

## **List of Symptoms**

Problem	Cause	Solution	Page
The thread is tangled on the wrong side of	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
the fabric.	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combinations" chart.	B-53
The upper thread is too tight.	The bobbin thread is incorrectly installed.	Correctly install the bobbin thread.	B-39
Cannot thread the needle	Needle is not in the correct position.	Press the "Needle Position" button to raise the needle.	B-13
	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
Cannot lower the presser foot with the presser foot lever	Presser foot was raised using the "Presser Foot Lifter" button.	Press the "Presser Foot Lifter" button to lower the presser foot.	B-13
Thread tension is incorrect	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
	Bobbin is set incorrectly.	Reset the bobbin. (If needle plate was removed, reinstall needle plate and tighten screws prior to installing bobbin case.)	B-39
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combination" chart.	B-53
	Presser foot holder is not attached correctly.	Reattach the presser foot holder correctly.	B-49
	Thread tension is set incorrectly.	Adjust the thread tension.	S-12
	Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	B-34
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
Jpper thread breaks	Machine is not threaded correctly (used the wrong spool cap, spool cap is loose, the thread did not catch the needle bar threader, etc.)	Rethread the machine correctly.	B-42
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized retailer.	A-3
	Upper thread tension is too strong.	Adjust the thread tension.	S-12
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combinations" chart.	B-53
	Thread is twisted.	Use scissors, etc., to cut the twisted thread and remove it from the race, etc.	_
	There are scratches near the hole of the needle plate.	Replace the needle plate, or consult your authorized retailer.	S-26
	There are scratches near the hole in the presser foot.	Replace the presser foot, or consult your authorized retailer.	B-49
	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
	Thread is knotted or tangled.	Rethread upper and lower thread.	B-39, B-42
	A bobbin designed specifically for this machine is not used.	Incorrect bobbins will not work properly. Only use a bobbin designed specifically for this machine.	B-39
Bobbin thread breaks	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	B-39
	There are scratches on the bobbin or it doesn't rotate properly.	Replace the bobbin.	B-39
	Thread is twisted.	Use scissors, etc. to cut the twisted thread and remove it from the race, etc.	-
	A bobbin designed specifically for this machine is not used.	Incorrect bobbins will not work properly. Only use a bobbin designed specifically for this machine.	B-39
Bobbin thread does not wind neatly on the	The thread is not passed through the bobbin winding thread guide correctly.	Correctly pass the thread through the bobbin winding thread guide.	B-35
bobbin.	Bobbin spins slowly.	Press [+] in the bobbin winding window to increase the bobbin winding speed.	B-37
	The thread that was pulled out was not wound onto the bobbin correctly.	Wind the thread that was pulled off around the bobbin 5 or 6 times clockwise.	B-36

Skipped stitches	Needle is turned bent or the point is dull		
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combination" chart.	B-53
	Machine is threaded incorrectly.	Check the steps for threading the machine and rethread it correctly.	B-42
1	Dust or lint has collected under the needle plate.	Remove the dust or lint with the brush.	A-3
l li	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
Ī	Needle is defective.	Replace the needle.	B-51
	Thin or stretch fabrics are being sewn.	Sew with one sheet of thin paper under the fabric.	S-9
Needle breaks	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
[	Needle clamp screw is not tightened.	Tighten the needle clamp screw.	B-52
	Needle is turned or bent.	Replace the needle.	B-51
	Using improper needle or thread for the selected fabric.	Check the needle and fabric combination.	B-53
Ī	Wrong presser foot was used.	Use the recommended presser foot.	S-68
[	Upper thread tension is too strong.	Adjust the thread tension setting.	S-12
	Fabric is pulled during sewing.	Do not pull the fabric during sewing.	_
	Spool cap is set incorrectly.	Check the method for attaching the spool cap, then reattach the spool cap.	B-42
	There are scratches around the holes in the needle plate.	Replace the needle plate, or consult your authorized retailer.	A-3
	There are scratches around the hole(s) in the presser foot.	Replace the presser foot, or consult your authorized retailer.	B-49
[	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized retailer.	A-3
ļ j	Needle is defective.	Replace the needle.	B-51
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
ļ j	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	B-39
Ī	Presser foot is attached incorrectly.	Attach the presser foot correctly.	B-49
	Screw of the presser foot holder is loose.	Securely tighten the screw of the presser foot.	B-49
Ī	Fabric is too thick.	Use fabric that the needle can pierce when the handwheel is turned.	S-7
	Fabric is fed forcefully when sewing thick fabric or thick seams.	Allow the fabric to be fed without being forcefully pushed.	
	Stitch length is too short.	Adjust the stitch length.	S-10
Ī	Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	B-34
Fabric does not feed through the machine	Feed dogs are set in the down position.	Press , and then turn the handwheel to raise the feed dogs.	S-40
	Stitches are too close together.	Lengthen the stitch length setting.	S-10
l -	Wrong presser foot was used.	Use the correct presser foot.	S-68
l -	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
l	Thread is entangled.	Cut the entangled thread and remove it from	A-11
		the race.	
1	There is a mistake in the upper or bobbin threading.	Check the steps for threading the machine and rethread it correctly.	B-39, B-42
[	Thread tension is set incorrectly.	Adjust the thread tension.	S-12
I L	Stitches are too long when sewing thin fabrics.	Shorten the stitch length.	S-10
⊢	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	Spool cap is set incorrectly.	Check the method for attaching the spool cap, then reattach the spool cap.	B-42
<u> </u>	Wrong presser foot.	Use the correct presser foot.	S-68

Problem	Cause	Solution	Page
High-pitched sound	Dust or lint is caught in the feed dogs.	Remove the dust or lint.	A-3
while sewing	Pieces of thread are caught in the race.	Clean the race.	A-3
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized retailer.	A-3
	A bobbin designed specifically for this machine is not used.	Incorrect bobbins will not work properly. Only use a bobbin designed specifically for this machine.	B-39
Character pattern	Wrong presser foot was used.	Attach the correct presser foot.	S-68
does not turn out	Pattern adjustment settings were set incorrectly.	Revise the pattern adjustment settings.	S-82
	Did not use a stabilizer material on thin fabrics or stretch fabrics.	Attach a stabilizer material.	S-81
	Thread tension is set incorrectly.	Adjust the thread tension.	S-12
	Fabric was pulled, pushed or fed at an angle while it was being sewn.	Sew while guiding the fabric with your hands so that the fabric is fed in a straight line.	S-3
Machine does not	There is no pattern selected.	Select a pattern.	S-21, S-77
operate	"Start/Stop" button was not pushed.	Press the "Start/Stop" button.	B-13
	Main power switch is not turned on.	Turn the main power to ON.	B-19
	Presser foot is not lowered.	Lower the presser foot.	B-13
	"Start/Stop" button was pushed with the foot controller attached.	Remove the foot controller, or use the foot controller to operate the machine.	S-4
	The "Start/Stop" button was pressed while the machine is set for the sewing speed controller to control the zigzag stitch width.	Use the foot controller instead of the "Start/Stop" button to operate the machine, or set the "Width Control" to "OFF" in the settings screen.	B-25, S-4
	All keys and buttons have been locked by	Press to unlock all keys and buttons.	B-49, B-51
Nothing happens,	The screen has been locked.	Press either of the following keys to unlock	_
even if the LCD display is pressed		the screen.	
The fabric feeds in the opposite direction.	The feed mechanism is damaged.	Contact your nearest authorized retailer.	_
The LCD screen is fogged up.	Condensation has formed on the LCD screen.	After a while, the cloudiness will disappear.	_
Specifying with sensor pen cannot be	The sensor pen has not been calibrated.	Before using the sensor pen for the first time, be sure to calibrate it.	B-64
done accurately	The pen is being held differently than when it was calibrated.	When using the sensor pen, be sure to hold it at the same angle as when it was calibrated. The specification location may be misaligned if the pen is held at a slightly different angle. In this case, make fine adjustments after making the selection.	B-64

## **A** CAUTION

- This machine is equipped with a thread detection device. If the "Start/Stop" button is pushed before the upper threading is done, the machine will not operate properly. Also, depending on the pattern selected, the machine may feed the fabric even if the needle is raised. This is due to the needle bar release mechanism. At these times, the machine will make a sound different from what is made during normal sewing. This is not the sign of a malfunction.
- If the power is disconnected during sewing:
   Turn the main power to OFF and unplug the machine.
   If you restart the machine, follow the instructions for operating the machine correctly.

### **ERROR MESSAGES**

If the machine is not properly set and the "Start/Stop" button or the "Reverse Stitch" button is pressed, or if the operation procedure is incorrect, the machine does not start. An alarm sounds and an error message is displayed on the LCD. If an error message displays, follow the instructions in the message.

Below is an explanation of error messages. Refer to these when necessary (if you press or do the operation correctly while the error message is displayed, the message disappears).

### **A** CAUTION

• Be sure to rethread the machine. If you press the "Start/Stop" button without rethreading the machine, the thread tension may be wrong or the needle may break and cause injury.

Marks	Error Messages	Cause/Solution
	A malfunction occurred.Turn the machine off, then on again.	This message is displayed if some malfunction occurs.
	An invalid area was touched by the sensor pen. Touch again within the active sensor area. (130mm x 200mm / 5"X 8")	This message appears when you touch the invalid area of sensor pen. Touch the active area. (see page B-66)
	An invalid sewing area was touched by the sensor pen. Touch again within the valid sewing area.	This message appears when you touch the invalid area of sewing with the sensor pen. Touch the active area. (see page B-66)
$\odot$	Can not change the configuration of the characters	This message is displayed when there are too many characters and the curved character configuration is impossible.
?	Check and rethread the upper thread.	This message is displayed when the upper thread is broken or not threaded correctly, and the "Start/Stop" button or the "Reverse Stitch" button is pressed.
$\odot$	Data volume is too large for this pattern.	This message is displayed when the patterns you are editing take up too much memory, or if you are editing too many patterns for the memory.
	Failed to save file.	This message appears when you try to save more than 100 settings screen image files in the USB media. In this case, delete a file from the USB media or use different USB media. (see page B-29)
	In twin needle mode, the automatic needle threading button cannot be used.	This message is displayed when the automatic needle threading button is pushed while twin needle sewing is set.
	Lower the buttonhole lever.	This message is displayed when the buttonhole lever is up, a buttonhole stitch is selected, and the "Start/Stop" button or "Reverse Stitch" button is pushed.
?	Lower the presser foot lever.	This message is displayed when the "Presser Foot Lifter" button is pushed while the presser foot lever is raised/the needle is lowered.
$\odot$	Move the sensor pen away from the currently marked position.	This message appears when you press down the sensor pen tip before pressing and keep pressing for the certain period. Move the sensor pen away from the current position.
$\odot$	Not enough available memory to save the pattern. Delete another pattern?	This message is displayed when the memory is full and the stitch or pattern cannot be saved.
$\odot$	OK to automatically lower the presser foot?	This message is displayed when is pressed (the presser foot is raised).
?	OK to delete the ending point setting?	This message appears when you try to recall the pattern stored in the machine while specifying the sewing end point using the sensor function. (see page B-71)
?	OK to delete the selected pattern?	This message is displayed when, after selecting a pattern,  Utility Stitch or Character   Character   Decorative   Stitch or Stitch   Is pressed and the pattern is about to be deleted.

Marks	Error Messages	Cause/Solution
?	OK to delete the setting?	This message appears when DELETE or ALL is pressed to delete the settings for a utility stitch. To delete the selected settings, press OK.
?	Preventive maintenance is recommended.	This message is displayed when the machine needs to be maintained. (see page A-3)
	Raise the buttonhole lever.	This message is displayed when the buttonhole lever is down, a stitch other than a buttonhole is selected, and the "Start/Stop" button or the "Reverse Stitch" button is pushed.
	Sensor module error.	This message appears when something is wrong with the sensor unit of the machine. Consult your authorized retailer.
$\odot$	Set the clock.	This message appears when the time/date is not set. Set time/date. (see page B-20)
?	The bobbin thread is almost empty.	This message is displayed when the bobbin thread is running out.
	The bobbin winder safety device has activated. Is the thread tangled?	This message is displayed when the bobbin is being wound, and the motor locks because the thread is tangled, etc.
	The ending point cannot be selected for this stitch.	This message appears when the function to specify the sewing end point cannot be used with the current stitch. Select other stitch. (see page B-71)
	The needle position cannot be changed for this stitch.	This message appears when the function to specify the needle drop position cannot be used with the current stitch. Select other stitch. (see page B-71)
<u> </u>	The needle will move. Keep your hands etc. away from the needle area.	This message appears when you touch the point closer than 2 cm from the needle drop point with the sensor pen in the sensor function. (see page B-63)
?	The pockets are full. Delete a pattern.	This message is displayed when the memory is full and a pattern must be deleted.
<u> </u>	The safety device has been activated.ls the thread tangled? Is the needle bent?	This message is displayed when the motor locks due to tangled thread or for other reasons related to thread delivery.
	The shutoff support mode has been activated. Turn off the machine.	This message appears when the machine is in the shutoff support mode. Turn off the machine once to start the machine again. (see page B-28)
	The "Start/Stop" button does not operate with the foot controller attached. Remove the foot controller.	This message is displayed when the "Start/Stop" button is pushed to sew Utility stitches or Character/Decorative stitches while the foot controller is connected.
	The upper thread may not be threaded correctly. Thread the upper thread from the beginning.	This message is displayed when it seems that the upper thread has not been threaded correctly.
	The USB media was changed. Do not change the USB media while it is being read.	This message is displayed when you attempt to select a pattern after the USB media in which the pattern is saved has been changed.
$\odot$	There is no needle plate cover. Attach a needle plate cover.	This message is displayed when the needle plate cover is not attached.
	This file cannot be used.	This message appears if the file format is incompatible with this machine. Check the list of compatible file formats. (see page S-95)
	This file exceeds the data capacity and cannot be used. Use a suitable size file.	This message is displayed when the file size exceeds the data capacity of the machine.  Confirm the file size and format. (see page S-96)
	This function cannot be used while in the sensor mode.	This message appears when the selected function is not available with the sensor function. (see page B-61)
	This key cannot be used at this time.	This message is displayed when you press in the screen other than the Utility Stitch, or press Pattern Explanation in the screen other than the Utility Stitch or Character/Decorative Stitch.

Marks	Error Messages	Cause/Solution
	This key does not operate when the needle is down. Raise the needle and press the key again.	This message is displayed when a key on the LCD display is touched while the needle is in the down position.
	This pattern cannot be sewn with this mode.	This message is displayed when the selected stitch is not available for the specific function.
	This stitch is not "Dual Feed Mode" compatible.	This message appears when the dual feed foot cannot be used with the current stitch. Select other stitch. (see page B-55)
	This USB media cannot be used.	This message is displayed when you try to use incompatible media.
?	This USB media is incompatible.	This message is displayed when you try to use incompatible USB media. For a list of compatible USB media, visit "www.babylock.com".
$\odot$	Transmitting by USB	This message is displayed while the USB media is transmitting.
	Turn off the power and replace the needle plate.	This message is displayed when you try to sew with a stitch other than a middle needle position stitch while the single-hole needle plate is installed.
	USB media error	This message is displayed when an error occurs with the USB media.
	USB media is not loaded. Load USB media.	This message is displayed when you try to recall or save a pattern while no USB media is loaded.
	Use the presser foot lifter button to lower the presser foot.	This message is displayed when a button, such as the "Start/Stop" button, is pushed while the presser foot is raised.
	When the speed controller is set to control the zigzag stitch width, the "Start/Stop" button does not operate.	This message is displayed when the speed control lever is set to control the zigzag stitch width, and the "Start/Stop" button is pushed. Use the foot controller to operate the machine.

## **SPECIFICATIONS**

	Item	Specification
Sewing Machine and Accessories (Box 1 of 2)	Dimensions of machine	Approx. 57.1 cm (W) × 33.5 cm (H) × 28.4 cm (D) (approx. 22-1/2 inches (W) × 13-1/16 inches (H) × 11-3/16 inches (D))
	Dimensions of box	Approx. 68.5 cm (W) $\times$ 55.0 cm (H) $\times$ 37.7 cm (D) (approx. 26-15/16 inches (W) $\times$ 21-5/8 inches (H) $\times$ 14-13/16 inches (D))
	Weight of machine	Approx. 15.4 kg (approx. 33.9 lb)
	Weight of box (for shipping)	Approx. 22.0 kg (approx. 48.5 lb)
	Sewing speed	70 to 1050 stitches per minute
	Needles	Home sewing machine needles (HA × 130)
Extension table box (Box 2 of 2)	Dimensions of extension table	Approx. 63.6 cm (W) × 9.8 cm (H) × 40.6 cm (D) (approx. 25-1/16 inches (W) × 3-7/8 inches (H) × 16 inches (D))
	Dimensions of machine with extension table attached	Approx. 81.1 cm (W) × 33.5 cm (H) × 40.6 cm (D) (approx. 32-1/16 inches (W) × 13-1/16 inches (H) × 16 inches (D))
	Dimensions of box	Approx. 66.3 cm (W) $\times$ 42.7 cm (H) $\times$ 5.8 cm (D) (approx. 25-1/16 inches (W) $\times$ 16-13/16 inches (H) $\times$ 2-5/16 inches (D))
	Weight of extension table	Approx. 2.2 kg (approx. 4.9 lb)
	Weight of box (for shipping)	Approx. 3.0 kg (approx. 6.7 lb)
Total Shipping Weight (Combination	of 2 boxes complete)	Approx. 27 kg (approx. 59.6 lb)

<sup>\*</sup> Please be aware that some specifications may change without notice.

### **UPGRADING YOUR MACHINE'S SOFTWARE**

You can use USB media or a computer to upgrade software for your sewing machine. When an upgrade program is available on "<a href="www.babylock.com">www.babylock.com</a>", please download the files following the instructions on the website and steps below.




#### Note

 When using USB media to upgrade the software, check that no data other than the upgrade file is saved on the USB media being used before starting to upgrade.


# **Upgrade Procedure Using USB Media**

- While pressing the "Automatic Threading" button, turn the main power to ON.
  - $\rightarrow$  The following screen will appear on the LCD.



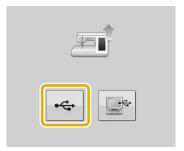

 Insert the USB media into the USB port for media/mouse on the machine. The media device should only contain the upgrade file.



- ① USB port for media/mouse
- ② USB media



#### **Note**

 The access lamp will begin blinking after inserting USB media, and it will take about 5 to 6 seconds to recognize the media. (Time will differ depending on the USB media).



Press LOAD



 $\rightarrow$  The upgrade file is loaded.



#### Note


 If an error occurs, a red text error message will appear. When the installation is performed successfully, following message will appear.



Remove the USB media, and turn the machine off and on again.

# Upgrade Procedure Using Computer

- While pressing the "Automatic Threading" button, turn the main power to ON.
  - → The following screen will appear on the LCD.
- Press Press

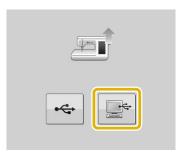

- Plug the USB cable connector into the corresponding USB ports for the computer and for the machine.
  - → "Removable Disk" will appear in "Computer (My computer)".
- Copy the upgrade file to "Removable Disk".



→ The following message will appear.



**6** When the message disappears, press





 $\rightarrow$  The upgrade file is loaded.

#### ∠ Note

• If an error occurs, a red text error message will appear. When the installation is performed successfully, following message will appear.



6 Unplug the USB cable, and turn the machine off and on again.

## INDEX

A	E
Accessories	Eco mode B-2
included accessories B-13	Editing
options B-15	character/decorative stitches S-8-
Accessory compartment B-13	Elastic zigzag stitches S-3.
Adapter B-50	Elongation key S-8
Air vent B-11	Error messages A-1:
Alphabet characters	Eyelet S-6.
character/decorative stitches	<b>'</b>
Appliqué S-48	F
quilting S-38	<u> </u>
using a zigzag stitch S-31	Fabrics
Automatic fabric sensor system S-17	fabric/thread/needle combinations B-53
Automatic reinforcement stitch key	sewing heavyweight fabrics S-:
Automatic thread cutting key S-13	sewing lightweight fabrics
Automatic Threading button B-13, B-42	sewing stretch fabrics
	Fagoting S-5
B	Feed dogs B-12, S-40
	Flat bed attachment B-1
Back to beginning key	Flat fell Seam S-2
Bar tacks S-60	Foot controller B-11, S-
Basting S-28	Free motion sewing mode S-40
Blind hem stitches	
Bobbin	G
pulling up the bobbin thread B-41	
setting B-39	Gathering S-24
winding B-34	Guideline marker S-14
Bobbin case	
cleaning A-3	Н
Bobbin cover B-12, B-40	
Bobbin holder (switch) B-36	Handle B-1
Bobbin winder B-11	Handwheel B-1
Bobbin work	Heirloom S-5.
Button sewing S-61	Hemstitching S-5.
4 hole buttons S-62	Home page screen B-22
shank S-62	
Buttonhole lever B-12, S-56, S-59	
Buttonholes	
odd-shaped/buttons that do not fit the button holder plate S-58	Image key S-22, S-89
one-step S-55	
	K
C	<del></del>
	Key functions
Calibrating the sensor pen B-64	character/decorative stitches
Character/Decorative Stitches	utility stitches B-2
adjustments S-82	Knee lifter B-11, S-1
combining S-90	
editing S-84	L
key functions S-84	<del> </del>
retrieving S-99, S-100	L/R SHIFT S-1
saving S-96, S-97, S-98	LCD screen B-11, B-2
selecting S-77	cleaning
sewing S-81	locking S-10
Cleaning	Lower threading
LCD screen A-3	pulling up the bobbin thread B-4
machine casing A-3	setting the bobbin B-3
race A-3	winding the bobbin B-3-
Combining Patterns	
character/decorative stitches	M
Cord guide bobbin cover S-32	l <del></del>
Crazy quilt S-32	Main power switch B-11, B-19, B-6
	Mini spool insert B-3.
D	Mirror image key S-21, S-8
	Multi-directional sewing S-6
Darning S-58	
Dart seam S-28	N
Dual feed foot B-55	<del></del>
	Needle

changing the needle B-51	sewing end point B-71
changing the needle position S-25	Sensor pen B-61
fabric/thread/needle combinations B-53	Sensor pen holder B-62
mode B-22	Settings
twin needle B-46	automatic reinforcement stitching S-5
Needle bar thread guides B-12, B-46	automatic thread cutting
Needle clamp screw B-12	display language B-29
Needle mode selection key	machine setting mode key B-25
Needle plate B-12	stitch length S-10
Needle position S-18, S-25	stitch width S-10
Needle Position button B-13	thread tension S-12
	Sewing machine help key B-30
0	Sewing speed controller (speed control slide) B-11, B-13, S-3
	Sewing type selection key
Operation buttons B-11, B-13	Shelltuck stitches
Overcasting S-31, S-33	Shutoff support mode
,	Single/Repeat sewing key S-87
P	Size selection key
	Smocking stitches
Patchwork S-32	Speaker B-26
Piecing	Specifications
Pintuck S-30	Spool cap B-11
Pivoting S-15	Spool net
Power cord B-20	Spool pin B-11
Power cord receptacle B-11	Start/Stop button B-13
Presser foot	Step stitch patterns
adapter B-49	Stitch setting chart
attaching B-49	Straight stitch foot
pressure	Straight stitch needle plate
removing B-49	Straight stitches
types	Supplemental spool pin
Presser foot holder	3uppiemental spool pin 5-11, 5-54, 5-40
Presser foot holder screw	_
Presser foot lever	T
Presser Foot Lifter button	Tape attaching S-33
Presser foot/Needle exchange key B-46, B-49, B-51, B-55	Tape or elastic attaching
Detected the little and the little a	· · · · · · · · · · · · · · · · · · ·
	Lhroad
Pre-tension disk	Thread  fabric/thread/paedle combinations  P. 52
_	fabric/thread/needle combinations B-53
Q	fabric/thread/needle combinations B-53 thread tension S-12
Q	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4
Q Quilting	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13
Q         Quilting       S-35         free motion       S-40	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88
Q Quilting	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47
Q         Quilting       S-35         free motion       S-40	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42
Q         Quilting       S-35         free motion       S-40	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11
Quilting	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50
Q         Quilting       S-35         free motion       S-40         with satin stitches       S-39         R         Race       A-3	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6
Quilting	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6         Troubleshooting       A-7
Quilting	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6
Quilting	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6         Troubleshooting       A-7
Quilting	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6         Troubleshooting       A-7
Quilting	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-38 B-59 A-7 B-39 B-11 B-38 B-42 B-11 B-38 B-42 B-11 B-38 B-42 B-11 B-38 B-46
Quilting	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6         Troubleshooting       A-7         Twin needle       B-46         U       Upgrading         A-20
Quilting	fabric/thread/needle combinations  thread tension  S-12 Thread cutter  B-11, S-4 Thread Cutter button  B-13 Thread density key  S-88 Thread guide  B-11, B-35, B-38, B-47 Thread guide plate  B-11, B-38, B-42 Top cover  B-11 Top stitching  S-50 Touch pen  A-6 Troubleshooting  A-7 Twin needle  U  Upgrading  Upper threading
Quilting	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle U Upgrading Lupper threading twin needle mode B-12 B-13 B-14 B-14 B-14 B-16 B-16 B-16 B-16 B-16 B-16 B-17 B-18 B-18 B-18 B-18 B-18 B-18 B-18 B-18
Q         Quilting       S-35         free motion       S-40         with satin stitches       S-39         R       Race         Reinforcement Stitch button       B-13, S-5         Retrieving       S-99         computer       S-101         machine's memory       S-99         stitch settings       S-23         USB media       S-100         utility stitches       S-23         Reverse Stitch button       B-13, S-5	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42
Quilting	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48
Q           Quilting         S-35           free motion         S-40           with satin stitches         S-39           R           Race         A-3           Reinforcement Stitch button         B-13, S-5           Retrieving         S-99           computer         S-101           machine's memory         S-99           stitch settings         S-23           USB media         S-100           utility stitches         S-23           Reverse Stitch button         B-13, S-5           Reverse/Reinforcement stitches         S-5	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6         Troubleshooting       A-7         Twin needle       B-46         U       Upper threading         twin needle mode       B-46         using the "Automatic Threading" button       B-42         using the spool net       B-48         USB cable       B-54, S-98, A-21
Q         Quilting       S-35         free motion       S-40         with satin stitches       S-39         R       Race         Reinforcement Stitch button       B-13, S-5         Retrieving       S-99         computer       S-101         machine's memory       S-99         stitch settings       S-23         USB media       S-100         utility stitches       S-23         Reverse Stitch button       B-13, S-5	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46 U Upgrading twin needle mode using the "Automatic Threading" button B-48 USB cable B-54, S-98, A-21 USB media
Quilting         S-35 free motion         S-40 with satin stitches         S-40           R         Race         A-3 Reinforcement Stitch button         B-13, S-5           Retrieving character/decorative stitch patterns         S-99 computer         S-101 machine's memory         S-99 stitch settings         S-23 USB media         S-100 utility stitches         S-23 Reverse Stitch button         B-13, S-5 Reverse/Reinforcement stitches         S-5           S         S         S-5	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-100
Quilting       S-35         free motion       S-40         with satin stitches       S-39         R       Race         Reinforcement Stitch button       B-13, S-5         Retrieving       S-99         computer       S-101         machine's memory       S-99         stitch settings       S-23         USB media       S-100         utility stitches       S-23         Reverse Stitch button       B-13, S-5         Reverse/Reinforcement stitches       S-5         S         Satin stitches       S-39, S-88	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-100 saving S-97
Quilting       S-35         free motion       S-40         with satin stitches       S-39         R       Race         Reinforcement Stitch button       B-13, S-5         Retrieving       S-99         computer       S-101         machine's memory       S-99         stitch settings       S-23         USB media       S-100         utility stitches       S-23         Reverse Stitch button       B-13, S-5         Reverse/Reinforcement stitches       S-5         S       Satin stitches       S-39, S-88         Saving	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-97 usable S-95
Q           Quilting         S-35           free motion         S-40           with satin stitches         S-39           R           Race         A-3           Reinforcement Stitch button         B-13, S-5           Retrieving         S-90           computer         S-101           machine's memory         S-99           stitch settings         S-23           USB media         S-100           utility stitches         S-23           Reverse Stitch button         B-13, S-5           Reverse/Reinforcement stitches         S-5           S         Satin stitches         S-39, S-88           Saving         S-96	fabric/thread/needle combinations       B-53         thread tension       S-12         Thread cutter       B-11, S-4         Thread Cutter button       B-13         Thread density key       S-88         Thread guide       B-11, B-35, B-38, B-47         Thread guide plate       B-11, B-38, B-42         Top cover       B-11         Top stitching       S-50         Touch pen       A-6         Troubleshooting       A-7         Twin needle       B-46         U       Upper threading         twin needle mode       B-46         using the "Automatic Threading" button       B-42         using the spool net       B-48         USB cable       B-54, S-98, A-21         USB media       recalling       S-100         saving       S-97         usable       S-95         USB mouse       B-28, B-54
Q           Quilting         S-35           free motion         S-40           with satin stitches         S-39           R           Race         A-3           Retrieving         S-13, S-5           Retrieving         S-101           computer         S-101           machine's memory         S-99           stitch settings         S-23           USB media         S-100           utility stitches         S-23           Reverse Stitch button         B-13, S-5           Reverse/Reinforcement stitches         S-5           S         Satin stitches         S-39, S-88           Saving         S-96           computer         S-98	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-47 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-97 usable S-97 usable S-95 USB mouse B-28, B-54 USB port connector
Q           Quilting         S-35           free motion         S-40           with satin stitches         S-39           R           Race         A-3           Reinforcement Stitch button         B-13, S-5           Retrieving         S-99           computer         S-101           machine's memory         S-99           stitch settings         S-23           USB media         S-100           utility stitches         S-23           Reverse Stitch button         B-13, S-5           Reverse/Reinforcement stitches         S-5           S         Satin stitches         S-5           Saving         Character/decorative stitches         S-96           computer         S-98           machine's memory         S-96	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading twin needle mode using the "Automatic Threading" button using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling recalling saving S-97 usable S-95 USB mouse B-28, B-54 USB port connector for computer B-11, S-98
Q           Quilting         S-35           free motion         S-40           with satin stitches         S-39           R           Race         A-3           Reinforcement Stitch button         B-13, S-5           Retrieving         S-99           computer         S-101           machine's memory         S-99           stitch settings         S-23           USB media         S-100           utility stitches         S-23           Reverse Stitch button         B-13, S-5           Reverse/Reinforcement stitches         S-5           S         Satin stitches         S-5           Saving         S-39, S-88           Saving         S-96           computer         S-98           machine's memory         S-98           stitch settings         S-22	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U  Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-90 USB mouse B-28, B-54 USB port connector for computer B-11, S-98 for media S-97
Quilting         S-35 free motion         S-40 with satin stitches         S-39           R         Race         A-3 Reinforcement Stitch button         B-13, S-5 Retrieving character/decorative stitch patterns         S-99 computer         S-101 machine's memory         S-99 stitch settings         S-23 USB media         S-100 utility stitches         S-23 Reverse Stitch button         B-13, S-5 Reverse/Reinforcement stitches         S-23 Reverse/Reinforcement stitches         S-55           S         Satin stitches         S-39, S-88 Saving         S-96 computer         S-96 computer         S-98 machine's memory         S-96 stitch settings         S-22 USB media         S-22 USB media         S-97	fabric/thread/needle combinations  thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U  Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-90 USB media recalling S-90 USB mouse B-28, B-54 USB port connector for computer B-11, S-98 for media S-97 Utility stitches
Quilting S-35 free motion S-40 with satin stitches S-39  R Race A-3 Reinforcement Stitch button B-13, S-5 Retrieving character/decorative stitch patterns S-99 computer S-101 machine's memory S-99 stitch settings S-23 USB media S-100 utility stitches S-23 Reverse Stitch button B-13, S-5 Reverse/Reinforcement stitches S-5  S Satin stitches S-39, S-88 Saving character/decorative stitches S-98 machine's memory S-96 stitch settings S-96 computer S-98 machine's memory S-96 stitch settings S-22 USB media S-97 utility stitches S-22 USB media S-97 utility stitches S-22	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-97 usable S-97 usable S-97 USB mouse B-28, B-54 USB port connector for computer B-11, S-98 for media S-97 Utility stitches key functions B-23
Quilting S-35 free motion S-40 with satin stitches S-39  R  Race A-3 Reinforcement Stitch button B-13, S-5 Retrieving character/decorative stitch patterns S-99 computer S-101 machine's memory S-99 stitch settings S-23 USB media S-100 utility stitches S-23 Reverse Stitch button B-13, S-5 Reverse/Reinforcement stitches S-5  S  Satin stitches S-39, S-88 Saving character/decorative stitches S-96 computer S-96 stitch settings S-96 stitch settings S-96 surjng S-96 stitch settings S-96 stitch settings S-96 stitch settings S-96 stitch settings S-97 utility stitches S-97 utility stitches S-97 utility stitches S-22 Scallop stitches S-50	fabric/thread/needle combinations thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U Upgrading Lusing the "Automatic Threading" button B-42 Using the "Automatic Threading" button B-48 USB cable B-54, S-98, A-21 USB media recalling recalling saving S-97 USB mouse B-28, B-54 USB port connector for computer for media S-97 Utility stitches key functions S-88 B-11, S-98 B-23 pattern explanation key B-31
Quilting S-35 free motion S-40 with satin stitches S-39  R Race A-3 Reinforcement Stitch button B-13, S-5 Retrieving character/decorative stitch patterns S-99 computer S-101 machine's memory S-99 stitch settings S-23 USB media S-100 utility stitches S-23 Reverse Stitch button B-13, S-5 Reverse/Reinforcement stitches S-5  S Satin stitches S-39, S-88 Saving character/decorative stitches S-96 computer S-96 stitch settings S-96 utility stitches S-96 computer S-98 machine's memory S-96 stitch settings S-22 USB media S-97 utility stitches S-22 Scallop stitches S-50 Screen brightness A-6	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread guide S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-38, B-42 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U  Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-97 usable S-97 usable S-97 usable S-97 USB mouse B-28, B-54 USB port connector for computer B-11, S-98 for media S-97 Utility stitches key functions B-23 pattern explanation key B-33 retrieving S-23
Quilting S-35 free motion S-40 with satin stitches S-39  R Race A-3 Reinforcement Stitch button B-13, S-5 Retrieving character/decorative stitch patterns S-99 computer S-101 machine's memory S-99 stitch settings S-23 USB media S-100 utility stitches S-23 Reverse Stitch button B-13, S-5 Reverse/Reinforcement stitches S-5  S Satin stitches S-5  S Satin stitches S-96 computer S-96 stitch settings S-96 computer S-96 computer S-98 machine's memory S-96 stitch settings S-22 USB media S-97 utility stitches S-97 utility stitches S-97 utility stitches S-95 Screen brightness A-6 Sensor functions B-60	fabric/thread/needle combinations thread tension S-12 Thread cutter S-11, S-4 Thread Cutter button S-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide B-11, B-35, B-38, B-47 Thread guide plate Top cover S-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U  Upgrading Lupper threading twin needle mode using the "Automatic Threading" button using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling recalling saving S-97 usable S-97 USB mouse B-28, B-54 USB port connector for computer S-97 Utility stitches key functions key functions S-23 saving S-23 saving S-23 saving S-22
Q           Quilting         \$-35           free motion         \$-40           with satin stitches         \$-39           R         A-3           Reinforcement Stitch button         B-13, \$-5           Retrieving         \$-99           character/decorative stitch patterns         \$-99           computer         \$-101           machine's memory         \$-99           stitch settings         \$-23           USB media         \$-100           utility stitches         \$-23           Reverse Stitch button         B-13, \$-5           Reverse/Reinforcement stitches         \$-5           S           Satin stitches         \$-39, \$-88           Saving         \$-96           computer         \$-98           machine's memory         \$-96           stitch settings         \$-22           USB media         \$-97           utility stitches         \$-22           Scallop stitches         \$-50           Screen brightness         A-6           Sensor functions         B-60           guideline marker         B-66	fabric/thread/needle combinations B-53 thread tension S-12 Thread cutter B-11, S-4 Thread Cutter button B-13 Thread guide S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-47 Thread guide plate B-11, B-35, B-38, B-47 Top cover B-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U  Upgrading A-20 Upper threading twin needle mode B-46 using the "Automatic Threading" button B-42 using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling S-100 saving S-97 usable S-97 USB mouse B-28 USB port connector for computer B-11, S-98 for media S-97 Utility stitches key functions B-23 pattern explanation key B-33 retrieving S-22 selecting S-21
Quilting S-35 free motion S-40 with satin stitches S-39  R Race A-3 Reinforcement Stitch button B-13, S-5 Retrieving character/decorative stitch patterns S-99 computer S-101 machine's memory S-99 stitch settings S-23 USB media S-100 utility stitches S-23 Reverse Stitch button B-13, S-5 Reverse/Reinforcement stitches S-5  S Satin stitches S-5  S Satin stitches S-96 computer S-96 stitch settings S-96 computer S-96 computer S-98 machine's memory S-96 stitch settings S-22 USB media S-97 utility stitches S-97 utility stitches S-97 utility stitches S-95 Screen brightness A-6 Sensor functions B-60	fabric/thread/needle combinations thread tension S-12 Thread cutter S-11, S-4 Thread Cutter button S-13 Thread density key S-88 Thread guide B-11, B-35, B-38, B-47 Thread guide B-11, B-35, B-38, B-47 Thread guide plate Top cover S-11 Top stitching S-50 Touch pen A-6 Troubleshooting A-7 Twin needle B-46  U  Upgrading Lupper threading twin needle mode using the "Automatic Threading" button using the spool net B-48 USB cable B-54, S-98, A-21 USB media recalling recalling saving S-97 usable S-97 USB mouse B-28, B-54 USB port connector for computer S-97 Utility stitches key functions key functions S-23 saving S-23 saving S-23 saving S-22

#### W

Walking foot B-49

Z
Zigzag stitches S-31
Zipper insertion
centered S-64
side S-65

English 882-D01 Printed in Taiwan



XF3650-001