



BERNINA 735

User Manual

made to create **BERNINA**



Dear BERNINA customer,

Congratulations! You have decided on BERNINA and therefore on a product which will delight you for years. For more than 100 years our family company has attached greatest importance to satisfied customers. As for me, it is a matter of personal concern to offer you Swiss development and precision at the height of perfection, future-orientated sewing technology and a comprehensive customer service.

The BERNINA 7-series consists of various ultramodern machines, whose development not only focused the highest demands on technique and the ease of use but also considered the design of the product. After all we sell our products to creative people like you, who do not only appreciate high quality but also form and design.

Enjoy the creative sewing, embroidering and quilting on your new BERNINA B 735 and keep informed about the various accessories at www.bernina.com. On our homepage you will also find a lot of inspiring sewing instructions, to be downloaded for free.

Our highly trained BERNINA dealers will provide you with more information on service and maintenance offers.

I wish you lots of pleasure and many creative hours with your new BERNINA.

A handwritten signature in black ink, appearing to read "H.P. Ueltschi".

H.P. Ueltschi
Owner
BERNINA International AG
CH-8266 Steckborn

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	7	2.5 Spool pin	33
Important information	10	Swiveling spool pin	33
1 My BERNINA	12	Horizontal spool pin	33
1.1 Introduction	12	2.6 Feed dog	34
1.2 BERNINA Quality control	12	Adjusting the feed dog	34
1.3 Welcome to the world of BERNINA	12	2.7 Slide-on table	34
1.4 Overview Machine	14	Using the slide-on table	34
Overview front controls	14	2.8 Presser foot	35
Overview front	15	Adjusting the presser foot position via the knee lifter of the Free Hand System	35
Overview sideways	16	Adjusting the presser foot position via the button «Presser foot up/down»	35
Overview - Back Panel	17	Changing the presser foot	35
1.5 Supplied accessories	18	Selecting the presser foot in the User Interface	36
Overview accessories machine	18	Adjusting the presser foot pressure	37
Overview presser feet	20	2.9 Needle and stitch plate	37
Accessory box	21	Changing the needle	37
1.6 Overview User Interface	22	Selecting the needle in the User Interface	38
Overview functions/visual information	22	Selecting needle type and needle size	38
Overview System settings	22	Adjusting the needle position up/down	38
Overview selection menu sewing	23	Adjusting the needle position left/right	38
Software operation	23	Needle stop up/down (permanent)	39
1.7 Needle, Thread, Fabric	25	Changing the stitch plate	39
Overview Needles	25	Selecting the stitch plate in the User Interface	40
Example for needle description	27	2.10 Threading	40
Thread selection	27	Threading the upper thread	40
Needle/thread combination	28	Threading the double needle	43
2 Sewing preparation	29	Threading the triple needle	44
2.1 Before using the machine for the first time	29	Winding the bobbin thread	44
2.2 Accessory box	29	Threading the bobbin thread	45
Accessory box free standing	29	Indicating fill level of bobbin thread	47
Storing accessories	29	3 Setup Program	48
2.3 Connection and Switching on	30	3.1 Sewing settings	48
Connecting the foot control	30	Adjusting the upper thread tension	48
Connecting the machine	30	Adjusting the maximum sewing speed	48
Attaching the knee lifter of the Free Hand System	31	Programming the securing stitches	48
Fixing the touchscreen pen	31	Adjusting the hovering height of the presser foot	48
Switching the machine on	32	Programming the button «Pattern end»	49
2.4 Foot control	32	Programming the button «Thread cutter»	50
Regulating the speed via the foot control	32	Adjusting the presser foot position with needle stop down	50
Raising/Lowering the needle	32	Programming the button «Quick reverse»	51
		Programming the button «Securing»	51

3.2	Embroidery settings	52
	Adjusting the upper thread tension	52
	Adjusting the maximum embroidering speed	52
	Centering or opening embroidery motifs in the original position	52
	Calibrating the embroidery hoop	53
	Entering the fabric thickness	53
	Activating/Deactivating the function thread away	53
	Programming the securing stitches	54
	Adjusting the thread cut	54
	Changing the measuring unit	55
3.3	Selecting personal settings	55
3.4	Monitoring functions	56
	Activating the upper thread indicator	56
	Activating the bobbin thread indicator	56
3.5	Activating the audio signals	57
3.6	Machine settings	57
	Selecting a language	57
	Adjusting the brightness of the display	58
	Adjusting the sewing light	58
	Calibrating the display	58
	Back to default setting	59
	Deleting user data	59
	Deleting motifs on the BERNINA USB Stick	60
	Calibrating the Buttonhole foot No. 3A	60
	Packing the embroidery module	60
	Reviewing the total number of stitches	61
	Registering details of the dealer	61
	Saving Service data	62
4	System settings	63
4.1	Calling up the Tutorial	63
4.2	Calling up the Creative Consultant	63
4.3	Calling up the Embroidery Consultant	63
4.4	Calling up the Help	63
4.5	Using eco mode	63
4.6	Cancelling any alterations with «clr»	63
5	Creative sewing	64
5.1	Overview selection menu sewing	64
	Selecting a stitch pattern	64
5.2	Regulating the speed	64
5.3	Adjusting the upper thread tension	64
5.4	Editing stitch patterns	65
	Changing the stitch width	65
	Changing the stitch length	65
	Correcting the balance	66
	Programming pattern repeat	66
	Mirror image of stitch patterns	67
	Editing stitch pattern length	67
	Sewing stitch patterns using the triple stitch	67
	Quick reverse	67
	Permanent Quick reverse	68
	Backstepping	68
5.5	Combining stitch patterns	68
	Overview Combi mode	68
	Creating Stitch pattern combinations	68
	Saving a stitch pattern combination	69
	Loading a stitch pattern combination	69
	Overwriting a stitch pattern combination	69
	Deleting a stitch pattern combination	70
	Editing a single stitch pattern	70
	Deleting a single stitch pattern	70
	Adding a single stitch pattern	71
	Adapting the stitch pattern length and stitch pattern width	71
	Mirroring a stitch pattern combination	72
	Stitch pattern combination Subdivider 1	72
	Stitch pattern combination Subdivider 2	73
	Securing a stitch pattern combination	73
	Programming pattern repeat	73
5.6	Administering stitch patterns	74
	Saving settings of stitch patterns	74
	Calling up the previously sewn stitch patterns	74
	Saving stitch patterns in personal memory	74
	Overwriting stitch patterns from the personal memory ..	74
	Loading stitch patterns from the personal memory ..	75
	Deleting stitch patterns from the personal memory ..	75
	Saving stitch patterns on the BERNINA USB stick	75
	Uploading a stitch pattern from the BERNINA USB stick	75
	Deleting stitch patterns from the BERNINA USB stick ..	76
5.7	Securing	76
	Securing with the button «Pattern end»	76
	Securing via the icon «Securing»	76
5.8	Height Compensation of uneven layers	77
5.9	Sewing Corners	77
6	Practical stitches	78
6.1	Overview Practical Stitches	78
6.2	Sewing straight stitch	80
6.3	Securing with the automatic Securing Program	81
6.4	Sewing in the zipper	81
6.5	Sewing both sides of the zipper from bottom to top	82



Table of Contents

6.6	Sewing Triple Straight stitch	83
6.7	Sewing Triple zig zag	84
6.8	Manual darning	84
6.9	Automatic darning	86
6.10	Reinforced darning, automatic	87
6.11	Finishing edges	87
6.12	Sewing Double overlock	88
6.13	Narrow edgestitching	88
6.14	Wide edgestitching	89
6.15	Edgestitching using the seam guide	89
6.16	Sewing hem edges	90
6.17	Sewing blind hems	90
6.18	Sewing visible hems	91
6.19	Sewing flat joining seams	92
6.20	Sewing basting stitches	92
7	Decorative stitches	93
7.1	Overview Decorative Stitches	93
7.2	Bobbin-Play	94
7.3	Altering the stitch density	94
7.4	Sewing cross stitches	95
7.5	Pintucks	96
	Pintucks	96
	Overview Pintuck Feet	96
	Working with cord	97
	Sewing Pintucks	98
8	Alphabets	99
8.1	Overview Alphabet	99
8.2	Creating lettering	99
9	Buttonholes	101
9.1	Overview Buttonholes	101
9.2	Making use of the height compensation tool	102
9.3	Using the compensation plate	102
9.4	Marking buttonholes	103
9.5	Cord	104
	Using cord with the Buttonhole Foot with Slide #3A ...	104
	Using cord with the Buttonhole Foot #3	105
9.6	Sewing a test sample	106
9.7	Determining the buttonhole slit width	106
9.8	Determining the buttonhole length with the Buttonhole Foot with Slide #3A	107
9.9	Determining the buttonhole length with Buttonhole Foot #3	107
9.10	Sewing a buttonhole automatically	108
9.11	Programming the Heirloom buttonhole	109
9.12	Sewing the manual 7-step buttonhole	109
9.13	Sewing the manual 5-step buttonhole	110
9.14	Cutting the buttonhole open with the seam ripper ..	111
9.15	Cutting open buttonholes with the buttonhole cutter (optional accessory)	111
9.16	Sewing on buttons	111
9.17	Sewing eyelets	112
10	Quilting	113
10.1	Overview Quilt Stitches	113
10.2	Quilting, Securing Program	113
10.3	Sewing handlook quilt stitches	114
10.4	Guiding the quilt work freely	114
11	BERNINA Stitch Regulator (BSR)	116
11.1	BSR mode 1	116
11.2	BSR mode 2	116
11.3	BSR function with Straight stitch No. 1	116
11.4	BSR function with Zigzag No. 2	116
11.5	Sewing preparations for quilting	116
	Attach the BSR presser foot	116
	Changing the presser foot sole	117
11.6	Using the BSR mode	117
11.7	Securing	118
	Securing in BSR1 Mode with the button «Start/Stop» ...	118
	Securing in BSR2 Mode	119
12	My BERNINA Embroidery	120
12.1	Overview Embroidery module	120
12.2	Supplied accessories Embroidery module	120
	Overview accessory Embroidery module	120
12.3	Overview User Interface	122
	Overview functions/visual information	122
	Overview System settings	122
	Overview Selection menu embroidery	123
12.4	Important Embroidery information	123
	Upper thread	123
	Bobbin thread	123

Choosing the embroidery motif	124
Selecting the embroidery file format	124
Embroidery test	124
The size of the embroidery motif	124
Embroidering motifs by third-party providers	124
Underlay stitches	125
Satin or Leaf stitch	125
Step stitch	125
Connecting stitches	126
13 Embroidering preparation 127	
13.1 Attaching the Module	127
13.2 Preparing the machine	128
Lowering the feed dog	128
Selecting an embroidery motif	128
13.3 Embroidery foot	128
Attaching the embroidery foot	128
Selecting the presser foot in the User Interface	129
13.4 Needle and stitch plate	129
Inserting the embroidery needle	129
Selecting the embroidery needle in the User Interface	130
Selecting needle type and needle size	130
Attaching the stitch plate	131
Selecting the stitch plate in the User Interface	132
Thread-up command	132
13.5 Embroidery hoop	132
Overview Embroidery hoop selection	132
Selecting the embroidery hoop	132
Tear-away stabilizers	133
Cut-away stabilizers	133
Using adhesive spray	133
Using spray starch	133
Using iron-on interfacing	133
Using paper-backed adhesive stabilizer	134
Using water-soluble stabilizer	134
Preparing the embroidery hoop	134
Attaching the hoop	135
Overview Embroidery functions	136
Center the needle to the embroidery hoop	136
Moving the hoop to the back	136
Moving the module for the sewing mode	136
Grid on/off	137
Locating the center of the embroidery motif	137
Virtual positioning of the embroidery hoop	137
14 Setup Program 138	
14.1 Adjusting the embroidery settings in the Setup Program	138
15 Creative embroidering 139	
15.1 Overview embroidering	139
15.2 Selecting and changing the embroidery motif	139
15.3 Checking the embroidery time and the embroidery motif size	139
15.4 Regulating the speed	139
15.5 Editing the embroidery motif	140
Overview Editing embroidery motif	140
Scaling up the embroidery motif view	140
Downsizing the embroidery motif view	140
Moving the embroidery motif view	140
Moving the embroidery motif in enlarged view	141
Moving the embroidery motif	141
Rotating motif	142
Altering the embroidery motif size proportionally	142
Altering the embroidery motif size disproportionately	143
Mirroring embroidery motifs	143
Changing the stitch type	144
Altering the stitch density	144
Checking the size and the position of the embroidery motif	144
Deleting an embroidery motif	145
Changing the sequence within an embroidery motif combination	145
Grouping embroidery motifs	145
15.6 Pinpoint placement	147
Positioning of grid points	147
Free point positioning	148
15.7 Combining embroidery motifs	149
Combining embroidery motifs	149
Deleting a single embroidery motif	149
Duplicating the embroidery motif	149
Duplicating a combination	150
15.8 Creating lettering	150
Overview embroidery alphabets	150
Creating words/sentences	151
Editing words/sentences	152
15.9 Changing the colors of the embroidery motif	153
Overview changing the color	153
Changing the colors	153
Changing the thread brand	153
15.10 Embroidering the embroidery motif	154
Overview Embroidery menu	154
Adding basting stitches	154
Moving the hoop	154
Embroidery sequence control when thread breaks	155
Cutting connecting stitches	155
Reducing color changes	155



Table of Contents

Multi-colored embroidery motif on/off	155
Color indication	156
15.11 Freearm Embroidery	156
15.12 Administering embroidery motifs	157
Administering embroidery motifs	157
Saving embroidery motifs in the personal memory	157
Saving the embroidery motif on the BERNINA USB stick	157
Overwriting the embroidery motif in the personal memory	158
Overwriting the embroidery motif on the BERNINA USB stick	158
Importing stitch patterns	158
Loading an embroidery motif from the personal memory	159
Loading an embroidery motif from the BERNINA USB stick	159
Deleting an embroidery motif from the personal memory	159
Deleting an embroidery motif from the BERNINA USB stick	160
16 Embroidery	161
16.1 Embroidering via the button «Start/Stop»	161
16.2 Increasing the embroidery speed	161
16.3 Adjusting the upper thread tension	161
16.4 Embroidering via the foot control	162
17 Care and maintenance	163
17.1 Firmware	163
Checking the firmware version	163
Updating firmware	163
Recovering saved data	164
17.2 Machine	164
Cleaning the display	164
Cleaning the feed dog	164
Cleaning the hook	165
Lubricating the hook	166
Cleaning the thread catcher	168
18 Errors and faults	169
18.1 Error messages	169
18.2 Troubleshooting	173
19 Storage and disposal	177
19.1 Storing the machine	177
19.2 Dispose of the machine	177
20 Technical data	178
21 Overview stitch patterns	179
21.1 Overview Stitch patterns	179
Practical stitches	179
Buttonholes	179
Decorative stitches	179
Quilt stitches	182
21.2 Overview Embroidery motifs	182
Editing embroidery motifs	182
Embellishment	182
Quilt motifs	186
Projects	189
Borders and Lace	190
Children	192
Seasons	195
Sport and hobbies	200
Flowers	202
DesignWorks	204
Borders	207
Animals	209
Index	211

IMPORTANT SAFETY INSTRUCTIONS

Please be aware of the following basic safety instructions when using your machine. Before using this machine, read instruction manual carefully.

DANGER

To protect against electric shock, the following instructions must be observed.

- Never leave the machine unattended when it is connected to the power supply.
- Immediately after use and before cleaning, switch off the machine and disconnect the power cable from the outlet.

In order to protect against injury, the following instructions must be adhered to.

- Do not look directly into the LED lamp with optical instruments (e. g. magnifying glass).
- If the LED lamp is damaged or defective, have the LED lamp checked or repaired at your local authorized BERNINA dealer.
- Switch off the machine before working in the needle area.
- Before starting the machine, close all covers.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons, the following instructions must be observed.

General facts

- This machine may only be used for the purpose described in this instruction manual.

Working environment

- Do not use the machine outdoors.
- Only use the machine in dry rooms.
- Do not use the machine in a humid area.
- Do not use the machine in rooms where aerosol products (sprays) are being used.
- Do not use the machine in rooms where oxygen is dispensed.

Technical condition

- Never use the machine when it is damp.
- Do not use the machine if it is not working properly.



- Do not use the machine if a cable or the plug is damaged.
- Do not use the machine if it has been dropped, damaged or has fallen into water.
- If the machine is damaged or does not work properly, have the machine checked or repaired by your local authorized BERNINA dealer.
- Keep all ventilation openings of the machine and the foot control free of lint, dust and loose cloth.
- Do not use the machine if the ventilation openings are blocked.

Accessories and Supplies

- Only use the accessories recommended by the manufacturer.
- Always use the original BERNINA Stitch Plate.
An incorrect stitch plate can result in needle breakage.
- Use only straight needles of good quality.
Bent or damaged needles can cause needle breakage.
- This machine is double-insulated (except for USA, Canada and Japan).
Use only identical replacement parts. See instructions for servicing of double-insulated products.
- To lubricate the machine, only use oil recommended by BERNINA.

Safety instructions

- While operating the machine, all protective inserts must be in place and all covers must be closed.

Appropriate use

- The machine may be used, cleaned and maintained by children older than eight or by people with reduced physical, sensory or mental capabilities or if there is a lack of experience and knowledge as long as they have been given instructions.
- Furthermore, these persons must be supervised while working with the machine, and/or they must know the safe operation of the machine and be aware of the resulting hazards.
- Children must not play with the machine.
- Special care should be taken when the machine is operated by or in the presence of children.
- Only use the machine with the supplied power cable.
- The power cable for USA and Canada (power plug NEMA 1-15) may only be used for a maximum supply voltage of 150 volt-to-ground.
- Only use this machine with the supplied foot control of type LV-1.
- Do not insert any objects into the openings of the machine.

- Do not place any objects on the foot control.
- While sewing, guide the fabric gently.
Pulling and pushing the fabric can cause needle breakage.
- Keep fingers away from all moving parts.
- Special care is required in the needle area.
- For activities in the needle area - such as threading the needle, changing the needle, threading the looper or changing the presser foot - switch off the machine.
- To switch off, set the power switch to «0».
- When protective covers are removed, when the machine is oiled or when other cleaning and maintenance operations mentioned in this instruction manual are carried out, switch off the machine and disconnect the power plug from the outlet.
- Pull the plug out of the outlet by pulling on the plug. Do not pull on the cable.



Important information

Availability of the instruction manual

The instruction manual is supplied with the machine.

- Keep the instruction manual safe at a suitable place near the machine to have it at hand in case that you need to look up something.
 - If you pass the machine to a third party, always include the instruction manual.
 - The latest version of the instruction manual can be downloaded at www.bernina.com

Proper use

Your BERNINA machine is conceived and designed for private household use. It is intended for sewing fabrics and other materials as described in this instruction manual. Any other use is not considered proper. BERNINA assumes no liability for consequences resulting from improper use.

Equipment and scope of delivery

Example images are used in these operating instructions for the purposes of illustration. The machines shown in the images and the accessories shown therefore do not always match the actual items included with your machine. The supplied accessory can vary depending on the country of delivery. You can acquire any accessories mentioned or shown that are not included in the scope of delivery as optional accessories from a specialist BERNINA dealer. Further accessories can be found at www.bernina.com.

For technical reasons and in order to improve the product, changes may be made to the equipment of the machine and the scope of delivery at any time and without prior notice.

Maintenance of double-insulated products

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system and should only be done by qualified service personnel. Only original spare parts should be used for service and repairs. A double-insulated product is marked with the words: «Double-Insulation» or «double-insulated».



Environmental Protection

BERNINA is committed to the protection of the environment. We strive to minimize the environmental impact of our products by continuously improving product design and our technology of manufacturing.



The machine is labeled with the symbol of the crossed-out wastebin. This means that the machine should not be disposed of in household waste when it is no longer needed. Improper disposal can result in dangerous substances getting into the groundwater and thus into our food chain, damaging our health.

The machine must be returned free of charge to a nearby collection point for waste electrical and electronic equipment or to a collection point for the reuse of the machine. Information on the collection points can be obtained from your local administration. When purchasing a new machine, the dealer is obliged to take back the old machine free of charge and dispose of it properly.

If the machine contains personal data, you are responsible for deleting the data yourself before returning the machine.

Explanation of symbols



Designates a high-risk hazard which can lead to serious injuries or potentially even death if not avoided.



Designates a medium-risk hazard which can lead to serious injuries if not avoided.



Designates a low-risk hazard which can lead to minor or moderate injuries if not avoided.



Designates a hazard which can lead to material damage if not avoided.



Tips from BERNINA **sewing experts** are found next to this symbol.

1 My BERNINA

1.1 Introduction

With your BERNINA B 735 you can sew, embroider and quilt. Delicate silk or satin fabrics as well as heavy-weight linen, fleece and denim can be sewn without any problems with this machine. Numerous practical as well as decorative stitches, buttonholes and embroidery motifs are at your disposal.

Additional to this instruction manual, subsequently listed help programs are provided which will give you useful advice and support at any time how to operate your BERNINA B 735.

The **Tutorial** gives information and explanations, covering various aspects of sewing, embroidering and the different stitches.

The **Creative Consultant** informs you about decision support for sewing projects. After entering the kind of fabric and the desired sewing project, suggestions concerning the suitable needle or the appropriate presser foot are displayed.

The **Embroidery Consultant** informs you about decision support for embroidery projects. After entering the kind of fabric and the desired embroidery project, suggestions concerning the suitable needle or the appropriate embroidery foot are displayed.

The **Help Program** contains information about individual stitch patterns, functions and applications in the display.

Further information

In addition to this instruction manual of your BERNINA B 735 further information products are enclosed.

The latest version of your instruction manual as well as additional information in connection with the machine and accessories can be found on our website <http://www.bernina.com>

1.2 BERNINA Quality control

All BERNINA machines are assembled with utmost care and are subjected to an extensive functionality test. The integrated stitch counter therefore indicates that the machine has already sewn stitches, which were performed exclusively for test purposes and quality control. The subsequent thorough cleaning does not exclude the possibility that thread remnants may still be found in the machine.

1.3 Welcome to the world of BERNINA

Made to create, this is the slogan of BERNINA. Not only with our machines do we support you in the implementation of your ideas. In addition to the offers listed below, we offer you lots of suggestions and instructions for your future projects as well as the opportunity to exchange ideas with other sewing, quilting and embroidery enthusiasts. I wish you lots of pleasure.

BERNINA YouTube Channel

On YouTube we offer a wide range of how-to videos and support concerning the most important functions of our machines. You can also find detailed explanations many presser feet, meaning that your projects will be a complete success.

<https://www.youtube.com/BerninalInternational>

Available in English and German.

inspiration – the sewing magazine in the online shop

Are you looking for ideas, sewing patterns and instructions for great sewing projects? In this case, the BERNINA magazine «inspiration» is exactly what you need. Three times a year, inspiration offers fantastic sewing and embroidery ideas. From seasonal fashion trends to trendy accessories and practical tips to original decorations for your home or cute sewing ideas for children.

The magazine is available in English, German, Dutch, and French.

In our online shop you can purchase "inspiration" as an e-magazine or as a print version, either as individual issues or as a subscription. Furthermore, there are many individual downloadable cutting patterns to discover! Please have a look at <https://www.bernina.com/inspiration>

BERNINA Blog

Subtle instructions, free sewing patterns and embroidery motifs as well as many new ideas: All this you can find in the weekly blog of BERNINA. Our experts give useful tips and explain step by step how you can achieve the desired result. In the community you can upload your own projects and exchange experiences and ideas with other sewing and embroidering enthusiasts.

<https://www.bernina.com/blog>

Provided in English, German and Dutch.

BERNINA Social Media

Follow on social networks to learn more about events, thrilling projects as well as tips and tricks all about sewing, quilting and embroidering. We keep updated and we are happy to show you one or two highlights from the world of BERNINA.

<https://www.bernina.com/social-media>



1.4 Overview Machine

Overview front controls



- | | |
|--------------------------|--------------------------------|
| 1 «Quick Reverse» | 7 «Pattern Begin» |
| 2 «Thread Cutter» | 8 «Needle Up/Down» |
| 3 «Presser Foot Up/Down» | 9 «Upper Multi-function knob» |
| 4 «Start/Stop» | 10 «Lower Multi-function knob» |
| 5 «Pattern End» | 11 «Needle Left/Right» |
| 6 «Securing» | |

Overview front

- | | | | |
|---|---|----|---------------------------------|
| 1 | Connection for embroidery module | 7 | Slide speed control |
| 2 | Bobbin cover | 8 | Thread take-up lever cover |
| 3 | Connection for accessory (optional accessory) | 9 | Thread take-up lever |
| 4 | Presser foot | 10 | Fixing screw |
| 5 | Needle threader | 11 | Connection for slide-on table |
| 6 | Sewing light | 12 | Connection for Free Hand System |

Overview sideways



- | | |
|--|-------------------------------------|
| 1 Connection for foot control | 7 Power switch |
| 2 PC-connection | 8 Connection for power cable |
| 3 Spool holder | 9 Magnet holder for touchscreen pen |
| 4 Bobbin winding unit with thread cutter | 10 Air vents |
| 5 Swiveling spool holder | 11 USB port |
| 6 Handwheel | 12 Feed dog up/down |

Overview - Back Panel

- | | | | |
|---|---|----|--------------------------|
| 1 | Connection for Slide-on Table | 8 | Carry Handle |
| 2 | Connection for Darning Hoop | 9 | Bobbin Winder Pretension |
| 3 | BSR Connection | 10 | Thread Take-Up Lever |
| 4 | Connection for Accessory (optional accessory) | 11 | Thread Guide |
| 5 | Air Vents | 12 | Thread Cutter |
| 6 | Thread Guide | 13 | Feed Dog |
| 7 | Bobbin Winding Unit | 14 | Stitch Plate |

1.5 Supplied accessories

Overview accessories machine

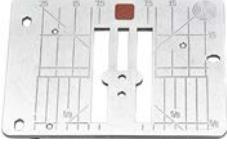
Illustration	Name	Purpose
	Dust cover	To protect the machine from dust and contamination.
	BERNINA Accessory Box	To store the supplied accessories as well as the optional accessories.
	Free Hand System (FHS)	To raise and lower the presser foot.
	Slide-on Table	To increase the sewing surface.
	CutWork/Straight stitch plate	To sew straight stitches and for CutWork.
	Spool disc	To support the regular unwinding of the thread from the spool.
	Bobbin for B9 hook Set of 5	To wind the bobbin thread.
	Foam pad 2 pieces	The foam pad prevents the thread from slipping, tangling or breaking on the spool pin.

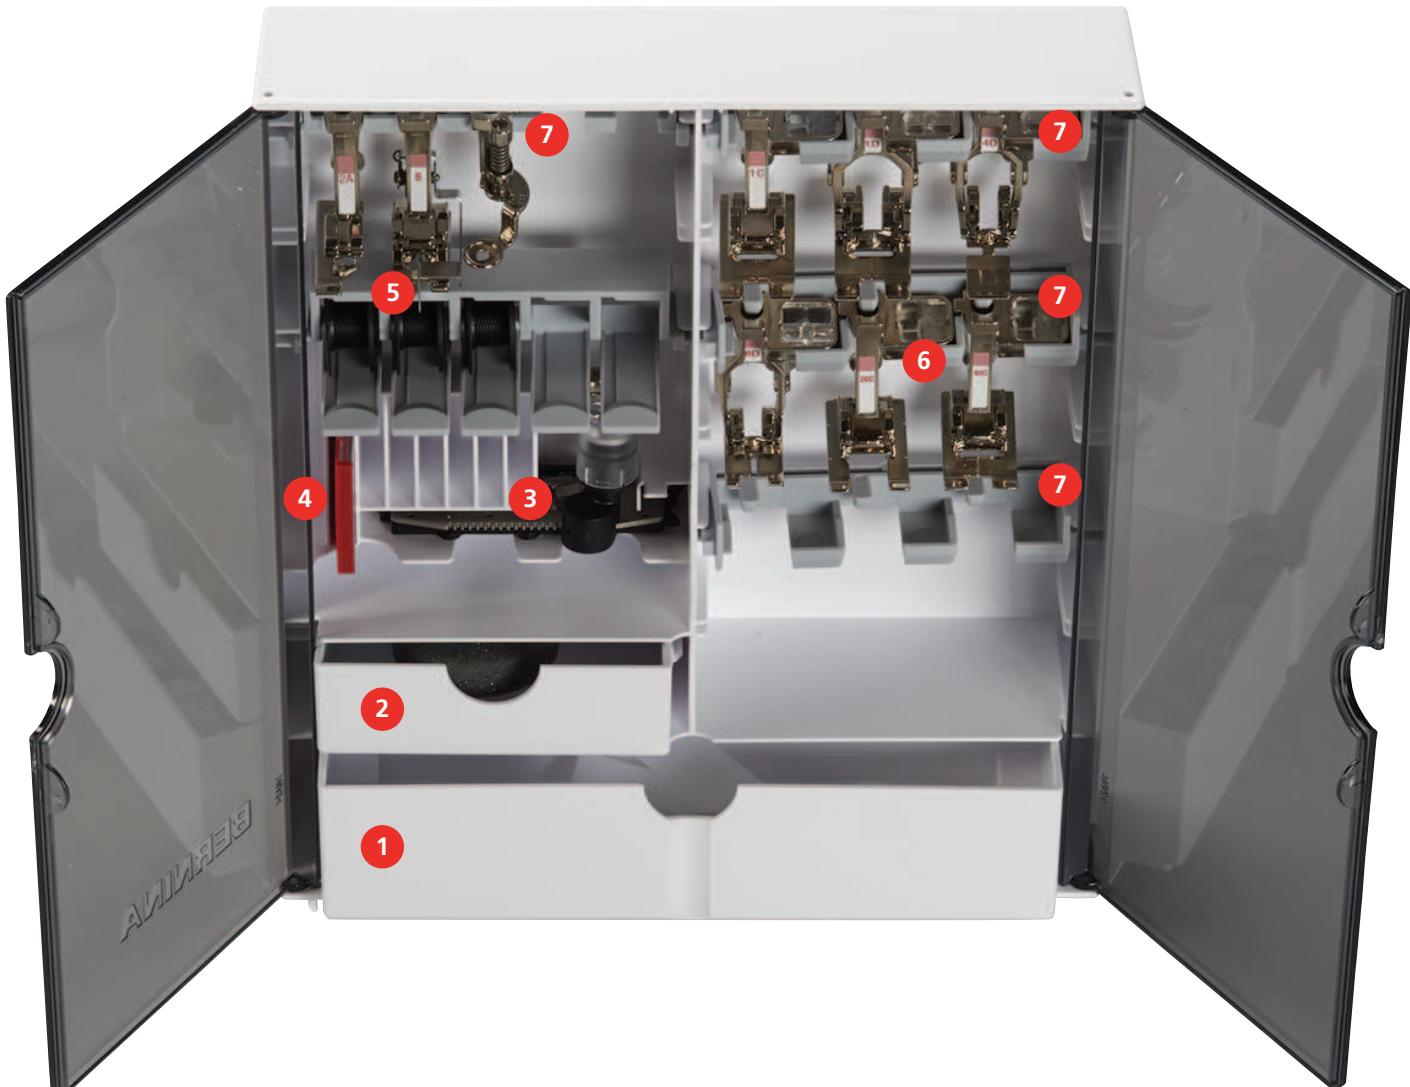
Illustration	Name	Purpose
	Touchscreen pen	For precise operation of the touch display.
	Seam ripper	To undo seams and to cut buttonholes open.
	Height compensating tool	To level an angled position of the presser foot sole when sliding over thick seams.
	Selection of needles	For any common applications.
	Seam guide, right	To align regular seam distances.
	Screwdriver Torx, gray	To change the needle.
	Screwdriver red (slot)	To loosen and tighten slotted screws.
	Angular Torx wrench Torx	To open the headframe.
	Brush/Needle Inserter	To clean the feed dog and the looper area.
	Sewing machine oil	To oil the machine.

Illustration	Name	Purpose
	Power cable	To connect the machine with the power supply system.
	Foot control	To start and stop the machine. To control the sewing speed.

Overview presser feet

Supplied standard presser feet

Illustration	Number	Name	Purpose	Example
	#1	Reverse Pattern Foot	To sew various practical and decorative stitches. To sew forward and in reverse.	
	#3A	Buttonhole foot with slide	To sew buttonholes automatically.	
	#4	Zipper Foot	To sew in zippers.	
	#8	Jeans Foot	To sew with Dual Feed. To sew denim.	
	#20	Open Embroidery Foot	To sew appliqués and decorative patterns.	

Accessory box

- | | | | |
|---|----------------------------|---|--------------------------------------|
| 1 | Big Drawer | 5 | Spool Pin |
| 2 | Small Drawer | 6 | Presser Feet |
| 3 | Buttonhole Foot with Slide | 7 | Presser Foot Holders for 5.5 mm feet |
| 4 | Selection of needles | | |

1.6 Overview User Interface

Overview functions/visual information



- | | | | |
|---|---|---|--------------------------|
| 1 | «Upper Thread Tension» | 5 | «Stitch Plate Selection» |
| 2 | «Needle Selection» | 6 | «Feed Dog Up/Down» |
| 3 | «Presser foot indicator / presser foot selection» | 7 | «Bobbin Thread» |
| 4 | «Presser Foot Pressure» | | |

Overview System settings



- | | | | |
|---|-----------------------|---|------------------|
| 1 | «Home» | 5 | «Help» |
| 2 | «Setup Program» | 6 | «eco Mode» |
| 3 | «Tutorial» | 7 | «Clear Settings» |
| 4 | «Creative Consultant» | | |

Overview selection menu sewing



- | | | | |
|---|-----------------------|---|-------------------|
| 1 | «Practical Stitches» | 5 | «Quilt Stitches» |
| 2 | «Decorative Stitches» | 6 | «Personal Memory» |
| 3 | «Alphabets» | 7 | «History» |
| 4 | «Buttonholes» | | |

Software operation

The touch-sensitive screen can be operated with the finger or stylus.

Tap: Short tap of an element.

Swipe: Tap an element and swipe quickly on the screen.

Draw: Tap the screen and slowly move in one direction, eg. for scrolling up and down.

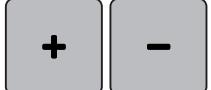
Navigation

Illustration	Name	Purpose
	«Home»	Switch between «Home screen» and «Sewing screen».
	Navigation path	Show a previous menu level.
	«Close»	Close the window.
	More	Show more features or information.
	Continue	Scroll to next display.
	Back	Scroll to previous display.

Activate/deactivate functions

Figure	Element	Status
	Switch	Function is activated.
		Function is deactivated.
	Icon	Function is deactivated.
		Function is activated.

Adjust values

Illustration	Name	Purpose
	Slider control	Set the value with the slider control. Reset the value to the default value by tapping the small bullet.
	Field «Plus» / «Minus»	«Plus» increase, «Minus» reduce the value.
	Yellow frame	Indication that the set value differs from the default value. Reset the value to the default value by tapping.

Enter text and numbers

To enter numerical values or text, a corresponding keyboard is shown.



Illustration	Name	Purpose
	Entry field	Display of the entry. Delete all characters entered with a single tap.



Illustration	Name	Purpose
	«Delete»	Delete the last character.
	«Lower Case Characters»	Show the available letters in lower case letters.
	«Upper Case Characters»	Show the available letters in upper case letters.
	«Numbers and Mathematical Characters»	Show the available numbers and mathematical characters.
	«Special Characters»	Show the available special characters.
	«Confirm»	Confirm the entry and leave the submenu.
	«Cancel»	Cancel the entry and the view closes.

1.7 Needle, Thread, Fabric

In the course of time a needle wears out. Therefore it should be replaced regularly. Only a perfect point results in a good stitching result. In general it can be said: the thinner the thread, the finer the needle. The illustrated needles are either standard or optional accessory, depending on the machine.

- Needle sizes 70, 75: for thin fabrics.
- Needle sizes 80, 90: for medium fabrics.
- Needle sizes 100, 110 and 120: for heavy fabrics.

Overview Needles

Illustration	Needle name	Needle description	Purpose
	Universal needle 130/705 H 60-120	Slightly rounded point	For nearly all natural and synthetic fabrics (woven and knitted).
	Stretch needle 130/705 H-S 75, 90	Mid-sized ball point, special eye shape and needle scarf	For jersey, tricot, knit and stretch fabrics.
	Jersey/Embroidery needle 130/705 H SUK 60-100	Mid-sized ball point	For knitware, knitted good.
	Jeans needle 130/705 H-J 80-110	Point, narrow point, reinforced shaft	For heavy-weight fabrics such as jeans or canvas.


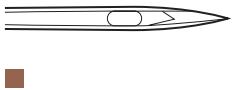
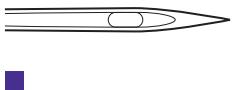
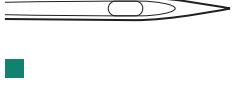
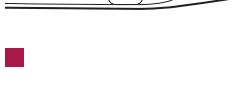
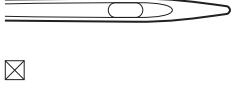
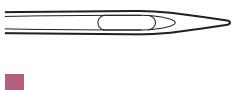
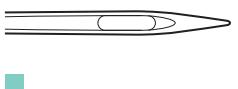
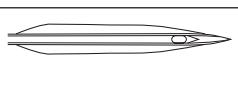
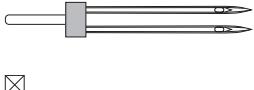
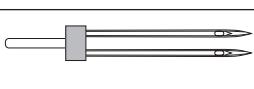
Illustration	Needle name	Needle description	Purpose
 ■	Leather needle 130/705 H LR 90, 100	With cutting point (LR = special point to sew leather)	For all types of leather, synthetic leather, plastic, sheeting.
 ■	Microtex needle 130/705 H-M 60-110	Especially sharp, narrow point	For micro fiber fabrics and silk.
 ■	Quilting needle 130/705 H-Q 75, 90	Slightly rounded fine point	For straight and topstitching.
 ■	Embroidery needle 130/705 H-E 75, 90	Small ball point, especially wide needle eye and wide thread groove	For embroidery on all natural and synthetic fabrics.
 ☑	Fine-material needle 130/705 H SES 70, 90	Small ball point	For fine knitware and knitted materials. For embroidery on fine, delicate fabrics.
 ■	Metafil needle 130/705 H METAFIL 80	Long needle eye (2 mm) in all needle sizes	For sewing or embroidering with metallic threads.
 ■	Cordonnet needle (to patch embroidery) 130/705 H-N 70-100	Long needle eye (2 mm) in all needle sizes	Topstitching with thick thread.
	Felt needle PUNCH	Needle with barbed hook	For felt work.
 ☑	Hemstitch needle 130/705 H WING 100-120	Wing-like widened needle shaft (wing)	To sew blind stitches.
 ☑	Universal double needle 130/705 H ZWI 70-100	Needle distance: 1.0/1.6/2.0/2.5/ 3.0/4.0/6.0/8.0	For visible hems in stretch fabrics, pintucks, decorative sewing.
 ☑	Stretch double needle 130/705 H-S ZWI 75	Needle distance: 2.5/4.0	For visible hems in stretch fabrics, pintucks, decorative sewing.

Illustration	Needle name	Needle description	Purpose
	Hemstitch double needle 130/705 H ZWIHO 100	Needle distance: 2.5	For special effects with hemstitch embroidery.
	Universal triple needle 130/705 H DRI 80	Needle distance: 3.0	For visible hems in stretch fabrics, decorative sewing.

Example for needle description

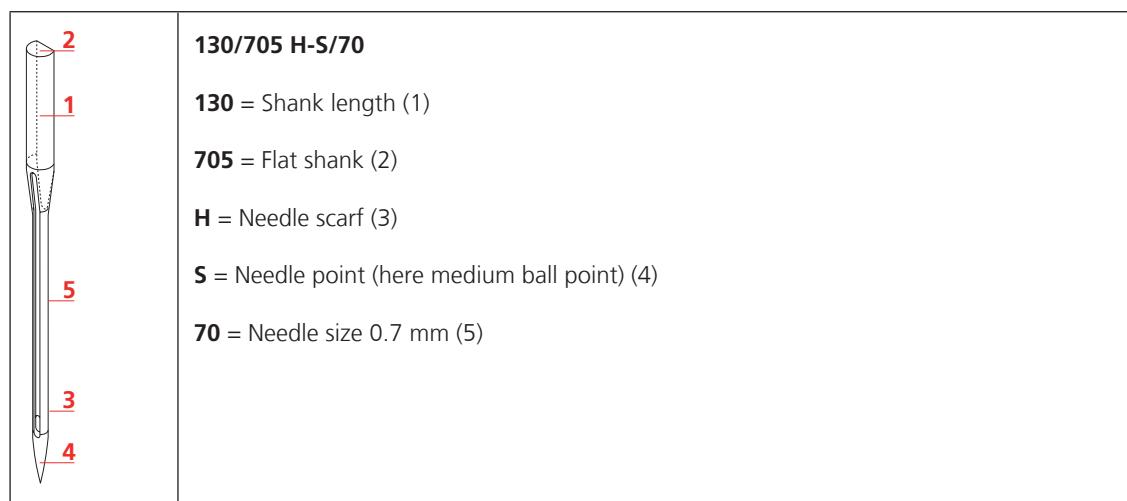The 130/705 system, which is the most common for household machines, is explained by the following picture of a Jersey/Stretch needle.





Thread selection

For a perfect sewing result, thread and fabric quality play an important role.

We recommend purchasing quality threads to achieve good sewing results.

- Cotton threads have the advantage of being a natural fiber and therefore are especially suitable for sewing cotton fabrics.
- Mercerized cotton threads have a slight sheen that is not lost with washing.
- Polyester threads have a high tensile strength and is particularly colorfast.
- Polyester threads are more flexible and are recommended where a strong and elastic seam is required.
- Rayon threads are made of natural fibers and have a brilliant sheen.
- Rayon threads are suitable for decorative stitches and achieve a more beautiful effect.

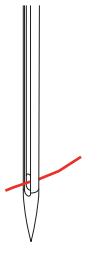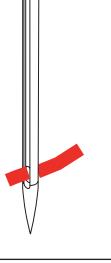Needle/thread combination

	The needle/thread combination is correct, when the thread fits perfectly into the long groove and goes easily through the needle eye. The thread can be optimally secured.
	The thread can break and skipped stitches can occur when there is too much clearance in the long groove and the needle eye.
	The thread can break and get stuck when the thread scrapes against the edge of the long groove not fit well into the needle eye optimally.

2 Sewing preparation

2.1 Before using the machine for the first time



BERNINA recommends lubricating the hook before using the machine for the first time or after a longer period of non-use. (see page 163)

By oiling the hook, the occurrence of unwanted noises in the hook area can be avoided.

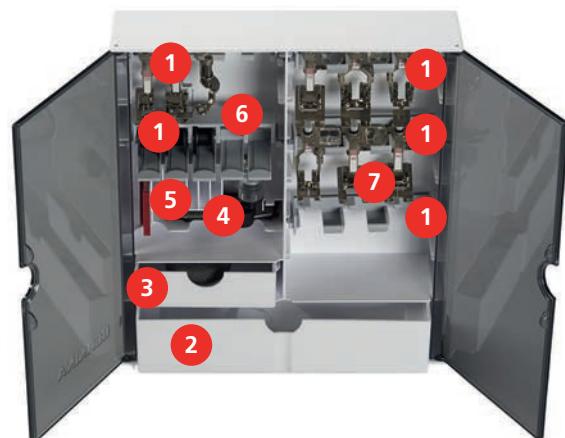
2.2 Accessory box

Accessory box free standing

- > On the back of the box, pull both extensions out until they click into place.



Storing accessories



- > Insert the holders (1) for bobbins, feet and needles.
- > Store the small parts, e.g. thread discs etc., in the drawers (2) and (3).
- > Store the Buttonhole foot with slide #3A in compartment (4).
- > Store the provided needle package in the special compartment (5).

NOTICE**Scratched sensor surfaces of the bobbin**

Malfunction of the lower thread indicator. If the sensor surfaces of the bobbins are scratched or dirty, the bobbin thread indicator will no longer detect the low thread level.

- > Always position the bobbins in the bobbin holder with the silver sensor surface to the right.

- > Insert the bobbins into the compartment (6) of the accessory box so that the silvery sensor surfaces are on the right side.
- > To remove a bobbin, press the compartment holder down.
- > Store the presser feet in the holders (7) (5.5 mm).

2.3 Connection and Switching on

Connecting the foot control

The cable of the foot control is rolled up on its underside.

- > Unroll the cable of the foot control to the desired length and fix it in the cable holders of the foot control..



- > Insert the plug of the cable into the foot control socket of the machine.



- > Place the foot control under the table.
- > If the cable is too long, roll up the excess length and fix it in the cable holders of the foot control.

Connecting the machine

To ensure safe operation of the machine, only the supplied mains cable may be used. The supplied power cable is designed for the voltage range applicable in the country of use. If the machine is to be used in a country other than the country of origin, the power cable suitable for that country must be obtained from the Authorized BERNINA dealer.

The power cable for USA and Canada has a polarized plug (one blade wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit into the outlet, turn the plug upside down and plug it in. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

- > Insert the device connector of the power cable into the machine's power cable connection.



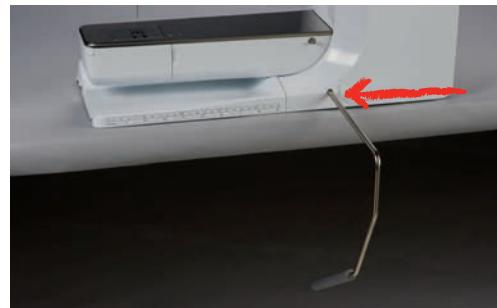
- > Insert the power plug of the power cable into the socket.

Attaching the knee lifter of the Free Hand System



The lateral position of the knee lifter can be adjusted by your local BERNINA Dealer if required.

- > Insert the knee lifter into the opening at the front side of the machine.
> Adjust the sitting height so that the knee lifter can be operated with the knee.



Fixing the touchscreen pen

- > Store the touchscreen pen at the magnet holder.



Switching the machine on

- > Set the Power Switch to «I».



2.4 Foot control

Regulating the speed via the foot control

Via the foot control the speed can be adjusted infinitely variable.

- > Press the foot control down carefully to start the machine.
- > To sew faster, press the foot control harder.
- > Release the foot control to stop the machine.



Raising/Lowering the needle

- > Sink the heel back on the foot control to raise/lower the needle.



2.5 Spool pin

Swiveling spool pin

Installing the spool holder



With metallic or other special threads, it is recommended to use the swiveling spool pin.

The swiveling spool holder is necessary when several threads are sewn and it can also be used for bobbin winding while sewing.

- > Swivel the spool holder up as far as it will go.



Inserting foam pad and thread spool

The foam pad prevents the thread from getting hooked at the swiveling spool holder.

- > Place the foam pad on the swiveling spool holder.
- > Place the thread spool on the spool holder.



Horizontal spool pin

Placing the foam pad, the thread spool and the spool disc

The spool disc provides an even unwinding of the thread from the thread spool. The spool disc is only used with the horizontal spool pin.

- > Place the foam pad on the spool pin.
- > Place the thread spool on the spool pin.

- > Position the appropriate spool disc on the spool pin so that there is no space between the spool disc and the thread spool.



Using a spool net

The spool net provides an even unwinding of the thread from the thread spool and prevents the thread from knotting and breaking. The spool net is only used with the horizontal spool holder.

- > Pull the spool net over the thread spool.



2.6 Feed dog

Adjusting the feed dog

- > To lower the feed dog, push the button «Feed Dog Up/Down».



- > To raise the feed dog, push the button «Feed Dog Up/Down» again.

2.7 Slide-on table

Using the slide-on table

The Slide-on Freearm Extension Table, attached to the freearm, enables the available sewing area to be extended.

- > Raise the needle.
- > Raise the presser foot.
- > Switch off the machine and disconnect it from the power supply.

- > Push the Slide-on Freearm Extension Table from the left to the right over the freearm until it engages.



- > To remove the slide-on table, press the button at the table down and pull the slide-on table over the free arm to the left.



2.8 Presser foot

Adjusting the presser foot position via the knee lifter of the Free Hand System

- > Adjust the sitting height so that the knee lifter can be operated with the knee.
- > Push the knee lifter with the knee to the right to raise the presser foot.



- Simultaneously the feed dog is lowered and the thread tension is released.
- > Release the knee lifter slowly to lower the presser foot.

Adjusting the presser foot position via the button «Presser foot up/down»



- > To raise the presser foot, push the button «Presser Foot Up/Down».
- > To lower the presser foot, push the button «Presser Foot Up/Down» again.

Changing the presser foot

- > Raise the needle.
- > Raise the presser foot.
- > Switch the machine off and disconnect it from the power supply system.

- > Push the clamping lever up.



- > Remove the presser foot.
- > Guide the new presser foot upwards over the cone.
- > Press the clamping lever down.

Selecting the presser foot in the User Interface

After changing the presser foot, a check can be performed to determine whether it is suitable for the selected stitch pattern. Additionally, alternative presser feet are displayed, which are available for the selected stitch pattern.

- > Switch the machine on.
- > Select a stitch pattern.
- > Tap «Presser foot indicator / presser foot selection».



- > To display all suitable presser feet for the selected stitch pattern, tap «Optional Presser Feet».



- > Select the attached presser foot.
 - When the selected presser foot is suitable, sewing can start.
 - If the selected presser foot is not suitable for the selected stitch pattern, it can still be selected but the machine is automatically prevented from starting. An error message is displayed. If an incorrect presser foot is selected, the sewing stitch is displayed in red in the sewing stitch preview.



Adjusting the presser foot pressure



The presser foot pressure is designed to adjust the pressure of the presser foot optimally to the fabric thickness. When working with thick fabrics, it is recommended to reduce the presser foot pressure. This provides the advantage that the presser foot is slightly lifted so that the fabric can be moved more easily. When working with thin fabrics, it is recommended to increase the presser foot pressure. This provides the advantage that the fabric cannot be moved too easily under the presser foot.



- > Tap «Presser Foot Pressure».
- > Adjust the Presser Foot Pressure.

2.9 Needle and stitch plate

Changing the needle

- > Raise the needle.
- > Switch the machine off and disconnect it from the power supply system.
- > Remove the presser foot.
- > Loosen the fixing screw of the needle using the screwdriver gray Torx.



- > Pull the needle down.
- > Hold the new needle with the flat side to the back.
- > Insert the needle as far as it will go.
- > Tighten the fixing screw of the needle using the screwdriver gray Torx.



Selecting the needle in the User Interface

After changing the needle, you can check whether this can be used with the selected stitch plate.

- > Tap «Needle Selection».
- > Select the fitted needle.



- When the selected needle matches the selected presser foot, sewing can be started. If the selected needle does not match the selected presser foot, there will be an error message when starting the machine and the machine will not sew.

Selecting needle type and needle size

Convenient memory function: To prevent a loss of information, the needle type and the needle size can be saved additionally on the machine. The saved needle type and the saved needle size can be checked at any time.



- > Tap «Needle Selection».
- > Tap «Needle Information».
- > Select the needle type (1) of the fitted needle.
- > Select the needle type (2) of the fitted needle.



Adjusting the needle position up/down



- > To lower the needle, push the button «Needle Up/Down».
- > To raise the needle, push the button «Needle Up/Down» again.

Adjusting the needle position left/right

There is a total of 11 needle positions. The needle position is indicated by the needle position number in the display.

- > To position the needle position to the left, push the button «Needle left» (1).
- > To position the needle position to the right, push the button «Needle right» (2).



Needle stop up/down (permanent)



- > To set the needle stop position permanently, tap «Needle Stop Up/Down».
 - The machine stops with needle position down as soon as the foot control is released or the button «Start/Stop» has been pushed.
- > Tap «Needle Stop Up/Down» again.
 - The machine stops with needle position up as soon as the foot control is released or the button «Start/Stop» has been pushed.

Changing the stitch plate

The stitch plate is marked with vertical, horizontal and diagonal lines in millimeters (mm) and inches (inch). These markings are helpful for sewing or precise top-stitching.

Prerequisite:

- The feed dog is lowered.
- The machine is switched off and disconnected from the power supply.
- The needle and presser foot are removed.
- > At the marking on the rear of the stitch plate, push the stitch plate downwards until it tips.



- > Remove the stitch plate.
- > Place the openings of the new stitch plate above the corresponding guide pins and press down until it clicks into place.

Selecting the stitch plate in the User Interface

After changing the stitch plate, you can check whether this can be used with the selected needle.

- > Tap «Stitch Plate Selection».
- > Select the previously fitted stitch plate.



- If the selected stitch plate is suitable to be used in combination with the needle, sewing can begin.
- If the selected stitch plate is not suitable to be used in combination with the needle, an error message is displayed and starting the machine is automatically prevented.

2.10 Threading

Threading the upper thread

Prerequisite:

- The needle and the presser foot are raised.
- The machine is switched off and disconnected from the power supply system.
- > Place the foam pad on the spool holder.
- > Place the thread spool on the spool holder so that the thread unwinds clockwise.
- > Add the appropriate spool disc.
- > Guide the thread in direction of the arrow through the rear thread guide (1) and hold the thread with the hands so that it is taut and can be inserted into the thread tension.
- > Guide the thread in direction of the arrow through the thread tension (2).

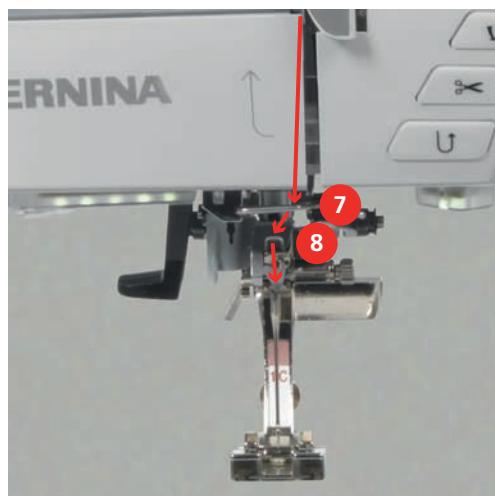


- > Guide the thread downwards (3) around the thread take-up lever cover (4).
- > Guide the thread upwards and insert into the thread take-up lever (5).

> Guide the thread downwards again (6).




> Guide the thread through the guides (7/8) above the presser foot.




> Switch the machine on.

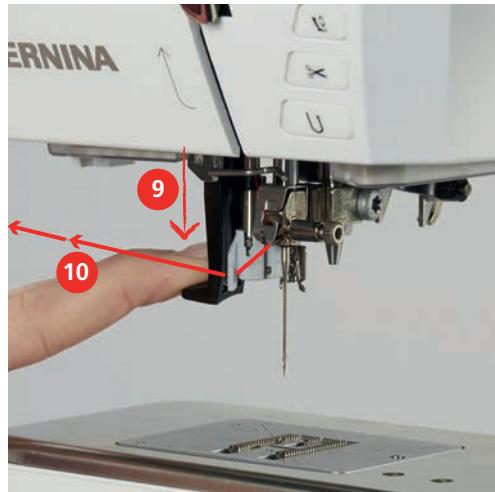
- > Press the semi-automatic threader lever (9) slightly down, keep pressed and pull the thread to the left beneath the gray threader hook (10).



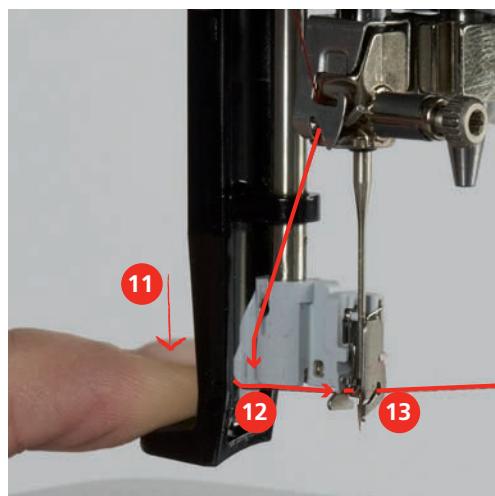- > Guide the thread around the gray threader hook from the left to the right (12).
- > Press the threader lever down as far as it will go (11) and then pull the thread from the left to the right (12) through the threader slot (13) until it hooks into the small wire hook.



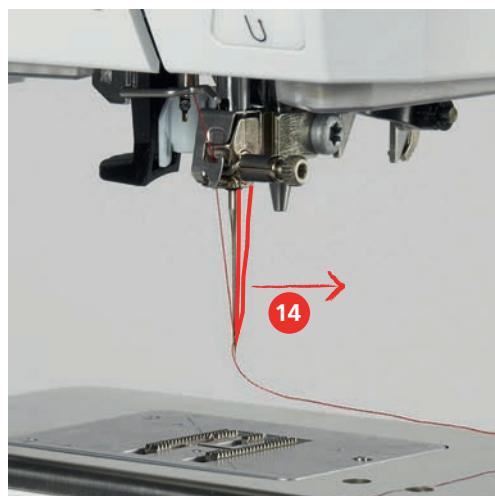- > Release the lever and the thread simultaneously to thread.
- > Pull the thread loop (14) to the back.



- > Pull the thread beneath the presser foot from back to front over the thread cutter (15) and cut.



Threading the double needle

Prerequisite:

- The double needle is inserted.
- > Guide the first thread in direction of the arrow on the right side of the tension disc (1).
- > Guide the second thread in direction of the arrow on the left side of the tension disc (1).



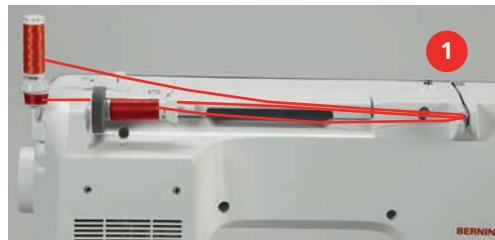
- > Guide the first and the second thread to the thread guide above the needle.
> Thread the first thread manually into the right needle.
> Thread the second thread manually into the left needle.



Threading the triple needle

Prerequisite:

- The triple needle is inserted.
- > Place the foam pad, the thread spool and the appropriate spool disc on the spool holder.
- > Place the filled bobbin on the swiveling spool holder.
- > Fit the appropriate thread disc.
- > Place the thread spool.
- > Thread the 3 threads up to the upper thread guide.



- > Guide 2 threads past the thread tension discs (1) on the left and to the thread guide above the needle.
- > Guide 1 thread past the thread tension discs (1) on the right and to the thread guide above the needle.
- > Thread the first thread into the left needle manually.
- > Thread the second thread into the center needle manually.
- > Thread the third thread into the right needle manually.

Winding the bobbin thread



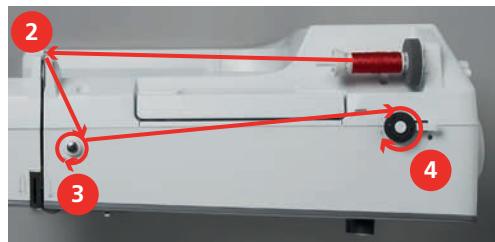
The bobbin thread can be wound while embroidering if the swiveling spool holder is used for winding.

Prerequisite:

- The foam pad, the thread spool and the appropriate spool disc are fitted.
- > Place the empty bobbin on the Winding Unit (1) so that the silvery sensor surface is down.



- > Guide the thread to the left into the rear thread guide (2).
- > Guide the thread around the bobbin winder pretension clockwise (3).
- > Wind the thread clockwise 2 – 3 times around the empty bobbin (4).



- > Pull the excess thread over the thread cutter at the engaging lever (5) and cut.



- > Push the engaging lever (6) towards the bobbin.

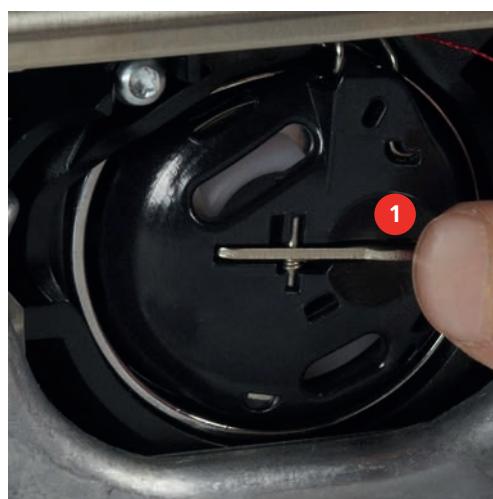


- The machine winds and the display to wind the bobbin appears.
- > Set winding speed.
- > To stop the winding process, the engaging lever must be pushed to the right.
- > Push the engaging lever towards the bobbin again to continue the winding process.
 - As soon as the bobbin is full, the machine stops the winding process automatically.
- > Remove the bobbin and cut the thread using the thread cutter at the engaging lever.

Threading the bobbin thread

Prerequisite:

- The needle is raised.
- The machine is switched off and the bobbin cover is opened.
- > Press the bobbin case release at the bobbin case (1).



- > Remove the bobbin case.
> Remove the bobbin from the bobbin case.

- > Insert the new bobbin so that the silvery sensor surface is facing the back of the bobbin case.



- > Pull the thread into the slot (2) from the left.



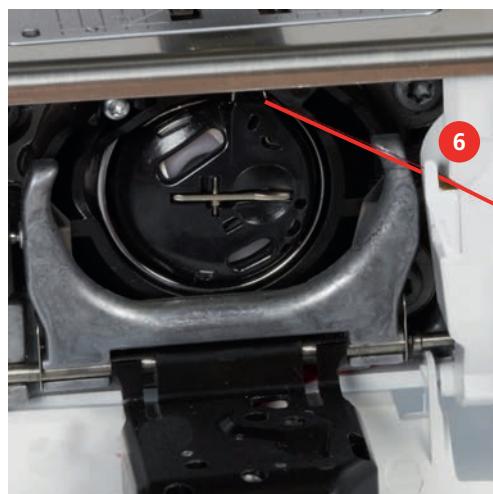
- > Pull the thread to the right under the spring (3), then lead the thread under the two thread guides (4) and pull upwards.



- > When inserting into the machine, hold the bobbin case so the thread guide (5) points upwards.



- > Insert the bobbin case.
- > Press onto the center of the bobbin case until it engages.
- > Pull the thread through the thread cutter (6) and cut.



- > Close the bobbin cover.

Indicating fill level of bobbin thread

When the fill level of the bobbin thread is low, an animation appears in the icon «Bobbin Thread» to indicate that the bobbin thread is about to run out.

- > To thread the bobbin thread according to the animation, tap, «Bobbin Thread».



3 Setup Program

3.1 Sewing settings

Adjusting the upper thread tension

Alterations of the upper thread tension in the Setup Program affect all stitch patterns. Individual alteration of the upper thread tension can also be made for currently selected stitches.



- > Tap «Setup Program».



- > Tap «Sewing settings».



- > Tap «Upper Thread Tension».
- > Adjust the upper thread tension.

Adjusting the maximum sewing speed

You can use this function to reduce the maximum speed.



- > Tap «Setup Program».



- > Tap «Sewing settings».



- > Tap «Maximum Sewing Speed».
- > Set the maximum sewing speed.

Programming the securing stitches

If the function is switched on, at the start of the pattern, 4 securing stitches are automatically sewn after the thread cut.



- > Tap «Setup Program».



- > Tap «Sewing settings».



- > Tap the switch again to deactivate the securing stitches.
- > Tap the switch again to activate the securing stitches.

Adjusting the hovering height of the presser foot

The hovering height of the presser foot can be adjusted according to the fabric thickness from 0 to maximal 7 mm.



> Tap «Setup Program».



> Tap «Sewing settings».



> Tap «Programming buttons and icons».



- > Tap «Programming the Hovering Height of the presser foot».
- > To adjust the distance between the fabric and the presser foot.

Programming the button «Pattern end»

The presser foot can be positioned, the thread cut and the automatic securing can be programmed.



> Tap «Setup Program».



> Tap «Sewing settings».



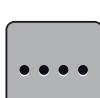
> Tap «Programming buttons and icons».




> Tap «Programming the button Pattern end».



> To sew 4 securing stitches in place, tap «Securing Stitches».



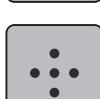- > To program subsequent securing stitches, tap «Securing stitches in close succession».
- > To program the number of subsequent securing stitches, tap «Plus» or «Minus».



> To program 4 securing stitches in place, tap «Securing stitches in place».



- > To deactivate the automatic thread cut after securing, tap «Automatic Thread Cutter».
- > To activate the automatic thread cut after securing, tap «Automatic Thread Cutter» again.



- > To keep the presser foot in lowered position, tap «Lift the presser foot».
- > To raise the presser foot after securing, tap «Lift the presser foot» again.



- > To deactivate the automatic securing, tap «Securing Stitches».
- > To activate the automatic securing, tap «Securing Stitches» again.

Programming the button «Thread cutter»

The automatic securing can be programmed before the thread cut takes place.



- > Tap «Setup Program».



- > Tap «Sewing settings».



- > Tap «Programming buttons and icons».



- > Tap «Programming the button Thread cutter».



- > To sew 4 securing stitches in place, tap «Securing Stitches».



- > To program subsequent securing stitches, tap «Securing stitches in close succession».
- > To program the number of securing stitches, tap «Minus» or «Plus».



- > To program 4 securing stitches in place, tap «Securing stitches in place».



- > To deactivate the automatic securing, tap «Securing Stitches».
- > To activate the automatic securing, tap «Securing Stitches» again.

Adjusting the presser foot position with needle stop down

With lowered needle, 3 different presser foot position can be selected: the presser foot lowered, the presser foot is raised to hovering position and the presser foot is raised to its maximum height.



- > Tap «Setup Program».



- > Tap «Sewing settings».



- > Tap «Programming buttons and icons».



- > Tap «Pressure foot position with Needle Stop Down».



- > Select the desired presser foot position.

Programming the button «Quick reverse»

You can choose between «Reverse sewing» and «Stitch-specific reverse sewing».



- > Tap «Setup Program».



- > Tap «Sewing settings».



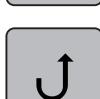
- > Tap «Programming buttons and icons».



- > Tap «Programming the button Quick reverse».



- > To set the stitch-precise reverse sewing, tap «Backstepping».



- > To set the stitch-precise reverse sewing, tap «Permanent Quick Reverse».

Programming the button «Securing»

The number and type of securing stitches can be programmed.



- > Tap «Setup Program».



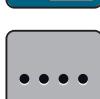
- > Tap «Sewing settings».




- > Tap «Programming buttons and icons».



- > Tap «Programming the button Securing».



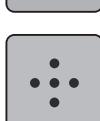- > To program subsequent securing stitches, tap «Securing stitches in close succession».
- > To program the number of securing stitches, tap «Minus» or «Plus».



- > To program 4 securing stitches in place, tap «Securing stitches in place».

3.2 Embroidery settings

Adjusting the upper thread tension

Changes to the upper thread tension in the Setup Program affect all of the embroidery motifs.



- > Tap «Setup Program».



- > Tap «Embroidery settings».



- > Tap «Adjusting the upper thread tension».
- > Adjust the upper thread tension.

Adjusting the maximum embroidering speed

You can use this function to reduce the maximum speed.



- > Tap «Setup Program».



- > Tap «Embroidery settings».



- > Tap «Maximum Embroidery Speed».
- > Set the maximum sewing speed.

Centering or opening embroidery motifs in the original position

When the embroidery motif is opened on the machine, it is always centered to the embroidery hoop. If you want the embroidery motif to be opened in its original position (defined by the BERNINA embroidery software), the function «Centering the embroidery motif» must be activated.



- > Tap «Setup Program».



- > Tap «Embroidery settings».



- > Tap «Centering the embroidery motif».



- > Tap the switch in the right section.
 - A previously moved embroidery motif which has been saved in the new position is opened in the saved position after selecting.
- > Tap the switch in the right section again.
 - The embroidery motif is centered to the embroidery hoop.

Calibrating the embroidery hoop

The calibration of the embroidery hoop is the coordination of the needle to the center of the embroidery hoop.

Prerequisite:

- The Embroidery Module is connected and the embroidery hoop with the appropriate embroidery template is attached.



> Tap «Setup Program».



> Tap «Embroidery settings».



> Tap «Calibrating the embroidery hoop».
> Select the desired embroidery hoop and follow the instructions in the display.



> To delete the current calibration, tap «Delete» (1).
> Center the needle via the arrow icons on the display.



Entering the fabric thickness

If the fabric thickness is more than 4 mm as for e.g. toweling, it is recommended to select 7.5 mm or 10 mm. The thicker the fabric, the slower the embroidery speed of the machine. When the machine is switched off, the alterations are reset to the basic setting 4 mm.



> Tap «Setup Program».



> Tap «Embroidery settings».



> Tap «Entering the fabric thickness».
> Select fabric thickness.

Activating/Deactivating the function thread away

To bring up the thread end after cutting and to pull it out of the fabric, the function must be activated. For embroidery motifs with long stitches it is recommended to deactivate the function Thread Away. If the distance between the presser foot and the embroidery hoop is too small, the function will not be carried out.



- > Tap «Thread cut settings».



- > To deactivate the automatic thread cut before changing a thread, tap the switch in the upper section of the display (1).
- > To activate the automatic thread cut before changing a thread, tap the switch in the upper section of the display (1) again.
- > Tap the switch in the middle section of the display (2) so that the machine will stop after about 7 stitches and the remaining thread can be cut manually.
- > Tap the switch in the middle section of the display (2) again and the machine won't stop for a manual thread cut.
- > To adjust the length from where the connecting stitches are cut, tap «Minus» or «Plus» (3).

Changing the measuring unit



The measuring unit in the Embroidery Mode can be changed from mm to inch. The standard setting is in mm.

- > Tap «Setup Program».



- > Tap «Embroidery settings».



- > Tap «Measuring unit».
- > To display the measurements in the Embroidery Mode in inch, tap «inch».
- > To display the measurements in the Embroidery Mode in mm, tap «mm».

3.3 Selecting personal settings



- > Tap «Setup Program».
- > Tap «Personal Settings».
- > Select the required display color and background.

- > Tap the text box above the color settings.



- > Enter the welcome message.
 - > To use upper-case letters, tap «Upper Case Characters» (standard setting).
 - > To use lower-case letters, tap «Lower Case Characters».
 - > To use figures and mathematical symbols, tap «Numbers and Mathematical Characters».
 - > To use special characters, tap «Special Characters».
 - > Tap the text box above the keyboard to delete the entered text completely.
 - > To delete single syllables of the entered text, tap «Delete».
 - > Tap «Confirm».

3.4 Monitoring functions

Activating the upper thread indicator



- > Tap «Monitoring Functions».
 - > Tap the switch in the upper s
 - > Tap the switch again to activ

Activating the bobbin thread indicator



- > Tap «Monitoring Functions».

 - > Tap the switch in the lower section of the display to deactivate the bobbin thread indicator.
 - > Tap the switch again to activate the bobbin thread indicator.

3.5 Activating the audio signals



> Tap «Setup Program».



> Tap «Set Sound».

> To switch all audio signals on or off, tap (1).



> To switch off the sound when selecting a stitch pattern, tap the corresponding «Switch Sounds On/Off» in area (2).

> To switch on the sound when selecting a stitch pattern, tap the corresponding in area (2) «1 – 4».



> To switch off the sound for selecting functions, tap the corresponding «Switch Sounds On/Off» in area (3).

> To switch on the sound for selecting functions, tap the corresponding in area (3) «1 – 4».



> To deactivate the sound of the beeper when using the BSR Modes, tap «Switch Sounds On/Off» in the sector (4).



3.6 Machine settings

Selecting a language

The User Interface can be programmed in different languages according to the customer's wish because BERNINA provides a wide range of international languages for the customers. Via firmware updates additional languages for the User Interface can be provided.

> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Language Selection».

> Select a language.



Adjusting the brightness of the display

The brightness of the display can be set to meet your individual needs.



- > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Screen Settings».

- > Adjust the brightness of the display in the upper section of the screen.

Adjusting the sewing light

You can set the brightness of the sewing light to meet your individual needs.



- > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Screen Settings»

- > Adjust the brightness of the sewing light in the lower section of the screen



- > Tap the switch to switch the sewing light off

- > Tap the switch again to switch the sewing light on.

Calibrating the display

Please find further information on this topic in the chapter attachment below troubleshooting at the end of the instruction manual.



- > Tap «Setup Program».

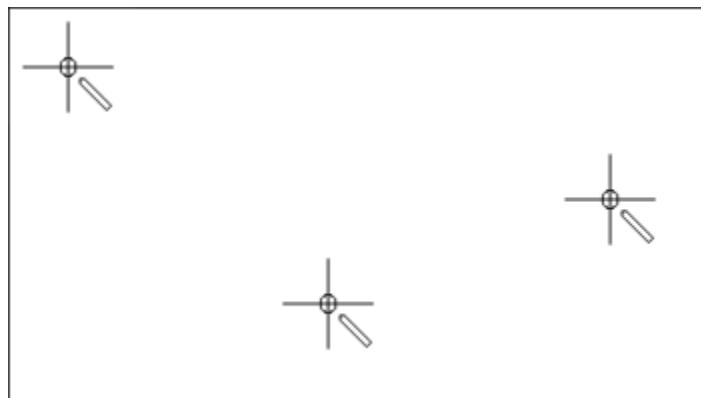


- > Tap «Machine Settings».



- > Tap «Calibrate Screen»

- > Touch the crosses in sequence using the touchscreen pen.



Back to default setting

ATTENTION: Using this function will delete all individually made settings.



- > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Factory Setting».



- > To restore all default settings for sewing, tap «Default setting sewing» and confirm.



- > To restore all default settings for embroidering, tap «Default setting embroidering» and confirm.



- > To restore all default settings, tap «Default setting machine», confirm and restart the machine.

Deleting user data

Motifs which are not needed anymore can be deleted to create space for new motifs.



- > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Factory Setting».



- > To delete all data from the Personal Memory, tap «Delete data from own storage medium» and confirm.



- > To delete all embroidery motifs from the Personal Memory, tap «Delete personal embroidery motifs» and confirm.

Deleting motifs on the BERNINA USB Stick

When motifs which won't be needed anymore are saved on the BERNINA USB Stick, the stick can be connected to the machine and the data can be deleted.

- > Insert the BERNINA USB stick into the USB port of the machine.
 - > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Factory Setting».



- > Tap «Deleting USB Stick».



- > Tap «Confirm».



Calibrating the Buttonhole foot No. 3A

The Buttonhole foot with slide #3A is calibrated to the machine and they should only be used both together.

Prerequisite:

- The Buttonhole foot with slide #3A is fitted.
 - The needle is not threaded.



- > Tap «Machine Settings».



- > Tap «Maintenance/Updates».



- > Tap «Calibrating the Buttonhole foot #3A».



- > To start the calibration, push the «Start/Stop» button.



Packing the embroidery module

To pack the embroidery module into the original packaging without moving the embroidery arm manually, the embroidery arm needs to be brought to its packing position.

Prerequisite:

- The embroidery module is connected with the machine.



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Maintenance/Updates».



> Tap «Packing position».
> Follow the instructions on the display.

Reviewing the total number of stitches

The total number of stitches by the machine and the number of stitches since the last maintenance carried out by a specialist BERNINA dealer are displayed.



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Information».



> Tap «Machine Data».

Registering details of the dealer

The contact details for your specialized BERNINA dealer can be entered.



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Information».



> To enter the dealer data, tap «Dealer Data».



> To enter the name of your specialized BERNINA dealer, tap «Name».



- > To enter the address of the specialized BERNINA dealer, tap «Address».



- > To enter the telephone number of the specialized BERNINA dealer, tap «Phone Number».



- > To enter the website or e-mail address of the specialized BERNINA dealer, tap «E-mail Address».

Saving Service data

The service data regarding the current status of the machine can be saved on a USB stick and consequently provided to the specialized BERNINA dealer.



- > Insert a USB stick which provides enough free capacity into the USB port of the machine.
 - > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Information».



- > Tap «Service Data».
 - > Tap «Export the service data».
 - The icon «Export the service data» is outlined in white.
 - > If the white frame is no longer displayed, remove the USB stick

4 System settings

4.1 Calling up the Tutorial

The Tutorial gives information and explanations, covering various aspects of sewing, embroidering and the different stitches.



- > Tap «Tutorial».
- > Select the desired topic in order to view information.

4.2 Calling up the Creative Consultant

The Creative Consultant provides information about decision support concerning sewing projects. After entering the fabric and the desired sewing project, suggestions for suitable needles, presser feet etc. are displayed.



- > Tap «Creative Consultant».
- > Select the fabric on which you want to sew.
- > Select the sewing project.

4.3 Calling up the Embroidery Consultant

The Embroidery Consultant informs you about decision support for embroidery projects. After entering the desired embroidery project and the fabric, suggestions for the suitable needle and the suitable embroidery foot are displayed.



- > Tap «Embroidery Consultant».
- > Select the embroidering project.
- > Select the fabric on which you want to embroider.
- > Tap «Confirm».
 - If an embroidery motif has already been selected, a warning appears stating that this will be overwritten.

4.4 Calling up the Help



- > Touch the window in the display where help is needed.
- > To start the Help Mode, tap «Help» twice.
- > Tap the icon in the display where help is needed.

4.5 Using eco mode

During a longer interruption of work the machine can be set into a power save mode. The power save mode also serves as a child safety feature. Nothing can be selected in the display and the machine cannot be started.



- > To activate the power save mode, tap «eco Mode».
 - The display goes to sleep. The power consumption is reduced and the sewing light is off.
- > To deactivate the power save mode, tap «eco Mode» again.

4.6 Cancelling any alterations with «clr»

Any alterations to motifs can be reset to basic setting. Exceptions are saved motifs which have been filed in the personal memory and monitoring functions.



- > Tap «Clear Settings».

5 Creative sewing

5.1 Overview selection menu sewing



- | | | | |
|---|-----------------------|---|-------------------|
| 1 | «Practical Stitches» | 5 | «Quilt Stitches» |
| 2 | «Decorative Stitches» | 6 | «Personal Memory» |
| 3 | «Alphabets» | 7 | «History» |
| 4 | «Buttonholes» | | |

Selecting a stitch pattern

- > Select a stitch pattern, alphabet or buttonhole.
- > To increase the view, tap «Increasing/Decreasing the display size» (1).



- > To decrease the view, tap «Increasing/Decreasing the display size» again.
- > To select the stitch pattern via the stitch number entry, tap «Stitch Pattern Selection via Number».

5.2 Regulating the speed

The sewing speed can be adjusted infinitely variable with the slide.

- > Move the slide to the left to reduce the sewing speed.
- > Move the slide to the right to increase the sewing speed.

5.3 Adjusting the upper thread tension

The default setting of the upper thread tension is set automatically as soon as a stitch pattern or an embroidery motif is selected.

The upper thread tension is set optimally at the BERNINA factory and the machine has been tested. Metrosene-/Seralon thread size 100/2 (Company Mettler, Switzerland) is used for upper and bobbin thread.

When of using other types of sewing or embroidery threads, the optimal tension may vary. Therefore it may be necessary to adjust the upper thread tension according to the sewing or embroidering project as well as the desired stitch pattern or the embroidery motif individually.

The higher the upper thread tension, the tighter the upper thread which means that the bobbin thread is pulled up to the top of the fabric. When the upper thread tension is low, the upper thread is less tightened which means that the bobbin thread is pulled up less.

Alteration to the upper thread tension affect the currently selected stitch pattern or embroidery motif.

Permanent alterations of the upper thread tension for the Sewing Mode (see page 48) and for the Embroidering Mode (see page 52) can be made in the Setup Program.

Prerequisite:

- The upper thread tension has been altered in the setup program.
- > Tap «Upper Thread Tension».
- > Adjust the upper thread tension.



- > Tap the yellow-outlined icon on the right side to reset the alterations to the default setting.
- > Tap the yellow-outlined icon on the left side to reset the alteration to default setting in the **Setup Program**.

5.4 Editing stitch patterns

Changing the stitch width

- > Turn the «Upper Multi-function knob» to the left to narrow the stitch width.
- > Turn the «Upper Multi-function knob» to the right to widen the stitch width.
- > To call up further setting options, tap the icon «Stitch width» (1).



Changing the stitch length

- > Turn the «Lower Multi-function knob» to the left to shorten the stitch length.
- > Turn the «Lower Multi-function knob» to the right to elongate the stitch length.

- > To call up other setting options, tap «Stitch length» (1).



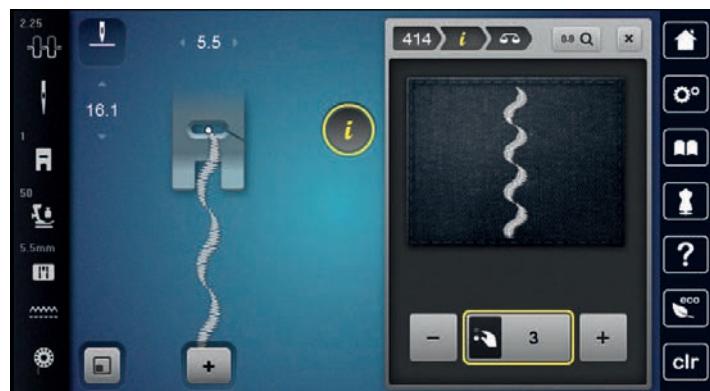
Correcting the balance

Different fabrics, threads and stabilizers can affect the programmed stitch patterns so that they cannot be sewn out correctly. The electronic balance can correct these deviation and the stitch pattern can be adjusted optimally to the selected fabric.

- > Select a stitch pattern or alphabet.
- > Sewing stitch pattern.
- > Tap «i-Dialog».



- > Tap «Balance».
 - A preview of the stitch pattern is displayed.



- > To correct the longitudinal direction of the stitch pattern, turn the «Lower Multi-function knob» until the preview of the stitch pattern matches the stitch pattern sewn on the fabric.
- > Altered Balance settings can be saved for each stitch in the «Personal Memory» .
- > Altered Balance settings only remain valid until the «Clear Settings» is pushed or the machine is switched off.



Programming pattern repeat

Stitch patterns can be repeated up to 99 times.

- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».





- > Tap «Pattern Repeat».
- > Enter the required number of stitch patterns.
- > Tap «Confirm».



Mirror image of stitch patterns



- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



- > To mirror the stitch pattern from left to right, tap «Mirror Image Left/Right».



- > To mirror the stitch pattern contrary to the sewing direction, tap «Mirror Image Up/Down».

Editing stitch pattern length



The stitch patterns can be lengthwise extended or shortened.

- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



- > Tap «Edit Stitch Pattern Length».
- > Adjust the stitch pattern length.

Sewing stitch patterns using the triple stitch



The stitch pattern can be sewn three times for a more attractive result. Not all stitch patterns can be sewn using the triple stitch.

- > Select a stitch pattern.
- > Tap «i-Dialog».



- > Tap «Triple Stitch».

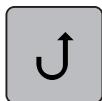
Quick reverse



- > Select a stitch pattern or alphabet.
- > To switch immediately to sewing in reverse when pushing the button «Quick Reverse», select Needle Stop Down (permanent).
- > Program needle stop up (permanent) to sew another stitch forward before the machine switches to reverse sewing.
- > Push and hold the button «Quick Reverse».

Permanent Quick reverse

- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



- > To sew permanently in reverse, tap «Permanent Quick Reverse».
- The machine sews permanently in reverse until the icon «Permanent Quick Reverse» is tapped again.

Backstepping

- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



- > To backstep the last 200 stitches, tap «Backstepping».

5.5 Combining stitch patterns

Overview Combi mode



1 «Stitch Width»

3 «Combination Mode/Single Mode»

2 «Stitch length»

4 Individual stitch pattern within the combination

Creating Stitch pattern combinations

In the Combi-mode stitch patterns and alphabets can be combined according to your wish. By combining any alphabet letters, the logo BERNINA can be created.



- > Tap «Combination Mode/Single Mode».

- > Select the desired stitch patterns.



-  > To get back to the Single Mode, tap «Combination Mode/Single Mode» again.

Saving a stitch pattern combination

To use an individually created stitch pattern combinations again, they can be saved in the folder «Personal Memory».

- > Create a stitch pattern combination.
- > Tap «Personal Memory».



-  > Tap «Save stitch pattern».
-  > To save the stitch pattern combination, tap «Confirm».

Loading a stitch pattern combination

-  > Tap «Combination Mode/Single Mode».
-  > Tap «Personal Memory».
-  > Tap «Loading a stitch pattern combination».
- > Select a stitch pattern combination.

Overwriting a stitch pattern combination

-  > Create a stitch pattern combination.
- > Tap «Personal Memory».
-  > Tap «Save stitch pattern».
- > Select the stitch pattern combination which is to be overwritten.
-  > To overwrite the stitch pattern combination, tap «Confirm».

Deleting a stitch pattern combination

- > Create a stitch pattern combination.
- > Tap «i-Dialog».



- > Tap «Edit Entire Combination».

- > Tap «Delete».

- > Tap «Confirm».

Editing a single stitch pattern

- > Create a stitch pattern combination.
- > To select a single stitch pattern, tap the desired position (1) within the stitch pattern combination.



- > To edit the single stitch pattern, tap «i-Dialog».



Deleting a single stitch pattern

Prerequisite:

- A stitch pattern combination has been created.
- > Tap the desired stitch pattern (1) within the stitch pattern combination.





> Tap «i-Dialog».



> Tap «Delete».

Adding a single stitch pattern

The new stitch pattern is always inserted **after** the selected stitch pattern.

- > Create a stitch pattern combination.
- > To select a single stitch pattern, tap the desired position (1) within the stitch pattern combination.



- > Select a new stitch pattern.

Adapting the stitch pattern length and stitch pattern width

The length and width of the individual stitch patterns in a stitch pattern combination can be adapted to the longest and widest stitch patterns in the combination.

- > Create a stitch pattern combination.
- > Tap «i-Dialog».



- > Tap «Edit Entire Combination».
- > Tap «Total Pattern Length» (1).



- > Tap «Adjust Length within Combination» (2).
 - The lengths of the stitch patterns are adapted to the length of the longest stitch pattern in the combination



- > Tap «Stitch Width» (3).



- > Tap «Edit Entire Combination» (4).
 - The widths of all of the stitch patterns are adapted to the width of the widest stitch pattern in the combination

Furthermore, the length and width of the stitch pattern combination are increased or decreased proportionally.

- > To decrease the width of the stitch pattern combination proportionally, turn the «Upper Multi-function knob» anti-clockwise.
- > To increase the width of the stitch pattern combination proportionally, turn the «Upper Multi-function knob» clockwise.
- > To decrease the length of the stitch pattern combination proportionally, turn the «Lower Multi-function knob» anti-clockwise.
- > To increase the length of the stitch pattern combination proportionally, turn the «Lower Multi-function knob» clockwise.

Mirroring a stitch pattern combination



- > Create a stitch pattern combination.
- > Tap «i-Dialog».



- > Tap «Edit Entire Combination».



- > To mirror the whole stitch pattern combination from left to right, tap, «Mirror Image Left/Right».
- > To reset the changes and revert to the default settings, tap «Mirror Image Left/Right».

Stitch pattern combination Subdivider 1

A stitch pattern combination can be subdivided into several sections. The subdivision is placed **beneath** the cursor. Only this section is sewn where the cursor is placed. To sew the next section, the cursor must be placed in the next section.



- > Create a stitch pattern combination.
- > Select the desired position within the stitch pattern combination where the stitch pattern combination is to be subdivided.
- > Tap «i-Dialog».



- > Tap «Edit Combination at Cursor Position».



- > Tap «Combination Subdivider (1)».



Stitch pattern combination Subdivider 2

A stitch pattern combination can be interrupted at various sections. The interruption is placed **beneath** the cursor.

- > Create a stitch pattern combination.
- > Select the desired position within the stitch pattern combination where the stitch pattern combination is to be interrupted.
- > Tap «i-Dialog».



- > Tap «Edit Combination at Cursor Position».



- > Tap «Combination Subdivider (2)».
- > Sew the first section and then reposition the fabric.



Securing a stitch pattern combination

- > Create a stitch pattern combination.
- > Select the desired position within the stitch pattern combination where the stitch pattern combination is to be secured.
- > Tap «i-Dialog».



- > Tap «Edit Combination at Cursor Position».



- > Tap «Securing Stitches».
 - Every single pattern of the stitch pattern combination can be secured at the start or at the end.



Programming pattern repeat

- > Create a stitch pattern combination.
- > Tap «i-Dialog».



- > Tap «Edit Entire Combination».



- > To repeat the stitch pattern combination, tap «Pattern Repeat» 1x.
 - > To repeat the stitch pattern combination up to 9x, tap «Pattern Repeat» again.
 - > To deactivate the pattern repeat, tap and hold «Pattern Repeat» or tap «Clear Settings».

5.6 Administering stitch patterns

Saving settings of stitch patterns



- > Select a stitch pattern, alphabet or buttonhole.
 - > Tap «i-Dialog».
 - > Edit the stitch, alphabet or buttonhole.



- > To save all alterations permanently, tap «Save Stitch Pattern Settings».



- > To cancel all alterations, tap «Reset Stitch Pattern».

Calling up the previously sewn stitch patterns

The 15 previously sewn stitch patterns are saved automatically and can be called up at any time.



- > To display the previously sewn stitch patterns, tap «History».
 - > Select a stitch pattern.

Saving stitch patterns in personal memory

In the folder «Personal Memory» any stitch patterns, also those which have been individually edited, can be saved.



- > Select a stitch pattern, alphabet or buttonhole.
 - > Edit the stitch pattern.
 - > Tap «Personal Memory».



- > Tap «Save stitch pattern».
 - > Select the file where the pattern is to be saved.
 - > Tap «Confirm».



Overwriting stitch patterns from the personal memory

Prerequisite:

- The stitch pattern is saved in the personal memory.
 - > Select a stitch pattern, alphabet or buttonhole.
 - > Edit the stitch pattern.
 - > Tap «Personal Memory».



- > Tap «Save stitch pattern».
 - > Select the file where the stitch pattern to be overwritten has been saved.
 - > Select the stitch pattern which should be overwritten.

-  > Tap «Confirm».

Loading stitch patterns from the personal memory

Prerequisite:

- The stitch pattern is saved in the personal memory.
- > Tap «Personal Memory».



- > Tap «Load embroidery motif».
 > Select the file where the stitch pattern has been saved.
 > Select a stitch pattern.

Deleting stitch patterns from the personal memory

Prerequisite:

- The stitch pattern is saved in the personal memory.
- > Tap «Personal Memory».



- > Tap «Delete».
 > Select the file where the stitch pattern has been saved.
 > Select a stitch pattern.
 > To delete the stitch pattern, tap «Confirm».



Saving stitch patterns on the BERNINA USB stick

On the BERNINA USB stick stitch patterns, also those which have been individually edited, can be saved.

- > Select a stitch pattern or alphabet.
 > Editing stitch patterns.
 > Tap «Personal Memory».



- > Tap «Save stitch pattern».
 > Insert the BERNINA USB stick into the USB port of the machine.
 > Tap «USB Stick».



- > Tap «Confirm».

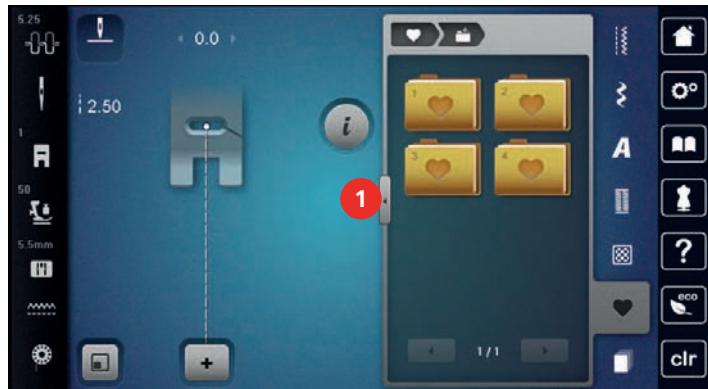
Uploading a stitch pattern from the BERNINA USB stick

- > Tap «Personal Memory».



- > Tap «Load embroidery motif».

- > Tap «Increasing/Decreasing the display size» (1).



- > Insert the BERNINA USB stick into the USB port of the machine.
- > Tap «USB Stick».
- > Select the desired stitch pattern.

Deleting stitch patterns from the BERNINA USB stick



- > Tap «Personal Memory».



- > Tap «Delete».
- > Insert the BERNINA USB stick into the USB port of the machine.
- > Select the stitch pattern which is to be deleted.
- > Tap «Confirm».



5.7 Securing

Securing with the button «Pattern end»

The «Pattern End» button can be programmed with various securing stitches.



- > Push the button «Pattern End» before sewing is started or while sewing.
 - While sewing, a stop icon indicates that the function is activated and the stitch pattern or the current combination of a stitch pattern will be secured at the end with the programmed number of stitches.



Securing via the icon «Securing»

Every single pattern of the stitch pattern combination can be secured at the start or at the end.



- > Tap «Edit Combination at Cursor Position».

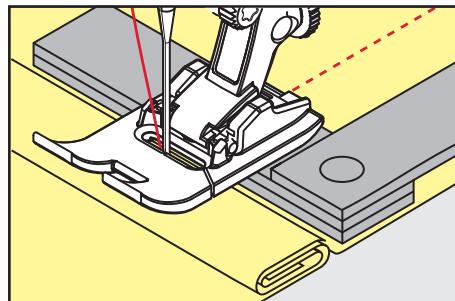


- > Tap «Securing Stitches» before sewing is started.
 - The stitch pattern/stitch pattern combination is secured with 4 stitches at the beginning.
- > Tap «Securing Stitches» while sewing.
 - The stitch pattern or the active stitch pattern of the stitch pattern combination is secured with 4 stitches at the end.


5.8 Height Compensation of uneven layers

If the presser foot is at an angle when sewing over a thick seam, the feed dog cannot grip the fabric and the sewing project cannot be sewn out properly.

- > Place 1 – 3 compensating plates as required from the back of the presser foot close to the needle to level the fabric layer.



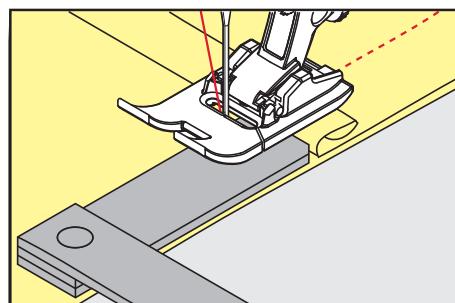- The presser foot is leveled with the sewing project.
- > Place 1 – 3 compensating plates as required from the front of the presser foot close to the needle to level the fabric layer.




- The presser foot is leveled with the sewing project.
- > Sew until the complete presser foot has passed the thick seam.
- > Remove the plates of the height compensation.

5.9 Sewing Corners

When sewing corners, only a small section of the fabric is actually on the feed dog. Therefore it cannot grip the fabric well. By means of the height compensation tool the fabric can be fed evenly.

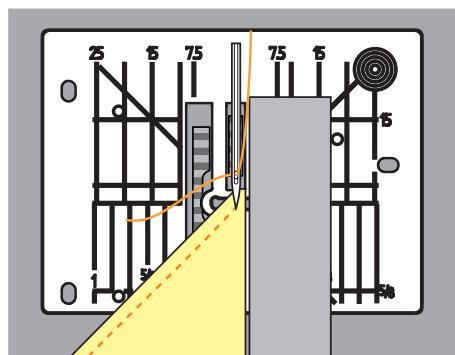- > When the fabric edge is reached, stop the sewing process with needle position down.
- > Raise the presser foot.
- > Turn the fabric and place in desired position.
- > Place 1 – 3 compensating plates as required on the right of the presser foot close to the sewing project.
- > Lower the presser foot.



- > Resume sewing until the sewing project is on the feed dog again.

6 Practical stitches

6.1 Overview Practical Stitches




Stitch patterns	Stitch number	Name	Description
	1	Straight stitch	To join seams, for topstitching and basting.
W	2	Zigzag	To finish edges, to sew elastic seams, to sew on lace inserts and elastics.
V	3	Vari-overlock	For finishing edges, sewing together and simultaneously finishing elastic fabrics.
W	4	Running stitch	For darning and reinforcing fabric edges or attaching lace or rubber tape.
И	5	Securing program	For automatic securing at the start of the seam with forward and reverse stitches.
	6	Triple straight stitch	For reinforced seams on heavy fabrics and decorative effects.
W	7	Triple zigzag	For durable seams on strong fabrics, visible hems and decorative seams.
X	8	Honeycomb stitch	For stretch fabrics and hems, including with rubber threads.
Y	9	Blind stitch	For blind hems on most fabric types and for shell edging on soft jerseys and fine fabric.
W	10	Double overlock	For simultaneously sewing together and finishing elastic fabrics.

	11	Super stretch stitch	For highly stretch open seams.
	12	Gathering stitch	For gathering with rubber threads and for flat joining seams on medium-weight fabrics.
	13	Stretch overlock	For simultaneously sewing together and finishing elastic fabrics, as well as for flat joining seams.
	14	Tricot stitch	For visible hems and seams in lingerie and sweaters and for mending tricot fabric.
	15	Universal stitch	For flat joining seams, visible hems and decorative seams in strong fabrics such as felt and leather and for attaching rubber tape.
	16	Sewn-out zigzag	For finishing and reinforcing fabric edges, for sewing on rubber tape and for decorative seams.
	17	Lycra stitch	For flat joining seams, visible hems on Lycra fabric and for stitching over seams in foundation garments.
	18	Stretch stitch	For stretchable seams and hems in woven and knitted fabrics.
	19	Reinforced overlock	For overlock seams or flat joining seams on medium-weight knit fabrics and toweling.
	20	Knit overlock	For stretchable seams and hems in woven and knitted fabric, for sewing and finishing.
	22	Simple darning program	For automatic darning in fine to strong fabrics.
	23	Reinforced darning program	For automatic darning in strong materials.
	24	Bartack program	For reinforcing pocket openings, buttonhole bars and for sewing belt loops.
=	25	Bartack program	For reinforcing pocket openings, sewing belt loops and securing seam ends.

	26	Large fly stitch	For reinforcing pocket openings, zippers and slits in medium-weight to thick fabrics.
	27	Small fly stitch	For reinforcing pocket openings, zippers and slits in fine to medium-weight fabrics.
	29	Narrow blind stitch	For blind hems and shell edging in light, fine and soft fabrics.
	30	Manual basting stitch	For work where a very long stitch length is required.
	31	Triple straight stitch with long stitch	For durable seams in strong fabrics, e.g. visible and decorative seams.
	32	Single straight stitch	As a connecting stitch in a combination for one straight stitch.
	33	Three single straight stitches	As connecting stitches in a combination for three individual straight stitches.
	34	Darning stitch	For darning together with the function "Permanent reverse sewing".

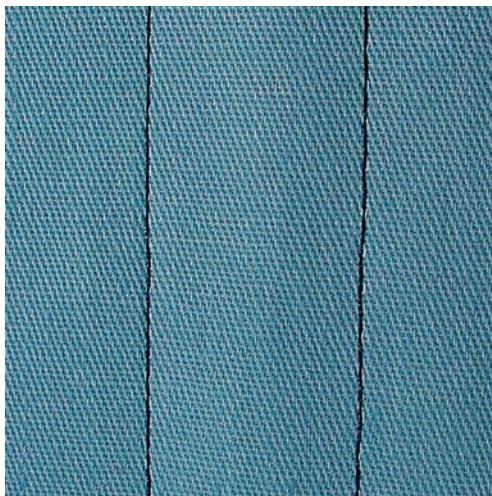6.2 Sewing straight stitch




Match the stitch length with the sewing project, such as for denim fabrics use long stitches (ca. 3 – 4 mm), for delicate fabrics use short stitches (ca. 2 – 2.5 mm). Match the stitch length with the thread size, e. g. when edgestitching with Cordonnet, use long stitches (ca. 3 – 5 mm).

Prerequisite:

- The Reverse Pattern Foot #1 is fitted.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.



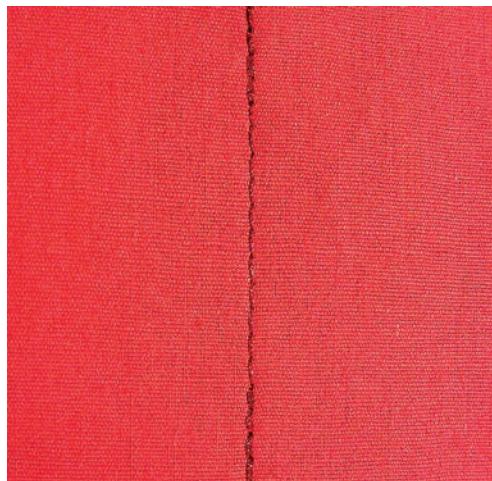6.3 Securing with the automatic Securing Program



Due to a determined number of 6 stitches sewn forwards and 6 stitches sewn in reverse, the securing is regular.

Prerequisite:

- The Reverse Pattern Foot #1 is fitted.
- > Tap «Practical Stitches».
- > Select Securing program No. 5.
- > Press the foot control.
 - The machine secures automatically.
- > Sew the seam in the desired length.
- > Push the button «Quick Reverse».
 - The machine secures automatically and stops at the end of the securing program.



6.4 Sewing in the zipper

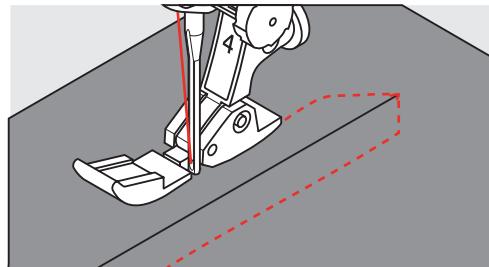


As the fabric feed can be difficult when starting to sew, it is recommended to hold the threads firmly or to pull the fabric slightly to the back for a few stitches or to sew 1 – 2 cm reverse first.

- > Fit the Reverse Pattern Foot #1.



- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Sew the seam up to where the zipper starts.
- > Sew the securing stitches.
- > Close the zipper length with long stitches.
- > Finish the seam allowances.
- > Iron the seam.
- > Open the zipper length.
- > Baste the zipper under the fabric so that the fabric folded edges meet over the center of the zipper.
- > Open the zipper a few centimeters.
- > Fit the Zipper Foot #4.
- > Move the needle position to the right.
- > Use the Free Hand System to raise the presser foot and to position the sewing project.
- > Start sewing from top left.
- > Guide the foot so that the needle stitches along the zipper coils.
- > Stop in front of the zipper pull with needle position down.
- > Raise the presser foot.
- > Close the zipper.
- > Continue to sew and stop in front of the base of the zipper with needle position down.
- > Raise the presser foot and turn the sewing project.
- > Sew across the other side of the zipper and stop with needle position down.
- > Raise the presser foot and turn the sewing project.
- > Sew the second side from bottom to top.



6.5 Sewing both sides of the zipper from bottom to top

For fabrics with pile, such as velvet, it is recommended to sew in the zipper on both sides from bottom to top.

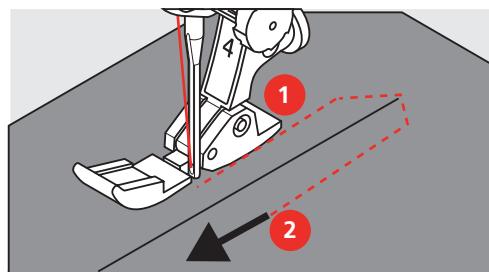


When the fabric is densely woven or hard, it is recommended to use a needle with the size 90 – 100. This results in an even stitch formation.



- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Sew the seam up to where the zipper starts.
- > Sew the securing stitches.
- > Close the zipper length with long stitches.
- > Finish the seam allowances.
- > Iron the seam.
- > Open the zipper length.
- > Baste the zipper under the fabric so that the fabric folded edges meet over the center of the zipper.
- > Fit the Zipper Foot #4.
- > Move the needle position to the right.
- > Use the Free Hand System to raise the presser foot and to position the sewing project.

- > Start sewing in the center of the seam at the end of the zipper.
- > Sew diagonally along the edge of the zipper coils.
- > Sew the first side (1) from bottom to top.
- > Stop in front of the zipper pull with needle position down.
- > Raise the presser foot.
- > Open the zipper as far as behind the presser foot.
- > Lower the presser foot and continue sewing.
- > Move the needle position to the left.
- > Sew the second side (2) in exactly the same way from bottom to top.



6.6 Sewing Triple Straight stitch

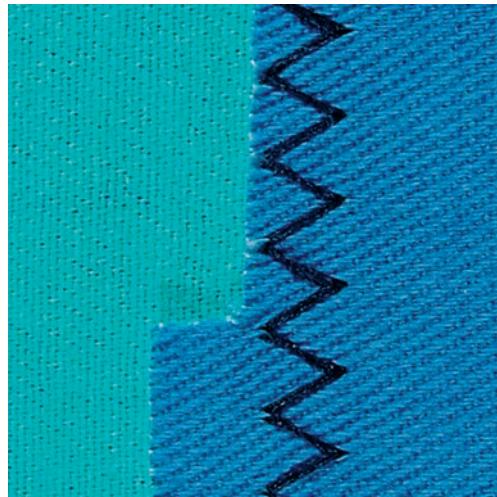


The Triple straight stitch is especially suitable for durable seams and for firm, densely woven fabrics such as denim and corduroy. It is suitable for durable seams and for firm, densely woven fabrics such as denim and corduroy. For firm or densely woven materials it is recommended to fit the Jeans Foot #8. This will help to sew denim or canvas. For decorative topstitching, the stitch length can be elongated.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Triple straight stitch No. 6.



6.7 Sewing Triple zig zag




In firm fabrics, particularly for denim fabrics, deckchair covers, awnings. Hems on items that are frequently washed. Finish the seam edges first.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Triple zigzag No. 7.



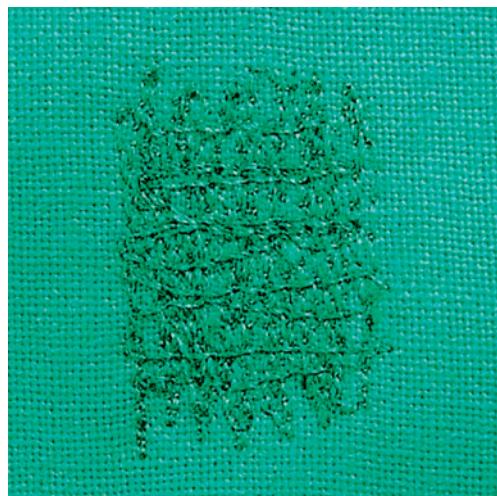6.8 Manual darning




Used for darning holes or worn areas in all fabric types.

If the thread is lying on top and a poor stitch formation results, slow down the movement of the sewing project. If there are knots on the wrong side of the fabric, move the sewing project faster. When the thread breaks, guide the sewing project more consistently.


- > Fit the Darning Foot #9.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Lower the feed dog.
- > Attach the Slide-on Freearm Extension Table.
- > Hoop the sewing project in the round embroidery hoop (optional accessory).
 - The darning area stays evenly taut and cannot be distorted.



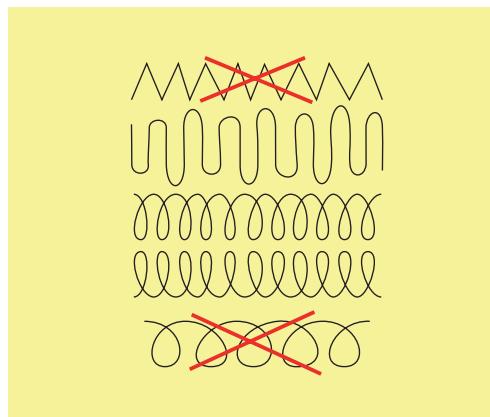
- > Sew from the left to the right, guide the fabric evenly by hand without using pressure.
- > Move in curves when changing the direction to avoid holes and thread breakage.
- > Work the edges in irregular lengths so that the thread is better spread over the fabric.



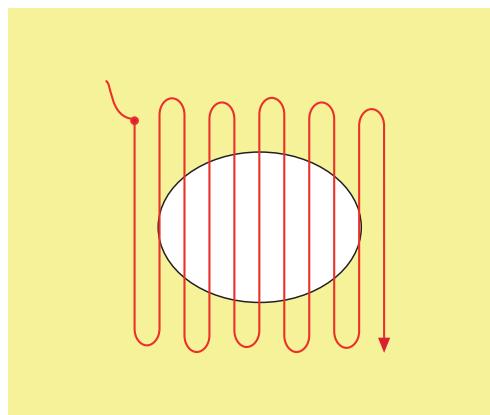- > Sew the first rows not too close together and beyond the worn area.
- > Sew the rows in irregular lengths.




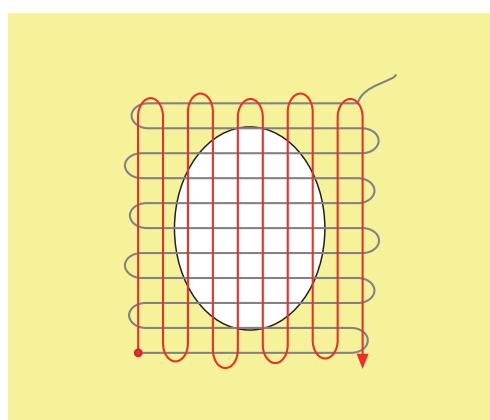- > Turn the sewing project by 90°.
- > Sew the first rows not too close.




- > Turn the sewing project by 180°.

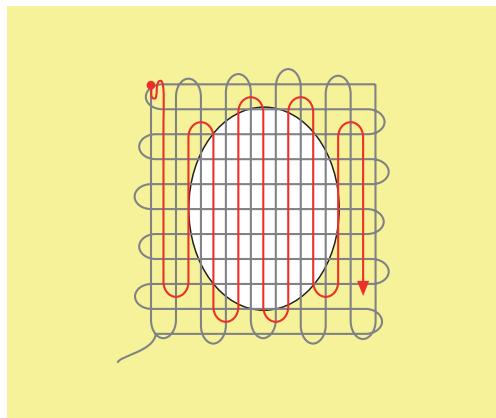- > Sew another loose row.



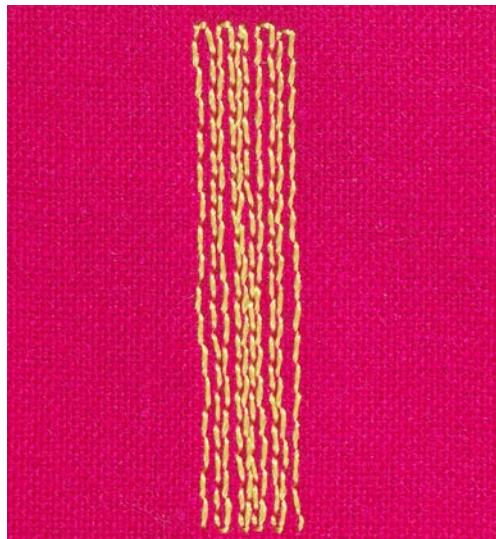6.9 Automatic darning




The Simple darning program No. 22 is particularly suitable for quick darning of worn areas or tears. It is recommended to use fine material as a backing for the worn and damaged areas or to stick an adhesive interlining. The Simple darning program No. 22 replaces the longitudinal threads in all fabrics. If the darning area becomes distorted, correct with the balance.



- > Tap «Practical Stitches».
- > Select Simple darning program No. 22.
- > Hoop light-weight materials in the round embroidery hoop (optional accessory).
 - The darning area stays evenly taut and cannot be distorted.
- > Start sewing top left.
- > Sew the first row.
- > Stop the machine.
- > Push the button «Quick Reverse».
 - The length is programmed.
- > Finish sewing the Darning Program.
 - The machine stops automatically.

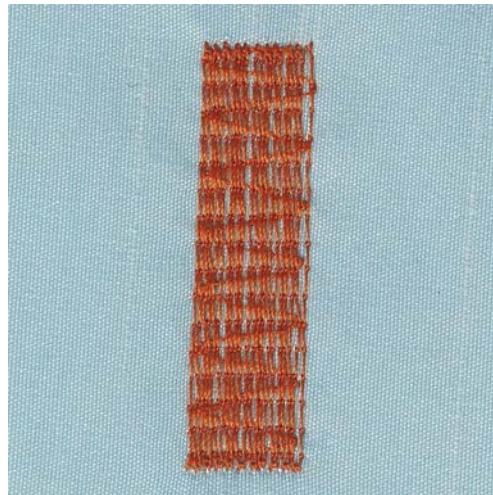6.10 Reinforced darning, automatic




The Reinforced darning program No. 23 is particularly suitable for quick darning of worn areas or tears. The Reinforced darning program No. 23 replaces the longitudinal threads in all fabrics.



If the Darning Program does not cover the whole worn or damaged area, it is recommended to reposition the work and the sew the Darning Program again. The length is programmed and can be repeated as often as desired.



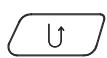- > Fit the Buttonhole foot with slide #3A.
- > Tap «Practical Stitches».
- > Select Reinforced darning program No. 23.
- > Hoop light-weight materials in the round embroidery hoop (optional accessory).
 - The darning area stays evenly taut and cannot be distorted.
- > Start sewing top left.
- > Sew the first row.
- > Stop the machine.
- > Push the button «Quick Reverse».
 - The darning length is programmed.
- > Finish sewing the Darning Program.
 - The machine stops automatically.



6.11 Finishing edges



Zigzag No. 2 is suitable for all fabrics. It can also be used for elastic seams as well as for decorative work. Use darning thread for fine materials. When sewing satin stitch, it is recommended to select a dense short the zig zag at a stitch length of 0.3 – 0.7 mm. The satin stitch can be used for appliqué and for embroidering.

Prerequisite:

- The edge of the fabric should lie flat and not roll.
- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Zigzag No. 2 or Satin stitch No. 1315.
- > Neither select too wide a stitch nor too long a stitch.
- > Guide the edge of the fabric into the center of the presser foot, so that the needle goes into the fabric on one side and over the edge into the air on the other side.



6.12 Sewing Double overlock



A double overlock seam is suitable for loose knits and cross seams in knits. When working with jersey, a jersey needle should be used to prevent damaging the knit fabric. When sewing stretch materials, use a stretch needle.



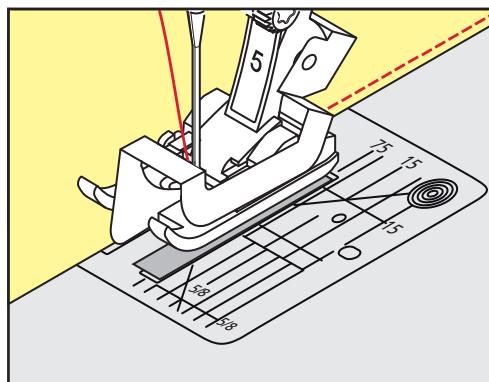
- > Fit the Reverse Pattern Foot #1 or the Overlock Foot #2 (optional accessory).
- > Tap «Practical Stitches».
- > Select Double overlock No. 10.

6.13 Narrow edgestitching



- > Fit the Blindstitch Foot #5 or Edgestitch Foot #10.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Place the left-hand edge against the guide of the Blindstitch foot.


- > Select the left-hand needle position at the desired distance to the edge.



6.14 Wide edgestitching



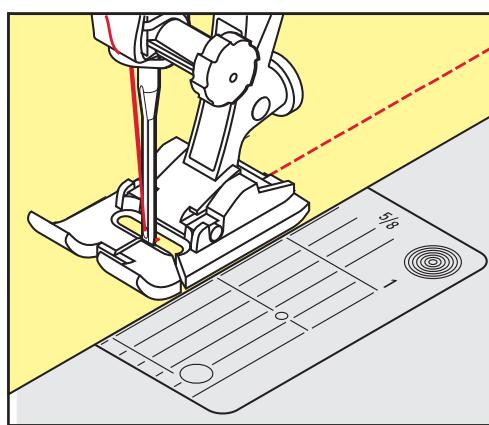- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Guide the edge along the presser foot or at a distance of 1–2.5 cm along the marks on the stitch plate.
- > Select the needle position at the desired distance to the edge.




6.15 Edgestitching using the seam guide



When sewing parallel wider lines, it is recommended to guide the seam guide along the sewn of lines.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Loosen the screw on the back of the presser foot.
- > Insert the seam guide into the hole in the presser foot.
- > Adjust the width as required.
- > Tighten the screw.

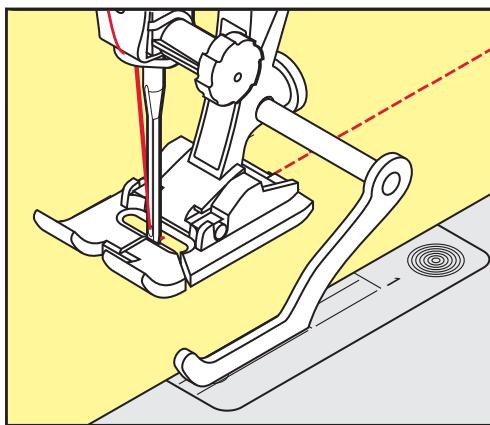
- > Guide the folded edge along the seam guide.




6.16 Sewing hem edges

When using the Blindstitch Foot #5, it is recommended to set the needle position to the far left or right. With the Reverse Pattern Foot #1 and the Edgestitch Foot #10, all needle positions are possible.

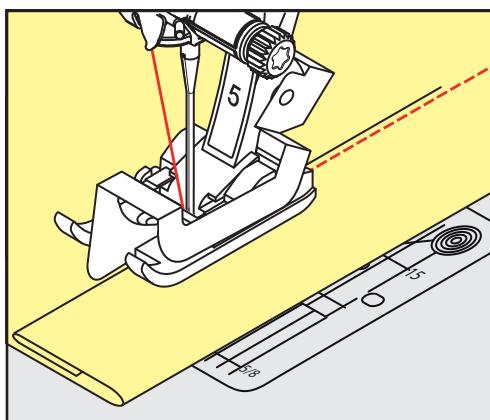- > Fit the Blindstitch Foot #5 or the Reverse Pattern Foot #1 or the Edgestitch Foot #10.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Place the inside upper edge on the right against the guide of the Blindstitch Foot.
- > Select the needle position to the far right in order to sew along the upper edge.



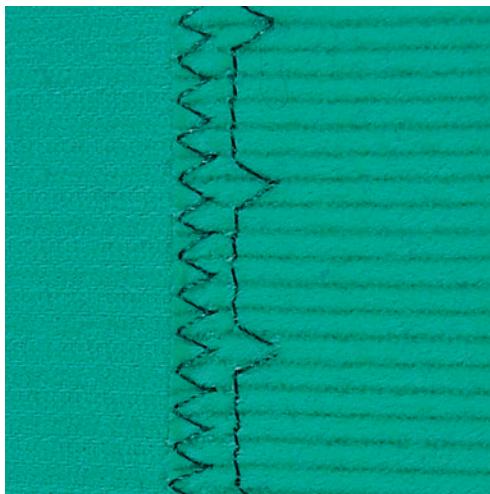
6.17 Sewing blind hems



For invisible hems in medium to heavy weight cotton, wool and blended materials.

Prerequisite:

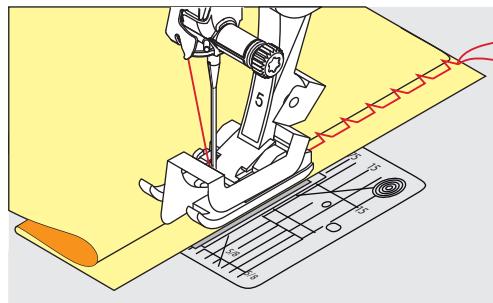- The fabric edges are finished.
- > Fit the Blindstitch Foot #5.
- > Tap «Practical Stitches».
- > Select Blind stitch No. 9.
- > Fold the fabric back over the right side of the fabric to expose the overcast edge.
- > Place the fabric under the presser foot and move the folded edge against the metal guide on the presser foot.
- > Guide the folded edge evenly along the metal guide of the presser foot to sew the stitches evenly deep.
 - Make sure that the needle only pierces the edge of the fold.
- > After sewing about 10 cm, check both sides of the fabric and adjust the width again if necessary.




6.18 Sewing visible hems



The visible hem is particularly suitable for elastic seams in tricot made of cotton, wool, synthetic and mixed fibers.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Tricot stitch No. 14.
- > Iron the hem and baste if necessary.
- > Reduce the Presser Foot Pressure if necessary.
- > Sew the hem in the desired depth on the right side of the fabric.
- > Trim off the remaining fabric on the wrong side of the fabric.

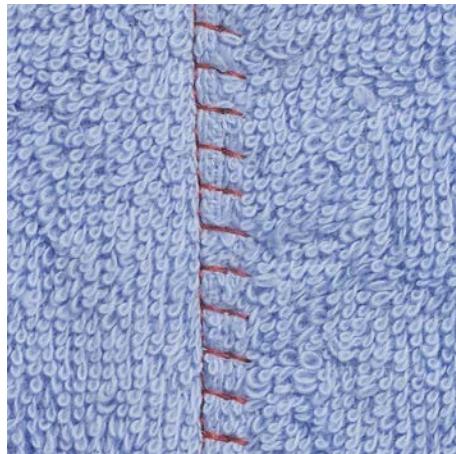6.19 Sewing flat joining seams




The flat joining seam is especially suitable for long-pile or thick materials such as terrycloth, felt or leather.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Stretch overlock No. 13.
- > Overlap the fabric edges.
- > Sew along the fabric edge.
- > To get a very flat, durable seam, make sure the needle stitches right over the top edge of the fabric into the bottom fabric.



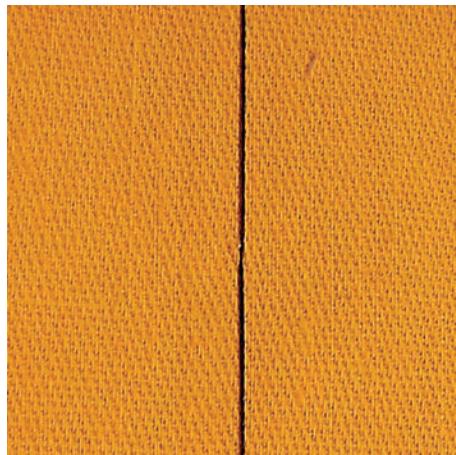6.20 Sewing basting stitches



When sewing basting stitches, it is recommended to use a fine darning thread. This is easier to remove. The basting stitch is suitable for sewing projects where a very long stitch length is required.

- > Fit the Darning Foot #9 (optional accessory).
- > Lower the feed dog.
- > Tap «Practical Stitches».
- > Select Manual basting stitch No. 30.
- > Pin the fabric layers at a right angle to basting direction to prevent the layers from slipping.
- > Hold the threads and sew 3 – 4 securing stitches at the beginning.
- > Sew a stitch and pull the fabric back at the desired stitch length.
- > Sew a stitch.
- > At the end sew 3 – 4 securing stitches.



7 Decorative stitches

7.1 Overview Decorative Stitches

Easier or more difficult decorative stitches come into their own depending on the type of fabric.


- Decorative stitches which are programmed with simple straight stitches are particularly appropriate for lightweight materials, e. g. Decorative stitchNo. 101.
- Decorative stitches which are programmed with triple straight stitches or with a few satin stitches are particularly appropriate for medium-weight materials, e. g. Decorative stitchNo. 107.
- Decorative stitches which are programmed with satin stitches are particularly appropriate for heavyweight materials, e. g. Decorative stitch No. 401.

For a perfect stitch formation it is of advantage to use the same thread color for upper and bobbin thread and a stabilizer. With pile or longfiber materials, it is recommended to use an additional water-soluble stabilizer on the right side, which can be easily removed after sewing.



Decorative stitch	Category	Name
	Category 100	Natural stitches
	Category 300	Cross stitches
	Category 400	Satin stitches
	Category 600	Geometric stitches
	Category 700	Heirloom stitches
	Category 900	Novelty stitches
	Category 2000	Seasons
	Category 2200	Hobbies and sport

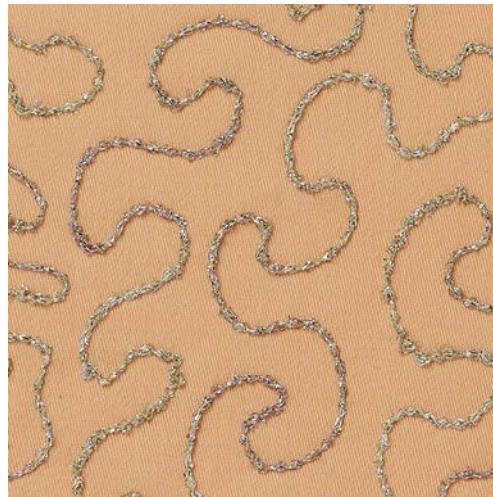7.2 Bobbin-Play



The bobbin can be filled with different thread material. For free-motion stitching to add texture. This method is similar to "normal" free-motion sewing, but is done on the **wrong** side of the fabric.

Reinforce the area to be sewn with embroidery stabilizer. The design can be drawn on the wrong side of the fabric. You can also draw the design on the front side of the fabric. The lines can be followed with a freely guided straight stitch using polyester, cotton or rayon thread. The rows of stitching are visible on the wrong side of the fabric, and they serve as guidelines for the bobbin-thread sewing.

The BSR function can be used for bobbin-thread sewing. We recommend guiding your project evenly under the needle at a consistent speed, following the lines of the design. The stabilizer must be removed after sewing.

Sew a sample first to check what the result looks like on the wrong side of the fabric.

Not all decorative stitches are suitable for this technique. Simple decorative stitches provide best results. Avoid compact stitch types and satin stitches.

NOTICE

Inappropriate bobbin case is used

Damage to the bobbin case.

- > Use the Bobbinwork bobbin case (optional accessory).

-
- > Fit the Open Embroidery Foot #20.

- > Tap «Decorative Stitches».

- > Select an appropriate decorative stitch.

- > Turn the «Upper Multifunction Knob» and the «Lower multifunction knob» to set the stitch length and stitch width so that a beautiful stitch formation can be achieved even when sewing with thick thread.

- > To adjust the upper thread tension, tap «Upper Thread Tension».



7.3 Altering the stitch density

With certain decorative stitches (e. g. No. 401) the stitch density can be altered. If the stitch density is increased, the stitch distance is enlarged. If the stitch density is decreased, the stitch distance is shortened. The programmed length of the stitch pattern is not affected.

- > Select the decorative stitch.



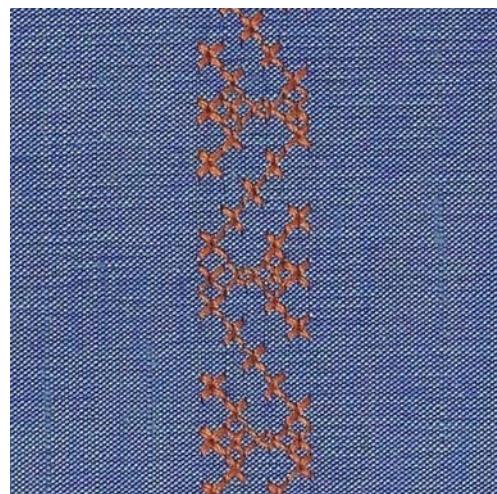
> Tap «i-Dialog».



> Tap «Altering the Pattern Length/Stitch Density».
> Set the stitch density (1).



7.4 Sewing cross stitches



Cross stitch embroidery is a traditional technique and an addition to the other decorative stitches. If the cross stitches are sewn on fabrics with a linen structure, they look as if they were hand-stitched. When cross stitches are sewn with embroidery yarn, the stitch pattern appears fuller. Cross stitches are particularly used for home furnishing, trimmings on garments and embellishing in general. As every following line refers to the first row, it is important to stitch the first row in a straight line.

- > Fit the Reverse Pattern Foot #1 or Open Embroidery Foot #20.
- > Select a cross stitch of the Categorie 300 and combine it as desired.
- > To ensure that the first row is sewn straight, we recommend using a seam guide (optional accessory) or the edge guide (optional accessory).
- > Stitch the second row next to the first at a distance of one presser foot's width or using the seam guide.

7.5 Pintucks

Pintucks



Pintucks are narrow stitched folds which are normally sewn on the fabric before cutting out the pieces for garments or other sewing projects. They are suitable for embellishing or in combination with other heirloom embroidery techniques. The use of Pintuck Feet can simplify this technique considerably. This technique reduces the size of the fabric. This means that always enough fabric should be calculated.

Overview Pintuck Feet

Pintuck foot	Number	Description
	# 30 (optional accessory)	3 grooves For heavy-weight fabrics. In combination with the 4 mm double needle
	# 31 (optional accessory)	5 grooves For heavy to medium-weight fabrics. In combination with the 3 mm double needle


Pintuck foot	Number	Description
	# 32 (optional accessory)	7 grooves For light to medium-weight fabrics. In combination with the 2 mm double needle
	# 33 (optional accessory)	9 grooves For very light fabrics (without extra cord). In combination with the 1 or 1.6 mm twin needle
	# 46C (optional accessory)	5 grooves In combination with the 1.6 – 2.5 mm double needle For very light to medium-weight fabrics.

Working with cord

A more distinctive and relief-like effect can be achieved when the pintucks are corded, which means that they are sewn with an additional pintuck cord. Choose a pintuck cord that fits well into the grooves of the selected pintuck foot. The cord must be colorfast and shrinkproof.

- > Switch off the machine and disconnect it from the power supply.
- > Remove the needle.
- > Remove the presser foot.
- > Remove the stitch plate.
- > Open the hook cover.
- > Pull the cord through the hook opening from the bottom and through the opening of the stitch plate.
- > Replace the stitch plate.
- > Close the Looper cover.

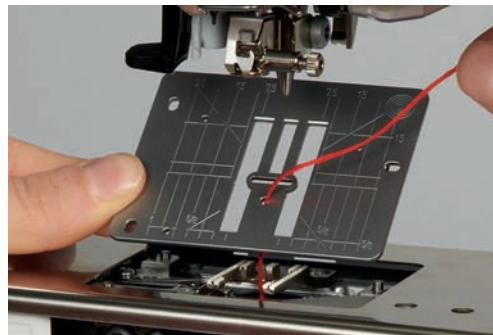- > Make sure that the cord slides through the thread slot of the bobbin cover.




- > Place the spool on the spool holder.



- > Check that the cord runs smoothly.
- > If the thread doesn't glide smoothly at the hook cover, leave the hook cover open.
- > If the hook cover is opened, deactivate the lower thread indicator in the Setup Program.
 - The cord lies on the wrong side of the material and is held/sewn over by the bobbin thread.

Sewing Pintucks

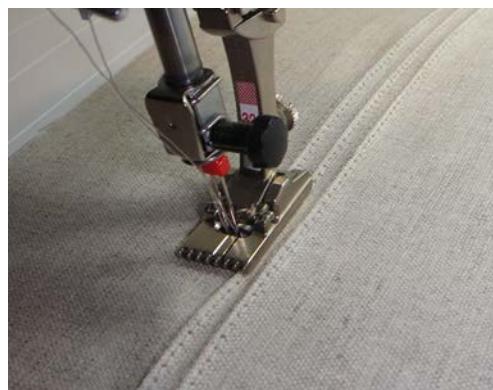- > Insert the corresponding twin needle.
- > Threading the double needle.
- > Thread-up command.
- > Sewing the first pintuck.
- > Place the first pintuck in one of the side grooves in the presser foot.
- > Sew additional pintucks parallel.




8 Alphabets

8.1 Overview Alphabet

Block, Outline, and Script lettering, as well as Cyrillic can be sewn in two different sizes. Block, Outline, and Script lettering, as well as Cyrillic can also be sewn in lower-case letters.

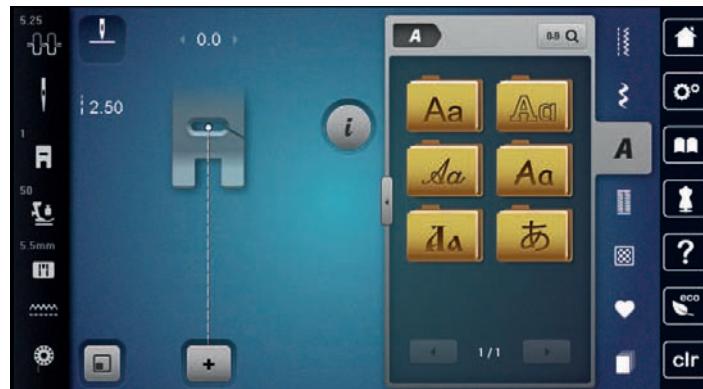For a perfect stitch formation, it is recommended to use the same thread color for upper and bobbin threads. The fabric can be reinforced with embroidery stabilizer on the wrong side. When working with pile or napped fabrics, e.g. toweling, use an additional, water-soluble stabilizer on the right side of the fabric.



Stitch pattern	Name
ABCabc	Block alphabet
ABCabc	Double-Block
A ^B Cabc	Script (Italics)
ABCabc	Comic lettering
АБВабв	Cyrillic
あいう	Hiragana

8.2 Creating lettering



It is recommended to sew a test sample using the desired thread, the original fabric and the original stabilizer. Please make sure that the fabric is fed evenly and lightly without colloding and being caught. Do not pull, push or hold the fabric while sewing.



- > Tap «Alphabets».
- > Select the font.



- > To create a combination, tap «Combination Mode/Single Mode».

- > To open the extended Enter Mode, tap «Increasing/Decreasing the display size» (1).



- > Select the letter.
ABC > To use upper-case letters, tap «Upper Case Characters» (standard setting).

abc > To use lower-case letters, tap «Lower Case Characters».

123 > To use figures and mathematical symbols, tap «Numbers and Mathematical Characters».

@&!... > To use special characters, tap «Special Characters».



- > To delete individual syllables of the entered text, tap «Delete».
✖ > To close the extended Enter Mode, tap «Increasing/Decreasing the display size» again.

9 Buttonholes

9.1 Overview Buttonholes

To create the correct buttonhole for every button, every purpose and for every garment, your BERNINA B 735 provides a considerable collection of buttonholes. The corresponding button can be sewn on automatically. Eyelets can also be sewn.




Stitch patterns	Stitch number	Name	Description
	51	Standard buttonhole	For light to medium-weight fabrics. e.g. blouses, dresses and bed linen.
	52	Narrow standard buttonhole	For light to medium-weight fabrics, e.g. blouses, dresses, children's and baby clothes, crafts.
	53	Stretch buttonhole	For all elastic fabrics.
	54	Round buttonhole with normal bartack	For medium-weight to heavy fabrics. e.g. dresses, jackets, coats and rainwear.
	55	Round buttonhole with horizontal bartack	For medium-weight to heavy fabrics, with a reinforced bar, e.g. dresses, jackets, coats and rainwear.
	56	Keyhole buttonhole	For heavy, non-stretch fabrics, e.g. jackets, coats and leisurewear.
	57	Keyhole buttonhole with pointed bartack	For stronger, non-stretch fabrics, e.g. jackets, coats, jeans and leisurewear.
	59	Straight stitch buttonhole	For staystitching and reinforcing buttonholes and as button hole edging, especially for buttonholes in leather and imitation leather.
	60	Button sew-on program	Sews buttons with 2 or 4 holes.

	61	Eyelet with small zigzag	Openings for cords or narrow ribbons and for decorative work.
	62	Eyelet with straight stitch	Openings for cords or narrow ribbons and for decorative work.
	63	Heirloom buttonhole	For handlook stitching effects on clothes and handicrafts on light to medium-weight fabrics.
	64	Double-rounded buttonhole	For medium-weight to heavy fabrics made from different fabrics.
	67	Round buttonhole with bartack	For medium-weight woven fabrics, e.g. blouses, dresses and jackets.
	68	Decorative keyhole buttonhole with horizontal bartack	For stronger, non-stretch fabrics, e.g. jackets, coats and leisurewear.
	69	Decorative buttonhole with double pointed bartack	For decorative buttonholes in firmer, non-elastic fabrics.

9.2 Making use of the height compensation tool

When a buttonhole is to be sewn at right angles to the project edge, it is recommend to use the height compensation plates (optional accessory).

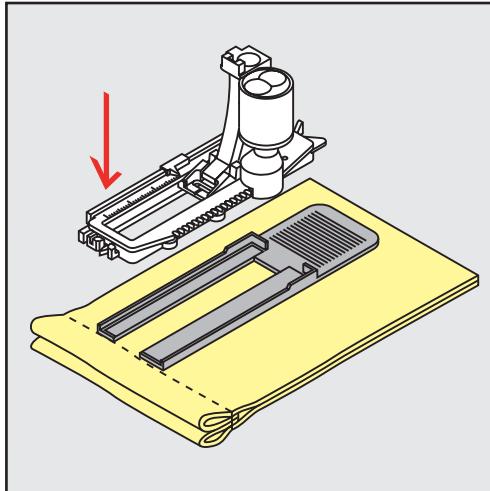- > Place the plates from the back between the sewing project and the bottom of the slide to the thick part of the sewing project.




- > Lower the presser foot.

9.3 Using the compensation plate


When sewing a buttonhole in difficult materials, it is recommended to use the Height Compensation Plate (optional accessory). It can be used in combination with the Buttonhole foot with slide #3A.

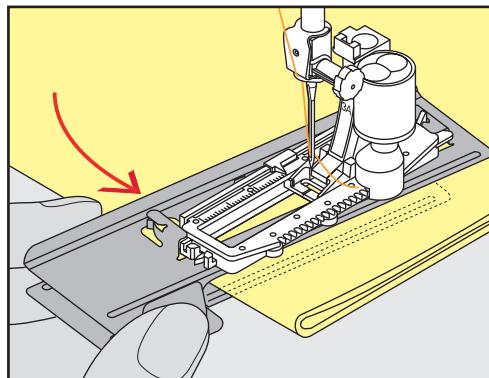- > Insert the compensation plate carefully from the side.




9.4 Marking buttonholes

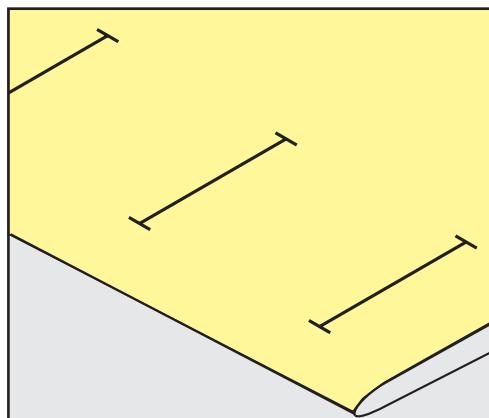
- > For the buttonholes to be sewn manually, mark the position and the length on the fabric using chalk or a water-soluble pen.



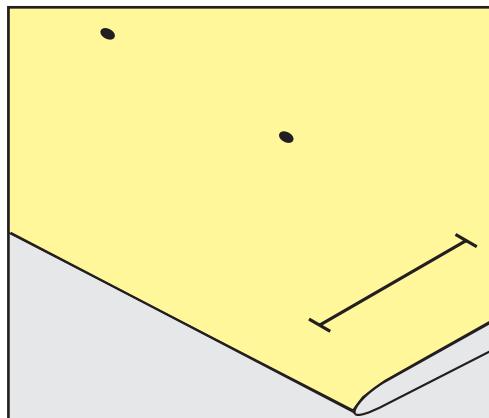- > For the buttonholes to be sewn automatically, mark the complete length of 1 buttonhole on the fabric using chalk or a water-soluble pen. For any subsequent buttonholes mark the starting point.



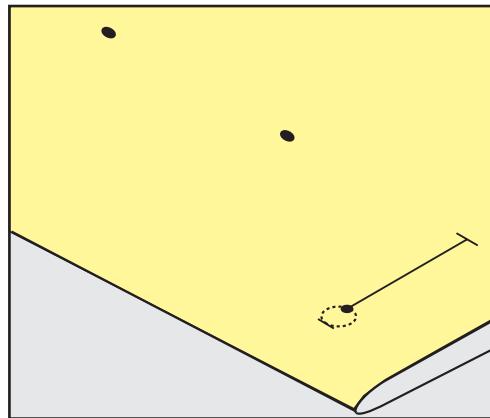- > For keyhole and round buttonholes mark the length of the bead with chalk or a water-soluble pen on the fabric. For any subsequent buttonholes mark the starting point. The length of the keyhole is sewn additionally.




9.5 Cord

Using cord with the Buttonhole Foot with Slide #3A


The cord reinforces and enhances the buttonhole and is particularly suitable for the Standard buttonhole No. 51. Optimal cord is Perle cotton No. 8, strong hand-sewing thread and fine crochet yarn. It is recommended not to hold the cord when sewing.

Prerequisite:

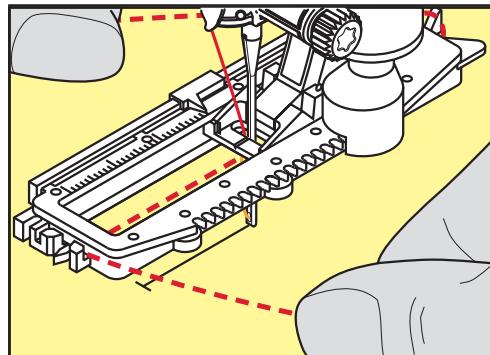
- The Buttonhole foot with slide #3A is fitted and raised.
- > Insert the needle at the beginning of the buttonhole.
- > Guide the cord on the right side under the buttonhole foot with slide.
- > Hook the cord over the pin at the back of the buttonhole foot with slide.



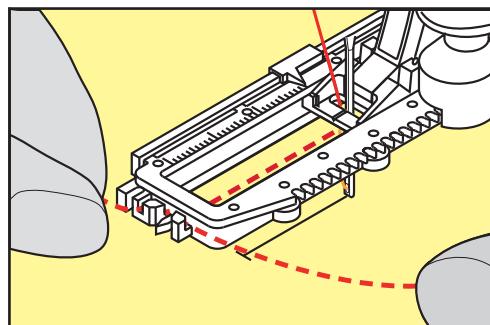- > Pull the cord on the left side under the buttonhole foot to the front with slide.



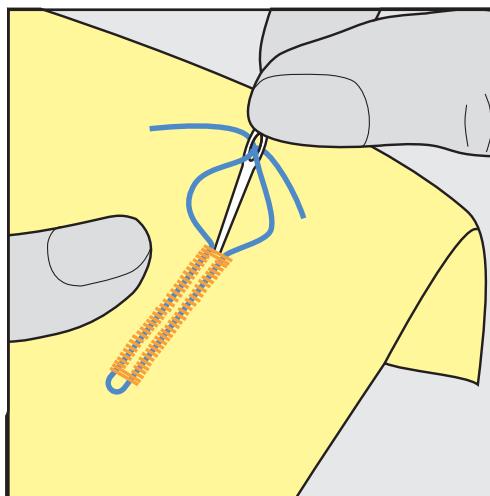
- > Pull the cord ends into the slits.
 - > Lower the buttonhole foot with slide.
 - > Sew the buttonhole in the usual manner.
 - > Pull the cord loop until the loop disappears in the bartack.
 - > Pull the ends of the cord through to the wrong side of the fabric (using a hand stitching-needle), knot or secure with stitches.




Using cord with the Buttonhole Foot #3

Prerequisite:

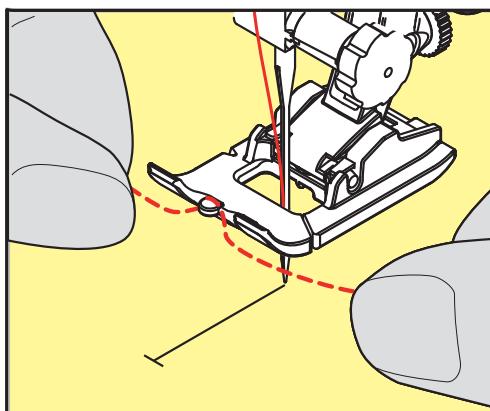
- The Buttonhole Foot #3 is fitted and raised.
 - > Insert the needle at the beginning of the buttonhole.
 - > Hook the cord over the pin at the back of the Buttonhole Foot.



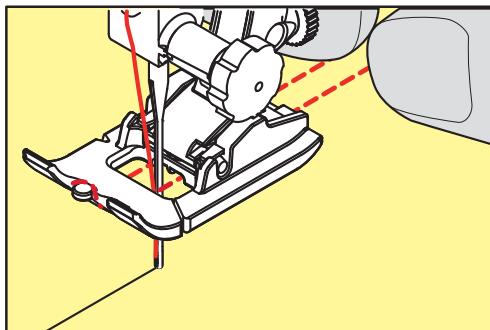- > Pull both cords ends under the Buttonhole Foot to the back and place each a cord into a groove of the sole.



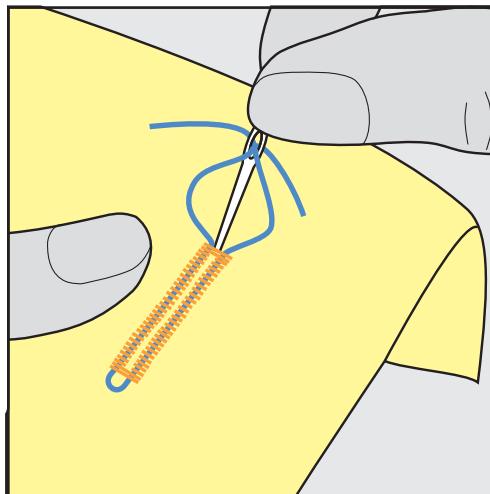- > Lower the Buttonhole Foot.
- > Sew the buttonhole in the usual manner.
- > Pull the cord loop until the loop disappears in the bartack.
- > Pull the cord ends with the sewing needle to the back and knot or secure them.



9.6 Sewing a test sample

Always sew a test sample of the buttonhole on the same fabric: It is recommended to use the same stabilizer and to select the same buttonhole. The test sample should also be sewn in the respective direction. By sewing a test sample the settings can be adjusted until the sewing result is satisfying.

It is worth underlaying the buttonholes with the Straight stitch buttonhole No. 59 when working with soft loosely woven materials or for buttonholes which are highly stressed. This is also recommended to reinforce buttonholes in leather, vinyl or felt.

Alterations to the Balance when sewing a manual standard buttonhole as well as the keyhole and the round buttonhole with length measurement affect both beads in the same way. With the manual keyhole or round buttonhole the alterations affect both sides differently.

If the stitch counter function is used and alterations are made concerning the Balance, the alterations affect both buttonhole beads differently.

- > Tap «Buttonholes».
- > Select the buttonhole.
- > Select and fit the desired presser foot.
- > Place the fabric under the presser foot and lower the presser foot.
- > Press the foot control carefully and start sewing. Guide the fabric slightly.
- > Check the Balance while sewing and adjust if necessary.
- > Check the test sample and make further amendments if necessary.

9.7 Determining the buttonhole slit width

The width of the buttonhole slit can be adjusted between 0.1 – 2.0 mm before sewing.

- > Tap «Buttonholes».
- > Select the buttonhole.
- > Tap «i-Dialog».



- > Tap «Buttonhole Slit Width».
 - > To adjust the desired width of the buttonhole slit, turn the Upper Multi-function knob or the «Lower Multi-function knob».

9.8 Determining the buttonhole length with the Buttonhole Foot with Slide #3A



The button can be placed in the yellow circle in the left section of the display. The yellow circle can be enlarged or downsized by turning the «Upper/Lower Multifunction knobs» and the diameter of the button can be determined in this way.

Additionally to the diameter of the button, 2 mm are added automatically for the buttonhole length. If the diameter of the button is 14 mm, the buttonhole length is calculated 16 mm.

Prerequisite:

- The Buttonhole foot with slide #3A is fitted.
 - > Tap «Buttonholes».
 - > Select the buttonhole.



- > Tap «i-Dialog».



- > Tap «Direct Entry Buttonhole Length».
 - > Turn the «Upper Multi-function knob» or the «Lower Multi-function knob» to adjust the buttonhole length.

9.9 Determining the buttonhole length with Buttonhole Foot #3

When the Buttonhole Foot #3 is used, the buttonhole length must be determined via the function Stitch Counter. The stitch counter function is suitable for all types of buttonholes. The left buttonhole bead is sewn forward, the right buttonhole bead is sewn in reverse. If alterations are made to the Balance, the Stitch Counter function has to be saved for every buttonhole separately.

Prerequisite:

- The Buttonhole Foot #3 is fitted.
 - > Tap «Buttonholes».
 - > Select the buttonhole.



- > Tap «i-Dialog».

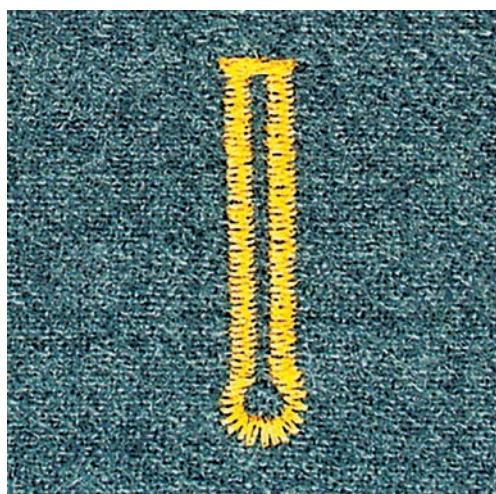
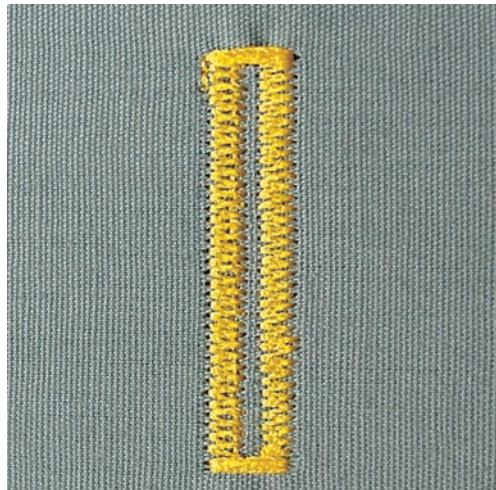


- > Tap «Programming the length via the Stitch Counter».
 - > Sew the required length of the buttonhole.
 - > Stop the machine.



- > The machine sews the lower bartack and the second bead in reverse when the button «Quick Reverse» is pushed.
 - > Stop the machine at the height of the first stitch.
 - > The machine sews the upper bartack and the securing stitches when the button «Quick Reverse» is pushed again.
 - The length of the buttonhole remains saved and every subsequent buttonhole is sewn identically until the machine is switched off.

9.10 Sewing a buttonhole automatically



When the Buttonhole foot with slide #3A is used, the length of the buttonhole is measured automatically by the lens on the presser foot. The buttonhole will be exactly duplicated and the machine switches to the next step automatically when the maximum length is reached. The Buttonhole foot with slide #3A is suitable for buttonholes at a length of 4 – 31 mm, depending on the buttonhole type. The Buttonhole foot with slide #3A must lie perfectly flat on the fabric so that the length can be measured accurately. All programmed buttonholes will be equally long and equally perfect.

Prerequisite:

- The Buttonhole foot with slide #3A is fitted.
- > Tap «Buttonholes».
- > Select the Buttonhole No. 51 - 53 or 54, 56, 57 or No. 64, 65 or 69.
- > Sew the required length of the buttonhole.
- > To program the length, push the button «Quick Reverse».
- > Push the button «Start/Stop» or press the foot control.
 - The machine finishes the buttonhole automatically. All subsequent buttonholes are sewn at the same length.

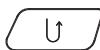




9.11 Programming the Heirloom buttonhole

Prerequisite:

- The Buttonhole foot with slide #3A is fitted.
 - > Tap «Buttonholes».
 - > Select Heirloom buttonhole No. 63.
 - > Sew the required length of the buttonhole.
 - > To program the length, push the button «Quick Reverse».
 - The machine finishes the buttonhole automatically. All subsequent buttonholes are sewn at the same length.



9.12 Sewing the manual 7-step buttonhole

The length of the buttonhole is determined manually when sewing. The bartack, eye and securing stitches are preprogrammed. The individual steps can also be selected by scrolling using the arrow icons or by pressing the button «Quick Reverse».

Prerequisite:

- The Buttonhole Foot #3 is fitted.

> Tap «Buttonholes».

> Select Standard buttonhole No. 51.



- > Tap «Manual Length Adjustment».
 - Step 1 is activated in the display for the start of the buttonhole.
 - > Sew the required length of the buttonhole.
 - Step 2 becomes active when sewing starts.



- > Stop when the required length of the buttonhole or length marking is reached.
 - > Step 3 appears by tapping «Scroll down».
 - The machine sews straight stitches in reverse.
 - > Stop the machine at the level of the first stitch at the start of the buttonhole.
 - > Step 4 appears by tapping «Scroll down».
 - The machine sews the upper bartack and stops automatically.
 - > Step 5 appears by tapping «Scroll down».
 - The machine sews the second bead.
 - > Stop the machine at the level of the last stitch of the first bead.



- > Step 6 appears by tapping «Scroll down».
 - The machine sews the lower bartack and stops automatically.
- > Step 7 appears by tapping «Scroll down».
 - The machine secures and stops automatically.

9.13 Sewing the manual 5-step buttonhole

The length of the buttonhole is determined manually when sewing. The bartack, eye and securing stitches are preprogrammed. The individual steps can also be selected by scrolling using the arrow icons or by pressing the button «Quick Reverse».

Prerequisite:

- The Buttonhole Foot #3 is fitted.



- > Tap «Buttonholes».
- > Select Round buttonhole with normal bartack No. 54.



- > Tap «i-Dialog».



- > Tap «Manual Length Adjustment».
 - Step 1 is activated in the display for the start of the buttonhole.
- > Sew the required length of the buttonhole.
 - Step 2 is activated.

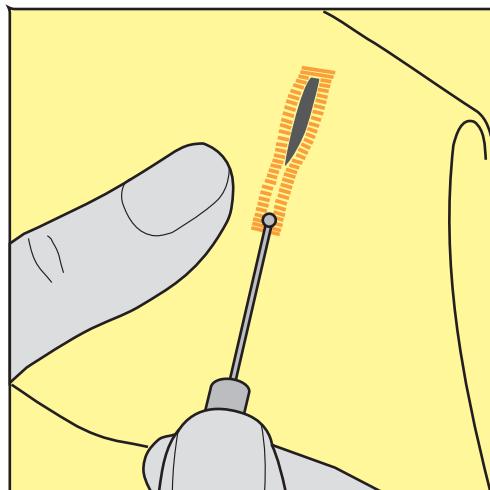


- > Stop when the required length of the bead or length marking is reached.
- > Step 3 appears by tapping «Scroll down».
- > The machine sews the curve or the eye and stops automatically.
- > Step 4 appears by tapping «Scroll down».
 - The machine sews the second bead in reverse.
- > Stop the machine at the level of the first stitch at the beginning of the buttonhole.
- > Step 5 appears by tapping «Scroll down».
 - The machine sews the upper bartack and secures automatically.




9.14 Cutting the buttonhole open with the seam ripper

- > Place a pin in each end of the buttonhole to avoid accidental cutting into ends of buttonhole.
- > Cut the buttonhole from both ends to the middle.



9.15 Cutting open buttonholes with the buttonhole cutter (optional accessory)

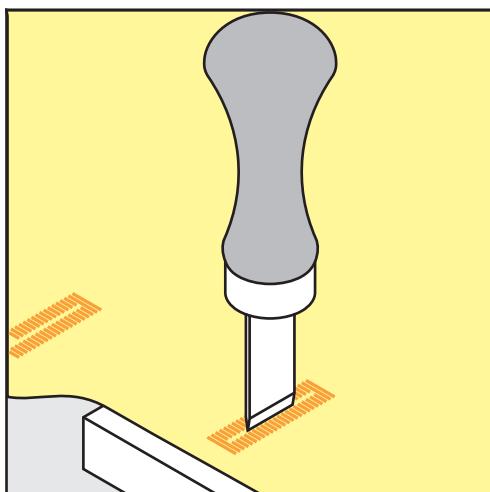- > Place the fabric on an appropriate piece of wood.



- > Position the cutter in the center of the buttonhole.
- > Press down on the cutter with your hand.

9.16 Sewing on buttons

The Button Sew-on Program can be used to sew on buttons with two or four holes, press studs or snap fasteners.

Recommended Sewing
Program:

Button sew-on program No. 60

Recommended Presser Foot:
Alternative Presser Feet:

Button Sew-On Foot #18

- Reverse Pattern Foot #1
- Darning Foot #9
- Reverse Pattern Foot with Clear Sole #34

Adjusting the thread shank

For buttons on thicker fabrics, increase the thread shank = the distance between the button and the fabric.

Buttons sewn on thin fabrics or buttons for decorative purposes only are stitched without a «thread shank».

NOTICE! The adjustment of the thread shank is only possible when using the Button Sew-On Foot #18.

- > Loosen the screw on the back of the presser foot.
- > Push the bar upwards according to the thickness of the fabric.
- > Tighten the screw.

Sewing on a button

Prerequisite:

- The shank length is adjusted according the fabric thickness.
 - The Button Sew-On Foot #18 or an alternative presser foot is fitted.
 - The fitted presser foot has been selected in the user interface.
 - The feed dog is lowered.
- > Tap «Buttonholes».
- > Select Button sew-on program No. 60.
- > Turn the handwheel until the bobbin thread comes up.
- > **NOTICE! The Button sew-on program always starts above the left hole of the button.**
- Position the button on the fabric. Place the button and the fabric beneath the needle so that the needle stitches into the left hole.
- For buttons with 4 holes, sew the first front pair of holes first.
- > Lower the presser foot.
 - > Perform the first stitches in the left hole via the handwheel.
 - > Keep turning the handwheel until the needle changes to the right hole. In doing so, check whether the needle goes into the right hole. If necessary, adjust the stitch width by turning the upper Multifunction knob.
 - > Hold the threads and push the foot control.
 - The machine sews on the button and stops automatically.
 - > For increased stability, sew the Button sew-on program again.
 - > Cut the threads with the machine. Alternatively, pull the sewing projects from under the sewing machine and trim the threads by hand. Pull the upper thread to the wrong side of the fabric and knot it with the bobbin thread.

9.17 Sewing eyelets



For increased stability sew the eyelet twice. If necessary, adjust the Balance.

Prerequisite:

- The Reverse Pattern Foot #1 or the Open Embroidery Foot #20 is fitted.
- > Tap «Buttonholes».
- > Select Eyelet with small zigzag No. 61 or Eyelet with straight stitch No. 62.
- > To alter the size of the eyelet, turn the «Upper Multi-function knob» or the «Lower Multi-function knob».
- > Sew the Eyelet Program.
 - The machine stops automatically at the end of the Eyelet Program.
- > Use an awl, punch pliers or a hole punch to open the eyelet.

10 Quilting

10.1 Overview Quilt Stitches



Stitch pattern	Stitch number	Name	Description
· · ·	No. 1301	Quilting, securing program	To secure at the sewing start and sewing end with short forward stitches.
—	No. 1302	Quilting, straight stitch	For machine quilting using a straight stitch with a 3 mm stitch length.
—	No. 1303	Patchwork stitch/straight stitch	For sewing patchwork parts together using a straight stitch with a 2 mm stitch length.
—	No. 1304 – No. 1308	Hand-look quilt stitch	For attaching an imitation of hand-look stitch with monofilament.
〔〕	No. 1309 – No. 1314	Blanket stitch	For applications and sewing on ribbons.
〔〕	No. 1317 – No. 1327 No. 1329 – No. 1330	Decorative quilt stitch	For quilting, crazy patchwork, embellishing and finishing.
——	No. 1315	Satin stitch	For appliqué.
}	No. 1316	Narrow blind stitch	For hidden sewing of applications

10.2 Quilting, Securing Program

Prerequisite:

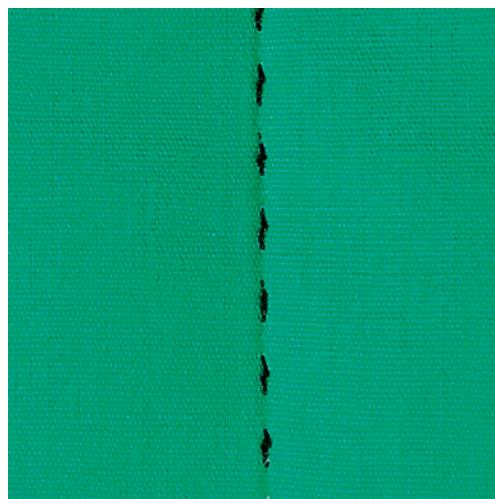
- The Reverse Pattern Foot #1 is fitted.
> Tap «Quilt Stitches».
> Select Decorative quilt stitch No. 1324.



- > Press the foot control.
 - The machine sews 6 stitches forward automatically when sewing is started.
- > Sew the seam in the desired length.
- > Push the button «Quick Reverse».
 - The machine sews 6 stitches forward automatically and stops automatically at the end of the Securing Program.



10.3 Sewing handlook quilt stitches



Handlook quilt stitches are suitable for all fabrics and sewing projects that should look like hand-sewn. It is recommended to use a monofilament thread as upper thread and an embroidery thread as bobbin thread. The sewing speed should be moderate to prevent the monofilament from breaking. If required, the upper thread tension and the balance can be adjusted to the sewing project and the desired quilt stitch.

Prerequisite:

- The Reverse Pattern Foot #1 is fitted.
- > Tap «Quilt Stitches».
- > Select Hand-look quilt stitch No. 1304 No. 1308.
- > If necessary, adjust the upper thread tension and the balance to suit the sewing project and the desired quilt stitch.
- > To start the machine, press the foot control or push the button «Start/Stop».



10.4 Guiding the quilt work freely





Free-motion quilting and darning are based on the same free-motion principles. With stipple quilting, entire areas of the fabric are filled with quilt stitches. The single lines of stitching are rounded and must not cross each other.



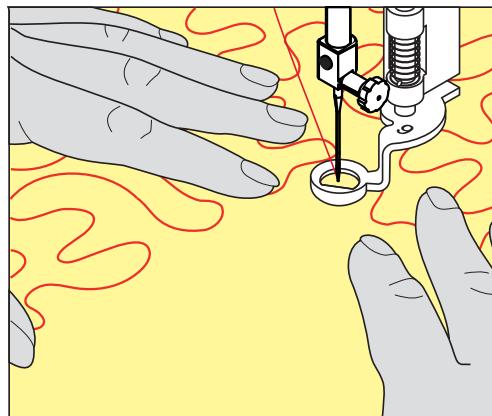
- Quilting gloves with rubber nubs make it easier to guide the fabric.
 - For the best possible results use the High thread tension bobbin case (optional accessory).
 - It is recommended to use the slide-on table and the Free Hand System.
 - With free motion quilting, it is of advantage to quilt from the center outwards and to guide the fabric using smooth, round movements to form the design of your choice.

Prerequisite:

- The top layer, the batting and the backing are pinned together or basted.
 - The feed dog is lowered.
 - The Darning Foot #9 is fitted.



- > Tap «Practical Stitches».
 - > Select Straight stitch No. 1.
 - > If required, adjust the upper thread tension.
 - > To prevent the fabric from shifting, select the needle position down.
 - > To start the machine, press the foot control or push the button «Start/Stop».
 - > To guide the fabric as if in a hoop, keep both hands close to the presser foot. Make sure that the needle does not pierce the same place several times in a row.
 - > To ensure a minimum stitch distance when quilting corners, reduce the embroidery speed.
 - > If the thread is lying on top of the fabric, slow down the movement.
 - > If there are knots on the wrong side of the fabric, move the fabric more quickly.



11 BERNINA Stitch Regulator (BSR)

The BERNINA Stitch regulator equalizes the stitch length which results of the free movement of the fabric while free-motion sewing - a sewing technique which grows more and more popular. When free-motion sewing with the BSR presser foot, every stitch is equally long and the stitch formation is perfectly regular.

As soon as the BSR presser foot is attached and the feed dog is lowered, the selection menu of the desired mode appears in the display of the machine. The BSR presser foot can be used with sewing straight stitch as well as zig zag.

The BSR presser foot reacts on the movement of the fabric and therefore controls the speed of the machine up to the highest possible speed. It can be said: The faster the movement of the material, the higher the speed of the machine.

If the fabric is moved too quickly, an acoustic signal sounds. The beeper can be activated or deactivated in the «BSR» display. The sound of the beeper can also be activated or deactivated in the Setup Program.

11.1 BSR mode 1

The BSR function can be controlled via the foot control or with the button «Start/Stop». Start the BSR mode. At the BSR presser foot a red light is on. By moving the fabric the machine accelerates. If the fabric isn't moved, securing in place is possible without pressing an additional button. When working via the foot control or when using the button «Start/Stop», the BSR mode doesn't stop automatically.

11.2 BSR mode 2

The BSR function can be controlled via the foot control or the button «Start/Stop». The machine starts only when the foot control or the button «Start/Stop» is pressed and the fabric is moved simultaneously. Without moving the fabric, the BSR2 modus stops after about 7 seconds. The red light goes off (only when working with the button «Start/Stop»). When working via the foot control, the red light doesn't go off.

11.3 BSR function with Straight stitch No. 1

This function allows free-motion quilting with straight stitch and a pre-programmed stitch length up to 4 mm. The programmed stitch length is maintained within a certain speed, independent of the fabric movement.

11.4 BSR function with Zigzag No. 2

The zig zag can be used e.g. for thread painting. The set stitch length will **not** be maintained when sewing the zig zag stitch, but the BSR function simplifies the application.

11.5 Sewing preparations for quilting

Attach the BSR presser foot

Prerequisite:

- The machine is switched off.

NOTICE

The lens of the BSR presser foot is dirty

The machine doesn't recognize the BSR presser foot.

> Clean the lens with a soft, slightly damp cloth.

> Change the presser foot.

- > Insert the cable of the BSR Foot into the connection (1).



- > Switch the machine on.
 - The BSR display opens and the BSR1 Mode is activated.

Changing the presser foot sole

NOTICE

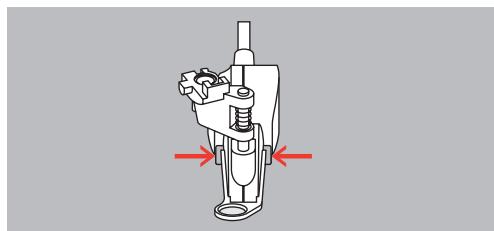
The lens of the BSR presser foot is dirty

The machine doesn't recognize the BSR presser foot.

- > Clean the lens with a soft, slightly damp cloth.

The standard stitch length is 2 mm. When sewing small shapes and stippling it is recommended to shorten the stitch length to 1 – 1.5 mm.

- > Raise the needle.
- > Raise the BSR foot.
- > Switch the machine off and disconnect it from the power supply system.
- > Remove the BSR foot from the machine.
- > Press both push buttons at the BSR foot against each other.



- > Pull the presser foot sole out of the guide downwards.
- > Insert the new presser foot sole into the guide and push upwards until it clicks into place.
- > Attach the BSR presser foot.

11.6 Using the BSR mode

The BSR function can either be operated via the foot control or via the button «Start/Stop».

Starting via the foot control: The foot control needs to be pressed while quilting. The machine keeps running in the BSR1 Mode until the foot control is released, even if the fabric isn't moved.

If quilting BSR2 Mode is stopped, the machine sews another stitch depending on the needle position and stops with needle position up.

Prerequisite:

- The Slide-on Freearm Extension Table has been fitted.
- The knee lifter of the Free Hand System is attached.
- > Lower the feed dog.
- > Select the desired BSR Mode.
- > To lower the presser foot, push the button «Start/Stop» or press the foot control.
- > To start the BSR Mode, push the button «Start/Stop» again or press and hold the foot control again.
 - A red light is lit on the BSR Presser Foot.
- > Move the fabric to control the speed of the machine in the BSR Mode.
- > To stop the BSR Mode, push the button «Start/Stop» again or release the foot control.
 - The BSR Mode stops and the red light at the presser foot goes off.
- > To deactivate the BSR Mode and to quilt without automatic stitch lengths, tap «BSR Mode».



11.7 Securing

Securing in BSR1 Mode with the button «Start/Stop»

Prerequisite:

- The BSR Presser Foot is fitted and connected to the machine.
- The BSR display opens and a BSR1 Mode is active.
- > Lower the feed dog.
- > Lower the presser foot.
- > Push the button «Needle Up/Down» 2x.
 - The bobbin thread is brought up.
- > Hold the upper and the bobbin thread.
- > Push the button «Start/Stop».
 - Start the BSR Mode.
- > Sew 5 – 6 securing stitches.
- > Push the button «Start/Stop».
 - The BSR Mode stops.
- > Cut the thread.





Securing in BSR2 Mode

Prerequisite:

- The BSR Presser Foot is fitted and connected to the machine.
- The BSR display opens and a BSR2 Mode is active.
 - > Lower the presser foot.
 - > Tap «i-Dialog».



- > Tap «Securing Stitches».



- > Press the foot control or push the button «Start/Stop».



By moving the fabric some short securing stitches are sewn, then the programmed stitch length is activated and the securing function is deactivated automatically.

12 My BERNINA Embroidery

12.1 Overview Embroidery module



12.2 Supplied accessories Embroidery module

Overview accessory Embroidery module

Illustration	Name	Purpose
	Drop-shaped Embroidery Foot #26	For embroidering, darning and free-motion quilting.
	Large oval embroidery hoop	To embroider large embroidery motifs or motif combinations up to 145 x 255 mm (5.70 x 10.04 in). Including the template for precise fabric positioning.

Illustration	Name	Purpose
	Medium embroidery hoop	To embroider medium-sized embroidery motifs up to 100 x 130 mm (3.94 x 5.12 in). Including the template for precise fabric positioning.
	Small embroidery hoop	To embroider small embroidery motifs up to 72 x 50 mm (2.83 x 1.97 in). For free arm embroidering with closed sewing projects such as sleeves, trouser legs or socks. Including the template for precise fabric positioning.
	USB Connecting cable	To transfer data from the computer to the machine or vice versa.
	Embroidery needle assortment	For embroidering.
	Template holder	To place and remove the template in or out of the embroidery hoop.
	Spool net	For even thread unwinding with smooth threads from the thread spool, e.g. nylon, rayon, silk threads or metallic yarns.


12.3 Overview User Interface

Overview functions/visual information



- | | | | |
|---|---|---|--------------------------|
| 1 | «Upper Thread Tension» | 5 | «Stitch Plate Selection» |
| 2 | «Needle Selection» | 6 | «Feed Dog Up/Down» |
| 3 | «Presser foot indicator / presser foot selection» | 7 | «Bobbin Thread» |
| 4 | «Hoop Indicator>Select Hoop» | | |

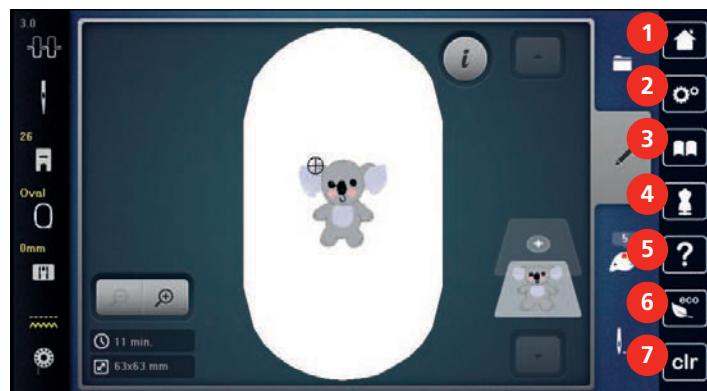Overview System settings



- | | | | |
|---|-----------------------|---|------------------|
| 1 | «Home» | 5 | «Help» |
| 2 | «Setup Program» | 6 | «eco Mode» |
| 3 | «Tutorial» | 7 | «Clear Settings» |
| 4 | «Creative Consultant» | | |

Overview Selection menu embroidery



- 1 «Selection»
2 «Edit»

- 3 «Color Information»
4 «Embroidery»

12.4 Important Embroidery information

Upper thread

A good quality thread (brand manufacturer) is essential for embroidery so that the embroidery is not affected negatively because of poor thread or thread breakage.

Embroidery is particularly effective if you use 40wt glossy rayon or polyester embroidery threads as upper threads. They are available in a wide range of colors for beautiful embroidery.

- Glossy polyester with a brilliant sheen is a hard wearing, colorfast thread and has a high tensile strength which is suitable for all types of embroidery.
- Rayon is a soft viscose fiber with a brilliant sheen and suitable for fine, delicate embroidery, or items that will not receive excessive wear and tear.
- Metallic thread is a light to medium-weight thread suitable for special effects in embroidery.
- When working with metallic threads, the automatic bobbin thread cutter should be deactivated. The other thread cutters shouldn't be used either because the knives are likely to wear off very quickly.
- When using metallic threads, the speed and the upper thread tension should be reduced.



Bobbin thread

In most cases black or white bobbin thread is used for embroidering. When both sides should have the same look, it is recommended to use the same color for bobbin and upper thread.

- Bobbin Fill is an especially soft and light polyester thread which is suited well to be used as bobbin thread. This special bobbin thread ensures a steady thread tension and an optimal intertwining of the upper and bobbin thread.

- Darning and embroidery threads are fine mercerized cotton threads which are suitable for embroidery on cotton.



Choosing the embroidery motif

Simple motifs with a low stitch count are suitable for embroidery on fine material. Densely embroidered motifs, e. g. embroidered motifs with multiple color and embroidery direction changes, are suitable for medium and heavy-weight material.

Selecting the embroidery file format

In order that embroidery motifs can be read by the BERNINA embroidery machine, they must be created by the BERNINA Embroidery Software and exported as .EXP file. Besides the actual embroidery file, a .BMP file and an .INF file are generated additionally. The .BMP file allows a preview of the embroidery motif and the .INF file provides the information on the thread colors. **Please note:** If the .INF file is missing, the embroidery motif cannot be displayed in the correct thread colors but only in standard colors. In this case, the colors can be entered manually in the color overview of the motif on the machine.

Additionally, following embroidery formats can be read by the machine: .PES, .PEC, .XXX, .PCS, .JEF and .DST. BERNINA International AG provides no guarantee that embroidery motifs which have not been created or converted by a BERNINA Embroidery Software can be correctly read and embroidered.

Embroidery test

For the embroidery test, always use the original material reinforced with the same stabilizer as will be used later. For the embroidery test it is recommended to use the same colors, threads and needles which are planned to be used for the embroidery project.

The size of the embroidery motif

Embroidery motifs can be enlarged or downsized on the embroidery machine or on the PC using the BERNINA Embroidery software (optional accessory). Enlargements or reductions up to 20% achieve the best results.

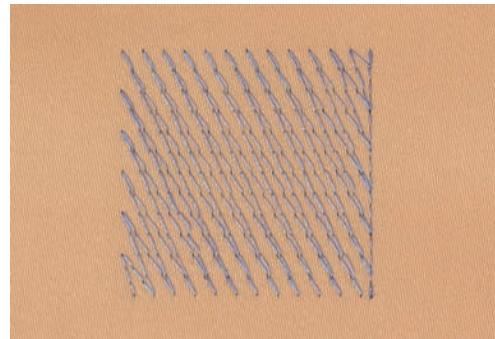
Embroidering motifs by third-party providers

BERNINA recommends uploading embroidery motifs of any file format via the free program «ART-Link» to the machine or a USB stick. Using «ART-Link» ensures that the embroidery motif can be read and embroidered correctly. «ART-Link» can be downloaded for free at www.bernina.com.




Underlay stitches

Underlay stitches are the foundation of a motif and are used to stabilize the base material and hold it in shape. They also prevent the covering stitches of the motif from sinking into the knit or the nap of the material.




Satin or Leaf stitch

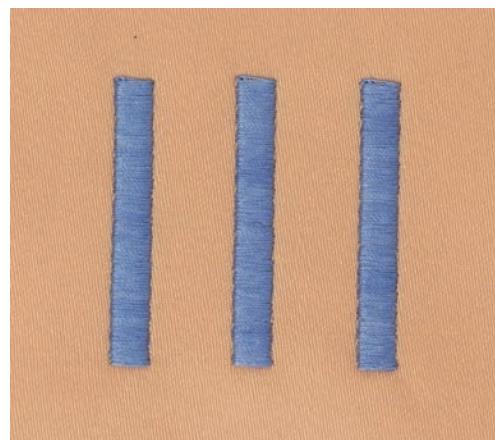The needle moves left to right and vice versa. The result is a very dense, covering zigzag stitching to fill the shape. Satin stitching fills are ideal for narrow and small shapes. Satin stitching is, however, not suitable for larger areas, since wide stitches are too loose and do not cover the fabric properly. In addition there is the risk that with too long stitches the threads could catch on something which would damage the embroidery.




Step stitch

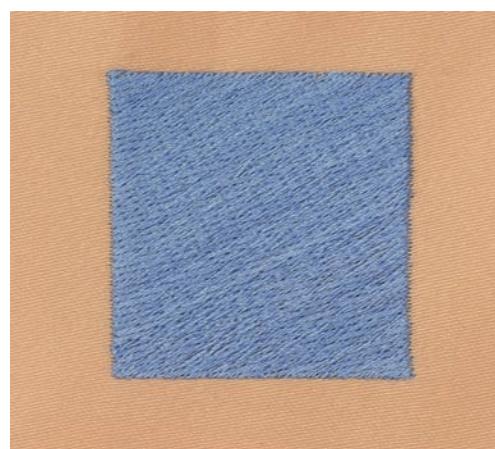Many short, equally long stitches are embroidered in offset rows closely next to each other which results in a densely filled area.



Connecting stitches

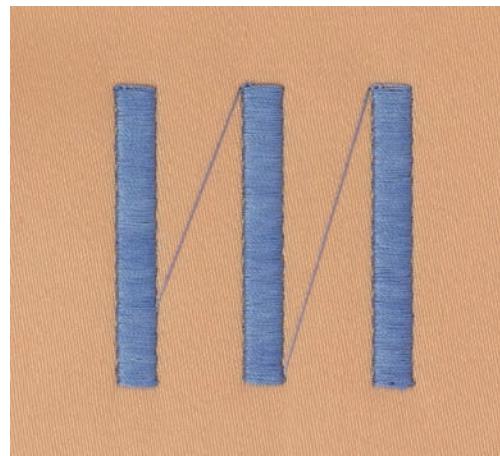Long stitches which are used to get from one part of the motif to the next. Before and after the connecting stitch securing stitches are sewn. Connecting stitches are trimmed.



13 Embroidering preparation

13.1 Attaching the Module

NOTICE

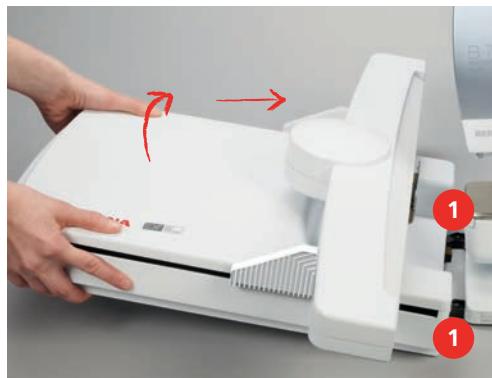
Transporting the embroidery module

Damage to the embroidery module connection and machine.

- > Remove the embroidery module before transporting the machine.

Prerequisite:

- The slide-on table must not be attached.
- > Make sure that the module and the machine are placed on a stable, even surface.
- > Make sure that there is enough space around to allow the unimpeded movement of the embroidery arm.
- > Lift the embroidery module on the left.
- > Carefully push the embroidery module from left to right into the embroidery module connection of the machine (1).



- > To remove the embroidery module, lift it on the left side and pull it carefully to the left.



13.2 Preparing the machine

Lowering the feed dog

- > Push the button «Feed dog up/down».



Selecting an embroidery motif

All embroidery motifs can either be embroidered as-is or they can be changed by using the various functions. You can find all embroidery motifs at the end of the instruction manual. Furthermore, embroidery motifs from the Personal Memory or from the BERNINA USB stick can be loaded.

- > Tap «Home».



- > Tap «Embroidery».
- > Select an alphabet, an embroidery motif, a stitch pattern or a personal embroidery motif from one of the files.



13.3 Embroidery foot

Attaching the embroidery foot

- > Raise the needle.
- > Raise the presser foot.
- > Switch the machine off and disconnect it from the power supply system.

- > Push the clamping lever up.



- > Remove the presser foot.
 - > Insert the embroidery foot from below into the bracket.
 - > Press the clamping lever down.

Selecting the presser foot in the User Interface

After having fitted the appropriate embroidery foot (Embroidery Foot #26, supplied accessory) it can be selected and saved on the machine. Moreover optional presser feet can be displayed which are available for the currently selected embroidery motif.

- > Switch the machine on.
 - > Select an embroidery motif.
 - > Tap «Presser foot indicator / presser foot selection».
 - > Select the fitted embroidery foot.



13.4 Needle and stitch plate

Inserting the embroidery needle



Embroidery needles of the type 130/705 H-SUK provide a larger eye and are slightly rounded. This avoids thread abrasion when using Rayon- and cotton embroidery thread. Depending on the embroidery thread use a size No. 70-SUK to No. 90-SUK needle.

- > Raise the needle.
 - > Switch the machine off and disconnect it from the power supply system.
 - > Remove the attached foot.

- > Loosen the fixing screw of the needle using the screwdriver gray Torx.



- > Pull the needle down.
- > Hold the new needle with the flat side to the back.
- > Insert the needle as far as it will go.
- > Tighten the fixing screw of the needle using the screwdriver gray Torx.

Selecting the embroidery needle in the User Interface

After changing the needle, you can check whether this can be used with the selected stitch plate.



- > Tap «Needle Selection».

- > Select the fitted needle.



- If the selected needle is suitable in combination with the stitch plate, embroidering can be started.
- If the selected needle is not suitable in combination with the stitch plate, starting the machine is automatically blocked.

Selecting needle type and needle size

Convenient memory function: To prevent a loss of information, the needle type and the needle size can be saved additionally on the machine. The saved needle type and the saved needle size can be checked at any time.



- > Tap «Needle Selection».



> Tap «Needle Information».



- > Select the needle type (1) of the fitted needle.
 - > Select the needle type (2) of the fitted needle.

Attaching the stitch plate

The stitch plate (CutWork/Straight, supplied accessory) has a small needle hole in the needle insertion area. The thread is pulled in and knotted optimally which results in an optimized stitching result.

- > To lower the feed dog, push the button «Feed dog up/down».



- > Switch off the machine and disconnect it from the power supply.
 - > Remove the needle.
 - > Remove the presser foot.
 - > At the marking on the rear of the stitch plate, push the stitch plate downwards until it tips.



- > Remove the stitch plate.
 - > Place the opening of the stitch plate (CutWork/Straight stitch plate) above the corresponding guide pins and press it down until it clicks into place.

Selecting the stitch plate in the User Interface

After changing the stitch plate, you can check whether this can be used with the selected needle.

- > Tap «Stitch Plate Selection».
- > Select the previously fitted stitch plate.



- If the selected stitch plate is suitable to be used in combination with the needle, sewing can begin.
- If the selected stitch plate is not suitable to be used in combination with the needle, an error message is displayed and starting the machine is automatically prevented.

Thread-up command

The machine must be ready for embroidery to bring up the bobbin thread. The bobbin thread can be brought up in one step for a manual knotting. If no securing stitches are wanted, it is recommended to deactivate the securing stitches in the Setup.



- > Hold the upper thread.
- > Push the button «Presser Foot Up/Down».
 - The bobbin thread is brought up automatically.

13.5 Embroidery hoop

Overview Embroidery hoop selection



1 Hoop selection

Selecting the embroidery hoop

The best embroidery result is achieved when the smallest possible embroidery hoop for the embroidery motif is selected.

The embroidery motif has a pre-set size which is displayed.



Prerequisite:

- The embroidery motif is selected.
 - > Tap «Hoop Indicator>Select Hoop».
 - The machine selects the optimal embroidery hoop according to the size of the embroidery motif automatically. If the pre-set embroidery hoop would not be available, another desired embroidery hoop can be selected. When an embroidery hoop is attached which does not correspond with the selected one, the attached hoop is considered active and the embroidery motif area is displayed accordingly.
 - > Select the desired embroidery hoop.

Tear-away stabilizers

Using a stabilizer ensures more stability of the embroidery project. A tear-away stabilizer suits all woven and non-stretch materials. 1 – 2 layers can be used. Stabilizers are available in different weights. With larger embroidered areas the stabilizer will remain under the embroidery thread. The stabilizer is applied to the wrong side of the fabric with temporary adhesive spray. Carefully tear away excess stabilizer after embroidering.

Cut-away stabilizers

Using a stabilizer ensure more stability of the embroidery project. A cut-away stabilizer suits all elastic materials. 1 – 2 layers can be used. Stabilizers are available in different weights. With larger areas to be embroidered the stabilizer will remain under the embroidery thread. The stabilizer is applied to the wrong side of the fabric with temporary adhesive spray. Carefully cut away excess stabilizer after embroidering.

Using adhesive spray

The application of spray adhesive is recommended for stretch and smooth materials and knitware. It prevents the fabric from losing shape and slipping. Appliqués can be exactly positioned with spray adhesive. The spray adhesive shouldn't be used near the machine to avoid contamination.

- > Use the adhesive spray carefully at a distance 25 – 30 cm (9 – 12 inch) when spraying the stabilizer.
 - > Adhere the sprayed stabilizer to the wrong side of the fabric carefully, smoothing material so there are no puckers.
 - > Position smaller parts such as pocket flaps or collars on the stabilizer.
 - > To avoid the possibility of getting hoop marks when working with napped materials or fleece, don't hoop the parts but spray the stabilizer and hoop it.
 - > Adhere the fabric to be embroidered.
 - > Remove any adhesive residue before starting the machine.

Using spray starch

Spray starch is ideal for additional stiffening fine, loosely woven materials. Always use an additional stabilizer on the wrong side of the material.

- > Spray the area to be embroidered.
 - > Let it dry or press gently with a warm iron if necessary.

Using iron-on interfacing

Iron-on interfacings are available in a variety of weights. It is recommended to use an iron-on interfacing which is easily removable from the basic fabric. An Iron-on interfacing suits all materials that are easily distorted like stretch fabric such as tricot and jersey.

- > Iron-on interfacings are ironed to the wrong side of the material using a warm iron.



Using paper-backed adhesive stabilizer

Paper-backed adhesive stabilizers are intended to be used for fabrics such as jersey and silk as well as for embroidery projects which are not suited to be hooped in the embroidery hoop.

- > Place the stabilizer in the hoop, so that the paper side is up.
- > Use a pair of scissors to score the paper and remove paper in the hoop area.
- > Position the fabric to be embroidered on the stabilizer and press it on place.
- > Remove any adhesive residue before starting the machine.

Using water-soluble stabilizer



For lace embroidery it is recommended to hoop 1 – 3 layers of water-soluble stabilizer in the embroidery hoop. As the embroidery motif is not embroidered on the fabric, only the thread embroidered motif is left. The embroidery motifs should be combined with short stitches otherwise the individual motifs may fall out.

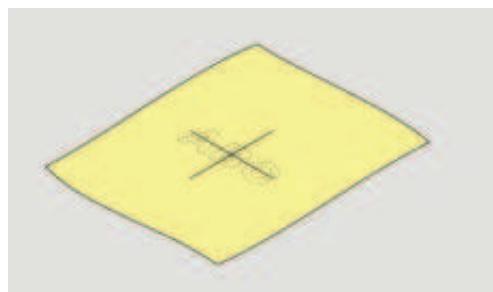
Water-soluble stabilizers are ideal for fine, sheer fabrics where other stabilizers may show through the embroidery stitches as well as for lace embroidery. The stabilizer dissolves in water. Water-soluble stabilizers are an ideal protection for looped pile fabrics preventing the loops from being damaged. It prevents threads from sinking into the material and keeps the fabric pile from poking through the embroidery.

- > Place the stabilizer on the underside of the material.
- > Use adhesive spray to adhere stabilizer if necessary.
- > For material with a pile, reinforce with additional, suitable stabilizer on the wrong side.
- > Place all the layers together into the embroidery hoop.
- > After dissolving, lay the motif down flat and let dry.

Preparing the embroidery hoop


The embroidery hoop consists of an outer and an inner hoop. There is a corresponding template for every hoop. The area to be embroidered is marked in 1 cm (0.39 inch) squares. The center and corner points are marked with holes. The required marks can be transferred to the material.

- > Mark the center of an embroidery motif on the fabric, using a water-soluble pen.




- > Loosen the screw on the outer hoop.
- > Remove the inner hoop.
- > Make sure that the arrow marks of both hoops match.
- > Attach the template holder.

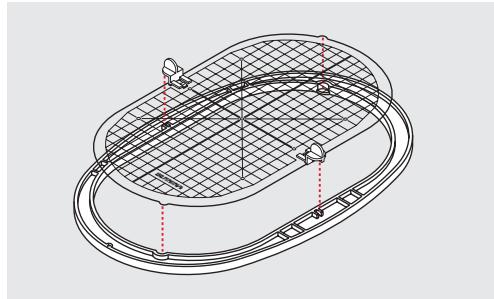- > Place the template in the inner hoop, so the BERNINA logo is at the front edge at the arrow mark until it clicks into place.



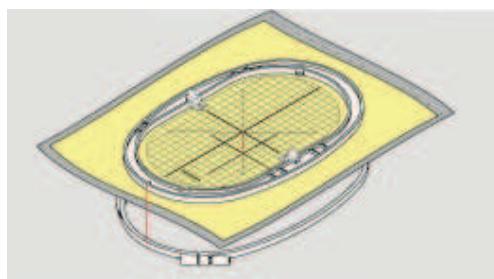
- > Place the material under the inner hoop.
 - > Line up the marked center point on the center of the template.
 - > Place the material and the inner hoop on the outer hoop so that the arrows of both hoops match.



- > Fit the hoops into each other; ensure that the material does not move.
 - > Hoop the fabric to be embroidered tightly.
 - > Tighten the screw.
 - > Remove the template from the hoop by using the template holder.
 - > To avoid scratches on the free arm, press the inner hoop into the outer hoop so that the inner hoop including the fabric protrudes downwards by up to 1 mm.

Attaching the hoop

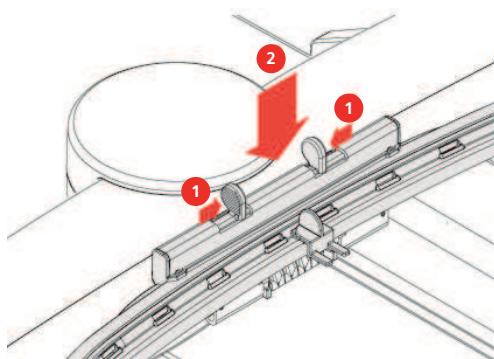- > Raise the needle.
 - > Raise the embroidery foot.
 - > Hold the hoop with the right side of the fabric up with the attaching mechanism to the left.
 - > Position the hoop below the embroidery foot.
 - > Press both attaching mechanisms (1) of the hoop towards each other.
 - > Position the embroidery hoop (2) above the bracket of the embroidery arm.
 - > Press the hoop down until it clicks in position.
 - > Release the attaching mechanism (1).



- > Press the attaching mechanisms of the hoop towards each other to remove the hoop.
 - > Remove the hoop.

Overview Embroidery functions



- | | | | |
|---|------------------------------------|---|-----------------------|
| 1 | «Center Embroidery Hoop to Needle» | 4 | «Grid On/Off» |
| 2 | «Move Hoop to the Back» | 5 | «Center Motif» |
| 3 | «Move Hoop to the Left» | 6 | «Virtual Positioning» |

Center the needle to the embroidery hoop

Relocating the embroidery hoop facilitates threading when the needle is close to the embroidery hoop.



- > Tap «Hoop Indicator>Select Hoop».



- > Tap «Center Embroidery Hoop to Needle».
- > Thread the upper thread.



- > To move the hoop back to its previous position, push the button «Start/Stop».

Moving the hoop to the back

To facilitate changing the bobbin, it is recommended to move the hoop to the back before threading. This makes it easier to open the bobbin cover.



- > Tap «Hoop Indicator>Select Hoop».



- > Tap «Move Hoop to the Back».
- > Thread the bobbin thread. (see page 45)



- > To move the hoop back to its previous position, push the button «Start/Stop». If necessary, pull back the upper thread.

Moving the module for the sewing mode

The embroidery module can be positioned so that any sewing projects can be carried out even if the module is connected.



- > Tap «Hoop Indicator>Select Hoop».
- > Remove the embroidery hoop.



- > Tap «Move Hoop to the Left».



- > Tap «Home».



- > Tap «Sewing Mode».

Grid on/off

When the center of the hoop and the grid are displayed, the embroidery motif can be positioned more exactly.



- > Tap «Hoop Indicator>Select Hoop».



- > To show the hoop center on the display, tap «Grid On/Off».
 - > To show the grid lines, tap «Grid On/Off» again.
 - > To hide the hoop center and the grid lines, tap «Grid On/Off» again.

Locating the center of the embroidery motif

The embroidery hoop is positioned so that the needle is exactly above the center of the embroidery motif or the motif begin.



- > Tap «Hoop Indicator>Select Hoop».



- > To position the hoop so that the needle is placed exactly over the center of the embroidery motif, tap «Center Motif».
 - > To position the hoop so that the needle is placed exactly over the motif start, tap «Center Motif» again.

Virtual positioning of the embroidery hoop

The embroidery hoop is automatically moved to the new position as soon as the embroidery motif is repositioned. Therefore the icon «Virtual Positioning» is activated automatically and outlined in yellow when an embroidery hoop is attached.

Prerequisite:

- The hoop is attached.



- > Tap «Hoop Indicator>Select Hoop».



- > To deactivate the automatic movement of the hoop after repositioning the embroidery motif, tap «Virtual Positioning».

- > To activate the automatic movement of the hoop after repositioning the embroidery motif, tap «Virtual Positioning» again.

14 Setup Program

14.1 Adjusting the embroidery settings in the Setup Program

Further information about this topic (see page 52).

15 Creative embroidering

15.1 Overview embroidery



- | | | | |
|---|---|---|-------------------------|
| 1 | Embroidery time/Embroidery Motif Size | 4 | «i-Dialog» |
| 2 | Scaling up, downsizing and moving the embroidery motif view | 5 | Embroidery motif layers |
| 3 | Area to be embroidered | | |

15.2 Selecting and changing the embroidery motif

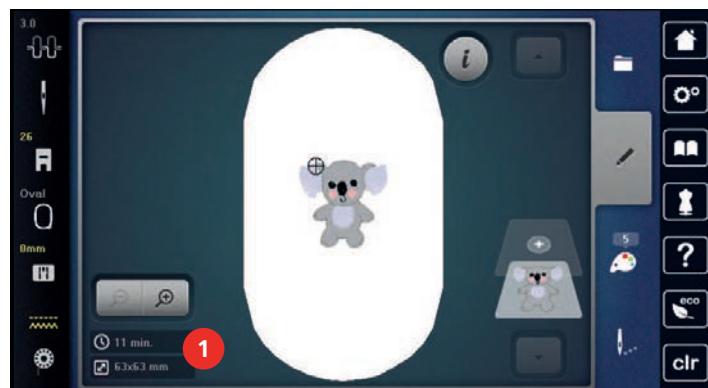


- > Tap «Load Embroidery Motif».
 - > Select a new embroidery motif.



15.3 Checking the embroidery time and the embroidery motif size

In the selection menu «Edit» the estimated embroidery time in minutes as well as the width and height of the embroidery motif is indicated at lower left (1).



15.4 Regulating the speed

The sewing speed can be adjusted infinitely variable with the slide.

- > Move the slide to the left to reduce the sewing speed.
 - > Move the slide to the right to increase the sewing speed.

15.5 Editing the embroidery motif

Overview Editing embroidery motif



- | | |
|---------------------------------|---------------------------------------|
| 1 «Move View» | 9 «Mirror Image Left/Right» |
| 2 «Relocating a stitch pattern» | 10 «Mirror Image Up/Down» |
| 3 «Zoom Out» | 11 «Duplicating» |
| 4 «Zoom In» | 12 «Delete» |
| 5 «Relocating a stitch pattern» | 13 «Check Embroidery Motif Size» |
| 6 «Rotate Embroidery Motif» | 14 «Group Embroidery Motifs» |
| 7 «Change Motif Size» | 15 «Change Embroidery Motif Sequence» |
| 8 «Pinpoint Placement» | 16 «Alter Stitch Type/Stitch Density» |

Scaling up the embroidery motif view

The view of the embroidery motif can be scaled up. In addition to that, the view can be adjusted with or without changing the embroidery position.

- > Select an embroidery motif.
-  > To edit the view of the embroidery motif, tap «Zoom In».
-  > To scale up the view of the embroidery motif, tap «Zoom In» 1 up to 4 times.
-  > To get back to the Edit Mode, tap «Zoom Out» 1 up to 4 times.

Downsizing the embroidery motif view

The view of the embroidery motif can be downsized. In addition to that, the view can be adjusted with or without changing the embroidery position.

- > Select an embroidery motif.
-  > To edit the view of the embroidery motif, tap «Zoom In».
-  > To downsize the view of the enlarged embroidery motif gradually, tap «Zoom Out» 1 – 4 times.

Moving the embroidery motif view

The view of the embroidery motif can be moved. In addition to that, the view can be adjusted with or without changing the embroidery position.

- > Select an embroidery motif.



- > To activate «Move View», tap «Zoom In».
 - «Move View» is activated (dark gray).
- > Move the view of the embroidery motif.
 - The embroidery position is not altered.
- > To get back to the Edit Mode, tap «Zoom Out».



Moving the embroidery motif in enlarged view

The view of the embroidery motif can be moved. In addition to that, the view can be adjusted with or without changing the embroidery position.



- > Select an embroidery motif.
- > To display the icon «Relocating a stitch pattern», tap «Zoom In».



- > Tap «Move Embroidery Motif».
 - The icon turns dark gray.
- > Move the view of the embroidery motif.
 - The embroidery position is altered.



- > To get back to the Edit Mode, tap «Zoom Out».



Moving the embroidery motif

- > Select an embroidery motif.
- > Tap «i-Dialog».



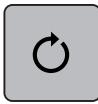
- > Tap «Move Embroidery Motif».
- > Turn the «Upper Multi-function knob» to move the embroidery motif horizontally in 1/10-mm steps.
- > Turn the «Lower Multi-function knob» to move the embroidery motif vertically in 1/10 mm steps or tap and hold the embroidery motif to move the embroidery motif as you like.
 - The relocation is indicated in the yellow-outlined icons.



- > Tap «Center Motif».
 - The embroidery motif is repositioned in the center of the embroidery hoop.

Rotating motif

- > Select an embroidery motif.
- > Tap «i-Dialog».




- > Tap «Rotate Embroidery Motif».
- > Turn the «Upper Multi-function knob» or the «Lower Multi-function knob» to the right to rotate the embroidery motif clockwise.
- > Turn the «Upper Multi-function knob» or the «Lower Multi-function knob» to the left to rotate the embroidery motif counter-clockwise.
- > To rotate the embroidery motif in 90°-steps, tap «Rotate the embroidery motif +90°».

Altering the embroidery motif size proportionally



Enlargements or reductions of the motif size up to maximum 20% achieve the best results.

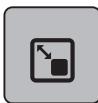If the motif size is to be altered by more than 20%, the motif should be adapted in a separate embroidery software and then reloaded onto the machine.



- > Select an embroidery motif.
- > Tap «i-Dialog».

- > Tap «Change Motif Size».

- > If «Retain proportions» is not outlined in white, tap «Retain proportions».

- «Retain proportions» is outlined in white.



- > Turn the «Upper/Lower Multi-function knob» to the right to scale up the embroidery motif proportionally.
- > Turn the «Upper/Lower Multi-function knob» to the left to downsize the embroidery motif proportionally.



Altering the embroidery motif size disproportionately



Enlargements or reductions of the motif size up to maximum 20% achieve the best results.

If the motif size is to be altered by more than 20%, the motif should be adapted in a separate embroidery software and then reloaded onto the machine.



- > Select an embroidery motif.
 - > Tap «i-Dialog».



- > Tap «Change Motif Size».



- > If «Retain proportions» is outlined in white, tap «Retain proportions».
 - «Retain proportions» is not outlined in white.



- > To make the embroidery motif wider, turn the «Upper Multi-function knob» clockwise.
 - > To make the embroidery motif narrower, turn the «Upper Multi-function knob» anti-clockwise.
 - > To make the embroidery motif longer, turn the «Lower Multi-function knob» clockwise.
 - > To make the embroidery motif shorter, turn the «Lower Multi-function knob» anti-clockwise.

Mirroring embroidery motifs

Embroidery motifs can be mirror-imaged both vertically and horizontally.



- > Select an embroidery motif.
 - > Tap «i-Dialog».



- > To mirror the embroidery motif horizontally, tap «Mirror Image Left/Right».



- > To mirror the embroidery motif vertically, tap «Mirror Image Up/Down».



Changing the stitch type

If the satin stitches are too long, they can be changed to step stitches.

- > Select an embroidery motif.
- > Tap «i-Dialog».



- > Tap «Alter Stitch Type/Stitch Density».



- > Touch the switch in the upper section of the display (1) to change the satin stitch to the step stitch.
- > Set the stitch length to 2.



Altering the stitch density

If the satin stitches are embroidered too densely, the stitch density can be adjusted.

- > Select an embroidery motif.
- > Tap «i-Dialog».



- > Tap «Alter Stitch Type/Stitch Density».



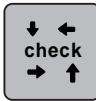
- > Adjust the stitch density (1).




Checking the size and the position of the embroidery motif

It can be checked whether or not the embroidery motif matches the designated position/location on the fabric. Points which are beyond the embroidery hoop are not traveled to.

- > Select an embroidery motif.
- > Tap «i-Dialog».



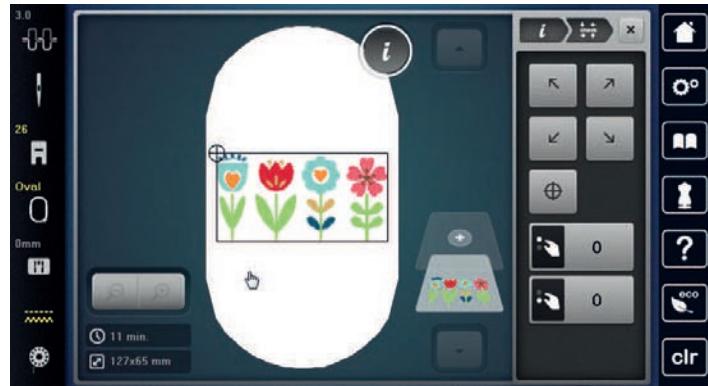- > Tap «Check Embroidery Motif Size».
 - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display.



- > To select the desired corner of the embroidery motif, tap the respective arrow.
 - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display. If the embroidery motif hasn't been positioned correctly yet, the position can be altered via the Upper/Lower Multi-function knobs and the complete embroidery positions can be checked again.
- > To position the needle in the center of the embroidery motif, tap «Center Motif».
- > Turn the «Upper Multi-function knob» to move the embroidery motif horizontally.
- > Turn the «Lower Multi-function knob» to move the embroidery motif vertically.



Deleting an embroidery motif

The active embroidery motif is deleted.



- > Select an embroidery motif.
- > Tap «i-Dialog».



- > Tap «Delete».

Changing the sequence within an embroidery motif combination

The sequence of the embroidery motifs in the embroidery motif combination can be changed.



Prerequisite:

- The embroidery motif combination has been created or the motif has been ungrouped.
- > Tap «i-Dialog».



- > Tap «Change Embroidery Motif Sequence».
- > Select the required embroidery motif and move it to the corresponding position.

Grouping embroidery motifs

Embroidery motifs can be added to or removed from a group. The grouped embroidery motifs can be processed in the same way as for one embroidery motif.

The sequence of the embroidery motifs in the group can be changed. (see page 145)

If the grouping of a embroidery motif has been canceled, i.e. the embroidery motif has been broken down into different elements/colors, the colors are no longer combined for new groupings. With alphabets, the length of the connecting stitches must first be set to 1 in the setup. The cancellation of the group then works for all letters.

- > Create an embroidery motif combination.
- > Select the embroidery motif (1) in the embroidery motif combination.



- > Tap «i-Dialog».



- > Tap «Group Embroidery Motifs».



- > Tap «Group».

– Embroidery motifs above the selected embroidery motif are added to the embroidery motif group.

- > Select the embroidery motif group.

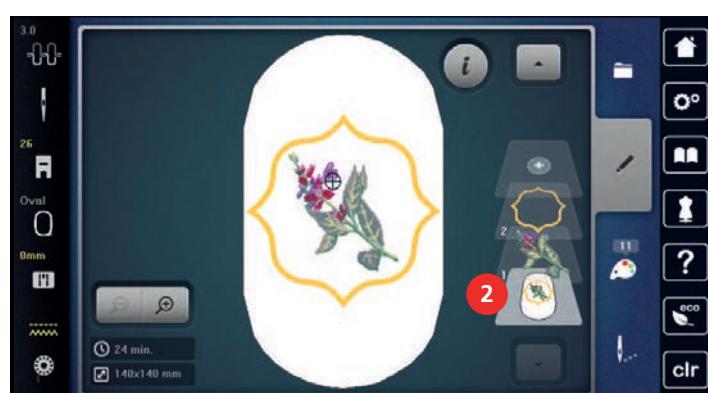
- > Tap «Ungroup».

– The grouping is canceled.

or

- > Create an embroidery motif combination.

- > Select all embroidery motifs (2).



- > Tap «i-Dialog».





- > Tap «Group».
 - All embroidery motifs are added to the embroidery motif group.
 - > Select the embroidery motif group.
 - > Tap «Ungroup».
 - The grouping is canceled.



15.6 Pinpoint placement

Positioning of grid points

This function allows the exact positioning of the embroidery motif on the fabric in an easy way. The positioning points can be placed in the grid.

Prerequisite:

- Any two points of the embroidery motif are marked with chalk or a water-soluble pen on the fabric. The place or the location where the embroidery motif is to be positioned is clearly visible.

> Select an embroidery motif.
> Tap «i-Dialog».



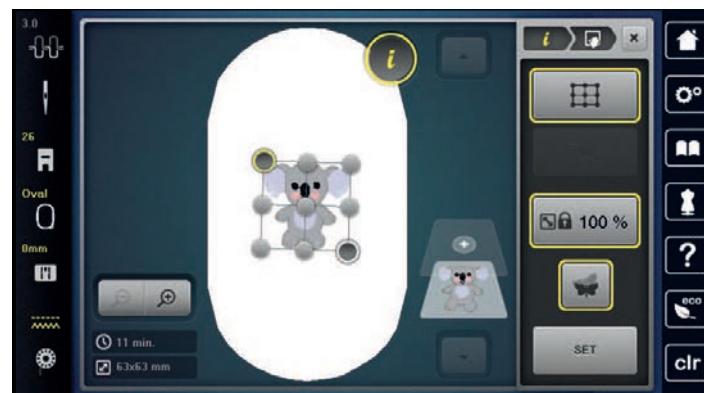
- > Tap «Pinpoint Placement».



- > Tap «Grid Point Positioning».
 - The embroidery motif is given a grid with nine different location/positioning points.



- > To prevent the size of the embroidery motif from being changed when positioning the points, tap «Scale the Size of Embroidery Motif».
 - > Select the desired positioning point to which the embroidery motif is to be adjusted.
 - The point changes color.
 - > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.
 - > To confirm the changed position, tap «Save Position».
 - The point changes color and is set.
 - > Select the second positioning point of the embroidery motif.
 - > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.



- > To confirm the changed position, tap «Save Position».
 - The point changes color and is set. The embroidery motif is adjusted accordingly.
- > To reset the changes and revert to the default settings, tap «Reset Pinpoint Placement».



Free point positioning

This function allows the exact positioning of the embroidery motif on the fabric in an easy way. The points can be defined as you like within the embroidery motif.

Prerequisite:

- Any two points of the embroidery motif are marked with chalk or a water-soluble pen on the fabric. The place or the location where the embroidery motif is to be positioned is clearly visible.
- > Select an embroidery motif.
- > Tap «i-Dialog».



- > Tap «Pinpoint Placement».



- > Tap «Free Point Positioning».



- > To prevent the size of the embroidery motif from being changed when positioning the points, tap «Scale the Size of Embroidery Motif».
- > Define a desired point within the embroidery motif.
 - The positioning point is displayed.
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.
- > To confirm the changed position, tap «Save Position».
 - The point changes color and is set.
- > Select the second positioning point of the embroidery motif.
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.



SET



- > To confirm the changed position, tap «Save Position».
 - The point changes color and is set. The embroidery motif is adjusted accordingly.



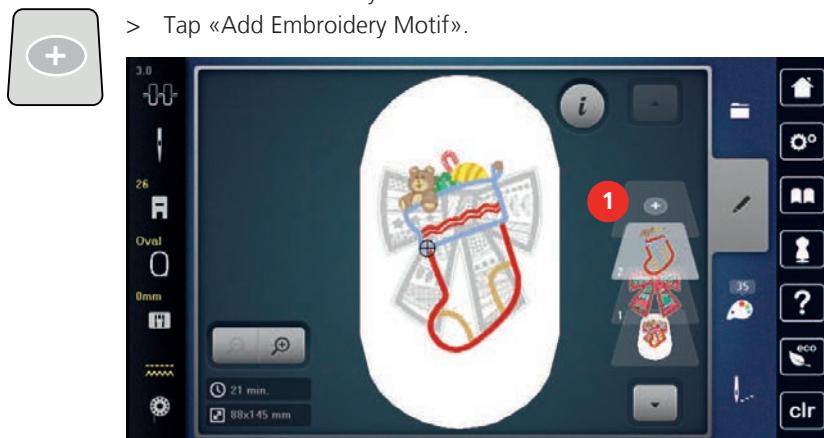
- > To reset the changes and revert to the default settings, tap «Reset Pinpoint Placement».

15.7 Combining embroidery motifs

Combining embroidery motifs

In the Combi-mode several embroidery motifs can be combined.

- > Select an embroidery motif.
 - > Tap «Add Embroidery Motif».



- > Select another embroidery motif.

Deleting a single embroidery motif

Prerequisite:

- A combination of embroidery motifs has been created.
 - > Tap the desired embroidery motif in the area of the embroidery motif level (1), keep it touched and drag it outwards.
 - A new window opens.



- > To delete the selected embroidery motif, tap «Confirm».

Duplicating the embroidery motif

- > Select an embroidery motif.
 - > Tap «i-Dialog».





- > Tap «Duplicating».
- The embroidery motif (1) is duplicated (2).



Duplicating a combination



When a combination is duplicated, the individual embroidery motifs cannot be selected anymore.

- > Select an embroidery motif.
- > Tap «Add Embroidery Motif».
- > Select another embroidery motif.
- > Select the combination (1).



- > Tap «i-Dialog».



- > Tap «Duplicating».
- The combination is duplicated (2).

15.8 Creating lettering

Overview embroidery alphabets

Embroidery motif	Name
ABC	Swiss Block
<i>ABC</i>	Anniversary

Embroidery motif	Name
ABC	Curly
ABC	Drifter
ABC	Childs Play
ABB	Russian Textbook

Creating words/sentences



Lettering is always embroidered in one color. To embroider single letters or single words in another color, every letter or every word has to be selected individually and placed in the area to be embroidered.

Lettering can be positioned within the hoop as you like. When the embroidery motif is positioned outside the area to be embroidered, the hoop is outlined in red on the display. With the hoop selection it can be checked whether or not the embroidery motif can be embroidered in another hoop. When the lettering does not fit in any hoop, two single words can be combined and positioned below each other as the following example will show.



- > Select «Alphabets».
- > Select the font.
- > Enter the text «Made to».



- > to use upper-case letters, tap «Upper Case Characters» (standard setting).



- > To use lower-case letters, tap «Lower Case Characters».



- > To use figures and mathematical symbols, tap «Numbers and Mathematical Characters».



- > To use special characters, tap «Special Characters».



- > Tap the text box above the keyboard to delete the entered text completely.
- > To delete single letters of the entered text, tap «Delete».



- > To accept the text, tap «Confirm».



- > Tap «Hoop Indicator>Select Hoop».
- > Select the hoop.
- > To get back to the Edit Mode, tap, «Hoop Indicator>Select Hoop» again.

Editing words/sentences



- > Tap «i-Dialog».



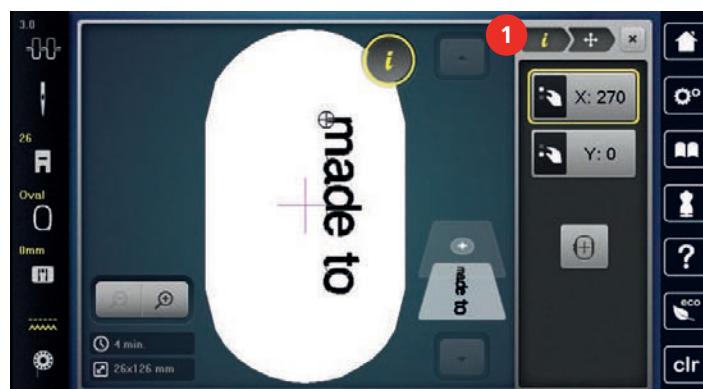
- > To rotate the embroidery motif, tap «Rotate Embroidery Motif» adjust the angle of rotation with the Multifunction Knobs.



- > To rotate the text by 90°, tap «Rotate the embroidery motif +90°».
- > To return to the «i-Dialog», tap «i» (1) in the Process Navigation.




- > To relocate the embroidery motif, tap «Move Embroidery Motif» and define the relocation with the Multifunction Knobs.
- > Turn the «Upper Multi-function knob» to move the embroidery motif horizontally.
- > Turn the «Lower Multi-function knob» to move the embroidery motif vertically.



- > Tap «Add Embroidery Motif».
- > Enter the text and rotate it if necessary.



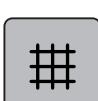- > Tap «Hoop Indicator>Select Hoop».



- > To position the text lines more precisely, tap «Grid On/Off».



15.9 Changing the colors of the embroidery motif

Overview changing the color




- | | |
|---------------------------------|-----------------------------|
| 1 «Color indication» | 4 «Altering color/brand» |
| 2 Preview for selected color | 5 «Color Information» |
| 3 «Assign Thread Brand» | |

Changing the colors

- > Select an embroidery motif.
- > Tap «Color Information».



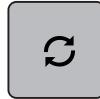- > To change a color, tap «Altering color/brand» next to the color to be changed.
- > To display additional colors, swipe up or down on the display.



- > To select the color by entering the color number, tap «Color selection via number».
- > Enter the number for the required color.
 - The color icon is displayed on the left.
- > To confirm the color selection, touch the color icon that is displayed on the left.

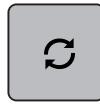


Changing the thread brand

- > Select an embroidery motif.
- > Tap «Color Information».




- > Tap «Altering color/brand».
- > To display other thread brands, scroll to the left and to the right.



- > Tap «Assign Thread Brand».
 - Any thread colors of the selected embroidery motif will be matched with the selected thread brand.

15.10 Embroidering the embroidery motif

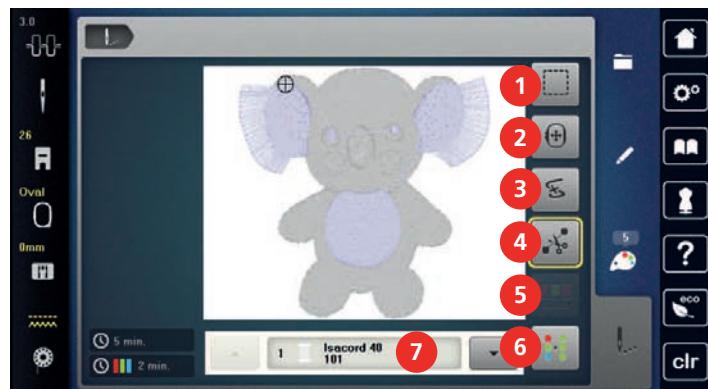Overview Embroidery menu



- | | | | |
|---|-------------------------------|---|---|
| 1 | «Basting» | 5 | «Reduce Color Changes» |
| 2 | «Move Hoop» | 6 | «Multi-colored Embroidery Motif On/Off» |
| 3 | «Embroidery Sequence Control» | 7 | «Color indication» |
| 4 | «Cut Connecting Stitches» | | |

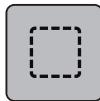
Adding basting stitches

The basting stitches can be embroidered along the embroidery motif. This gives the fabric and embroidery stabilizer a better hold.

- > Select an embroidery motif.
- > Tap «Embroidery».



- > To embroider the basting stitches along an embroidery motif, tap «Basting».
- > To deactivate the basting stitches, tap «Basting» again.




Moving the hoop

If the embroidery motif is so big that repeated rehooping is necessary, the embroidered motif can be moved again.

- > Select an embroidery motif.
- > Tap «Embroidery».



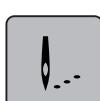- > Tap «Move Hoop».
- > Turn the «Upper Multi-function knob» to move the embroidery motif horizontally.
- > Turn the «Lower Multi-function knob» to move the embroidery motif vertically.



- > To accept the settings, tap «Embroidery» in the Process Navigation.



Embroidery sequence control when thread breaks

If the thread breaks, the needle can be repositioned in the embroidery motif using the function Embroidery Sequence Control.

- > Select an embroidery motif.
- > Tap «Embroidery».



- > Tap «Embroidery Sequence Control».
 - In the left section of the display a compact view of the embroidery motif is displayed. On the right side the enlarged embroidery motif is displayed.
- > Select the desired position in the compact view.
- > Turn the «Upper Multi-function knob» to move the hoop stitch by stitch.
- > Turn the «Lower Multi-function knob» to move the hoop in large steps.
 - The number in the yellow-outlined icon indicates the number of stitches within the embroidery sequence.
- > To select the desired stitch by entry, tap the icon «Stitch Position via number».



Cutting connecting stitches

The function is activated by default and the connecting stitches are cut automatically. When the function is deactivated, the connecting stitches between the embroidery motifs must be cut manually.

- > Select an embroidery motif.
- > Tap «Embroidery».



- > To deactivate the function, tap the yellow-outlined icon «Cut Connecting Stitches».
- > To activate the function, tap the yellow-outlined icon «Cut Connecting Stitches» again.



Reducing color changes

When the embroidery motifs overlap, the color changes **cannot** be reduced.

- > Select an embroidery motif.
- > Tap «Embroidery».



- > Tap «Reduce Color Changes».
 - Identical colors of the embroidery motif are collected to one color.



Multi-colored embroidery motif on/off

Multi-colored embroidery motifs can also be embroidered in one color.

- > Select an embroidery motif.
- > Tap «Embroidery».





- > Tap «Multi-colored Embroidery Motif On/Off».
 - The embroidery motif is embroidered in one color.

Color indication

Every color of the embroidery motif can be selected individually. The hoop moves to the first stitch of the current color. The currently active color can be embroidered individually or in another sequence.



- > Select an embroidery motif.
- > Tap «Embroidery».
- > Touch the icon Scroll up to select the previous color of the embroidery motif.

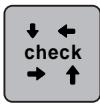
15.11 Freearm Embroidery

Freearm embroidery is defined as embroidering tubular fabrics or garments which are positioned around the freearm of the embroidery machine while being embroidered. Often used for sleeves, trouser legs or other narrow-tailored garments.

The mobility of the embroidery arm can be restricted or impeded with very narrow fabric tubes. Therefore make sure that the embroidery hoop can move forwards and backwards sufficiently. An impediment of the embroidery arm caused by a fabric tube which is too tight can result in embroidery motif offset or damage to the fabric.

Check the movability of the freearm


Note: If the fabric tube is narrow, deactivate the Thread Away Mode in the Setup Program.



- > Open the embroidery motif on the machine and edit as desired.
- > Mark the embroidery motif position and the size on the fabric in a suitable way.
- > Select the embroidery hoop as small as possible.
- > Hoop or stick the fabric along with the appropriate stabilizer in the embroidery hoop, depending on the stabilizer.
- > Pull the fabric tube carefully over the freearm of the machine and attach the embroidery hoop at the clutch of the embroidery module.
- > If necessary, reposition the embroidery motif.
- > Tap «Check Embroidery Motif Size».
- > After the successful check of the embroidery motif size, start the embroidery process.

15.12 Administering embroidery motifs

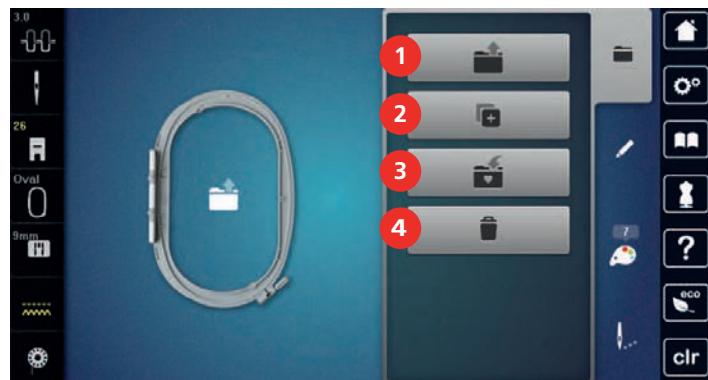Administering embroidery motifs



- | | |
|------------------------------|--------------------------------|
| 1 «Load Embroidery Motif» | 3 «Save Embroidery Motif» |
| 2 «Add Embroidery Motif» | 4 «Delete Embroidery Motif» |

Saving embroidery motifs in the personal memory

In the file «Save Embroidery Motifs» any embroidery motifs including individually edited embroidery motifs can be saved.

- > Select an embroidery motif.
- > Edit the embroidery motif.
- > Tap «Selection».



- > Tap «Save Embroidery Motif».
 - The embroidery motif to be saved is outlined in yellow.
 - The «Embroidery machine» is activated.



- > Tap «Confirm».



Saving the embroidery motif on the BERNINA USB stick

- > Select an embroidery motif.
- > Edit the embroidery motif.
- > Tap «Selection».



- > Tap «Save Embroidery Motif».
 - The embroidery motif to be saved is outlined in yellow.
- > Insert the BERNINA USB stick into the USB port of the machine.
- > Tap «USB Stick».
- > Tap «Confirm».



Overwriting the embroidery motif in the personal memory

- > Select an embroidery motif.
 - > Edit the embroidery motif.
 - > Tap «Selection».



- > Tap «Save Embroidery Motif».
 - The embroidery motif to be saved is outlined in yellow.
 - The «Embroidery machine» is activated.
 - > Select the embroidery motif which is to be overwritten.
 - > Tap «Confirm».



Overwriting the embroidery motif on the BERNINA USB stick

- > Select an embroidery motif.
 - > Edit the embroidery motif.
 - > Tap «Selection».



- > Tap «Save Embroidery Motif».
 - The embroidery motif to be saved is outlined in yellow.
 - > Insert the BERNINA USB stick into the USB port of the machine.
 - > Tap «USB Stick».
 - > Select the embroidery motif which is to be overwritten.
 - > Tap «Confirm».



Importing stitch patterns

Stitch patterns or stitch pattern combinations can be imported from the Sewing Mode to the Embroidery Mode and edited like embroidery motifs. Therefore endless embroidery can be combined quickly and easily and saved as an embroidery motif in the file «Personal embroidery motifs».

- > Tap «Home».



- > Tap «Sewing Mode».
 - > Select a stitch pattern.



- > Tap «Home».



- > Tap «Embroidery Mode».
 - The stitch pattern is automatically stored in the folder «Personal Embroidery motif».



- > Select «Personal Embroidery motif»



- > Select an embroidery motif.



Loading an embroidery motif from the personal memory



- > Tap «Selection».



- > Tap «Load Embroidery Motif».



- > Select «Personal Embroidery motif».
- > Select an embroidery motif.

Loading an embroidery motif from the BERNINA USB stick



- > Tap «Selection».
- > Insert the BERNINA USB stick into the USB port of the machine.



- > Tap «USB Stick».
- > Select a personal embroidery motif.

Deleting an embroidery motif from the personal memory

The embroidery motifs which are saved in the personal memory can be deleted individually.



- > Tap «Selection».



- > Tap «Delete».



– The «Embroidery machine» is activated.

- > Select the embroidery motif which is to be deleted.



- > Tap «Confirm».

Deleting an embroidery motif from the BERNINA USB stick



> Tap «Selection».



> Tap «Delete».



> Insert the BERNINA USB stick into the USB port of the machine.

> Tap «USB Stick».



> Select the embroidery motif which is to be deleted.

> Tap «Confirm».



16 Embroidery

16.1 Embroidering via the button «Start/Stop»

In case of a power cut the embroidery process is interrupted. After the restart the machine goes to the position which was embroidered last.



- > Push the button «Start/Stop» until the embroidery machine starts.
 - All parts of the motif being in the current color are embroidered.
 - The embroidery machine stops automatically at the end.
 - Both threads are cut automatically.
 - The embroidery machine switches to the next color automatically.
 - > Change the upper thread.
 - > To embroider the new color, push the button «Start/Stop».
 - After finishing the embroidery motif, the machine stops automatically and the threads are cut automatically.



16.2 Increasing the embroidery speed

To ensure the best embroidery quality, the speed when embroidering is reduced depending on the embroidery position. Choose between the two options to either embroider at optimal or maximum speed. Standard = optimal speed. It has to be considered that the quality of the embroidered embroidery motif at maximum speed cannot be ensured.

By switching the machine off and on, the optimal embroidery speed is activated.

Prerequisite:

- The embroidery motif is selected.

> Tap «Embroidery speed».
 - The maximum speed is activated

> Tap «Embroidery speed» again.
 - The optimal speed is activated.



16.3 Adjusting the upper thread tension

The default setting of the upper thread tension is set automatically as soon as a stitch pattern or an embroidery motif is selected.

When using other types of sewing or embroidery threads, the optimal tension may vary. Therefore it may be necessary to adjust the upper thread tension according to the sewing or embroidering project as well as the desired stitch pattern or the embroidery motif individually.

The higher the upper thread tension, the tighter the upper thread which means that the bobbin thread is pulled up to the top of the fabric. When the upper thread tension is low, the upper thread is less tightened which means that the bobbin thread is pulled up less.

Alteration of the upper thread tension affect the currently selected stitch pattern and all embroidery motifs. Permanent alterations of the upper thread tension for the Sewing Mode (see page 48) and for the Embroidering Mode (see page 52) can be made in the Setup Program.



- > Adjust the upper thread tension.



- > Tap the yellow-outlined icon on the right side to reset the alterations to the default setting.
> Tap the yellow-outlined icon on the left side to reset the alteration to default setting in the **Setup Program**.

16.4 Embroidering via the foot control

Embroidering via the foot control is recommended when only a short sequence has to be embroidered. While embroidering, the foot control must be pressed down all the time.

- > Press the foot control to start embroidering.



17 Care and maintenance

17.1 Firmware

Checking the firmware version

The firmware and hardware versions of the machine and the connected embroidery module are displayed.

- > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Information».



- > Tap «Machine Data».



Updating firmware

The latest firmware of the machine and a detailed step-by-step instruction for updating processes can be downloaded at www.bernina.com. In general, personal data and settings are automatically transferred during a firmware update. For reasons of safety, it is also recommended to save data and settings on a BERNINA USB stick before the firmware update is started. If personal data and settings should get lost during a firmware update, they can be transferred to the machine again afterwards.

- > Insert the USB stick with the new firmware version into the machine.
 - > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Maintenance/Updates».



- > Tap «Save Data».
 - When the data is saved, a green tick is temporarily displayed.

NOTICE

The BERNINA USB stick (optional accessory) has been removed too early

Firmware has not been updated and the machine cannot be used.

- > Remove the BERNINA USB stick (optional accessory) only after the update has been completed successfully.

Update

- > To start the firmware update, tap «Update».

Note: The update may take several minutes. Do not switch off the machine or remove the USB stick during the update.

- The machine restarts. When the update is complete, a message appears.

Recovering saved data

If personal data and settings after a software update are not available anymore, they can be transferred to the machine again afterwards.

- > Insert the BERNINA USB stick providing the saved data and settings into the USB port of the machine.
- > Tap «Setup Program».



- > Tap «Machine Settings».



- > Tap «Maintenance/Updates».



- > Tap «Machine Update».

**NOTICE**

The BERNINA USB stick (optional accessory) has been removed too early

Saved data cannot be transferred and the machine cannot be used.

- > Remove the BERNINA USB stick (optional accessory) only after the saved data has been transferred successfully.



- > Tap «Load Data».
 - After the data has been transferred, a green tick is temporarily displayed.

17.2 Machine

Cleaning the display

- > Clean the display in the switched off status with a soft slightly damp microfiber cloth.

Cleaning the feed dog

Remaining threads under the stitch plate must occasionally be removed.

- > Raise the needle and presser foot.

⚠ CAUTION

Electronically driven components

Risk of injury near the needle and the hook.

- > Switch the machine off and disconnect it from the power supply system.

- > Remove the needle and presser foot.

- > Lower feed dog.



- > Remove the stitch plate.

NOTICE

Dust and thread residues inside the machine

Damage to mechanical and electronic components.

- > Use a brush or a soft cloth.
 - > Do not use compressed air spray.

- > Clean the feed dog with the brush.

Cleaning the hook

! CAUTION

Electronically driven components

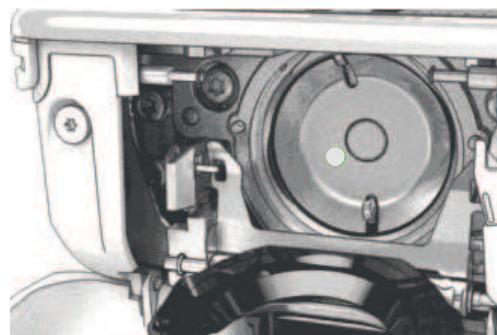
Risk of injury near the needle and the hook.

- > Switch the machine off and disconnect it from the power supply system.

- > Open the hook cover.
 - > Remove the bobbin case.
 - > Press the release lever to the left.



- > Fold down the fastening bracket along with the black hook race cover.
 - > Remove the hook.



NOTICE

Dust and thread residues inside the machine

Damage to mechanical and electronic components.

- > Use a brush or a soft cloth.
- > Do not use compressed air spray.

- > Clean the hook race with a brush and a soft cloth. Do not use any sharp objects.
- > Hold the hook at the pin in the center with two fingers.
- > Guide the hook, lower edge first, at an angle from above behind the hook race cover.
- > Position the hook with the two lugs on the hook driver meeting the corresponding openings in the hook; the colored mark on the hook driver should be visible through the hole in the hook.
- > Insert the hook.
 - The hook is magnetic and therefore fastened to the correct position.
- > Close the hook race cover and the fastening bracket until the release bracket engages.
- > As a check, turn the handwheel.
- > Insert the bobbin case.

Lubricating the hook

Lubricating the hook can prevent the occurrence of unwanted noises in the hook area. BERNINA recommends lubricating the hook in the following cases:

- Before using the machine for the first time
- After a longer downtime of the machine
- For intensive use: daily before sewing
- When the message " Lubricate the machine " is displayed
- In case of unwanted noises in the hook area

⚠ CAUTION

Electronically driven components

Risk of injury near the needle and the hook.

- > Switch the machine off and disconnect it from the power supply system.

- > Remove the bobbin case.
- > Press the release lever to the left.



- > Fold down the fastening bracket along with the black hook race cover.

- > Remove the hook.



- > Clean the hook race with a brush and a soft cloth. Do not use any sharp objects.
- > Add one drop of BERNINA oil down into the hook race.



- > Add one drop of oil into each of the two oil depots so that the felts are damp, and make sure that the red-marked surface of the hook sleeve remains free of oil.



- > Hold the hook at the pin in the center with two fingers.
- > Guide the hook, lower edge first, at an angle from above behind the hook race cover.
- > Position the hook with the two lugs on the hook driver meeting the corresponding openings in the hook; the colored mark on the hook driver should be visible through the hole in the hook.
- > Insert the hook.
 - The hook is magnetic and therefore fastened to the correct position.
- > Close the hook race cover and the fastening bracket until the release bracket engages.
- > As a check, turn the handwheel.
- > Insert the bobbin case.
- > Sew or embroider on a test fabric.

Cleaning the thread catcher



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Maintenance/Updates».

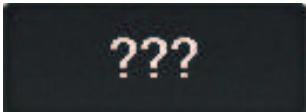
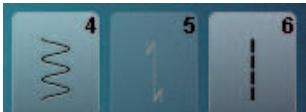
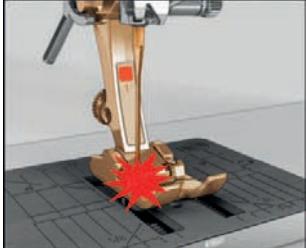





> Tap «Cleaning the thread catcher».




> Clean the thread catcher according to the instructions on the display.

18 Errors and faults

18.1 Error messages


Message on the display	Cause	Solution
	Stitch number unknown.	> Check the entry and enter the new number.
	The stitch pattern cannot be selected in the Combi-mode.	> Combine other stitches.
	The feed dog is not lowered.	> To lower the feed dog, push the button «Feed dog up/down».
	The selected needle and stitch plate cannot be used in combination.	> Replace the needle. > Replace the stitch plate.
	The needle is not at its top end.	> Adjust the needle position via the handwheel.
	The upper thread is used up.	> Rethread.
	The upper thread has broken.	> Rethread.
	The bobbin thread is used up.	> Rethread.
	The bobbin thread has broken.	> Clean the hook. > Rethread.

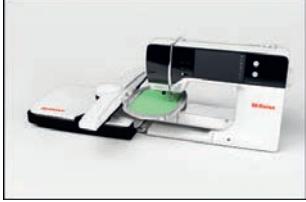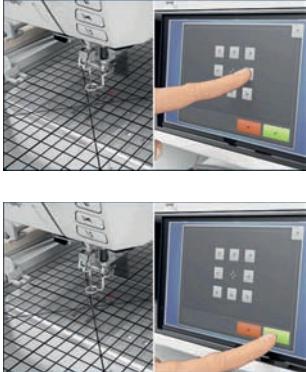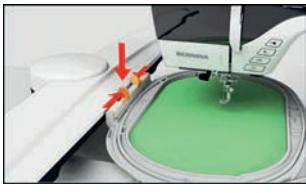Message on the display	Cause	Solution
	The main motor is not running.	<ul style="list-style-type: none"> > Turn the handwheel clockwise until the needle is at its top position. > Remove the sewing project. Do not pull on the fabric or the thread. > Remove the stitch plate. > Remove the thread remnants. > Clean the hook. > Remove the hook and make sure that there are no pieces of broken needle points on the magnetic back of the hook. > Deactivate the thread catcher in the Setup Program.
	The fabric under the presser foot is too thick.	<ul style="list-style-type: none"> > Reduce the fabric thickness.
	The contact between the machine and the embroidery module is interrupted as a result of vibrations.	<ul style="list-style-type: none"> > Make sure that the module and the machine are standing on a stable, even surface. > Connect the Embroidery Module to the machine.
	The needle position doesn't correspond with the center of the hoop.	<ul style="list-style-type: none"> > Calibrate the hoop.
	The embroidery module is not attached.	<ul style="list-style-type: none"> > Connect the Embroidery Module to the machine. > Contact the specialized BERNINA dealer to have the machine checked.
	The hoop is not attached.	<ul style="list-style-type: none"> > Attach the hoop.

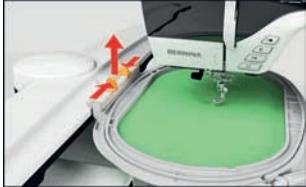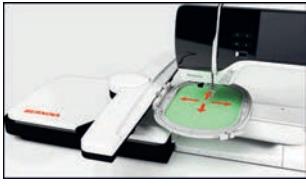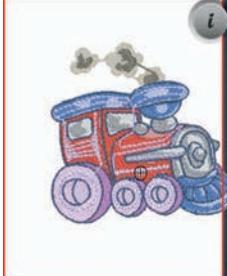Message on the display	Cause	Solution
	The hoop is attached.	> Remove the embroidery hoop.
	The movement of the hoop follows.	> Tap «Confirm».
	The embroidery motif is partly outside the hoop.	> Reposition the embroidery motif and start embroidering it again.
	The embroidery motif is too large.	> Reduce the size of the embroidery motif. > Attach a larger hoop.
Insufficient free space on the BERNINA USB stick (optional accessory).	There is not enough free capacity on the BERNINA USB stick (optional accessory).	> Make sure that the BERNINA USB stick (optional accessory) is used. > Delete data from the BERNINA USB stick (optional accessory).
No personal data on the BERNINA USB stick (optional accessory).	No personal data for recovery available on the BERNINA USB stick (optional accessory).	> Make sure that the data and settings have been saved on the BERNINA USB stick (optional accessory).
The recovery of personal data has failed.	The firmware update has been successful but the personal data could not be recovered.	> Make sure that the data and settings have been saved on the BERNINA USB stick (optional accessory). > Transfer saved data to the machine.
No BERNINA USB stick is inserted. Make sure that, throughout the entire automatic update, the same BERNINA USB stick remains inserted.	The BERNINA USB stick (optional accessory) is not inserted.	> Use a BERNINA USB stick (optional accessory) providing enough free capacity.

Message on the display	Cause	Solution
The firmware update has failed.	The latest firmware version cannot be found on the USB stick.	<ul style="list-style-type: none"> > Make sure that the compressed zip file has been unzipped for the firmware update. > Check whether the data for the software update is saved directly on the data medium and not in a file on the USB stick. > Updating Firmware.
 	The machine needs cleaning/lubricating.	<ul style="list-style-type: none"> > Clean the machine. > Lubricate the machine. <p>Important information on lubricating:</p> <ul style="list-style-type: none"> > Too much oil may stain the fabric and the thread. > After lubricating, sew/embroider a test piece first.
The automatic thread cutter (at the thread catcher) needs cleaning.	The automatic thread cutter needs cleaning. The message appears every time when the machine is started as soon as 1000 cutting cycles have been carried out.	<ul style="list-style-type: none"> > Tap «Confirm». <ul style="list-style-type: none"> – The machine calls up the function «Clean the thread catcher». > Clean the thread catcher according to the instructions on the display. <ul style="list-style-type: none"> – The counter for the cutting cycles is reset.
It is time for the regular maintenance. Please contact your authorized BERNINA dealer to make an appointment.	<p>The machine needs maintenance. The message appears after the programmed service interval has expired.</p> <p>Important information: When cleaning and maintenance work is carried out as instructed, the functionality and long service life of the machine is ensured. Ignoring the terms can affect the operating life and restrict the guarantee. The cost allocation for maintenance work is regulated nationally. Consult your authorized BERNINA dealer or your service center for more details.</p>	<ul style="list-style-type: none"> > Contact an authorized BERNINA dealer. > Delete the message temporarily by touching the icon «ESC». <p>After the third deletion, the message is not displayed until the next service interval is reached.</p>

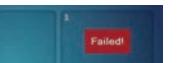

Message on the display	Cause	Solution
	The calibration of the Buttonhole foot with slide #3A has failed.	<ul style="list-style-type: none">> Check the presser foot for ease of movement. If necessary, remove lint, dust and fabric remnants.> Clean the reflector with a soft, slightly damp microfiber cloth.> Check the position of the reflector. If necessary, correct the position of the reflector or replace the presser foot.> Check the plastic on the underside of the presser foot for signs of wear. If necessary, replace the presser foot.> Clean the feed dog.> If the error still occurs, contact your authorized BERNINA dealer.

18.2 Troubleshooting

Fault	Cause	Solution
Uneven stitch formation	Upper thread too tight or too loose.	<ul style="list-style-type: none"> > Adjust the upper thread tension. > Check the thread feed from the thread spool.
	Needle blunt or bent.	<ul style="list-style-type: none"> > Replace the needle, make sure that a new BERNINA quality needle is used.
	Poor quality needle.	<ul style="list-style-type: none"> > Use a new BERNINA quality needle.
	Poor quality thread.	<ul style="list-style-type: none"> > Use quality thread.
	Incorrect needle/thread combination.	<ul style="list-style-type: none"> > Match the needle with the thread size.
	Incorrectly threaded.	<ul style="list-style-type: none"> > Rethread.
	Fabric has been pulled.	<ul style="list-style-type: none"> > Feed the fabric evenly.
Uneven stitch formation	Incorrect bobbin case is used.	<ul style="list-style-type: none"> > Use the supplied bobbin case marked with the triangle.



Fault	Cause	Solution
Skipped stitches	Incorrect needle.	> Use the needle system 130/705H.
	Needle blunt or bent.	> Replace the needle.
	Poor quality needle.	> Use a new BERNINA quality needle.
	The needle is incorrectly inserted.	> Insert the needle with the flat side to the back as far up as it will go into the needle holder and tighten the screw.
	Incorrect needle point.	> Match the needle point to the texture of the material.
Faulty stitching	Thread remnants between the thread tension discs.	> Fold a piece of thin material and slide the folded edge (not the raw edges) between the thread tension discs.
	Incorrectly threaded.	> Rethread.
	Thread remnants below the bobbin case spring.	> Remove the thread remnants under the spring.
Upper thread breaks	Incorrect needle/thread combination.	> Match the needle with the thread size.
	Upper thread is too tight.	> Reduce the upper thread tension.
	Incorrectly threaded.	> Rethread.
	Poor quality thread.	> Use quality thread.
	The stitch plate or the hook tip is damaged.	> Contact the nearest specialized BERNINA dealer to have the damages repaired. > Replace the stitch plate.
Lower thread breaks	The thread is caught in the area of the thread take-up lever.	> Remove the screw (1) on the headframe with the angular Torx Screwdriver. > Pull the headframe at the bottom slightly forward. > Flip the headframe upwards a bit and remove it. > Remove the thread remnants. > Attach the headframe and tighten the screw.
		
	The bobbin case is damaged.	> Replace the bobbin case.
	The stitch hole in the stitch plate is damaged.	> Contact the nearest specialized BERNINA dealer to have the damages repaired. > Replace the stitch plate.
	Needle blunt or bent.	> Replace the needle.

Fault	Cause	Solution
Needle breaks	The needle is incorrectly inserted. Fabric has been pulled. Thick fabric has been pushed. Knotted thread.	> Insert the needle with the flat side to the back as far up as it will go into the needle holder and tighten the screw. > Feed the fabric evenly. > Use a suitable presser foot, e. g. Jeans Foot #8, for thick fabric. > Use the height compensating tool when sewing over a thick seam. > Use quality thread.
Display is inactive	Incorrect calibrating data. The eco Mode is active.	> Recalibrate the display. (see page 58) > Tap «eco Mode».
Stitch width not adjustable	The selected needle and stitch plate cannot be used in combination. The «Presser foot indicator / presser foot selection» prevents the adjustment of the stitch width.	> Replace the needle. > Replace the stitch plate. > Select the fitted presser foot.
Speed too low	Unfavorable room temperature. Settings in the Setup Program.	> Place the machine in a warm room one hour before use. > Adjust the sewing speed in the Setup Program. > Adjust the slide.
The machine doesn't start	Unfavorable room temperature. The machine is damaged.	> Place the machine in a warm room one hour before use. > Connect the machine and switch it on. > Contact a specialized BERNINA dealer.
The light of the button «Start-/Stop» doesn't light up	Light is defect.	> Contact a specialized BERNINA dealer.
Neither the sewing light nor the light on the freearm lights up	Settings in the Setup Program. The sewing light is defect.	> Activate it in the Setup Program. > Contact a specialized BERNINA dealer.
Upper thread monitor doesn't react	Settings in the Setup Program. The upper thread indicator is defect.	> Activate it in the Setup Program. > Contact a specialized BERNINA dealer.

Fault	Cause	Solution
Bobbin thread monitor doesn't react	Settings in the Setup Program.	> Activate it in the Setup Program.
	The bobbin thread indicator is defect.	> Contact a specialized BERNINA dealer.
Error during firmware update	USB stick is not recognized.	> Using the BERNINA USB stick.
	The update process is blocked and the hourglass on the display is inactive.	> Remove the USB stick. > Switch off the machine. > Switch the machine on. > Follow the instruction on the display.
Beads and/or bartacks are repeatedly not sewn properly	Firmware update files are not found.	> Unzip the update data. > Store data for the firmware update directly on the data medium and not in a folder on the USB stick.
	The Buttonhole foot with slide #3A is not calibrated with the machine.	> Calibrate Buttonhole foot with slide #3A. (see page 60)

19 Storage and disposal

19.1 Storing the machine

It is recommended to store the machine in the original packaging. If the machine is stored in a cold room, place it in a warm room one hour before use.

- > Switch the machine off and disconnect it from the power supply system.
- > Don't store the machine outdoor.
- > Protect the machine against climatic influences.

19.2 Dispose of the machine

- > Clean the machine.
- > Sort the components by their materials and dispose of them according to the local laws and regulations.

20 Technical data

Designation	Value	Unit
Maximum fabric thickness	12.5 (0.49)	mm (in)
Sewing light	30	LED
Maximum speed	1000	Stitches per minute
Measurements without the spool pin (W × H × D)	522 × 358 × 214 (20.55 × 14.09 × 8.43)	mm (in)
Weight	14 (30.86)	kg (lb)
Energy consumption	140	W
Input voltage	100 – 240	V
Protection class (Electrical engineering)	II	

21 Overview stitch patterns

21.1 Overview Stitch patterns

Practical stitches

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	22	23	24	25	26	27	29	30
31	32	33	34										

Buttonholes

51	52	53	54	55	56	57	59	60	61	62	63	64	67
68	69												

Decorative stitches

Natural stitches

101	102	103	104	106	107	108	109	110	111	112	113	114	115
116	117	118	119	122	123	124	125	129	130	131	132	136	137
138	139	140	143	144	146	147	150	152	153	154	155	156	165
166	167	168	169	170	171								

Overview stitch patterns

Cross stitches

301	302	303	304	305	306	307	308	309	311	314	319	320	321
322	323	324	325	326	327	328	329	330	331	332	333	334	335
336	337	338	339	371	372	373							

Satin stitches

401	402	405	406	407	408	409	410	412	413	414	415	416	417
418	419	421	422	423	424	425	426	427	428	429	431	433	434
436	437	440	442	447	448	449	453	454	455	456	457	458	461
465	466												

Geometric stitches

601	602	603	604	605	606	607	608	609	610	611	612	613	614
615	616	618	619	620	621	622	623	624	625	626	627	628	629
630	631	632	633	634	635	636	637	639	640	641	642	643	644
645	646	647	648	649	650	651	652	653	654	655	656	657	658
660	661	662	663	664	665	666	677	678	679	680	691		

White embroidery

Novelty stitches

901 	902 	903 	904 	905 	906 	907 	908 	909 	910 	911 	912 	913 	914 
915 	916 	917 	918 	919 	920 	921 	922 	924 	926 	928 	929 	935 	937 
938 	939 	940 	944 	945 	946 	948 	950 	957 	961 				

Seasons

Sport and hobbies

Quilt stitches

1301	1302	1303	1304	1305 6 / Inch 2.4 / cm	1306 8 / Inch 3.2 / cm	1307 10 / Inch 4 / cm	1308 irregular look	1309	1310	1311	1312	1313	1314
1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327	1329
1330													

21.2 Overview Embroidery motifs

Editing embroidery motifs

Let your inspiration run free. A vast selection of embroidery motifs is at your disposal.

If you see one of the following pictograms below a number of the embroidery motif, you can find additional information at <https://www.bernina.com/specialeffects>.


	Detached point		Punchwork Design (motif)
	Basic CutWork		Couching
	Fringe		Projects in the hoop
	Appliqu��		Puffy Fonts
	CutWork Design (motif)		Quilting
	PaintWork Design (motif)		Trapunto
	CrystalWork Design (motif)		

Embellishment

Nb843_48		87 x 121 mm 3.4 x 4.8 inch		8.976	Nb826_48		135 x 133 mm 5.3 x 5.2 inch		11.154
1. Isacord 40 9971		2. Isacord 40 9937	3. Isacord 40 9925	4. Isacord 40 9975	5. Isacord 40 9978	6. Isacord 40 9973	7. Isacord 40 9982	8. Isacord 40 1972	1. Isacord 40 9971

12633-06	120 x 120 mm 4.7 x 4.7 inch	18.023	12473-06	133 x 120 mm 5.3 x 4.7 inch	11.358
1. Isacord 40 0015			1. Isacord 40 4610 2. Isacord 40 5633		
Be790403	140 x 130 mm 5.5 x 5.1 inch	13.281	12473-06	133 x 120 mm 5.3 x 4.7 inch	11.358
1. Isacord 40 0020 2. Isacord 40 0731			1. Isacord 40 4610 2. Isacord 40 5633		
80090-06	84 x 37 mm 3.3 x 1.4 inch	3.766	80090-07	128 x 36 mm 5 x 1.4 inch	5.450
1. Applique 1 2. Applique 2 3. Isacord 40 4103			1. Applique 1 2. Applique 2 3. Isacord 40 5440		
19999-002	125 x 136 mm 4.9 x 5.4 inch	10.184	Nb934_48	132 x 165 mm 5.2 x 6.5 inch	9.168
1. Isacord 40 0015 2. Isacord 40 0015 3. Isacord 40 0015			1. Isacord 40 2241 2. Isacord 40 1154 3. Isacord 40 1346 4. Isacord 40 1161 5. Isacord 40 2222 6. Isacord 40 5833 7. Isacord 40 1154 8. Isacord 40 2241		
Nb935_48	104 x 169 mm 4.1 x 6.6 inch	10.171	21021-05	119 x 156 mm 4.7 x 6.1 inch	14.326
1. Isacord 40 2222 2. Isacord 40 1346 3. Isacord 40 0232 4. Isacord 40 1154 5. Isacord 40 5833 6. Isacord 40 2241			1. Isacord 40 1252 2. Isacord 40 1161 3. Isacord 40 1565		

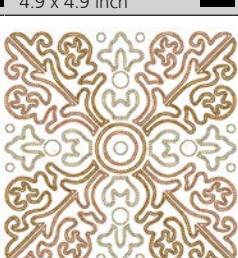Overview stitch patterns

21021-04	 123 x 150 mm 4.8 x 5.9 inch	 16.176	21021-06	 116 x 109 mm 4.6 x 4.3 inch	 12.204
1.  Isacord 40 1161 2.  Isacord 40 1252 3.  Isacord 40 1565			1.  Isacord 40 1161 2.  Isacord 40 1252 3.  Isacord 40 1565		
12490-03	 118 x 113 mm 4.6 x 4.5 inch	 6.669	12490-04	 146 x 122 mm 5.8 x 4.8 inch	 8.724
1.  Isacord 40 0108 2.  Isacord 40 3641 3.  Isacord 40 3652			1.  Isacord 40 0108 2.  Isacord 40 3641 3.  Isacord 40 3652		
12490-05	 126 x 104 mm 4.9 x 4.1 inch	 6.148	Fp887	 135 x 187 mm 5.3 x 7.4 inch	 12.658
1.  Isacord 40 0108 2.  Isacord 40 3641 3.  Isacord 40 3652			1.  Isacord 40 2504		
12528-12	 124 x 124 mm 4.9 x 4.9 inch	 39.751	12528-03	 76 x 130 mm 3 x 5.1 inch	 16.171
1.  Isacord 40 0931 2.  Isacord 40 0824 3.  Isacord 40 0851			1.  Isacord 40 0851 2.  Isacord 40 0824 3.  Isacord 40 0931		
Oc07207	 106 x 138 mm 4.2 x 5.4 inch	 17.807	82007-11	 112 x 94 mm 4.4 x 3.7 inch	 13.622
1.  Yenmet 7012 2.  Isacord 40 0670 3.  Yenmet 7012			1.  Applique 1 2.  Applique 3 3.  Applique 1 4.  Applique 3 5.  Applique 1 6.  Isacord 40 1805 7.  Isacord 40 2152 8.  Isacord 40 2520 9.  Isacord 40 2500 10.  Isacord 40 2115		
			11.  Isacord 40 0761		

82007-44		114 x 115 mm 4.5 x 4.5 inch		9.467	82006-30		100 x 174 mm 3.9 x 6.9 inch		21.584
1. Isacord 40 2152 2. Isacord 40 2520					1. Isacord 40 0020 2. Isacord 40 4174 3. Isacord 40 0020 4. Isacord 40 4174 5. Isacord 40 0771 6. Isacord 40 0832 7. Isacord 40 0108 8. Isacord 40 4174 9. Isacord 40 0660 10. Isacord 40 1526				
Nb251_48		72 x 103 mm 2.8 x 4.1 inch		8.612	Be790405		126 x 185 mm 4.9 x 7.3 inch		7.734
1. Isacord 40 2155 2. Isacord 40 2504 3. Isacord 40 0020 4. Isacord 40 0020					1. Isacord 40 3102				
Fb126		87 x 102 mm 3.4 x 4 inch		2.668	Be790407		200 x 271 mm 7.9 x 10.7 inch		19.455
1. Isacord 40 1220 2. Isacord 40 1805					1. Isacord 40 2510				
Be790502		60 x 58 mm 2.4 x 2.3 inch		1.814	21003-26		123 x 124 mm 4.8 x 4.9 inch		16.269
1. Isacord 40 3541					1. Isacord 40 0345 2. Isacord 40 0442 3. Isacord 40 0232				
Nb403_48		78 x 78 mm 3.1 x 3.1 inch		6.615	Nb373_48		121 x 177 mm 4.8 x 7 inch		9.769
1. Isacord 40 0552 2. Isacord 40 4032 3. Isacord 40 4332					1. Isacord 40 4531				

Overview stitch patterns

Nb442_48		56 x 58 mm 2.2 x 2.3 inch		809	Nb481_48		123 x 68 mm 4.9 x 2.7 inch		7.043
1. Isacord 40 5610 2. Isacord 40 5643 3. Isacord 40 3630			1. Isacord 40 0870 2. Isacord 40 0670						
Nb749_48		126 x 263 mm 5 x 10.4 inch		16.792					
1. Isacord 40 6051 2. Isacord 40 1805 3. Isacord 40 0182 4. Isacord 40 9405 5. Isacord 40 0800 6. Isacord 40 0904 7. YLI variations 8001 8. Isacord 40 0600 9. Isacord 40 0184 10. Isacord 40 0552 11. Isacord 40 1921 12. YLI variations 8019 13. YLI variations 8016 14. Isacord 40 1600 15. Isacord 40 1904 16. YLI variations 8020 17. Isacord 40 5912 18. YLI variations 8004 19. Isacord 40 5722 20. Isacord 40 5510 21. Isacord 40 0151 22. Isacord 40 0232 23. Isacord 40 6133 24. YLI variations 8013									

Quilt motifs

Bd380		103 x 103 mm 4 x 4.1 inch		2.976	Bd378		64 x 64 mm 2.5 x 2.5 inch		820
1. Isacord 40 5822			1. Isacord 40 5822						
Bd379		96 x 96 mm 3.8 x 3.8 inch		1.639	Bd381		62 x 64 mm 2.4 x 2.5 inch		866
1. Isacord 40 5822			1. Isacord 40 5822						

	Bd382		80 x 69 mm 3.2 x 2.7 inch		756
--	--------------	--	------------------------------	--	-----

1. Isacord 40 5822



	Bd383		80 x 80 mm 3.1 x 3.1 inch		1.690
--	--------------	--	------------------------------	--	-------

1. Isacord 40 5822



	Bd384		46 x 46 mm 1.8 x 1.8 inch		430
--	--------------	--	------------------------------	--	-----

1. Isacord 40 5822



	Bd385		46 x 92 mm 1.8 x 3.6 inch		852
--	--------------	--	------------------------------	--	-----

1. Isacord 40 5822



	Bd386		93 x 91 mm 3.6 x 3.6 inch		1.572
--	--------------	--	------------------------------	--	-------

1. Isacord 40 5822




	Bd387		67 x 67 mm 2.6 x 2.6 inch		741
--	--------------	--	------------------------------	--	-----

1. Isacord 40 5822




	Bd388		101 x 33 mm 4 x 1.3 inch		661
--	--------------	--	-----------------------------	--	-----

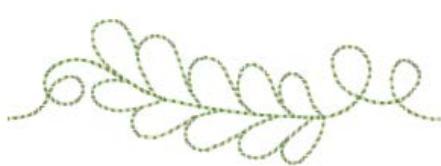1. Isacord 40 5822




	Bd389		101 x 36 mm 4 x 1.4 inch		837
--	--------------	--	-----------------------------	--	-----

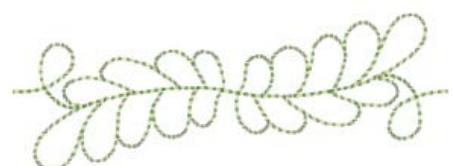1. Isacord 40 5822



	Bd390		101 x 32 mm 4 x 1.2 inch		925
--	--------------	--	-----------------------------	--	-----

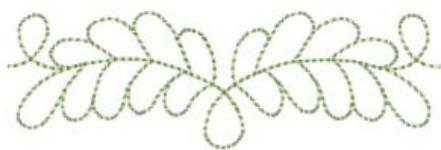1. Isacord 40 5822



	Bd391		43 x 55 mm 1.7 x 2.2 inch		620
--	--------------	--	------------------------------	--	-----


1. Isacord 40 5822



Overview stitch patterns

 Bd392  52 x 68 mm 2.1 x 2.7 inch  632 1.  Isacord 40 5822	 Bd558_48  104 x 104 mm 4.1 x 4.1 inch  4.472 1.  Isacord 40 4620
 12499-06  102 x 102 mm 4 x 4 inch  3.838 1.  Isacord 40 5115	 12499-04  123 x 123 mm 4.9 x 4.8 inch  7.229 1.  Isacord 40 5610
 12499-05  123 x 123 mm 4.9 x 4.9 inch  6.317 1.  Isacord 40 4103	 12499-24  133 x 215 mm 5.2 x 8.4 inch  11.445 1.  Isacord 40 4103
 12499-23  123 x 123 mm 4.9 x 4.9 inch  11.194 1.  Isacord 40 5115	 12607-20  122 x 122 mm 4.8 x 4.8 inch  1.055 1.  Isacord 40 0020
 12607-21  61 x 122 mm 2.4 x 4.8 inch  657 1.  Isacord 40 0020	 12416-04  89 x 89 mm 3.5 x 3.5 inch  3.482 1.  Isacord 40 0721

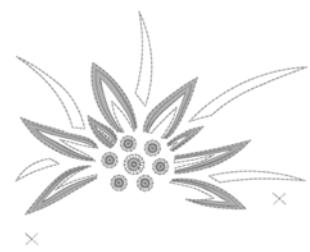Projects

32152-01	 150 x 229 mm 5.9 x 9 inch	 7.265	32152-02	 100 x 135 mm 3.9 x 5.3 inch	 1.356
1.  Isacord 40 0108			1.  Isacord 40 0108		
32152-03a	 188 x 220 mm 7.4 x 8.7 inch	 1.803	32152-03b	 179 x 196 mm 7.1 x 7.7 inch	 1.847
1.  Isacord 40 0108 2.  Isacord 40 0108			1.  Isacord 40 0108 2.  Isacord 40 0108		
32152-04	 190 x 288 mm 7.5 x 11.4 inch	 22.113	32152-05a	 190 x 153 mm 7.5 x 6 inch	 10.319
1.  Isacord 40 0108			1.  Isacord 40 0108 2.  Isacord 40 0108		
32152-05b	 184 x 176 mm 7.2 x 6.9 inch	 11.845	32152-06	 115 x 140 mm 4.5 x 5.5 inch	 2.532
1.  Isacord 40 0108 2.  Isacord 40 0108 3.  Isacord 40 0108			1.  Isacord 40 0108		
32152-07	 115 x 140 mm 4.5 x 5.5 inch	 6.565	32152-08	 135 x 155 mm 5.3 x 6.1 inch	 2.473
1.  Isacord 40 0108			1.  Isacord 40 0108		

Overview stitch patterns

32152-09	135 x 155 mm 5.3 x 6.1 inch	7.220	32152-10	190 x 279 mm 7.5 x 11 inch	3.894
1. Isacord 40 0108			1. Isacord 40 0108		

32152-11	125 x 122 mm 4.9 x 4.8 inch	4.614
1. Isacord 40 0108		

Borders and Lace

12659-01	45 x 58 mm 1.8 x 2.3 inch	6.790	12659-06	37 x 59 mm 1.4 x 2.3 inch	6.465
1. Isacord 40 1352 2. Isacord 40 1430			1. Isacord 40 4625 2. Isacord 40 4515		
21021-25	34 x 71 mm 1.3 x 2.8 inch	4.748	Oc00303	101 x 110 mm 4 x 4.4 inch	35.018
1. Isacord 40 1252			1. Isacord 40 0015		
12633-20	34 x 170 mm 1.4 x 6.7 inch	12.897	12508-08	40 x 151 mm 1.6 x 5.9 inch	7.102
1. Isacord 40 0015			1. Isacord 40 0352 2. Isacord 40 4752 3. Isacord 40 0124		

12508-17		42 x 152 mm 1.6 x 6 inch		7.962	Oc33411		24 x 177 mm 0.9 x 7 inch		15.868
1. Isacord 40 0352 2. Isacord 40 4752 3. Isacord 40 5552					1. Isacord 40 0015				
Oc33416		36 x 128 mm 1.4 x 5 inch		16.090	12485-12		41 x 139 mm 1.6 x 5.5 inch		3.391
1. Isacord 40 1902 2. Isacord 40 0015					1. Isacord 40 1134 2. Isacord 40 0520 3. Isacord 40 4240 4. Isacord 40 4111 5. Isacord 40 0702 6. Isacord 40 1430				
12485-31		46 x 225 mm 1.8 x 8.9 inch		2.174	21013-29		152 x 40 mm 6 x 1.6 inch		7.569
1. Isacord 40 0702 2. Isacord 40 0520					1. Isacord 40 4332				
Be110415		44 x 172 mm 1.7 x 6.8 inch		6.436	Fa981		35 x 142 mm 1.4 x 5.6 inch		3.709
1. Isacord 40 6051 2. Isacord 40 0811 3. Isacord 40 1921					1. Isacord 40 1055				
21002-21		151 x 21 mm 5.9 x 0.8 inch		3.176	21009-29		32 x 152 mm 1.3 x 6 inch		4.649
1. Isacord 40 1252					1. Isacord 40 5210				

Overview stitch patterns

82005-40	26 x 240 mm 1 x 9.4 inch	8.256	12410-07	115 x 158 mm 4.5 x 6.2 inch	30.450
1. Isacord 40 0851			1. Isacord 40 1874		
12410-15	29 x 133 mm 1.1 x 5.3 inch	9.439			
1. Isacord 40 4752					

Children

Be790305	118 x 145 mm 4.6 x 5.7 inch	13.118	12590-03	135 x 147 mm 5.3 x 5.8 inch	22.117
1. Isacord 40 0015 2. Applique 1 3. Applique 3 4. Isacord 40 3541 5. Applique 1 6. Applique 3 7. Isacord 40 0345 8. Applique 1 9. Applique 3 10. Isacord 40 1900 11. Isacord 40 0020 12. Isacord 40 0015			1. Applique 1 2. Applique 2 3. Applique 1 4. Applique 2 5. Applique 1 6. Applique 2 7. Applique 1 8. Applique 2 9. Isacord 40 0015 10. Isacord 40 0020 11. Isacord 40 5510 12. Isacord 40 5650 13. Isacord 40 4230 14. Isacord 40 4116 15. Isacord 40 0132 16. Isacord 40 0112 17. Isacord 40 0015		
Ck867	122 x 133 mm 4.8 x 5.2 inch	28.880	Cm031_48	86 x 64 mm 3.4 x 2.5 inch	6.433
1. Applique 1 2. Applique 2 3. Applique 3 4. Isacord 40 5730 5. Isacord 40 2761 6. Isacord 40 0630 7. Isacord 40 3910 8. Isacord 40 0015 9. Isacord 40 0811 10. Isacord 40 2830 11. Isacord 40 4174 12. Isacord 40 1701 13. Isacord 40 3722 14. Isacord 40 0015 15. Isacord 40 1430			1. Isacord 40 5730 2. Isacord 40 1352 3. Isacord 40 1755 4. Isacord 40 1730 5. Isacord 40 3820 6. Isacord 40 3040		

12401-17		99 x 55 mm 3.9 x 2.2 inch		1.345		Ck859		119 x 142 mm 4.7 x 5.6 inch		30.121	
1. Isacord 40 0731 2. Isacord 40 0630 3. Isacord 40 5934 4. Isacord 40 0111 5. Isacord 40 4240 6. Isacord 40 1342					1. Isacord 40 3815 2. Isacord 40 0101 3. Isacord 40 6141 4. Isacord 40 0630 5. Isacord 40 3910 6. Isacord 40 0811 7. Isacord 40 0015 8. Isacord 40 0904 9. Isacord 40 3241 10. Isacord 40 1701 11. Isacord 40 4174 12. Isacord 40 3815 13. Isacord 40 0015 14. Isacord 40 2153						
Ck520		75 x 60 mm 3 x 2.4 inch		11.019		Ck510		76 x 60 mm 3 x 2.4 inch		8.069	
1. Isacord 40 3906 2. Isacord 40 0132 3. Isacord 40 0015 4. Yenmet 7003 5. Isacord 40 3652 6. Isacord 40 0020 7. Isacord 40 0600 8. Isacord 40 2113					1. Isacord 40 5934 2. Isacord 40 3840 3. Isacord 40 3901 4. Isacord 40 0108 5. Isacord 40 0015 6. Isacord 40 3622 7. Isacord 40 4174 8. Isacord 40 0015						
Ck522		71 x 53 mm 2.8 x 2.1 inch		9.089		Ck863		127 x 125 mm 5 x 4.9 inch		19.354	
1. Isacord 40 3810 2. Isacord 40 0131 3. Isacord 40 0015 4. Isacord 40 0020 5. Isacord 40 0310 6. Isacord 40 1703 7. Yenmet 7021 8. Isacord 40 3353					1. Isacord 40 0630 2. Isacord 40 0506 3. Isacord 40 0630 4. Isacord 40 0015 5. Isacord 40 4103 6. Isacord 40 4111 7. Isacord 40 1701 8. Isacord 40 2830 9. Isacord 40 5912 10. Isacord 40 1730 11. Isacord 40 5510 12. Isacord 40 0811 13. Isacord 40 4174 14. Isacord 40 0352 15. Isacord 40 1805 16. Isacord 40 3151 17. Isacord 40 3151						
Nb198_48		94 x 72 mm 3.7 x 2.8 inch		9.711		Cm226_48		50 x 63 mm 2 x 2.5 inch		6.214	
1. Isacord 40 2650 2. Isacord 40 0713 3. Isacord 40 2166 4. Isacord 40 1755 5. Isacord 40 3251 6. Isacord 40 1600 7. Isacord 40 2153 8. Isacord 40 2152 9. Isacord 40 2761					1. Isacord 40 0101 2. Isacord 40 0131 3. Isacord 40 0152 4. Isacord 40 0020 5. Isacord 40 1755						

Overview stitch patterns

<p> Be790307  142 x 127 mm  19.667</p> <p>1.  Applique 1 2.  Applique 3 3.  Isacord 40 3130 4.  Applique 1 5.  Applique 3 6.  Isacord 40 0003 7.  Isacord 40 1720 8.  Isacord 40 0020 9.  Isacord 40 0520 10.  Isacord 40 3541</p> 	<p> Be790311  114 x 152 mm  12.320</p> <p>1.  Applique 1 2.  Applique 3 3.  Isacord 40 0933 4.  Applique 1 5.  Applique 3 6.  Applique 1 7.  Applique 3 8.  Isacord 40 0776 9.  Applique 1 10.  Applique 3 11.  Isacord 40 1900 12.  Isacord 40 0176 13.  Isacord 40 0015 14.  Isacord 40 0020</p> 
<p> Be790306  132 x 151 mm  18.399</p> <p>1.  Isacord 40 0003 2.  Applique 1 3.  Applique 2 4.  Isacord 40 0003 5.  Isacord 40 3910 6.  Isacord 40 0230 7.  Isacord 40 2723 8.  Isacord 40 1301 9.  Isacord 40 2640 10.  Isacord 40 0003 11.  Isacord 40 3332</p> 	<p> Be790308  155 x 178 mm  25.448</p> <p>1.  Isacord 40 0020 2.  Applique 1 3.  Applique 2 4.  Isacord 40 1720</p> 
<p> Be790309  87 x 150 mm  13.252</p> <p>1.  Applique 1 2.  Applique 3 3.  Isacord 40 0015 4.  Isacord 40 1900 5.  Isacord 40 0020 6.  Isacord 40 4116 7.  Isacord 40 0176 8.  Isacord 40 0015 9.  Isacord 40 0310</p> 	<p> Be790310  138 x 136 mm  16.278</p> <p>1.  Applique 1 2.  Applique 3 3.  Applique 1 4.  Applique 3 5.  Isacord 40 1161 6.  Isacord 40 1141 7.  Isacord 40 1161 8.  Isacord 40 3654 9.  Isacord 40 0176 10.  Isacord 40 1141 11.  Isacord 40 0020 12.  Isacord 40 0015 13.  Isacord 40 1900</p> 
<p> Be790312  122 x 133 mm  22.489</p> <p>1.  Applique 1 2.  Applique 3 3.  Applique 1 4.  Applique 3 5.  Isacord 40 0015 6.  Isacord 40 1600 7.  Isacord 40 0108 8.  Isacord 40 2912 9.  Isacord 40 3600 10.  Isacord 40 1141 11.  Isacord 40 0020</p> 	<p> Be790313  99 x 102 mm  8.788</p> <p>1.  Applique 1 2.  Applique 3 3.  Isacord 40 3750 4.  Isacord 40 1114 5.  Isacord 40 1900 6.  Isacord 40 3620 7.  Isacord 40 2510 8.  Isacord 40 5324 9.  Isacord 40 1114 10.  Isacord 40 1060 11.  Isacord 40 4114 12.  Isacord 40 0020 13.  Isacord 40 0015</p> 

Ck511	76 x 64 mm 3 x 2.5 inch	6.803	Cm193_48	107 x 127 mm 4.2 x 5 inch	12.461
1.  Isacord 40 4174			1.  Applique 1		
2.  Isacord 40 3600			2.  Applique 3		
3.  Isacord 40 3840			3.  Applique 1		
4.  Isacord 40 2900			4.  Applique 3		
Ck667	100 x 82 mm 3.9 x 3.2 inch	5.568	Ck738	89 x 86 mm 3.5 x 3.4 inch	5.620
1.  Applique 1			1.  Isacord 40 3151		
2.  Applique 2			2.  Isacord 40 3761		
3.  Applique 3			3.  Isacord 40 2761		
4.  Isacord 40 4103			4.  Isacord 40 1430		
5.  Isacord 40 4610			5.  Isacord 40 0221		
6.  Isacord 40 4220			6.  Isacord 40 5822		
7.  Isacord 40 0015			7.  Isacord 40 0811		
8.  Isacord 40 3544			8.  Isacord 40 0520		
Ck970	85 x 82 mm 3.3 x 3.2 inch	16.571	Cm147_48	55 x 100 mm 2.2 x 3.9 inch	6.170
1.  Isacord 40 0151			1.  Isacord 40 1755		
2.  Isacord 40 0152			2.  Isacord 40 0713		
3.  Isacord 40 0124			3.  Isacord 40 0704		
4.  Isacord 40 0131			4.  Isacord 40 6141		
5.  Isacord 40 3150			5.  Isacord 40 3251		
6.  Isacord 40 2830			6.  Isacord 40 1600		
7.  Isacord 40 3040					
8.  Isacord 40 3640					
9.  Isacord 40 3710					
10.  Isacord 40 2051	11.  Isacord 40 1725	12.  Isacord 40 3743			
13.  Isacord 40 0015	14.  Isacord 40 3743				


Seasons

 82023-14	 119 x 123 mm 4.7 x 4.8 inch	 14.989	 12858-04	 159 x 164 mm 6.3 x 6.4 inch	 16.385
<p>1.  Isacord 40 1753</p> <p>2.  Isacord 40 1753</p> <p>3.  Isacord 40 1753</p> <p>4.  Isacord 40 0010</p> <p>5.  Isacord 40 5100</p> <p>6.  Isacord 40 5210</p> <p>7.  Isacord 40 5220</p> <p>8.  Isacord 40 2101</p> <p>9.  Isacord 40 1753</p>			<p>1. Isacord 40 0015</p> <p>2. Isacord 40 0015</p>		

Overview stitch patterns



 82023-15 1. Isacord 40 5210 2. Isacord 40 5220 3. Isacord 40 5100 4. Isacord 40 1805 5. Isacord 40 2101 6. Isacord 40 1753	 124 x 152 mm 4.9 x 6 inch 	 9.577	 82023-13 1. Isacord 40 5220 2. Isacord 40 1753 3. Isacord 40 1805 4. Isacord 40 2101 5. Isacord 40 5210 6. Isacord 40 5100	 106 x 156 mm 4.2 x 6.1 inch 	 11.315
Hg795_48 1. Isacord 40 5730 2. Isacord 40 5513 3. Isacord 40 4430 4. Isacord 40 1032 5. Isacord 40 1900 6. Isacord 40 4113	 89 x 164 mm 3.5 x 6.5 inch 	 3.453	 12597-16 1. Isacord 40 0904 2. Isacord 40 0940	 88 x 85 mm 3.5 x 3.3 inch 	 15.862
80009-17 1. Isacord 40 5934 2. Isacord 40 5866 3. Isacord 40 5934	 86 x 130 mm 3.4 x 5.1 inch 	 6.582	 He255 1. Isacord 40 0111 2. Isacord 40 1701 3. Isacord 40 1800 4. Isacord 40 1701 5. Isacord 40 1800 6. Isacord 40 2640 7. Isacord 40 5650 8. Isacord 40 5610 9. Isacord 40 0015 10. Isacord 40 0111 11. Isacord 40 1060 12. Isacord 40 3910 13. Isacord 40 0800 14. Isacord 40 0940 15. Isacord 40 0651 16. Isacord 40 0832 17. Isacord 40 0651 18. Isacord 40 0832 19. Isacord 40 3650 20. Isacord 40 1351 21. Isacord 40 0108	 133 x 127 mm 5.2 x 5 inch 	 17.198
He252 1. Isacord 40 1902 2. Isacord 40 1701 3. Isacord 40 1902 4. Isacord 40 0532 5. Isacord 40 0842 6. Isacord 40 0532 7. Isacord 40 0842 8. Isacord 40 1902 9. Isacord 40 0651 10. Isacord 40 1123 11. Isacord 40 5220 12. Isacord 40 5210 13. Isacord 40 5422 14. Isacord 40 0101 15. Isacord 40 1430 16. Isacord 40 1725 17. Isacord 40 0520 18. Isacord 40 0824 19. Isacord 40 3910 20. Isacord 40 3650 21. Isacord 40 3910 22. Isacord 40 1902 23. Isacord 40 3650 24. Isacord 40 1123 25. Isacord 40 5324 26. Isacord 40 1154	 88 x 145 mm 3.5 x 5.7 inch 	 12.251	 Hg746_48 1. Isacord 40 3040 2. Applique 1 3. Applique 2 4. Isacord 40 0221 5. Applique 1 6. Applique 2 7. Isacord 40 0142 8. Isacord 40 0108 9. Applique 1 10. Applique 2 11. Isacord 40 0800 12. Isacord 40 0020 13. Isacord 40 0670 14. Isacord 40 0142	 112 x 138 mm 4.4 x 5.4 inch 	 17.815



Rc514		74 x 99 mm 2.9 x 3.9 inch		15.603	Hg747_48		124 x 147 mm 4.9 x 5.8 inch		18.378	
1. Isacord 40 1172 2. Isacord 40 0842 3. Isacord 40 0651 4. Isacord 40 0821 5. Isacord 40 0941 6. Isacord 40 0101 7. Isacord 40 0640 8. Isacord 40 3910 9. Isacord 40 4103 10. Isacord 40 3522 11. Isacord 40 0842					1. Isacord 40 0970 2. Isacord 40 3770 3. Isacord 40 5912 4. Isacord 40 0520 5. Isacord 40 0811 6. Isacord 40 3350 7. Isacord 40 3040 8. Applique 1 9. Applique 2 10. Applique 1 13. Applique 2 16. Isacord 40 1200					
Nb754_48		114 x 128 mm 4.5 x 5 inch		13.084	Nb759_48		99 x 62 mm 3.9 x 2.4 inch		4.937	
1. Yenmet 7037 2. Isacord 40 2155 3. Isacord 40 0651 4. Isacord 40 0101 5. Isacord 40 2532 6. Isacord 40 0640 7. Isacord 40 1352 8. Yenmet 7030 9. Isacord 40 0232 10. Isacord 40 1123					1. Yenmet 7037 2. Isacord 40 0640 3. Isacord 40 1352 4. Isacord 40 0232 5. Isacord 40 1123					
Hd976		101 x 108 mm 4 x 4.3 inch		18.674	Hg806_48		28 x 170 mm 1.1 x 6.7 inch		4.988	
1. Isacord 40 3962 2. Yenmet 7029 3. Isacord 40 0640 4. Isacord 40 0824 5. Isacord 40 0015 6. Isacord 40 0020 7. Isacord 40 0142 8. Isacord 40 3962 9. Isacord 40 0020 10. Isacord 40 0934 13. Isacord 40 5650 16. Isacord 40 5822 19. Isacord 40 5822					1. Isacord 40 2530 2. Isacord 40 1900 3. Isacord 40 5730 4. Isacord 40 1114 5. Isacord 40 4430 6. Isacord 40 4113					
12415-32		80 x 191 mm 3.1 x 7.5 inch		10.937	12415-29		108 x 172 mm 4.3 x 6.8 inch		4.814	
1. YLI variations 8019					1. YLI variations 8019					

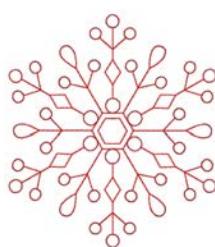12655-14		164 x 110 mm 6.4 x 4.4 inch	 16.122	12433-05		83 x 124 mm 3.3 x 4.9 inch	 15.348
1.  Isacord 40 1115 2.  Isacord 40 1055				1.  Isacord 40 1725 2.  Isacord 40 5934 3.  Isacord 40 0442 4.  Isacord 40 2115 5.  Isacord 40 2711			
12417-04		84 x 97 mm 3.3 x 3.8 inch	 8.085	Be790303		70 x 70 mm 2.7 x 2.8 inch	 5.764
1.  Isacord 40 1010 2.  Isacord 40 0811 3.  Isacord 40 1311 4.  Isacord 40 1543				1.  Isacord 40 0532 2.  Isacord 40 1300 3.  Isacord 40 0020 4.  Isacord 40 0015			
Be790301		127 x 89 mm 5 x 3.5 inch	 10.153	Gnnf80834		95 x 79 mm 3.7 x 3.1 inch	 6.430
1.  Isacord 40 1161 2.  Isacord 40 1860 3.  Isacord 40 1805 4.  Isacord 40 4116 5.  Isacord 40 1114 6.  Isacord 40 0532 7.  Isacord 40 0731 8.  Isacord 40 1322 9.  Isacord 40 1141 10.  Isacord 40 0020				1.  Isacord 40 5833 2.  Isacord 40 5633 3.  Isacord 40 2155 4.  Isacord 40 2153 5.  Isacord 40 2521 6.  Isacord 40 3901 7.  Isacord 40 0111			
He962_48		120 x 135 mm 4.7 x 5.3 inch	 4.128	12421-11		40 x 43 mm 1.6 x 1.7 inch	 3.965
1.  Isacord 40 1902				1.  Isacord 40 0800 2.  Isacord 40 0904 3.  Isacord 40 0020 4.  Isacord 40 0015			
12421-37		67 x 61 mm 2.6 x 2.4 inch	 1.320	12421-03		46 x 48 mm 1.8 x 1.9 inch	 2.328
1.  Isacord 40 0020				1.  Isacord 40 0020 2.  Isacord 40 0015 3.  Isacord 40 0111			

Cm287_48		90 x 117 mm 3.6 x 4.6 inch		18.749	Cm426_48		46 x 96 mm 1.8 x 3.8 inch		2.047
1. Isacord 40 0870					1. Isacord 40 0761				
2. Isacord 40 1172					2. Isacord 40 2155				
3. Isacord 40 0934					3. Isacord 40 1725				
4. Isacord 40 1755					4. Isacord 40 1902				
5. Isacord 40 0020					5. Isacord 40 0010				
6. Isacord 40 5531									
7. Isacord 40 5610									
8. Isacord 40 5722									
9. Isacord 40 2550									
10. Isacord 40 0015	11. Isacord 40 0713	12. Isacord 40 1840							
13. Isacord 40 1921	14. Isacord 40 2241								
Fq749_48		78 x 95 mm 3.1 x 3.7 inch		5.765	He919_48		89 x 69 mm 3.5 x 2.7 inch		5.245
1. Isacord 40 1114					1. Isacord 40 3650				
2. Isacord 40 1335					2. Isacord 40 3840				
3. Isacord 40 5664					3. Isacord 40 3641				
Hg053_48		122 x 122 mm 4.8 x 4.8 inch		15.370	Hg319_48		89 x 151 mm 3.5 x 6 inch		8.681
1. Isacord 40 5531					1. Isacord 40 5822				
2. Isacord 40 5643									
3. Isacord 40 1805									
Hg460_48		92 x 98 mm 3.6 x 3.9 inch		7.166	Nb317_48		87 x 87 mm 3.4 x 3.4 inch		2.064
1. Isacord 40 3650					1. Isacord 40 0020				
2. Isacord 40 0015					2. Isacord 40 0600				
3. Isacord 40 1921					3. Isacord 40 0800				
4. Isacord 40 3840					4. Isacord 40 0020				
5. Isacord 40 3810									
6. Isacord 40 4071									
7. Isacord 40 3444									

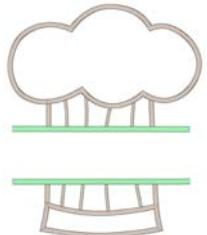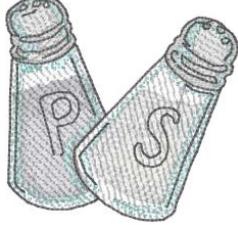Sport and hobbies

 82014-28 Applique 1 Applique 2 Isacord 40 0105 Isacord 40 0020 Isacord 40 4073 Isacord 40 1902 142 x 117 mm 5.6 x 4.6 inch 26.582	 12611-08 Applique 1 Applique 2 Applique 1 Applique 2 Isacord 40 1154 Isacord 40 5440 Isacord 40 1902 80 x 120 mm 3.1 x 4.7 inch 5.770
 12611-18 Applique 1 Applique 2 Isacord 40 0151 Isacord 40 5440 130 x 158 mm 5.1 x 6.2 inch 8.045	 Nx737 Isacord 40 0015 Yenmet 7005 Isacord 40 3962 Isacord 40 0020 72 x 99 mm 2.8 x 3.9 inch 10.793
 Nx741 Isacord 40 0131 Isacord 40 0111 Isacord 40 0970 Isacord 40 0015 Isacord 40 3971 Yenmet 7009 Yenmet 7003 Isacord 40 4230 Isacord 40 4174 80 x 78 mm 3.1 x 3.1 inch 11.206	 12383-18 Isacord 40 4174 91 x 171 mm 3.6 x 6.7 inch 5.182
 12472-01 Isacord 40 2504 Isacord 40 3901 Isacord 40 5610 Isacord 40 4240 Isacord 40 0015 Isacord 40 0015 Isacord 40 1123 Isacord 40 0761 Isacord 40 1902 Isacord 40 2504 Isacord 40 3901 Isacord 40 5610 Isacord 40 4240 Isacord 40 1300 138 x 142 mm 5.4 x 5.6 inch 23.233	 Be790606 Isacord 40 0020 Isacord 40 1306 100 x 86 mm 3.9 x 3.4 inch 7.445
 Be790608 Isacord 40 0020 80 x 80 mm 3.2 x 3.1 inch 7.937	 Be790603 Isacord 40 0015 Isacord 40 3654 80 x 75 mm 3.2 x 2.9 inch 11.824

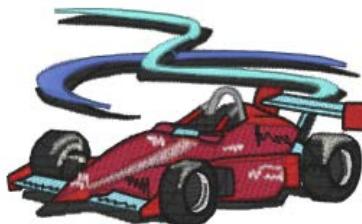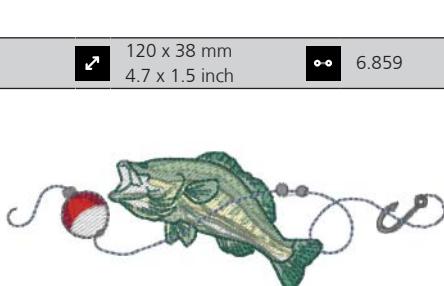Be790602		80 x 75 mm 3.1 x 3 inch	  10.169
1.  Isacord 40 5643 2.  Isacord 40 5912 3.  Isacord 40 0015			
Lt870		97 x 57 mm 3.8 x 2.2 inch	  10.380
1.  Isacord 40 3650 2.  Isacord 40 0015 3.  Isacord 40 0150 4.  Isacord 40 1902 5.  Isacord 40 0853 6.  Isacord 40 1565 7.  Isacord 40 0020 8.  Isacord 40 0142 9.  Isacord 40 2171			
Sr589		95 x 66 mm 3.7 x 2.6 inch	  14.868
1.  Isacord 40 0142 2.  Isacord 40 1220 3.  Isacord 40 1332 4.  Isacord 40 1334 5.  Isacord 40 3611 6.  Isacord 40 1800 7.  Isacord 40 0015 8.  Isacord 40 4174			
Rc244		88 x 53 mm 3.5 x 2.1 inch	  12.558
1.  Isacord 40 0020 2.  Isacord 40 3600 3.  Isacord 40 4230 4.  Yenmet 7005 5.  Isacord 40 3910 6.  Isacord 40 1902 7.  Isacord 40 1912 8.  Isacord 40 0108 9.  Isacord 40 0020 10.  Isacord 40 0015 11.  Isacord 40 0124			
Sp980		63 x 64 mm 2.5 x 2.5 inch	  11.286
1.  Isacord 40 0015 2.  Isacord 40 0142 3.  Isacord 40 0020			
Sp989		102 x 82 mm 4 x 3.2 inch	  10.827
1.  Isacord 40 4174 2.  Isacord 40 0142 3.  Isacord 40 3901 4.  Isacord 40 3962 5.  Isacord 40 0506 6.  Isacord 40 0520 7.  Isacord 40 0020			
Sr067		87 x 97 mm 3.4 x 3.8 inch	  16.143
1.  Isacord 40 3910 2.  Isacord 40 0706 3.  Isacord 40 4531 4.  Isacord 40 4430 5.  Isacord 40 1106 6.  Isacord 40 0501 7.  Isacord 40 5500 8.  Isacord 40 0020 9.  Isacord 40 4010			
Fb148_48		101 x 89 mm 4 x 3.5 inch	  11.163
1.  Isacord 40 0131 2.  Isacord 40 0608 3.  Isacord 40 0941 4.  YLI variations 8016 5.  YLI variations 8007 6.  Isacord 40 1123 7.  Isacord 40 1172 8.  Isacord 40 1725 9.  Isacord 40 6141 10.  Isacord 40 0142 11.  Isacord 40 2810			
Sr551		120 x 38 mm 4.7 x 1.5 inch	  6.859
1.  Isacord 40 1902 2.  Isacord 40 2123 3.  Isacord 40 0015 4.  Isacord 40 0520 5.  Isacord 40 5664 6.  Isacord 40 5233 7.  Isacord 40 5374 8.  Yenmet 7032 9.  Isacord 40 0111 10.  Yenmet 7036			

Flowers


Fq987_48	119 x 160 mm 4.7 x 6.3 inch	32.494	Fq472_48	123 x 123 mm 4.8 x 4.8 inch	4.361
1. Isacord 40 5650 2. Isacord 40 5833 3. Isacord 40 0352 4. Isacord 40 5934 5. Isacord 40 0465 6. Isacord 40 0015 7. Isacord 40 0781 8. Isacord 40 0170 9. Isacord 40 0731 10. Isacord 40 0640		11. Isacord 40 0352 12. Isacord 40 6133	1. Isacord 40 5610 2. Isacord 40 2830 3. Isacord 40 5822 4. Isacord 40 5664 5. Isacord 40 5643 6. Isacord 40 0015 7. Isacord 40 0811 8. Isacord 40 5633 9. Isacord 40 1725		
Fq464_48	110 x 104 mm 4.3 x 4.1 inch	7.122	12505-11	104 x 174 mm 4.1 x 6.9 inch	11.419
1. Isacord 40 5822 2. Isacord 40 5552 3. Isacord 40 5650 4. Isacord 40 1913 5. Isacord 40 1725 6. Isacord 40 2115			1. Isacord 40 0442 2. Isacord 40 5822 3. Isacord 40 5822 4. Isacord 40 6031 5. Isacord 40 5633 6. Isacord 40 2810 7. Isacord 40 2810 8. Isacord 40 0811 9. Isacord 40 0811 10. Isacord 40 1800 13. Isacord 40 0931 16. Isacord 40 1912		
12505-04	124 x 176 mm 4.9 x 6.9 inch	11.861	12505-10	102 x 134 mm 4 x 5.3 inch	5.685
1. Isacord 40 3840 2. Isacord 40 3840 3. Isacord 40 3815 4. Isacord 40 0311 5. Isacord 40 5822 6. Isacord 40 5822 7. Isacord 40 6031 8. Isacord 40 5633 9. Isacord 40 0811 10. Isacord 40 0811 13. Isacord 40 2300 16. Isacord 40 0504		11. Isacord 40 2530 12. Isacord 40 2530 14. Isacord 40 2155 15. Isacord 40 0931 17. Isacord 40 0020 18. Isacord 40 0442	1. Isacord 40 4103 2. Isacord 40 0442 3. Isacord 40 5822 4. Isacord 40 5822 5. Isacord 40 6031 6. Isacord 40 5633 7. Isacord 40 1800 8. Isacord 40 1800 9. Isacord 40 2504 10. Isacord 40 0504		11. Isacord 40 0020
12505-03	108 x 162 mm 4.3 x 6.4 inch	8.606	21027-01	123 x 122 mm 4.8 x 4.8 inch	6.211
1. Isacord 40 0442 2. Isacord 40 5822 3. Isacord 40 5822 4. Isacord 40 6031 5. Isacord 40 5633 6. Isacord 40 2810 7. Isacord 40 2530 8. Isacord 40 2530 9. Isacord 40 2155 10. Isacord 40 0811 13. Isacord 40 2830 16. Isacord 40 0311		11. Isacord 40 0811 12. Isacord 40 2830 14. Isacord 40 2504 15. Isacord 40 4114 17. Isacord 40 0931 18. Isacord 40 0020	1. Isacord 40 1805 2. Isacord 40 2721 3. Isacord 40 2520 4. Isacord 40 5100 5. Isacord 40 4114 6. Isacord 40 4103 7. Isacord 40 0506 8. Isacord 40 5115		






21027-14	 121 x 121 mm 4.8 x 4.8 inch	 7.316	21027-16	 57 x 152 mm 2.3 x 6 inch	 4.222
1.  Isacord 40 5115 2.  Isacord 40 2721 3.  Isacord 40 4114 4.  Isacord 40 2520 5.  Isacord 40 0506 6.  Isacord 40 5100 7.  Isacord 40 1805 8.  Isacord 40 5115 9.  Isacord 40 1805			1.  Isacord 40 1805 2.  Isacord 40 2520 3.  Isacord 40 2721 4.  Isacord 40 5100 5.  Isacord 40 0506 6.  Isacord 40 5115 7.  Isacord 40 4114 8.  Isacord 40 5115 9.  Isacord 40 1805		
21027-17	 57 x 152 mm 2.3 x 6 inch	 4.179	21017-01	 104 x 158 mm 4.1 x 6.2 inch	 11.928
1.  Isacord 40 1805 2.  Isacord 40 2723 3.  Isacord 40 2520 4.  Isacord 40 5100 5.  Isacord 40 0506 6.  Isacord 40 4103 7.  Isacord 40 4114 8.  Isacord 40 5115 9.  Isacord 40 1805			1.  Isacord 40 0453 2.  Isacord 40 0442 3.  Isacord 40 0345 4.  Isacord 40 1301 5.  Isacord 40 0702 6.  Isacord 40 1102 7.  Isacord 40 0761 8.  Isacord 40 0640		
FI135	 88 x 87 mm 3.5 x 3.4 inch	 12.688	FI136	 85 x 89 mm 3.3 x 3.5 inch	 8.501
1.  Isacord 40 5633 2.  Isacord 40 5822 3.  Isacord 40 5326 4.  Isacord 40 0870 5.  Isacord 40 3241			1.  Isacord 40 0311 2.  Isacord 40 5326 3.  Isacord 40 5374 4.  Isacord 40 0101 5.  Isacord 40 3951		
FI138	 85 x 75 mm 3.3 x 3 inch	 6.321	FI142	 79 x 86 mm 3.1 x 3.4 inch	 10.298
1.  Isacord 40 5934 2.  Isacord 40 5633 3.  Isacord 40 3331 4.  Isacord 40 3211 5.  Isacord 40 5326			1.  Isacord 40 2830 2.  Isacord 40 3541 3.  Isacord 40 2830 4.  Isacord 40 1912 5.  Isacord 40 0108 6.  Isacord 40 3842 7.  Isacord 40 0453 8.  Isacord 40 5326		
FI230	 78 x 72 mm 3.1 x 2.9 inch	 6.959	FI171	 70 x 89 mm 2.7 x 3.5 inch	 11.783
1.  Isacord 40 0600 2.  Isacord 40 5933 3.  Isacord 40 5944			1.  Isacord 40 5100 2.  Isacord 40 5100 3.  Isacord 40 5326 4.  Isacord 40 2600 5.  Isacord 40 3040		

Overview stitch patterns





82006-07	 124 x 166 mm 4.9 x 6.5 inch	 22.673	21006-02	 114 x 135 mm 4.5 x 5.3 inch	 9.132
1.  Isacord 40 4174 2.  Isacord 40 0108 3.  Isacord 40 0643 4.  Isacord 40 0660 5.  Isacord 40 0643 6.  Isacord 40 4421 7.  Isacord 40 1526 8.  Isacord 40 0660 9.  Isacord 40 4174		1.  Isacord 40 3910 2.  Isacord 40 3900 3.  Isacord 40 0015 4.  Isacord 40 3962 5.  Isacord 40 3900 6.  Isacord 40 0015			
80001-23	 85 x 102 mm 3.4 x 4 inch	 4.257	12457-06	 106 x 172 mm 4.2 x 6.8 inch	 12.636
1.  Isacord 40 1102 2.  Isacord 40 1805 3.  Isacord 40 6011 4.  Isacord 40 4174		1.  Isacord 40 3150 2.  Isacord 40 3210 3.  Isacord 40 0311 4.  Isacord 40 3331 5.  Isacord 40 3711 6.  Isacord 40 2250 7.  Isacord 40 2241 8.  Isacord 40 2051			
12457-13	 113 x 130 mm 4.4 x 5.1 inch	 6.676	21009-21	 65 x 108 mm 2.6 x 4.2 inch	 4.343
1.  Isacord 40 6051 2.  Isacord 40 5730 3.  Isacord 40 5722 4.  Isacord 40 2905 5.  Isacord 40 0311 6.  Isacord 40 5115 7.  Isacord 40 5220 8.  Isacord 40 5100		1.  Isacord 40 5220 2.  Isacord 40 5210			
Be790408	 58 x 90 mm 2.3 x 3.5 inch	 2.045			
1.  Isacord 40 3541					

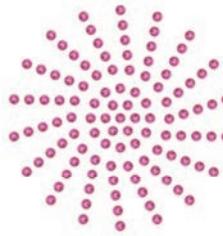DesignWorks

 Dw11	 70 x 71 mm 2.8 x 2.8 inch	 110	 21026-08_dw	 86 x 174 mm 3.4 x 6.9 inch	 11.047
1.  Swarovski 0502		1.  Edding 69 2.  Isacord 40 0020			

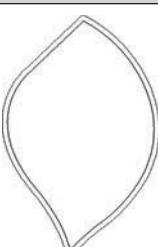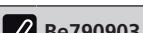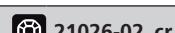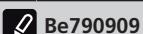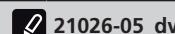
 Be790906	 192 x 196 mm 7.6 x 7.7 inch	 21.054	 21026-02_dw	 69 x 194 mm 2.7 x 7.6 inch	 7.815
1.  Edding 8 2.  Edding 3 3.  Edding 5 4.  Edding 34 5.  Edding 69 6.  Edding 10 7.  Edding 5 8.  Edding 9 9.  Edding 11 10.  Edding 65 11.  Edding 12			1.  Edding 69 2.  Applique 1 3.  Applique 2 4.  Isacord 40 0015 5.  Isacord 40 0020 6.  Isacord 40 0015		
 Be790905	 104 x 227 mm 4.1 x 8.9 inch	 21.349	 21026-02_cwa	 61 x 94 mm 2.4 x 3.7 inch	
1.  Edding 34 2.  Edding 12 3.  Edding 16 4.  Edding 10 5.  Edding 1			1.  Isacord 40 1375 2.  Cut 0001 3.  Cut 0002 4.  Cut 0003 5.  Cut 0004		
 Be790903	 181 x 293 mm 7.1 x 11.5 inch	 11.366	 21026-02_cr	 104 x 127 mm 4.1 x 5 inch	 150
1.  Edding 19			1.  Swarovski 0280 2.  Swarovski 0280		
 Be790901	 182 x 252 mm 7.1 x 9.9 inch	 38.392	 12448-09_pw	 121 x 161 mm 4.8 x 6.3 inch	 8.265
1.  Edding 34 2.  Edding 9 3.  Edding 33 4.  Edding 68 5.  Edding 1			1.  Edding 10 2.  Edding 2 3.  Edding 8 4.  Edding 1		
 Be790909	 167 x 322 mm 6.6 x 12.7 inch	 20.162	 21026-05_dw	 118 x 202 mm 4.6 x 7.9 inch	 9.309
1.  Edding 7			1.  Edding 9 2.  Isacord 40 0020		

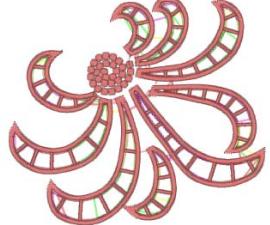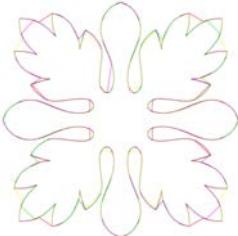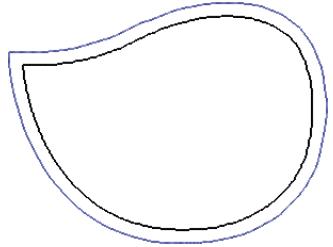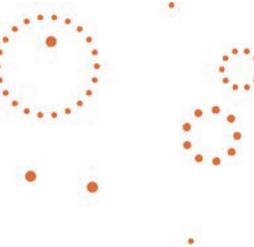Overview stitch patterns

 Dw05	↗ 105 x 94 mm 4.1 x 3.7 inch	↔	13.334	 12448-11_cr	↗ 84 x 124 mm 3.3 x 4.9 inch	↔	174
1.  Isacord 40 2022 2.  Cut 0001 3.  Cut 0002 4.  Cut 0003 5.  Cut 0004 6.  Isacord 40 2022		1.  Swarovski 0280 2.  Swarovski 0280 3.  Swarovski 0280					
 Dw10	↗ 184 x 184 mm 7.3 x 7.3 inch	↔	5.939	 12448-08_pw	↗ 119 x 177 mm 4.7 x 7 inch	↔	4.540
1.  Cut 0001 2.  Cut 0002 3.  Cut 0003 4.  Cut 0004		1.  Edding 7					
 Dw07	↗ 114 x 152 mm 4.5 x 6 inch	↔	198	 21022-13_dw	↗ 106 x 193 mm 4.2 x 7.6 inch	↔	15.285
1.  Swarovski 0237		1.  Edding 34 2.  Edding 68 3.  Edding 6 4.  Applique 1 5.  Applique 2 6.  Isacord 40 2640 7.  Applique 1 8.  Applique 2 9.  Isacord 40 1352 10.  Isacord 40 1600 11.  Isacord 40 4111 12.  Isacord 40 4103 13.  Isacord 40 0017 14.  Isacord 40 2830					
 Dw08	↗ 206 x 100 mm 8.1 x 3.9 inch	↔	424	 21022-13_cwa_a	↗ 75 x 76 mm 3 x 3 inch	↔	
1.  Swarovski 0501		1.  Isacord 40 3600 2.  Cut 0001 3.  Cut 0002 4.  Cut 0003 5.  Cut 0004					
 21022-13_cwa_b	↗ 48 x 36 mm 1.9 x 1.4 inch	↔		 21022-13_cr	↗ 95 x 86 mm 3.7 x 3.4 inch	↔	
1.  Isacord 40 3600 2.  Cut 0001 3.  Cut 0002 4.  Cut 0003 5.  Cut 0004		1.  Swarovski 0280 2.  Swarovski 0280 3.  Swarovski 0280					

	Be700121	128 x 128 mm 5 x 5 inch	2.183
--	-----------------	----------------------------	-------

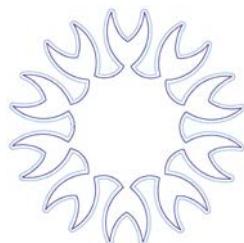1. Isacord 40 3600
2. Isacord 40 1703



	Be700122	119 x 37 mm 4.7 x 1.5 inch	4.124
--	-----------------	-------------------------------	-------

1. Isacord 40 5833

Sm;)e

	Be700124	141 x 134 mm 5.6 x 5.3 inch	6.184
--	-----------------	--------------------------------	-------


1. Isacord 40 2300
2. Isacord 40 3901



Borders


	12383-09	113 x 77 mm 4.4 x 3 inch	4.757
--	-----------------	-----------------------------	-------

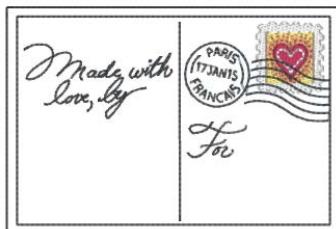1. Isacord 40 0020
2. Isacord 40 4174
3. Isacord 40 0608
4. Isacord 40 2101
5. Isacord 40 1600
6. Isacord 40 0015
7. Isacord 40 4174




	12621-19	155 x 104 mm 6.1 x 4.1 inch	8.360
--	-----------------	--------------------------------	-------

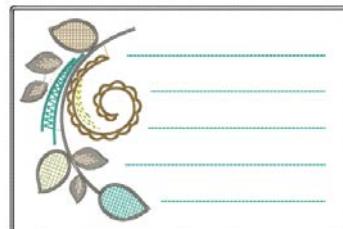1. Isacord 40 0015
2. Isacord 40 0015
3. Isacord 40 0721
4. Isacord 40 4620
5. Isacord 40 0352
6. Isacord 40 0152
7. Isacord 40 0672
8. Isacord 40 4620
9. Isacord 40 0015




	12621-04	155 x 104 mm 6.1 x 4.1 inch	3.803
--	-----------------	--------------------------------	-------

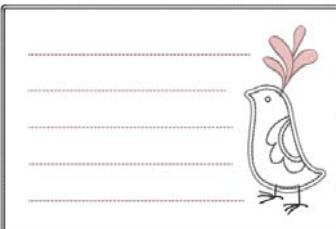1. Isacord 40 0015
2. Isacord 40 0015
3. Isacord 40 0020
4. Isacord 40 2051
5. Isacord 40 0015
6. Isacord 40 4174
7. Isacord 40 2051
8. Isacord 40 0015




	12621-05	155 x 104 mm 6.1 x 4.1 inch	5.811
--	-----------------	--------------------------------	-------

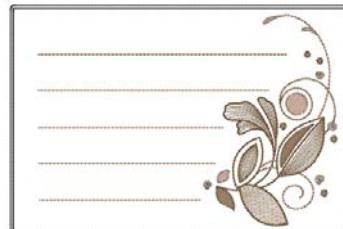1. Isacord 40 0015
2. Isacord 40 0015
3. Isacord 40 0933
4. Isacord 40 1252
5. Isacord 40 1252
6. Isacord 40 0015




	12621-09	155 x 104 mm 6.1 x 4.1 inch	5.520
--	-----------------	--------------------------------	-------

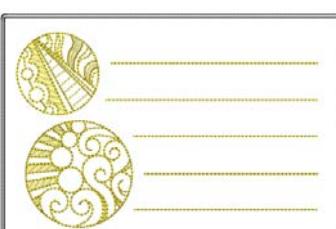1. Isacord 40 0015
2. Isacord 40 0015
3. Isacord 40 0504
4. Isacord 40 0542
5. Isacord 40 0542
6. Isacord 40 0015




	12621-02	155 x 104 mm 6.1 x 4.1 inch	5.558
--	-----------------	--------------------------------	-------

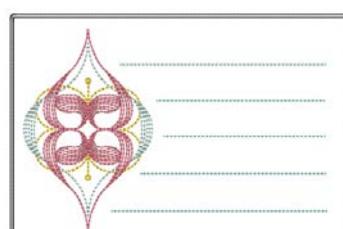1. Isacord 40 0020
2. Isacord 40 0020
3. Isacord 40 0811
4. Isacord 40 4952
5. Isacord 40 1921
6. Isacord 40 4952
7. Isacord 40 0020



Overview stitch patterns

 80090-26 1. Applique 1 2. Applique 2 3. Applique 1 4. Applique 2 5. Isacord 40 4103 6. Isacord 40 2508	 124 x 129 mm 4.9 x 5.1 inch  6.087	 12611-27 1. Applique 1 2. Applique 2 3. Isacord 40 5440	 137 x 137 mm 5.4 x 5.4 inch  3.961
 12611-28 1. Applique 1 2. Applique 2 3. Isacord 40 0703	 140 x 140 mm 5.5 x 5.5 inch  3.649	 12649-05 1. Applique 1 2. Applique 2 3. Isacord 40 1840 4. Isacord 40 1860 5. Isacord 40 0015	 91 x 88 mm 3.6 x 3.5 inch  9.087
 12606-26 1. Isacord 40 0670 2. Isacord 40 0670 3. Isacord 40 0670	 139 x 139 mm 5.5 x 5.5 inch  5.211	 12606-33 1. Isacord 40 0670 2. Isacord 40 0670 3. Isacord 40 0670	 43 x 70 mm 1.7 x 2.8 inch  2.376
 12606-37 1. Isacord 40 0670 2. Isacord 40 0670 3. Isacord 40 0670	 46 x 78 mm 1.8 x 3.1 inch  2.692	 12611-21 1. Applique 1 2. Applique 2 3. Isacord 40 1703	 156 x 72 mm 6.1 x 2.8 inch  11.513
 12611-23 1. Applique 1 2. Applique 2 3. Isacord 40 1902	 156 x 72 mm 6.1 x 2.8 inch  12.817	 12611-22 1. Applique 1 2. Applique 2 3. Isacord 40 1703	 156 x 72 mm 6.1 x 2.8 inch  12.504

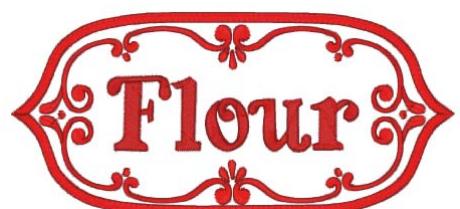

12611-24156 x 72 mm
6.1 x 2.8 inch

12.613

1. Applique 1
2. Applique 2
3. Isacord 40 1902



Animals

12676-0181 x 148 mm
3.2 x 5.8 inch

15.344

1. Isacord 40 2171
2. Isacord 40 2530
3. Isacord 40 2155
4. Isacord 40 2520
5. Isacord 40 2500

**Cm263_48**116 x 192 mm
4.6 x 7.6 inch

14.402

1. Isacord 40 3151
2. Isacord 40 0532
3. Isacord 40 1755
4. Isacord 40 2171
5. Isacord 40 2761
6. Isacord 40 0015
7. Isacord 40 0020
8. Isacord 40 2155

**12389-10**53 x 45 mm
2.1 x 1.8 inch

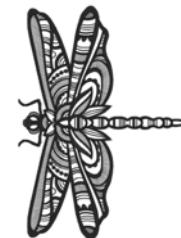
2.784

1. Isacord 40 0020
2. Yenmet 7003
3. Isacord 40 0170
4. Isacord 40 0811
5. Isacord 40 0940
6. Isacord 40 0800
7. Isacord 40 0713
8. Isacord 40 0933
9. Isacord 40 0020

**12760-02**122 x 171 mm
4.8 x 6.7 inch

21.512

1. Isacord 40 0020

**Wp415_48**132 x 148 mm
5.2 x 5.8 inch

25.110

1. Isacord 40 0941
2. Isacord 40 0532
3. Isacord 40 0945
4. Isacord 40 0020

**Cm216_48**47 x 67 mm
1.9 x 2.6 inch

5.046

1. Isacord 40 1010
2. Isacord 40 0101
3. Isacord 40 0132
4. Isacord 40 0020
5. Isacord 40 0124
6. Isacord 40 1010
7. YLI variations 8012

**Cm213_48**58 x 102 mm
2.3 x 4 inch

7.866

1. Isacord 40 1840
2. Isacord 40 1055
3. Isacord 40 1252
4. Isacord 40 0651
5. Isacord 40 0660
6. Isacord 40 0020
7. Isacord 40 1055

**Wp421_48**96 x 137 mm
3.8 x 5.4 inch

14.219

1. Isacord 40 1161
2. Isacord 40 1876
3. Isacord 40 1154



Overview stitch patterns

Na248		78 x 73 mm 3.1 x 2.9 inch		10.132	Hd977		98 x 98 mm 3.8 x 3.9 inch		13.738		
1. Isacord 40 0101 2. Isacord 40 3971 3. Isacord 40 2220 4. Isacord 40 0132 5. Isacord 40 2051 6. Isacord 40 2155 7. Isacord 40 2320 8. Isacord 40 2220 9. Yenmet 7023			1. Isacord 40 3962 2. Isacord 40 0015 3. Isacord 40 0640 4. Isacord 40 0824 5. Isacord 40 2650 6. Isacord 40 0020 7. Isacord 40 0142 8. Isacord 40 0640 9. Isacord 40 0824 10. Isacord 40 2650 11. Isacord 40 2830 12. Isacord 40 1352 13. Yenmet 7029			1. Isacord 40 0101 2. Isacord 40 0131 3. Isacord 40 0132 4. Isacord 40 4174 5. Isacord 40 0108 6. Isacord 40 0020 7. Isacord 40 5933 8. Isacord 40 0453			106 x 81 mm 4.2 x 3.2 inch		15.746
Lj598		106 x 81 mm 4.2 x 3.2 inch		15.746							

Index

A

Activate/deactivate function.....	24
Adjusting the hoop	53
Adjusting the Presser Foot Pressure.....	37
Adjusting the presser position via the knee lifter of the Free Hand System.....	35
Adjusting the upper thread tension.....	48
Alphabets	99
Altering the embroidery motif size disproportionately.....	143
Altering the embroidery motif size proportionally.....	142
Altering the stitch density	144
Attaching the embroidery module.....	127
Attaching the hoop.....	135
Attaching the knee lifter	31

B

Buttonholes	101
-------------------	-----

C

Calibrating the Buttonhole foot No. 3A	60
Calibrating the display	58
Calling up Help	63
Calling up the Creative Consultant.....	63
Calling up the Embroidery Consultant.....	63
Calling up the tutorial	63
Changing the color	153
Changing the needle	37
Changing the presser foot	35
Checking the firmware version.....	163
Child safety lock	63
Cleaning the feed dog	164
Cleaning the hook	165
Combination Mode.....	68, 149
Combining Embroidery Motifs	149
Cord	104

D

Decorative stitches	93
Dispose of the machine.....	177

E

Embroidery file format	124
------------------------------	-----

Embroidery test.....	124
Energy-saving Mode	63
Entering dealer data.....	61
Environmental Protection	10
Error messages.....	169
Explanation of symbols	11

F

Firmware

Activate/deactivate function	24
Navigation	23
Setting values.....	24
Fitting the stitch plate	131
Foot Control	
Connecting	30
Free point positioning	148

I

Inserting the embroidery needle.....	129
Introduction	12

L

Lubricating the hook	166
----------------------------	-----

M

Maintencance and cleaning	164
Moving the hoop to the back.....	136
Moving the module for the Sewing Mode.....	136

N

Navigation	23
Needle Stop Up/Down (permanent).....	39
Needle, Thread and Fabric.....	25
Needles overview	25
Needles, Threads	28

O

Overview Embroidery module	120
Overview of embroidery motifs	182

P

Pintucks	96
Placing the spool disc	33

Positioning of grid points	147
Power cable	30
USA/Canada	30
Practical Stitches	78
Using eco Mode.....	63

Q

Quilting	113
----------------	-----

R

Raising/Lowering the needle	32
Regulating the speed	64, 139
Replacing the stitch plate	39
Restoring the default settings.....	59

S

Safety Instructions.....	7
Saving a stitch pattern combination	69
Saving the service data.....	62
Select own settings.....	55
Selecting a stitch pattern.....	64
Selecting an embroidery motif	128
Selecting the language.....	57
Setting sounds.....	57
Setting the display brightness.....	58
Setting the lower thread indicator.....	56
Setting the securing stitches.....	48
Setting the sewing light	58
Setting the upper thread indicator	56
Setting values	24
Sewing a test sample	106
Slide-on Freearm Extension Table	34
Storing the machine.....	177

T

Technical specifications.....	178
Threading the bobbin thread	45
Threading the double needle	43
Threading the triple needle	44
Threading the upper thread	40
Troubleshooting.....	173

U

Updating firmware.....	163
Using a spool net	34



BERNINA recommends threads from

Mettler®

BERNINA International AG | CH-8266 Steckborn Switzerland | www.bernina.com | © Copyright by BERNINA International AG

1055345.00A.04
2021-06 EN

made to create **BERNINA**