

“IMPORTANT SAFETY INSTRUCTIONS”

When using a sewing machine, basic safety precautions should always be taken, including the following:

“Read all instructions before using.”

DANGER — To reduce the risk of electric shock.

1. The sewing machine should never be left unattended while plugged in. Always unplug the sewing machine from the electrical outlet immediately after using and before cleaning.
2. Always unplug before changing the light bulb. Replace bulb with same type rated 12V 5 watts.

WARNING — To reduce the risk of burns, fire, electric shock, or injury to persons.

1. Do not allow this sewing machine to be used as a toy. Close attention is necessary when the sewing machine is used by or near children.
2. Use this sewing machine only for its intended use as described in this manual. Use only accessories recommended by the manufacturer as contained in this manual.
3. Never operate this sewing machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the sewing machine to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
4. Never operate the sewing machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the accumulation of lint, dust, and loose cloth.
5. Never drop or insert any object into any opening.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn the main switch to the symbol “O” position which represents off, then remove plug from outlet.
9. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
10. Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
11. Always use the proper needle plate. The wrong plate can cause the needle to break.
12. Do not use bent needles.
13. Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
14. Switch the sewing machine to the symbol “O” position when making any adjustments in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, and the like.
15. Always unplug the sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.

“SAVE THESE INSTRUCTIONS”

“This sewing machine is intended for household use.”

FOR USERS IN THE UK, EIRE, MALTA AND CYPRUS ONLY.

If your sewing machine is fitted with a three-pin non-rewireable BS plug then please read the following.

IMPORTANT

If the available socket outlet is not suitable for the plug supplied with this equipment, it should be cut off and an appropriate three-pin plug fitted. With alternative plugs an approved fuse must be fitted in the plug.

NOTE

The plug served from the main lead must be destroyed as a plug with bared flexible cords is hazardous if engaged in a live socket outlet. In the event of replacing the plug fuse, use a fuse approved by ASTA to BS 1362, i.e. carrying the  mark, rating as marked on plug.

Always replace the fuse cover, never use plugs with the fuse cover omitted.

WARNING

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER 'E', BY THE EARTH SYMBOL  OR COLOURED GREEN OR YELLOW.

The wires in this main lead are coloured in accordance with the following code:

Blue Neutral

Brown Live

As the colours of the wiring in the main lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black or blue.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red or brown.

CONGRATULATIONS ON CHOOSING A BROTHER COMPUTER SEWING MACHINE

Your machine is the most advanced computerized home use sewing machine available. To fully enjoy all the features incorporated we suggest that you study this booklet.

PLEASE READ BEFORE USING YOUR SEWING MACHINE

For safe operation

1. Be sure to keep your eye on the needle while sewing. Do not touch the pulley, thread take-up, needle, or other moving parts.
2. Remember to turn off the power switch and unplug the cord when:
 - Operation is completed
 - Replacing or removing the needle or any other parts
 - A power failure occurs during use
 - Maintaining the machine
 - Leaving the machine unattended.
3. Do not store anything on the foot controller.
4. Plug the machine directly into the wall. Do not use extension cords.

For a longer service life

1. When storing your sewing machine, avoid direct sunlight and high humidity locations. Do not store the sewing machine beside a space heater, iron, or other hot objects.
2. Use only neutral soaps or detergents to clean the case. Benzene, thinner, and scouring powders can damage the case and machine, and should never be used.
3. Do not drop or hit the machine.
4. Always consult the operation manual when replacing or installing any assemblies, the presser feet, needle, or other parts to assure correct installation.

For repair or adjustment

In the event a malfunction occurs or adjustment is required, first follow the troubleshooting table in the back of the operation manual to inspect and adjust the machine yourself. If the problem persists, please consult your nearest authorized Brother service center.

CONTENTS

CHAPTER 1

SETTING UP

.....	5
PRINCIPAL PARTS	5
OTHER INCLUDED ACCESSORIES	7
OPTIONS	8
SELECTION KEYS	9
Screen messages guide you through each operation	9
OPERATION BUTTONS	10
Using the operation buttons	10
USING THE SCREEN KEYS	11
Examples of the keys on LCD	11
About the screen	11
If the LCD is hard to see when the power is turned on	12
Adjusting the brightness of the LCD	12
HOW TO USE THE LANGUAGE SELECTION KEY	13
How to clear the language selection	14
BOBBIN WINDING / BOBBIN THREAD SETTING	15
Winding the bobbin and setting the bobbin thread	15
Setting the bobbin	17
UPPER THREADING	18
Thread according to number and arrow marks on machine	18
Auto-threading device	20
START/STOP	21
"START/STOP" button	21
Foot controller	21
STITCH WIDTH AND STITCH LENGTH	22
Stitch width	22
Stitch length	23
Quick adjustment reference chart for stitch width and stitch length	25
THREAD TENSION	27
Correct tension	27
Loosen tension by touching "◀" (Weak)	27
Tighten tension by touching "▶" (Strong)	28
Except "UTILITY STITCH"	28
CHANGING THE PRESSER FOOT	29
Change the presser foot according to the LCD message	29
Installing embroidery foot "Q"	29
Changing the embroidery foot	30
Feed dog adjustment	30
CHANGING THE NEEDLE	31
Setting the needle securely	31
Checking needle	31
MACHINE OPERATION KEYS	32

CHAPTER 2

1. SEWING

.....	33
TRIAL SEWING	33
Sewing by using "UTILITY STITCH"	33
AUTOMATIC REINFORCEMENT STITCHING	35
Cancelling automatic reinforcement stitching	35

AUTOMATIC THREAD CUTTING	36
Cancelling programmed automatic thread cutting	36
UTILITY STITCH SELECTION	37
USEFUL SKILLS	39
The "🔍" key	39
Sewing corners	40
Sewing thick seams	40
Sewing curves	40
Sewing thick fabric	41
Sewing thin fabric	41

2. UTILITY STITCHES

.....	42
STRAIGHT STITCHES	42
For reinforcement or stretch fabric	43
Changing the stitch length	43
Changing the needle position	43
ZIGZAG STITCHES	44
Overcasting (using a zigzag stitch)	44
Applique (using a zigzag stitch)	44
Patchwork (for crazy quilt)	44
OVERCASTING	45
When using [S], [E] or [L] stitches	45
When using [H], [T] or [P] stitches	45
OVERCASTING (When using the side cutter)	46
BLIND HEM STITCHES	48
Adjusting the needle drop position	49
BUTTONHOLE STITCHES	50
Order of one cycle	52
Sewing stretch fabrics	52
Buttons that do not fit into the guide plate (Odd-shaped buttons)	53
Changing the stitch length	53
Changing the stitch width	53
BAR TACKING	54
Thick fabrics	55
Changing the bar tack stitch length	55
Changing the bar tack stitch width	55
DARNING	56
Changing the length of the darning stitch	57
Changing the bar tack stitch width	57
Darning stitch cycle	57
TAPE ATTACHING	58
EYELET STITCH	59
Size of eyelet (Actual size)	59
BUTTON SEWING	60
Attaching buttons with four holes	61
Attaching a shank to the button	61
BASTING	62
ZIPPER INSERTION (CENTERED AND SIDE APPLICATION)	63
Centered application	63
Side application	64
DART SEAM	66
GATHERING	67
Pulling out the bobbin thread	68
PINTUCK	69
FLAT FELL SEAM	71
Finished flat fell seam	72
APPLIQUES	73
Sewing the applique around corners	73
APPLIQUE QUILTS	74
SCALLOP STITCH	75
SMOCKING STITCH	76

PATCHWORK STITCH.....	77
FAGOTING	78
DECORATIVE STITCHING	79
Decorative stitching	79
Shell tacking	79
HEM-STITCH (HEIRLOOM STITCH)	80
“  ” hem-stitching	80
“  ” hem-stitching	81
LATERAL SEWING (STRAIGHT/ZIGZAG).....	82

3. CHARACTER AND DECORATIVE STITCHES

.....	84
CHARACTER SEWING	84
Combinations of characters	85
DECORATIVE STITCHES	86
SATIN STITCHES.....	87
CROSS STITCHING.....	88
CHARACTER AND DECORATIVE STITCH ADJUSTMENT.....	89
Changing the pattern size (Actual size)	89
Single/repeat sewing	89
Elongation	90
Changing the stitch length and the stitch width	91
Customize patterns by combining satin stitches or one-point stitches and using the “  ” and “  ” keys.....	92
Confirming entry of combined stitch patterns	94
Saving combined stitch patterns.....	94
SEWING.....	96
Sewing attractive finishes	96
Using a pattern sheet.....	96
Sewing	97
ADJUSTING STITCH PATTERN	99

4. EMBROIDERING

.....	100
PREPARATION BEFORE SEWING	100
Attaching embroidery foot “Q”.....	100
Fitting embroidery unit	101
Removing the embroidery unit.....	101
Placing the embroidery unit into its case	102
Initializing the embroidery unit	102
SELECTING AND SEWING PATTERNS	103
Selecting alphabetical characters	103
Selecting one-point patterns	104
Selecting frame patterns.....	105
Selecting floral alphabets.....	106
Selecting patterns from a memory card.....	107
MEMORY	109
Saving a pattern combination in memory	109
EMBROIDERING	110
Embroidering attractive finishes.....	110
Setting the fabric into the embroidery frame.....	110
Fitting the embroidery frame to the embroidery unit	112
Embroidering	113
Embroidering a single color pattern when “MULTI COLOR” is displayed	115
Changing the stitch density for characters and some frame patterns.....	115

MOVING THE LOCATION (LAYOUT)	116
Moving the embroidery location	117
Checking the embroidering area.....	117
Embroidering from a specific starting point.....	118
Changing the pattern direction.....	118
Reversing patterns.....	119
Using the “IMAGE” key	119
Changing the size of characters and frame patterns.....	120
ADJUSTMENTS DURING THE EMBROIDERY PROCESS.....	121
If the thread breaks during embroidering.....	121
Continuing a pattern after the power has been momentarily turned off	121
When sewing again from the beginning.....	122
EMBROIDERY APPLICATIONS.....	123
Linking characters.....	123
Embroidering appliques (using a frame pattern)	124
Embroidering onto small pieces of fabric or onto corners.....	126

5. EDITING EMBROIDERY PATTERNS

.....	127
EDITING FUNCTION	127
One-point pattern and frame pattern combinations.....	127
One-point pattern and character combinations.....	127
One-point pattern, frame pattern and character combinations.....	127
Explanation of functions.....	128
EXAMPLE OF PATTERN EDITING.....	129
Moving the sewing position.....	132
Changing the character spacing	132
Changing the sizes of characters and frame patterns.....	133
Rotating patterns	133
Reversing patterns horizontally	134
Deleting patterns.....	134
Editing a memory card pattern.....	135
EMBROIDERING AN EDITED PATTERN	136
MODIFYING AN EDITED PATTERN.....	137
Modifying one pattern while editing a different pattern.....	137
Correcting a pattern after editing is finished	138
SAVING A PATTERN COMBINATION TO MEMORY	139

6. RETRIEVING

.....	141
RETRIEVING CHARACTERS AND PATTERNS	141
RETRIEVING AN EMBROIDERY PATTERN	142
RETRIEVING AN EDITED PATTERN	143
DELETING A STORED PATTERN	144

7. MY CUSTOM STITCH™ (Function for making own stitch)

.....	145
MAKING THE ILLUSTRATION	145
GENERATING THE DATA	147
EDITING AN EXISTING “  ”	149
Moving a point	149
Moving part or all of a pattern	150
Inserting new points	150
Once you have finished editing	151
STORING THE “  ” WHICH YOU HAVE ENTERED	152
RETRIEVING A “  ”	153

MAINTENANCE

.....	154
CLEANING	154
Cleaning the screen	154
Cleaning the sewing machine surface	154
Cleaning the shuttle	154
CHANGING THE LIGHT BULB	156
RELATED CHART OF SEWING FABRICS, THREAD AND NEEDLE	157

ERROR MESSAGES

.....	158
Warning messages	158
Instruction messages	163
Alarms	164

TROUBLESHOOTING

.....	165
USING THE “OPERATION GUIDE” KEY	165
Trouble with threads and stitches	166
Mechanical trouble	167

SEWING CHART

.....	168
-------	------------

PATTERNS (PROGRAMMED IN MACHINE)


.....	171
Utility stitches	171
Character sewing	171
Character embroidering chart	174
Frame pattern embroidering chart	174

PATTERNS (MEMORY CARD)

.....	175
One point mark embroidery pattern	175


*MY CUSTOM STITCH™ is under application for a registered trademark in the United States of America.

PRINCIPAL PARTS

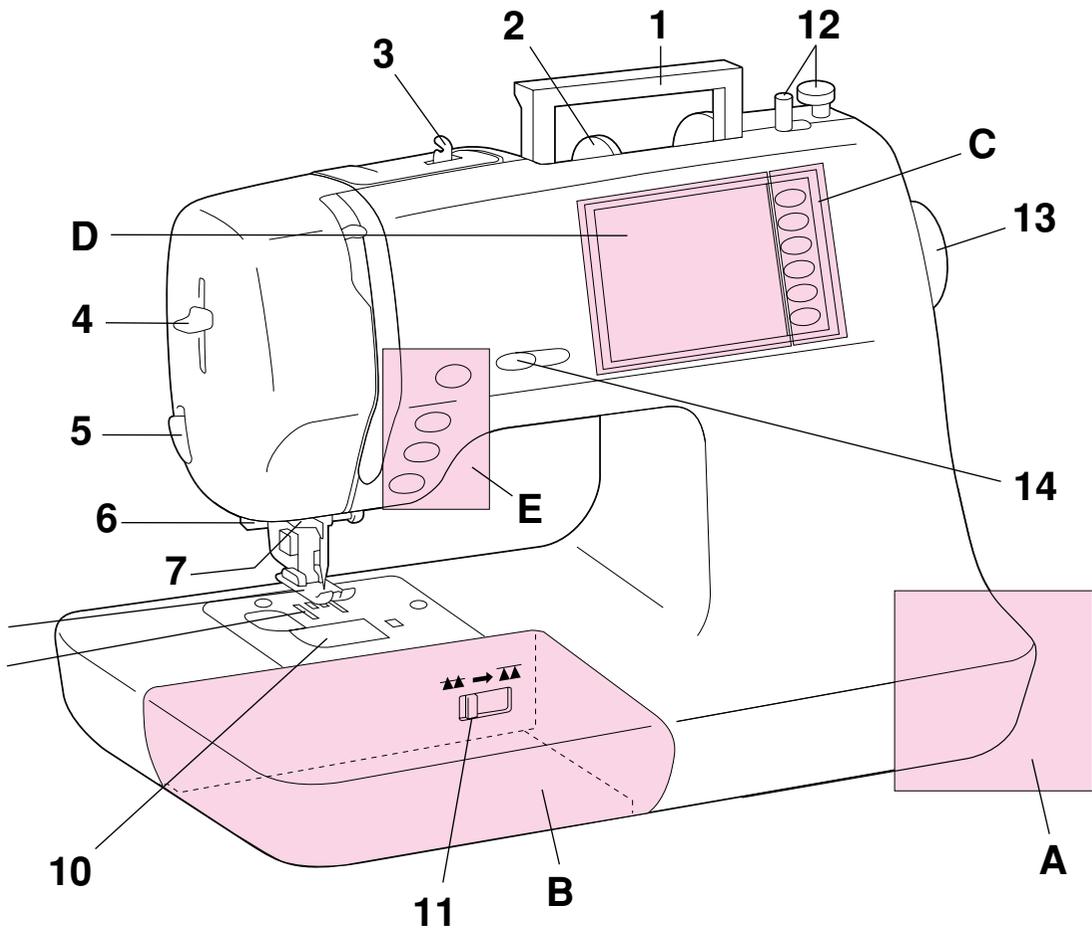

- 1- Handle
- 2- Spool cap
- 3- Thread guide for bobbin winding
- 4- Needle threader lever
- 5- Thread cutter
- 6- Buttonhole lever
- 7- Needle threader
- 8- Presser foot
- 9- Feed dog
- 10- Bobbin cover
- 11- Feed dog adjuster lever
- 12- Bobbin winder device
- 13- Balance wheel
- 14- Speed range control lever

- A- Main power switch and connectors
- B- Accessory compartment
- C- Selection keys (Refer to page 9)
- D- L.C.D. (Liquid Crystal Display)
- E- Operation buttons (Refer to page 10)

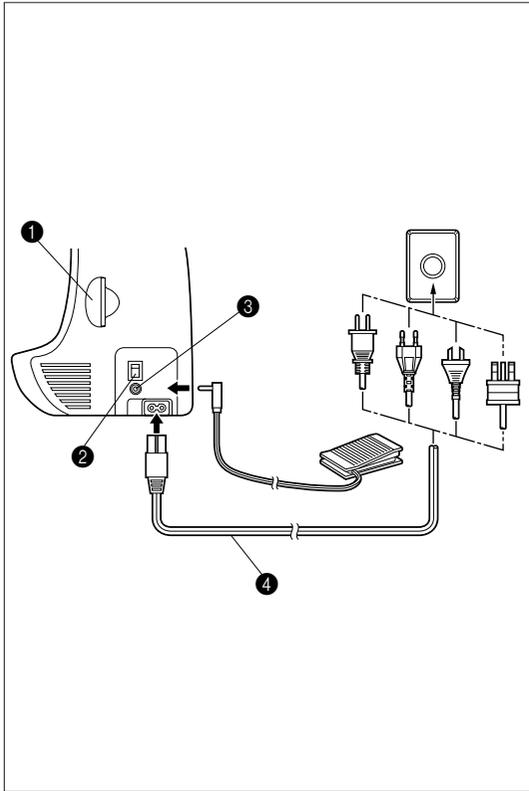


A. MAIN POWER SWITCH AND CONNECTORS

- ① **Card slot**
Slot for memory card insertion.
- ② **Main power switch**
Use to turn on/off the main power.
- ③ **Controller jack**
Insert for foot controller operation.
- ④ **Power cord**
Use to connect machine to power supply.

CAUTION

- When leaving the sewing machine unattended, the main switch of the machine must be switched off or the plug must be removed from the socket-outlet.
- When servicing the sewing machine, or when removing covers or changing bulbs, the machine or the electrical set must be unplugged.
- For U.S.A. only
This appliance has a polarized plug (one blade wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

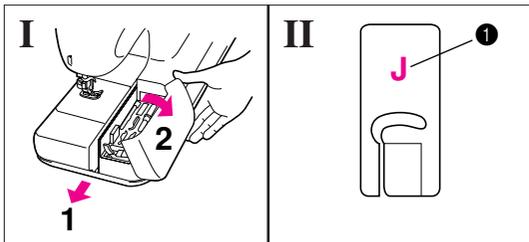


B. FLAT BED ATTACHMENT WITH ACCESSORY COMPARTMENT

- I Tilt the lid of the accessory compartment toward you to open.
- II Each presser foot has a symbol.
- ① Presser foot symbol

III ACCESSORY LIST


The location of each accessory is shown in figure III.

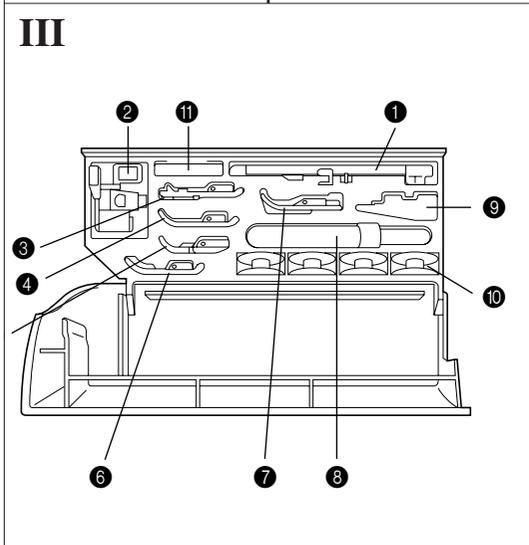

No.	Part Name	Part Code
①	Buttonhole foot "A"	X57789-101
②	Embroidery foot "Q"	XA2159-101
③	Overcasting foot "G"	X51162-001
④	Monogramming foot "N"	X53840-201
⑤	Zipper foot "I"	X59370-051
⑥	Zigzag foot "J"	137748-101
⑦	Blind stitch foot "R"	X56409-001
⑧	Seam ripper	X54243-001
⑨	Button fitting foot "M"	130489-001
⑩	Bobbin	136492-101
⑪	Needle set	X58358-001


- * Always use the plastic bobbin which is supplied with machine or in accessory compartment.
- * Always use BROTHER accessories recommended for this machine.

OTHER INCLUDED ACCESSORIES

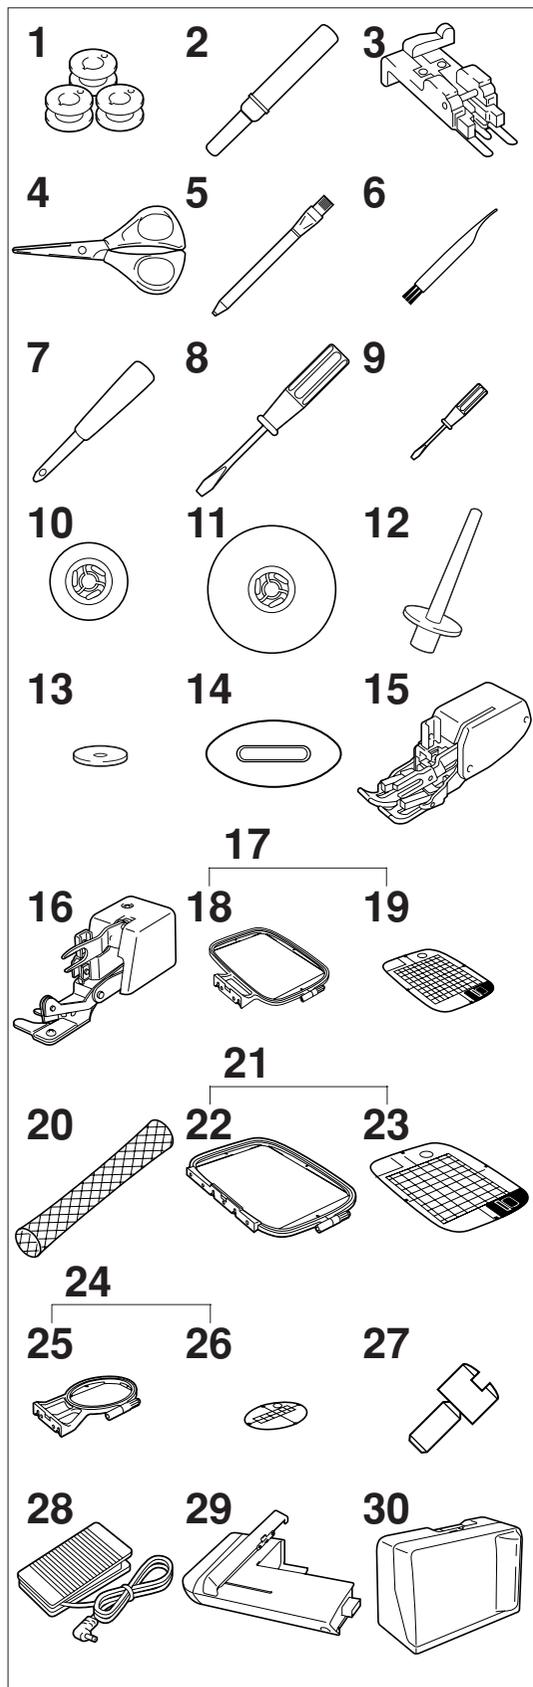

No.	Part Name	Part Code	
		U.S.A.	Others
1	Bobbin (3)	136492-101	
2	Seam ripper	X54243-001	
3	Button fitting foot "M"	130489-001	
4	Scissors	184783-001	
5	Chalk pen	184944-001	
6	Cleaning brush	XA4527-001	
7	Eyelet punch	135793-001	
8	Screwdriver (Large)	X55467-051	
9	Screwdriver (Small)	X55468-051	
10	Spool cap (Small)	130013-003	
11	Spool cap (Large)	130012-003	
12	Extra spool pin*	XA3336-051	
13	Spool felt	X57045-001	
14	Disc-shaped screwdriver	XA2005-051	
15	Walking foot*	X80926-001	
16	Side cutter	X80943-001	
17	Embroidery set (Regular)	SA422	X80903-002
18	Embroidery frame (Regular)	XA2171-001	
19	Embroidery sheet (Regular)	XA2212-001	
20	Net*	127610-000	
21	Embroidery set (Large)	SA423	X80902-002
22	Embroidery frame (Large)	XA2168-001	
23	Embroidery sheet (Large)	XA2209-001	
24	Embroidery set (Small)	SA421	X80904-102
25	Embroidery frame (Small)	XA2174-001	
26	Embroidery sheet (Small)	XA2215-101	
27	Screw*	132730-251	
28	Foot controller	234522-001	
29	Embroidery unit	—	
30	Hard case	XA1821-001	


- * Use the same screw when installing both the side cutter and the walking foot.
- * If using special threads which wind quickly off the thread spool, place a net on the spool before using.
- * If using the walking foot, please refer to the explanatory sheet which is inserted in the instruction book.
- * The extra spool pin which is provided as an accessory should be attached to the end of the bobbin winder shaft during use.

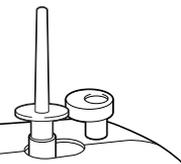

Note (For U.S.A. only)

Foot controller: Model J2
This foot controller can be used for sewing machine model PC-8200.

OPTIONS


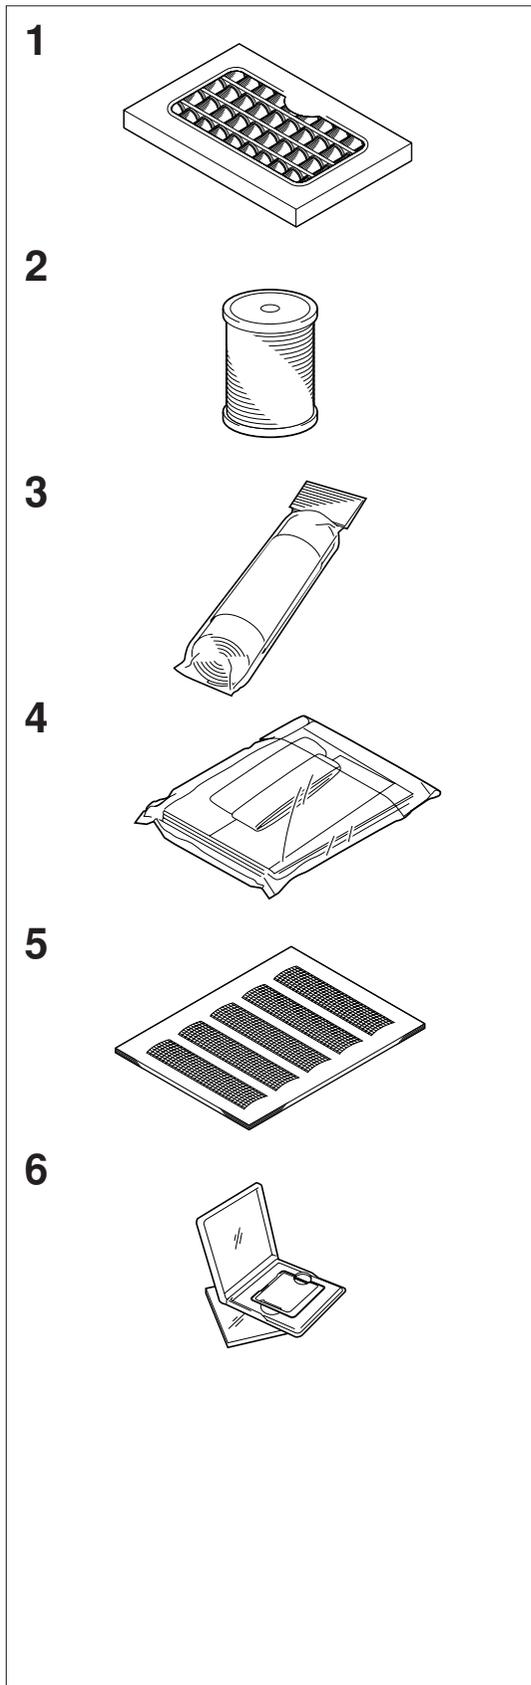


No.	Part Name	Part Code	
		U.S.A.	Others
1	Brother poly 40 color thread set	ETS-40	X80928-100
2	Brother poly #60 bobbin thread	EBT-SG	X80918-001
3	Backing material (Stabilizer material)	SA517	X80914-001
4	Country bag	SA152	X80922-002
5	Grid sheet set	SA500	X80948-001
6	Memory card*		
	No. 1 Alphabet	SA298	X58317-001
	No. 2 Flower	SA299	X58321-001
	No. 3 Dinosaur	SA300	X58362-001
	No. 6 Moskowitz's World	SA303	X58497-001
	No. 7 Country Life	SA304	X59322-001
	No. 8 Holiday	SA305	X59357-001
	No. 9 Hobby Craft	SA306	X59511-001
	No. 10 Monogram Emblem	SA307	X59567-001
	No. 11 Frame	SA311	XA0257-001
	No. 12 Transportation	SA312	XA0275-001
	No. 13 Sports Emblem	SA313	XA0517-001
	No. 14 Large Floral	SA314	XA1223-001
	No. 15 Cute Kids	SA315	XA1325001
	No. 16 Dogs & Cats	SA316	XA1406-001
	No. 17 Nintendo	SA317	XA1434-001
	No. 19 Marine	SA319	XA2452-001
	No. 20 Petite Designs	SA320	XA2869-001
	No. 21 Needlework	SA321	XA2873-001

* This unit cannot be used in conjunction with the memory card S-1.

SELECTION KEYS

Screen messages guide you through each operation

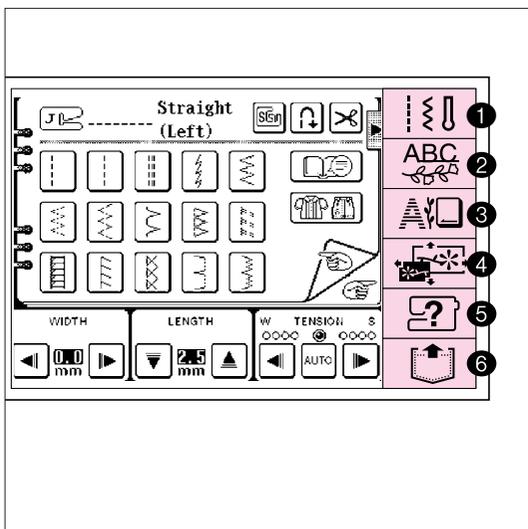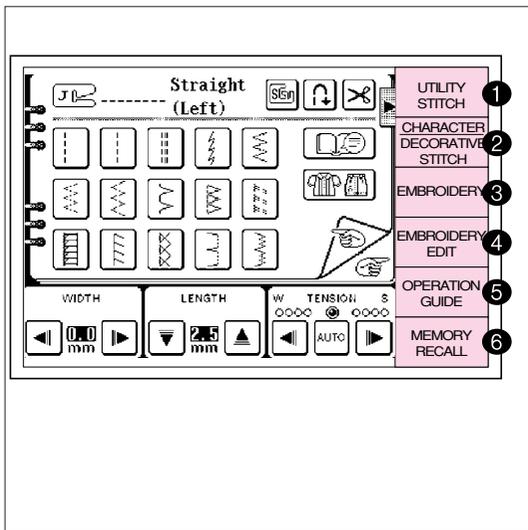



C. SELECTION KEYS

* Depending on the country of destination, the selection keys may be displayed by means of characters or by illustrations.

- ① **“UTILITY STITCH” KEY**
Use this key when you sew utility stitches such as straight stitches, buttonholes, etc.
- ② **“CHARACTER/DECORATIVE STITCH” KEY**
Use this key to sew alphabetical characters and other decorative stitches.
- ③ **“EMBROIDERY” KEY**
Use this key when using a memory card and when embroidering pre-programmed patterns. When you insert or remove the memory card from the machine, the main power switch should always be turned off.
- ④ **“EMBROIDERY EDIT” KEY**
Use this key for embroidering patterns which are combinations of other patterns.
- ⑤ **“OPERATION GUIDE” KEY**
Use this key if you would like information on how to use machine functions such as upper threading, bobbin winding and bobbin thread setting.
- ⑥ **“MEMORY RECALL” KEY**
Use this key to retrieve combined patterns which have been saved in memory.

OPERATION BUTTONS


Using the operation buttons

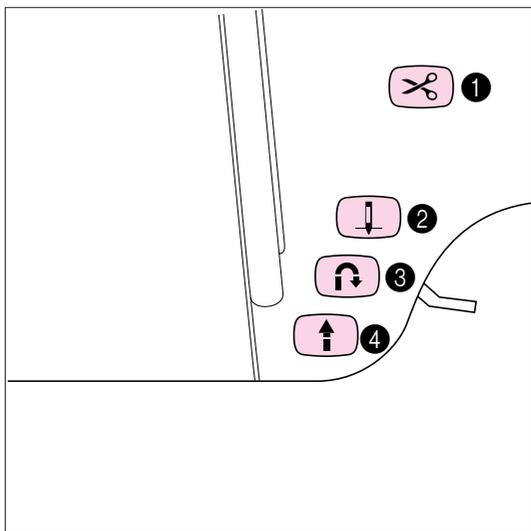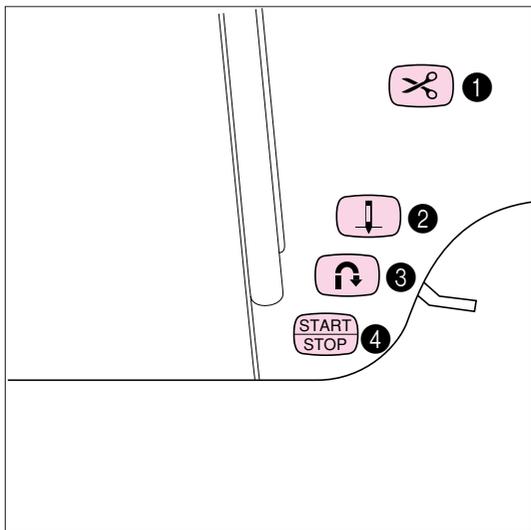

D. OPERATION BUTTONS

- ❶ **“THREAD CUTTER” BUTTON**
When you press this button, both upper and bobbin threads are cut automatically.
- ❷ **“NEEDLE POSITION” BUTTON**
Press to change the needle position from up to down or from down to up.
- ❸ **“REVERSE STITCH” BUTTON**
The reverse stitch button is used to secure and end stitching with a reverse stitch or reinforcement stitch. The reverse stitch function stitches backward. The reinforcement stitch function stitches three times in the same position. (See page 35 for full instructions.)
- ❹ **“START/STOP” BUTTON**
The button illuminates green when the machine is ready to be started and while sewing or embroidering. If starting is not possible, it illuminates red. In addition, it illuminates orange when the bobbin thread is being wound onto the bobbin (when the bobbin winder shaft is to the right).
 - * Sewing continues at low speed while the button is pressed.
 - * The needle will drop to its lowest position when the machine is stopped.

USING THE SCREEN KEYS

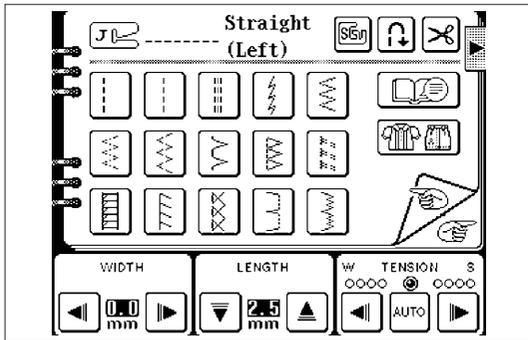

Touch a key on the screen with your finger to select the pattern which appears inside the key or to start the function or operation indicated inside the key.

CAUTION

Be sure to touch the key with your finger only. Never use a pointed instrument such as a sharp pencil or a screwdriver or a hard object to touch the key.

Furthermore, do not press down too hard on the screen, otherwise problems may result.

Examples of the keys on LCD

“”:

Touch this key to return to the previous page.

“”:

Touch this key to move to the next page.

“CHECK”:

If an error message appears, touch this to return to the original screen.

“CLOSE”:

If another screen is being displayed over the top of an advice screen, for example, touch this key to remove the topmost screen.

“RETURN”:

Touch this key to return to the previous screen.

“END”:

Touch this key to stop using the function.

“CONFIRM”:


Touch this key to start a function working.

About the screen

NOTES


- All or parts of the screen may become darker or lighter at times because of changes in the ambient temperature around the screen. This is normal and is not the sign of a malfunction. Adjust the screen if it is difficult to read.
- The screen may be dark, immediately after the power is turned on. This is a feature of the light which illuminates the screen, and is not the sign of a malfunction. The screen will return to its normal level of brightness after approximately 10 minutes.

If the LCD is hard to see when the power is turned on

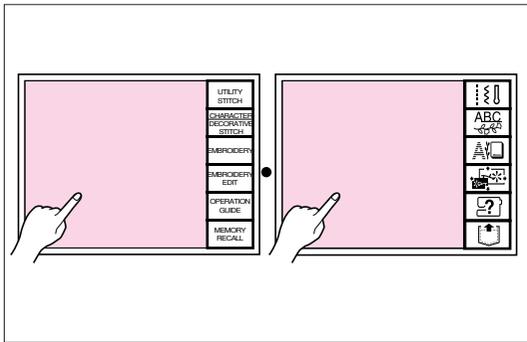

1. While touching the LCD (anywhere is OK), turn the power off and then back on again.


* The START/STOP button will not illuminate at this time.

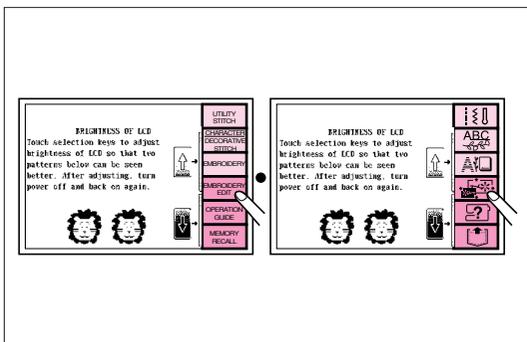

2. Touch any one of the lower three selection keys (EMBROIDERY EDIT, OPERATION GUIDE or MEMORY RECALL). The LCD will become darker each time one of these keys is touched. If you would like to make the LCD lighter, touch any one of the upper three selection keys (UTILITY STITCH, CHARACTER/DECORATIVE STITCH or EMBROIDERY).


3. After you have finished adjusting, turn the power off and back on again once more.

Adjusting the brightness of the LCD.

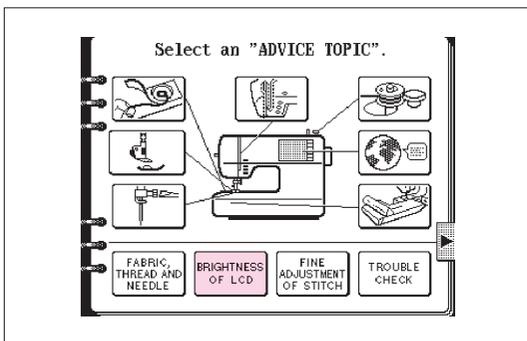

1. Touch the "OPERATION GUIDE" key.


2. Touch the "BRIGHTNESS OF LCD" key.

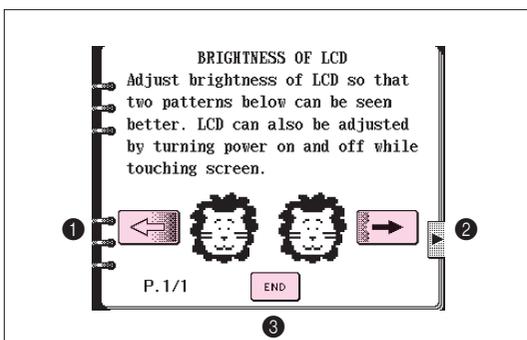


- ① Touch this key to make contrast less (lighter).
- ② Touch this key to make contrast greater (darker).
- ③ Touch this key to return to the screen which was previously being displayed.

HOW TO USE THE LANGUAGE SELECTION KEY

You can use the “” key to easily change the display language for all the keys and messages on the LCD screen to the language you need.

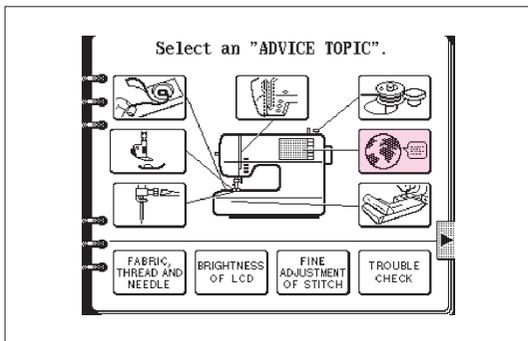

1. Touch the “OPERATION GUIDE” key.
2. Touch the “” key.
3. The language display screen will then appear. Touch the key which corresponds to the desired language.

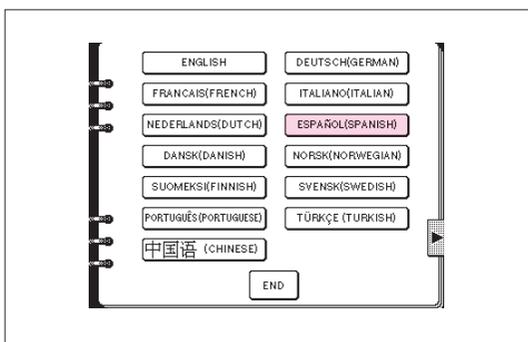


Example: To change the display language to Spanish

1. Touch the “” key.
2. Touch “ESPAÑOL (SPANISH). This will change the language setting to Spanish.
3. The display will then return to the screen which was previously being displayed.

Note

- * When the “” key is used to set the display language, error messages will also be displayed in the language selected.
- * The display language can be selected from a list of 13 languages (English, German, French, Italian, Dutch, Spanish, Danish, Norwegian, Finnish, Swedish, Portuguese, Turkish and Chinese).

How to clear the language selection

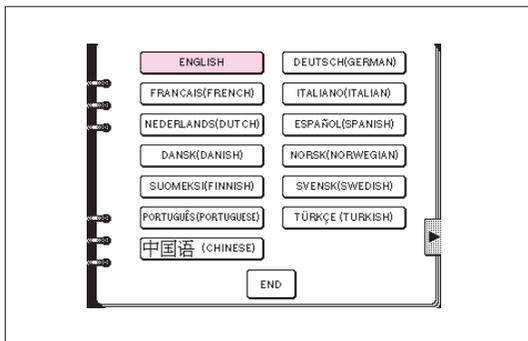

Example: To change the display language from Spanish back to English



1. Touch the "OPERATION GUIDE" key.
2. Touch the "🌐" key.
3. Touch the "ENGLISH" key.
This will cancel the Spanish language setting and return all screen displays and error messages to the English language.

CAUTION

- This function should not be used as a translation function.
- If the power supply is turned off, the current language setting will be retained and will not be cleared.

BOBBIN WINDING / BOBBIN THREAD SETTING

Winding the bobbin and setting the bobbin thread

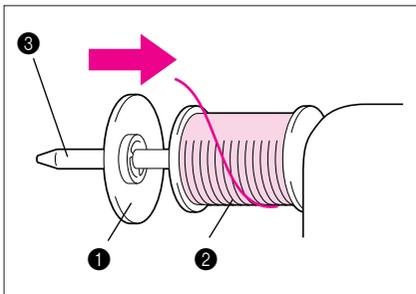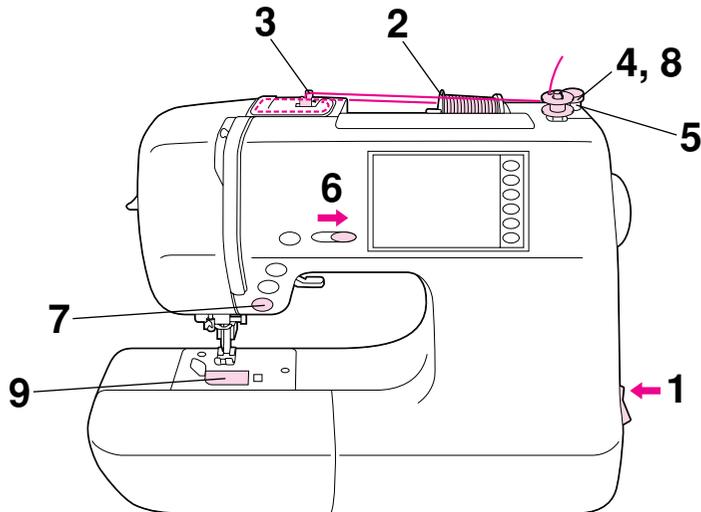


1. Connect the machine to the power supply and turn on the main power.

2. Set the thread spool. The thread end should come from the bottom front of the spool. The spool cap closest to the thread spool size should be used to hold the spool securely on the spool pin.

- ① Spool cap
- ② Spool
- ③ Spool pin


* The spool cap should be pushed on as far as it will go.

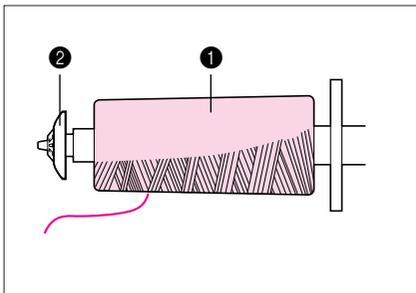


Note

If using a fine thread such as cross wound thread, slightly separate the spool cap (small) from the thread on the spool before using.

- ① Cross wound thread
- ② Spool cap (small)

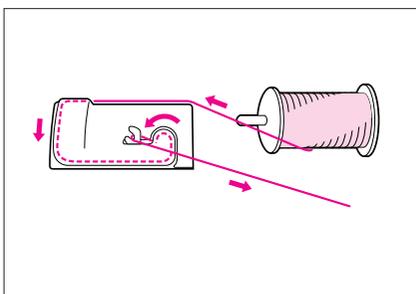


3. Guide the thread through the machine and the thread guide for bobbin winding as marked by the dotted line.

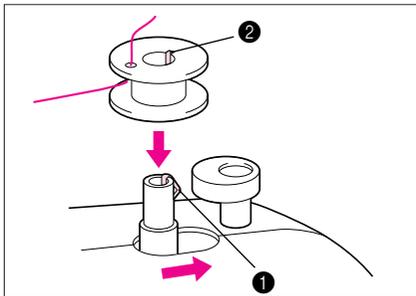

4. Guide the thread through the small hole in the side of the bobbin from the inside. Place the bobbin on the bobbin winder shaft. While holding the thread end, push the bobbin winder shaft to the right.


- ① Spring on the shaft
- ② Groove of the bobbin

* Align the groove of the bobbin with the spring on the shaft.

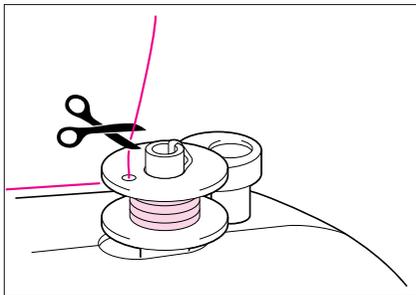

5. While holding the thread end, press the "START/STOP" button. Wind the thread a few times around the bobbin and press the "START/STOP" button again.

Trim the excess thread from the top of the bobbin after the machine stops.

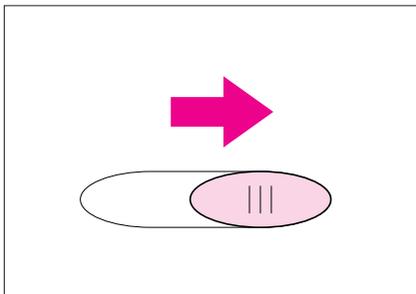


6. Set the speed to maximum.

7. Press the "START/STOP" button. The machine will stop automatically when the bobbin is full. Press the "START/STOP" button to stop at any time or when the bobbin has stopped moving and the motor is still running.

8. Push the bobbin shaft to the left. Remove the bobbin.


9. Set the bobbin into the shuttle as shown on the next page.

Setting the bobbin

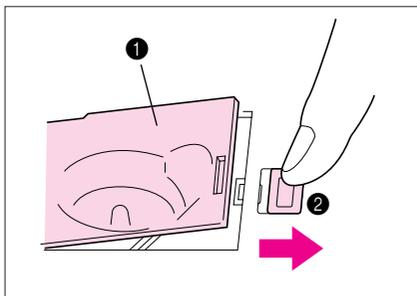


1. Slide open the bobbin cover.

- ❶ Bobbin cover
- ❷ Bobbin cover release button

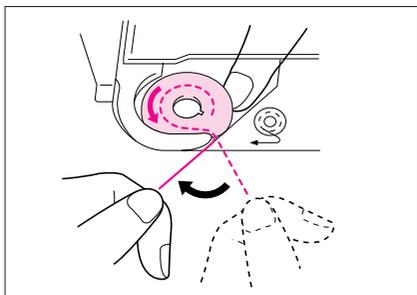


2. Insert the bobbin into the shuttle with the thread direction as noted in the diagram.

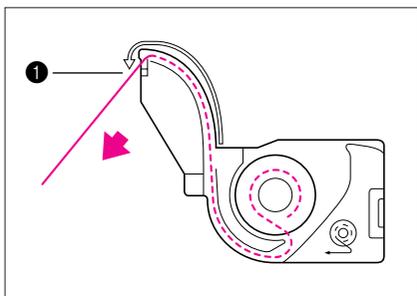

3. Guide the thread end through the slit, then pull the thread toward you to cut off any excess thread.

- ❶ Built-in thread cutter


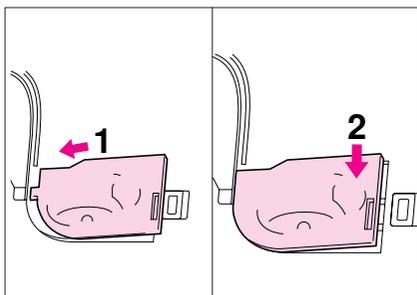


4. Close the bobbin cover by placing the left end in place and pressing down lightly on the right end so that it snaps into place.


* Sewing can begin without pulling out the bobbin thread.

UPPER THREADING


Thread according to number and arrow marks on machine.

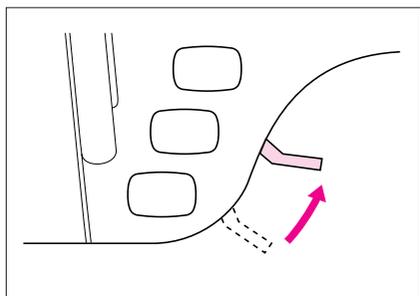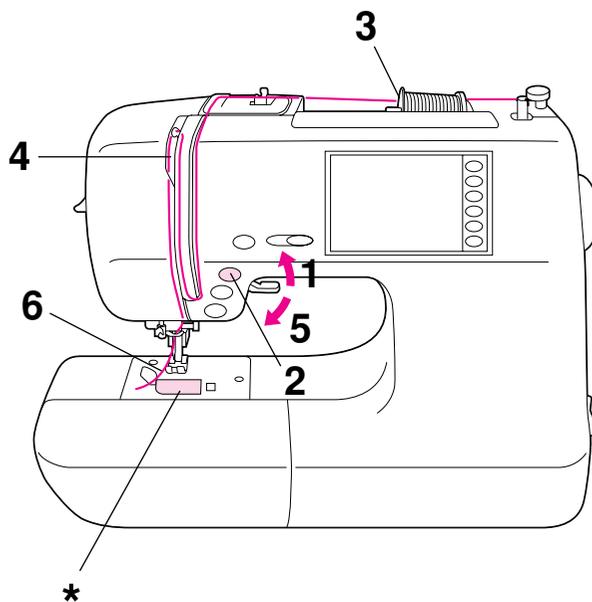


1. Raise the presser foot lever. (If the presser foot is not raised, the upper thread cannot be threaded.)

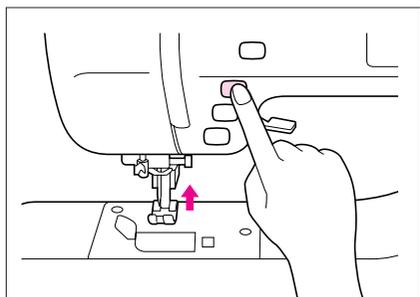



2. Press the "NEEDLE POSITION" button to raise the needle to the up position.

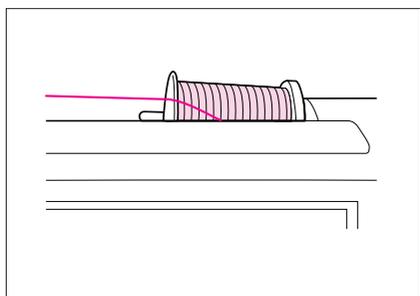

3. Set the thread spool. The thread end should come from the bottom front of the spool. The spool cap closest to the thread spool size should be used to hold the spool securely on the spool post.

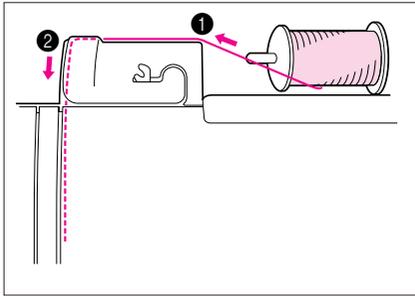

4. Guide the thread as illustrated by the numbers and arrow marks on the machine.

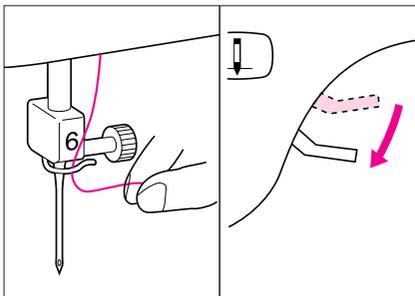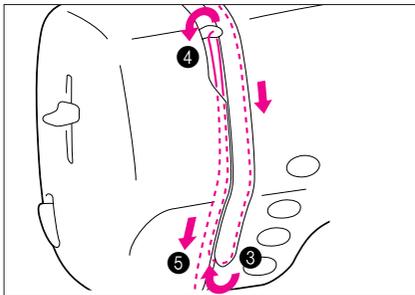

5. Lower the presser foot.
6. Thread the needle manually or using the auto-threading device.
- * You do not need to pull the bobbin thread up before you start sewing.
7. Pass the thread underneath the presser foot and pull it out from the rear of the machine by about 5 cm.

Note

Always raise the presser foot before removing the upper thread from the machine or damage may occur to the auto thread tension unit.

USING THE EXTRA SPOOL PIN AND THE NET

Extra spool pin

Use when embroidering with metallic thread.

1. Insert the extra spool pin into the end of the bobbin winder shaft.
2. Install the spool felt and the thread spool in that order, and then thread the upper thread.

- ① Insert the extra spool pin into the end of the bobbin winder shaft
- ② Spool felt
- ③ Thread spool

* When setting the thread spool, set it so that the thread winds off from the front of the spool.

* If using metallic thread, we recommend that you use a 90/14 home sewing machine needle.

Note



This method keeps the thread from twisting as it comes off the spool pin.

Net


If using special threads which wind quickly off the thread spool, attach a net to the spool before using.

* Cut the net to match the size of the spool.

- ① Net
- ② Thread spool
- ③ Spool pin
- ④ Spool cap

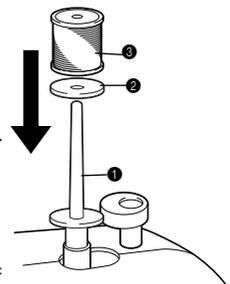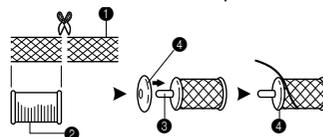


Auto-threading device

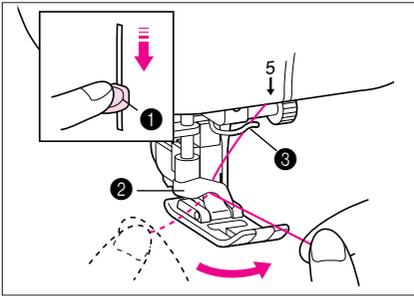

1. Guide the thread through the wire loop and gently pull the thread towards you.

- ① Needle threader lever
- ② Guide (Large hook)
- ③ Wire loop


* Lowering the presser foot will engage the automatic tension and will allow you to grip the thread as you proceed.

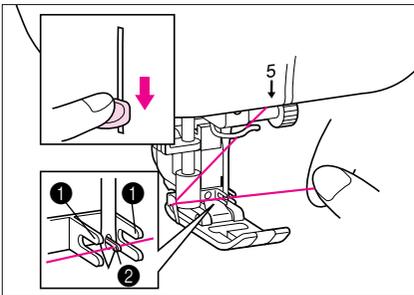

2. Lower the needle threader lever all the way down using your left index finger. Check that the thread is held by the guide (large hook) and that the hook on the needle threader has passed through the eye of the needle.


- ① Second set of hooks
- ② Third hook

3. As you lower the needle threader lever drape the thread to the left and the large hook will catch the thread. When the needle threader lever is in the lowest position, drape the thread across the eye of the needle.

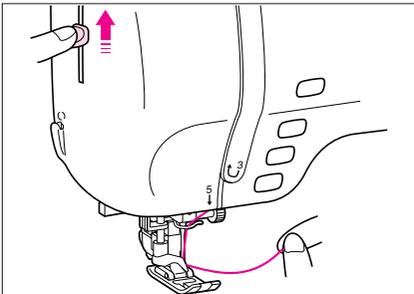

* Rotating your right hand slightly to check that the thread is engaged.

4. While gently holding the thread, raise the needle threader lever.

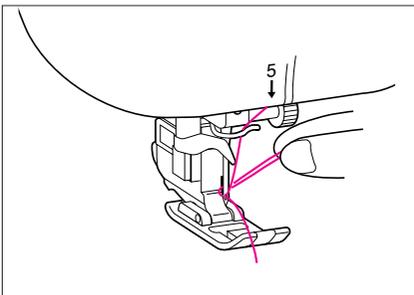

5. Pull the thread towards the rear to finish the upper threading.

6. Pass the thread underneath the presser foot and pull it out from the rear of the machine by about 5 cm (1-15/16").

Needle	Thread (cotton)
65/9	#30, 50, 60
75/11	#30
90/14	#30
100/16	#20


Note

The auto-threading device cannot be used with the combinations shown at left.

Transparent nylon thread can be used regardless of the chart providing needle used in 90/14 to 100/16.


START/STOP

“START/STOP” button

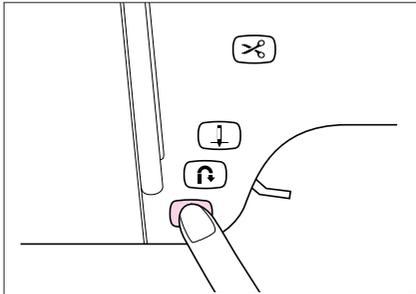

Press this button to start the machine, and then press it once more to stop the machine. (Refer to page 10.)

Foot controller

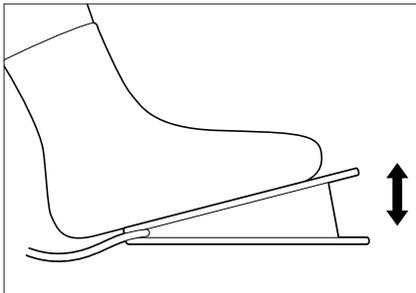

When the foot controller is depressed lightly, the machine will run at a low speed. When the pressure on the foot controller is increased, the machine's speed will increase. When pressure on the foot controller is released, the machine will stop. Care should be taken that nothing is placed on the foot controller when the machine is not in use.


Note (For U.S.A. only)

Foot controller: Model J2

This foot controller can be used for sewing machine model PC-8200.


STITCH WIDTH AND STITCH LENGTH

Stitch width

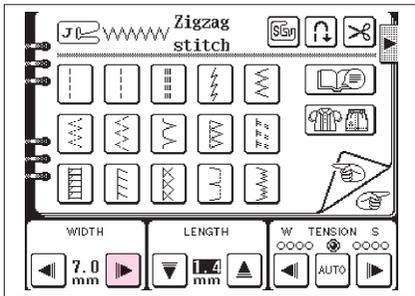


Increasing the stitch width

Touch the “▶” stitch width setting key.

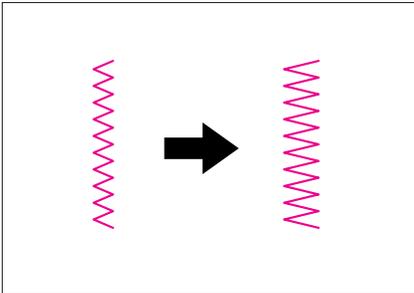


The stitch width setting value will increase each time you touch the key.

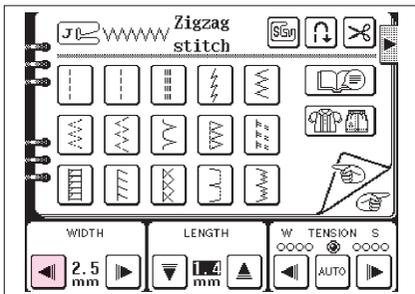


Decreasing the stitch width

Touch the “◀” stitch width setting key.

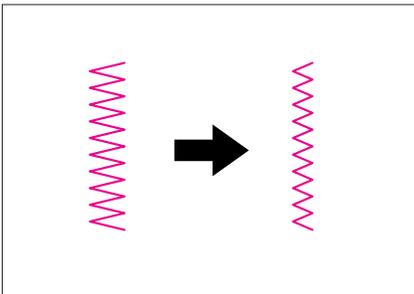


The stitch width setting value will decrease each time you touch the key.

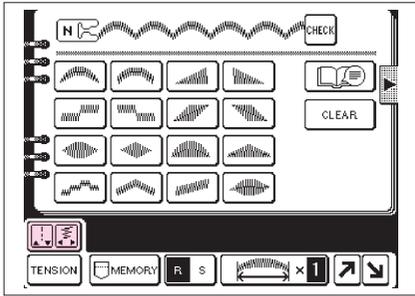


Sewing characters and patterns using satin stitches

Touch the “CHARACTER/DECORATIVE STITCH” key from the selection keys in the right side of the machine. Touch the “” key on the LCD screen.

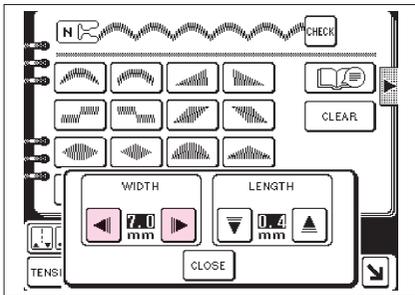


* If you touch the “CLOSE” key, the display will return to the previous screen.

Stitch length

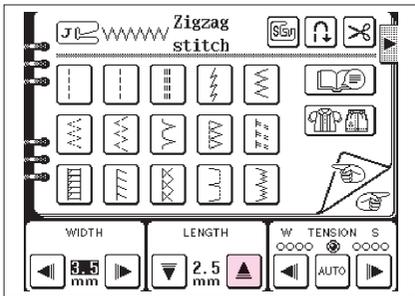


Increasing the stitch length

Touch the “” stitch length setting key.

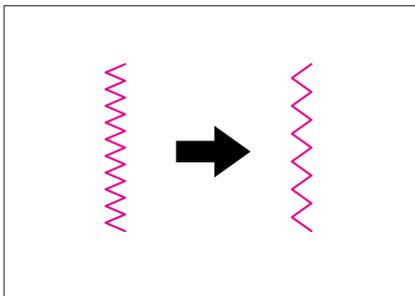


The stitch length setting value will increase each time you touch the key.

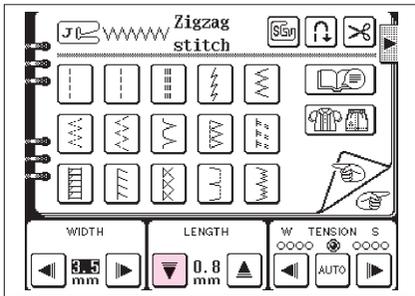


Decreasing the stitch length

Touch the “” stitch length setting key.

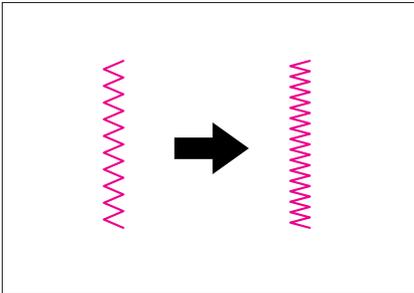


The stitch length setting value will decrease each time you touch the key.

- * When sewing straight stitches, if the fabric thickness is less than 1 mm, the stitch length is automatically changed to 4.0 mm at the sewing start to prevent gathering, even if you set the length to 5.0 mm.

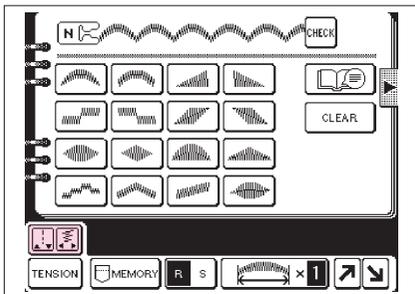

Sewing characters and patterns using satin stitches

Press the “CHARACTER/DECORATIVE STITCH” key from the selection keys on the right side of the machine. Touch the “” key to adjust.

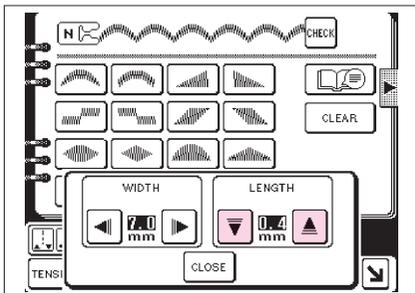

- * If you touch the “CLOSE” key, the display will return to the previous screen.

Quick adjustment reference chart for stitch width and stitch length


STITCH		Stitch width [mm (inch.)]		Stitch length [mm (inch.)]		STITCH		Stitch width [mm (inch.)]		Stitch length [mm (inch.)]	
		Auto.	Manual	Auto.	Manual			Auto.	Manual	Auto.	Manual
Straight (Left)		[0.0 (0.0)]	0.0–7.0 (0–1/4)	2.5 (3/32)	0.2–5.0 (1/64–3/16)	Darning		7.0 (1/4)	2.5–7.0 (3/32–1/4)	2.0 (1/16)	0.4–2.5 (1/64–1/16)
	Straight (Middle)		–	–	2.5 (3/32)		0.2–5.0 (1/64–3/16)				
Stretch stitch			[0.0 (0.0)]	0.0–7.0 (0–1/4)	2.5 (3/32)	1.5–2.5 (1/16–3/32)	Tape attaching		2.0 (1/16)	1.0–3.0 (1/16–1/8)	0.4 (1/64)
		1.0 (1/16)	1.0–3.0 (1/16–1/8)	2.5 (3/32)	1.0–4.0 (1/16–3/16)			4.0 (3/16)	0.0–7.0 (0.0–1/4)	1.0 (1/16)	0.2–4.0 (1/61–3/16)
Zigzag		3.5 (1/8)	0.0–7.0 (0–1/4)	1.4 (1/16)	0.0–4.0 (0–3/16)	Eyelet		7.0 (1/4)	7.0 6.0 5.0 (1/4–3/16)	7.0 (1/4)	7.0 6.0 5.0 (1/4–3/16)
Elastic zigzag		5.0 (3/16)	1.5–7.0 (1/16–1/4)	1.0 (1/16)	0.2–4.0 (1/64–1/16)	Button sewing		3.5 (1/8)	2.5–4.5 (3/32–3/16)	–	–
		5.0 (3/16)	1.5–7.0 (1/16–1/4)	1.0 (1/16)	0.2–4.0 (1/64–1/16)		Basting		0.0 (0.0)	0.0–7.0 (0–1/4)	20 (13/16)
Overcasting		3.5 (1/8)	2.5–5.0 (3/32–3/16)	2.0 (1/16)	1.0–4.0 (1/16–3/16)	Applique			3.5 (1/8)	2.5–5.0 (3/32–3/16)	2.5 (3/32)
		5.0 (3/16)	2.5–5.0 (3/32–3/16)	2.5 (3/32)	1.0–4.0 (1/16–3/16)			1.5 (1/16)	0.5–3.5 (1/32–1/8)	1.4 (1/64)	0.8–4.0 (1/16–3/16)
		5.0 (3/16)	0.0–7.0 (0.0–1/4)	2.5 (3/32)	0.5–3.0 (1/32–1/8)	Scallop		5.0 (3/16)	2.5–7.0 (3/32–1/4)	0.4 (1/64)	0.1–1.0 (1/64–1/16)
		5.0 (3/16)	3.5–5.0 (1/8–3/16)	2.5 (3/32)	1.0–4.0 (1/16–3/16)		Smocking stitch		5.0 (3/16)	1.5–7.0 (1/16–1/4)	1.6 (1/16)
		5.0 (3/16)	0.0–7.0 (0.0–1/4)	2.5 (3/32)	0.5–3.0 (1/32–1/8)	Patchwork stitch			5.0 (3/16)	2.5–7.0 (3/32–1/4)	2.5 (3/32)
		4.0 (3/16)	0.0–7.0 (0.0–1/4)	4.0 (3/16)	1.0–4.0 (1/16–3/16)			4.0 (1/16)	0.0–7.0 (0.0–1/4)	1.2 (1/16)	0.2–4.0 (1/64–1/16)
Blind hem stitch		0.0 (0.0)	+3 – –3	2.0 (1/16)	1.0–3.5 (1/16–1/8)	Fagoting		5.0 (3/16)	0.0–7.0 (0.0–1/4)	2.5 (3/32)	2.5–3.0 (3/32–1/8)
								5.0 (3/16)	2.5–7.0 (3/32–1/4)	2.5 (3/32)	1.0–2.5 (1/16–3/32)
Buttonhole		5.0 (3/16)	3.0–5.0 (1/8–3/16)	0.4 (1/64)	0.3–1.0 (1/64–1/16)						
		5.0 (3/16)	3.0–5.0 (1/8–3/16)	0.4 (1/64)	0.2–1.0 (1/64–1/16)						
		6.0 (1/4)	3.0–6.0 (1/8–1/4)	1.0 (1/16)	0.5–2.0 (1/32–1/16)						
		6.0 (1/4)	3.0–6.0 (1/8–1/4)	1.5 (1/16)	1.0–3.0 (1/16–1/8)						
											
		7.0 (1/4)	3.0–7.0 (1/8–1/4)	0.5 (1/32)	0.3–1.0 (1/64–1/16)						
											

STITCH		Stitch width [mm (inch.)]		Stitch length [mm (inch.)]	
		Auto.	Manual	Auto.	Manual
Decorative stitch		4.0 (3/16)	0.0–7.0 (0.0–1/4)	2.5 (3/32)	1.0–4.0 (1/16–3/16)
		4.0 (3/16)	0.0–7.0 (0.0–1/4)	3.0 (1/8)	2.0–4.0 (1/16–3/16)
		5.5 (3/16)	0.0–7.0 (0.0–1/4)	1.6 (1/16)	1.0–4.0 (1/16–3/16)
		3.5 (1/8)	0.0–7.0 (0.0–1/4)	1.6 (1/16)	0.2–4.0 (1/64–1/16)
		0.0 (0)	0.0–7.0 (0.0–1/4)	2.5 (3/32)	1.0–4.0 (1/16–3/16)
		5.0 (3/16)	1.5–7.0 (1/16–1/4)	1.0 (1/16)	0.2–4.0 (1/64–3/16)
Lateral sewing (Straight)		–	–	–	–
		–	–	–	–
		–	–	–	–
		–	–	–	–
		–	–	–	–
		–	–	–	–
		–	–	–	–
		–	–	–	–
Lateral sewing (Zigzag)		–	–	–	–
		–	–	–	–
Heirloom		6.0 (1/4)	1.5–7.0 (1/16–1/4)	2.5 (3/32)	1.5–4.0 (1/16–3/16)
		5.0 (3/16)	2.0–7.0 (1/16–1/4)	1.6 (1/16)	1.0–4.0 (1/16–3/16)
		5.0 (3/16)	1.5–7.0 (1/16–1/4)	4.0 (3/16)	1.5–4.0 (1/16–3/16)
		3.5 (1/8)	1.5–7.0 (1/16–1/4)	3.0 (1/8)	1.6–4.0 (1/16–3/16)
		5.0 (3/16)	3.0–7.0 (1/8–1/4)	3.5 (1/8)	2.0–4.0 (1/16–3/16)

*–: Non-adjustable

THREAD TENSION

Correct tension

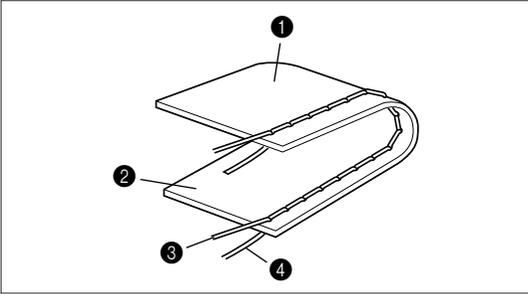


- ① Reverse side
- ② Surface
- ③ Upper thread
- ④ Bobbin thread


* Thread tension is automatically set to the most appropriate point irrespective of the chosen fabric and thread.

* Correct tension is important because too much or too little tension will weaken your seams or cause your fabric to pucker.

Loosen tension by touching “◀” (Weak).

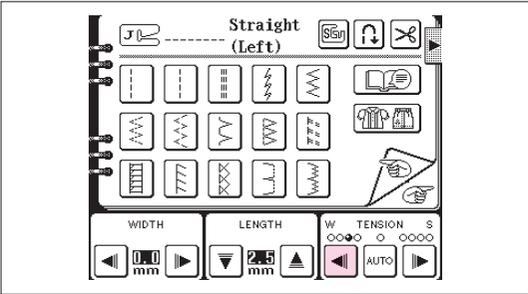


Touch the “◀” thread tension setting key. The thread tension value will decrease (become weaker).

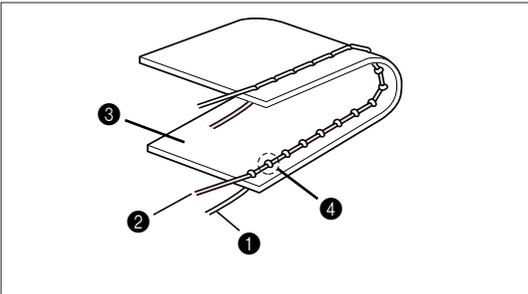


- ① Bobbin thread
- ② Upper thread
- ③ Surface
- ④ Locks appear on surface of fabric.

Tighten tension by touching “▶” (Strong).

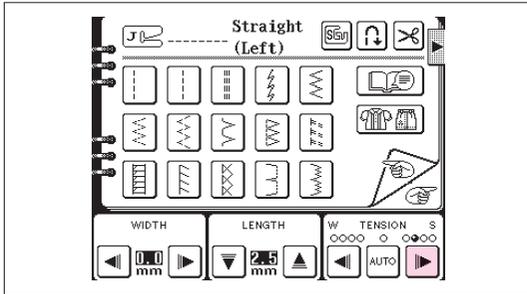


Touch the “▶” thread tension setting key. The thread tension value will increase (become stronger).

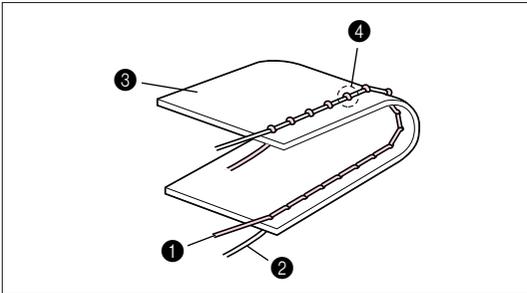

- ① Upper thread
- ② Bobbin thread
- ③ Reverse side
- ④ Locks appears on reverse side of fabric.

Except “UTILITY STITCH”

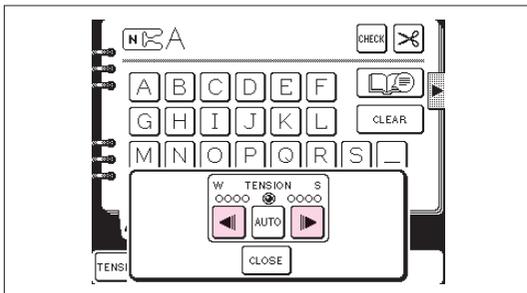


1. Touch the “TENSION” key.
2. Change the upper thread tension.


* If you touch the “CLOSE” key, the display will return to the previous screen.

CHANGING THE PRESSER FOOT

Change the presser foot according to the LCD message

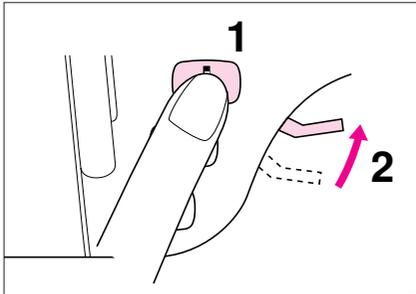


1. Push the “NEEDLE POSITION” button to raise the needle, and then turn off the power.
2. Raise the presser foot lever.

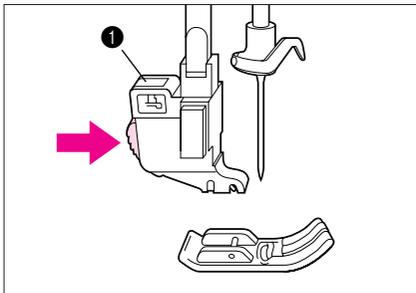

3. Press the black button located at the back of the presser foot holder to release the foot.

❶ Presser foot holder

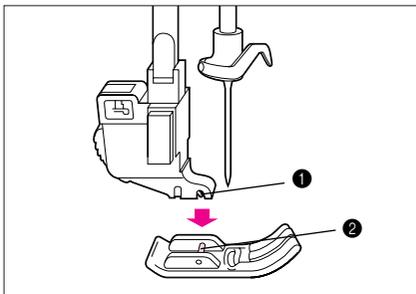


4. Place the presser foot pin directly below the holder-end and lower the presser foot lever.


❶ Holder-end

❷ Foot pin

Installing embroidery foot “Q”

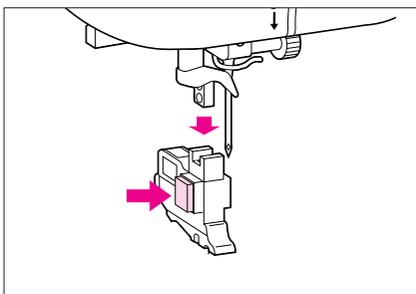


1. Push the “NEEDLE POSITION” button to raise the needle, and then turn off the power.
2. Raise the presser foot lever.
3. While pressing the black button to the left of the presser foot holder, pull the presser foot holder downward to remove it.

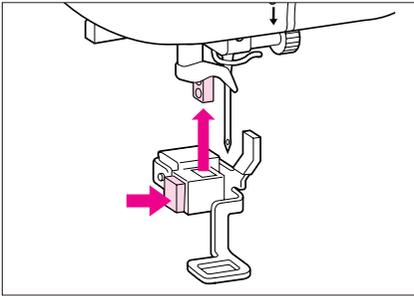


4. Raise the presser foot lever to the highest position. While pressing the black button to the left of the embroidery foot "Q", push embroidery foot "Q" upward with both hands as far as it will go to install it.

CAUTION
Be careful not to touch the needle during this time, otherwise injury may result.

Changing the embroidery foot

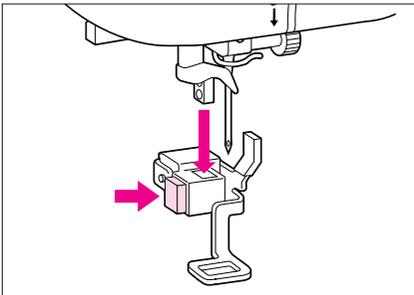


1. Raise the presser foot lever to the highest position. While pressing the black button to the left of embroidery foot "Q", pull embroidery foot "Q" downward to remove it.

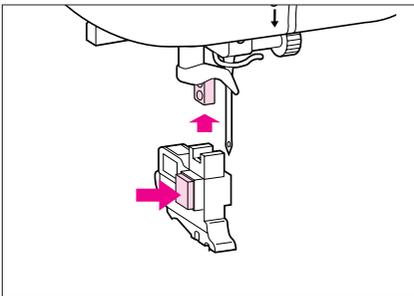

2. While pressing the black button to the left of the presser foot holder, push the presser foot holder upward with both hands as far as it will go to install it.

CAUTION
Be careful not to touch the needle during this time, otherwise injury may result.

Feed dog adjustment

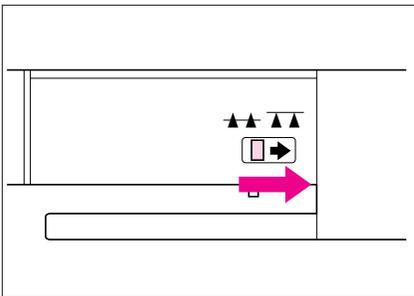


With the accessory compartment off the machine, the feed dog adjustment lever can be seen on the base of the sewing machine. Sliding the lever to the right will lower the feed dogs. Feed dogs are lowered during button sewing as well. If you are continuing to sew, slide the lever to the left and the feed dogs will raise.


* When the embroidery unit is on to the machine, the feed dogs drop automatically.

CHANGING THE NEEDLE

Setting the needle securely

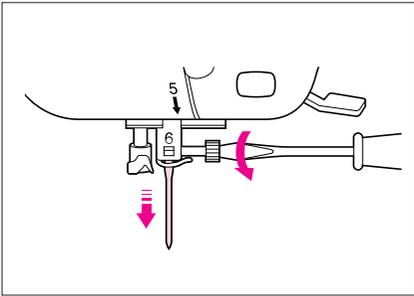

1. Turn off the power and lower the presser foot.
2. Loosen the screw with a screwdriver.
3. Pull out the needle.

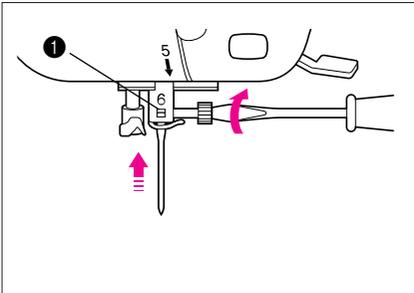


4. With the flat side of the needle facing the back, insert the needle as far as it will go against the needle stopper. Fasten the screw securely with a screwdriver.

① Needle stopper


5. Turn the power on.

Checking needle

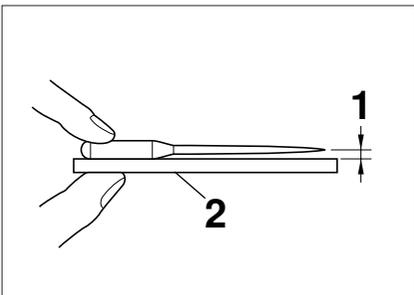

1. Place the needle on a flat surface and check whether the space is parallel or not.
2. Flat surface
(Needle plate, glass, ruler etc.)
If the space is not parallel then the needle is bent and should be thrown away to prevent damage to your project or to the machine.

MACHINE OPERATION KEYS

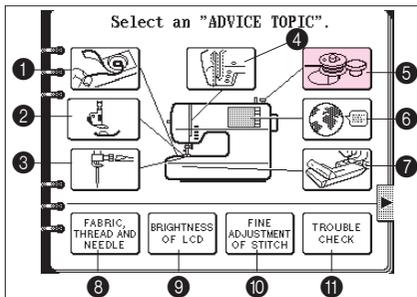


This sewing machine contains built-in instructions on how to use the machine which are based on this operation manual. If you touch the “OPERATION GUIDE” key, details of basic operations such as bobbin winding and upper threading will appear on the LCD, so that you can refer to these instructions while using the machine.

Example: If you would like to know how to wind the bobbin thread


1. Touch the “OPERATION GUIDE” key. A screen such as left will be displayed.

- ❶ Touch this key to find out how to set the bobbin thread.
- ❷ Touch this key to find out how to replace the presser foot.
- ❸ Touch this key to find out how to replace the needle.
- ❹ Touch this key to find out how to thread the upper thread.
- ❺ Touch this key to find out how to wind the bobbin thread.
- ❻ Touch this key to find out how to select the language.
- ❼ Touch this key to find out how to embroider.
- ❽ Touch this key to find out which thread and needle to use for different fabrics.
- ❾ Touch this key if the screen is difficult to read.
- ❿ Touch this key if the pattern is distorted.
- ⓫ Touch this key if a problem occurs while sewing.

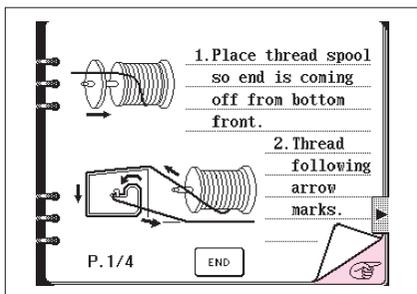


2. Touch the “” key.

The procedure for winding the bobbin thread onto the bobbin will be displayed.

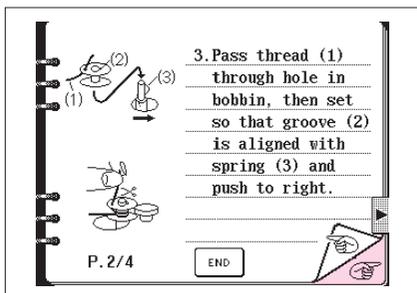


3. Touch the “” key to display the next part of the procedure. Follow the procedure to wind the bobbin thread onto the bobbin.

* Touch the “END” key to return to the original screen.

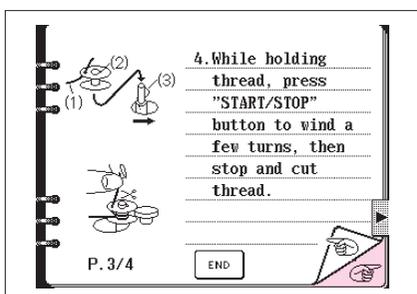


TRIAL SEWING

Sewing by using “UTILITY STITCH”

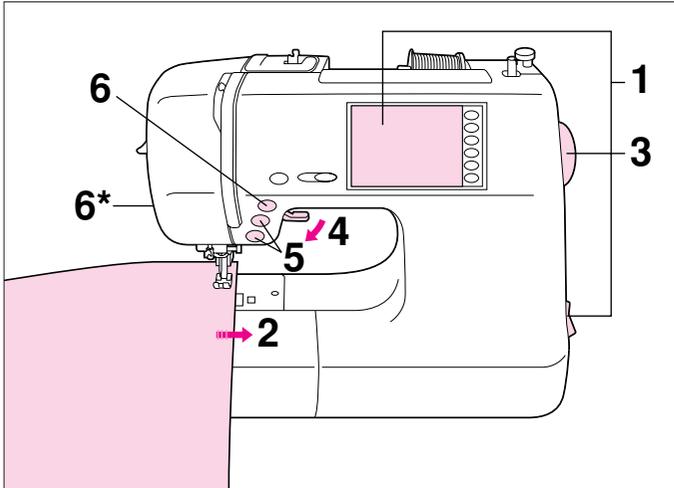

CAUTION


- Be aware of the needle at all times while sewing, and keep your hands away from all moving parts such as the needle, balance wheel and thread take-up lever, otherwise injury may result.
- Do not pull or push the fabric too hard while sewing, otherwise injury may result.
- Never use bent needles. Such needles can easily break, which could result in injury.

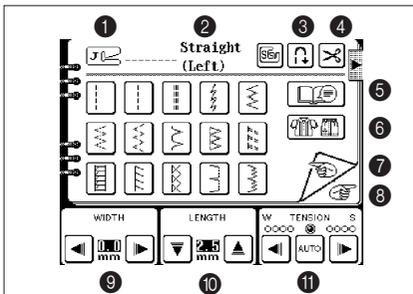

A 75/11 needle is inserted into the machine at the factory.


1. When the machine is turned on, the straight stitch (left) is always selected.

- ① Replace with the presser foot with the letter indicated.
- ② This indicates the pattern being selected.
- ③ If you touch this key before sewing, reverse stitches (reinforcement stitches) will be sewn automatically. (Refer to page 35.)
- ④ If you touch this key before sewing, the thread will be automatically cut at the finish of sewing. (Refer to page 36.)
- ⑤ An advice screen will appear if you touch this key while sewing. (Refer to page 39.)
- ⑥ This selects the appropriate pattern for the sewing application and also displays the operation steps. (Refer to page 37.)
- ⑦ Touch this key to return to the previous page.
- ⑧ Touch this key to move to the next page.
- ⑨ Touch these keys to adjust the stitch width setting.
- ⑩ Touch these keys to adjust the stitch length setting.
- ⑪ Touch these keys to change the thread tension.

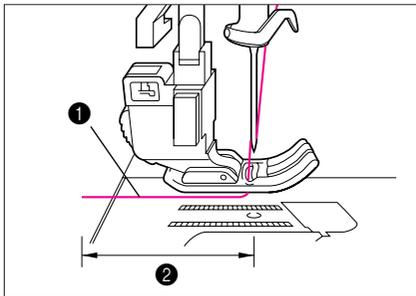

2. Pass the thread underneath the presser foot and pull it out from the rear of the machine by about 5 cm.


- ① Upper thread
- ② 5 cm (1-15/16)

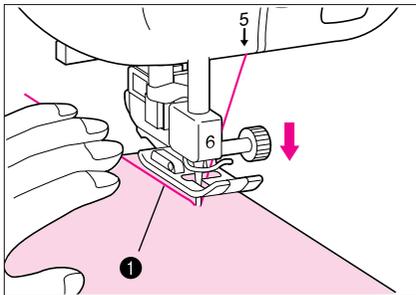


3. While pressing down on the thread and the fabric with your left hand, turn the balance wheel with your right hand to move the needle to the sewing start position.

- ① Thread


* Sewing can begin without pulling out the bobbin thread.

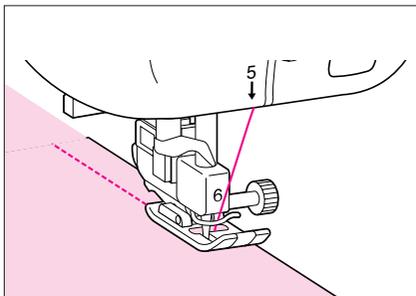

4. Lower the presser foot. Press the “REVERSE STITCH” button to sew a reverse stitch, and then press the “START/STOP” button. The machine will start to run at slow speed.

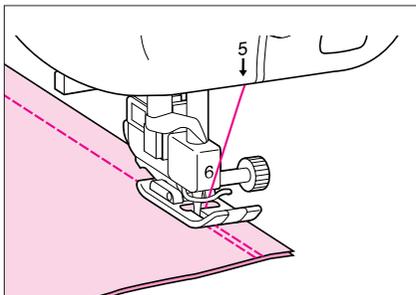

5. When sewing is completed, press the “REVERSE STITCH” button to sew a reverse stitch.

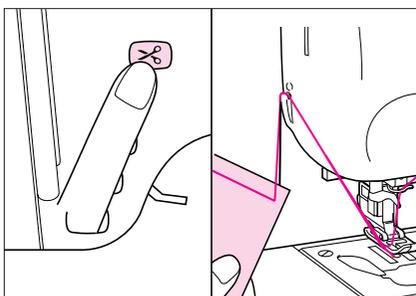

6. Press the “THREAD CUTTER” button to cut the threads .


*6. Cut thick thread (thicker than # 30) with the cutter on the side of the machine as illustrated.

* BOBBIN THREAD SENSOR


If a warning message appears on the message screen, the bobbin thread is running out. Replace the bobbin thread at this time.

AUTOMATIC REINFORCEMENT STITCHING

This stitch automatically prevents fraying.

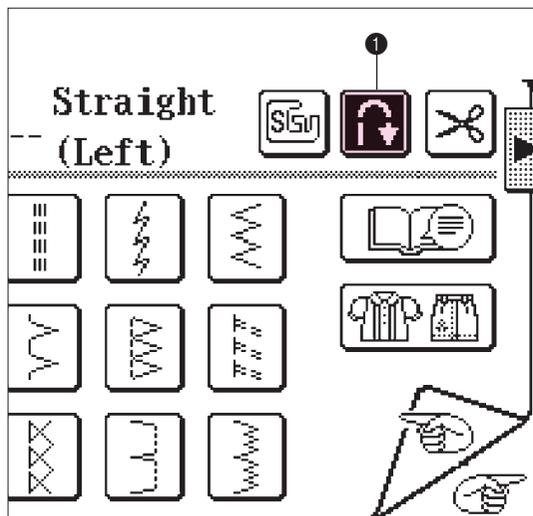

1. Select the stitch pattern.
 2. Touch the automatic reinforcement stitch key.
- ① Automatic reinforcement stitch key

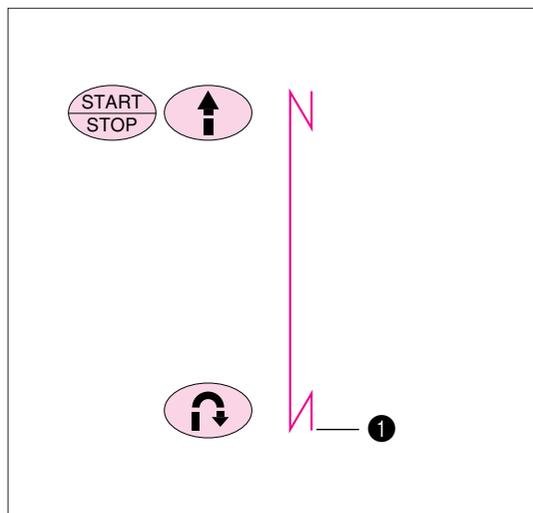



3. Press the “START/STOP” button.
A reinforcement stitch will be sewn before sewing starts. A reinforcement stitch will not be done if there is a pause in sewing. Press the “START/STOP” button to pause sewing. An ending reinforcement stitch will not be sewn. (The fabric may be turned or adjusted required.) Press the “START/STOP” button again to restart sewing.
 4. When sewing is completed, press the “REVERSE STITCH” button to sew a reinforcement stitch and stop.
- ① Automatically stops.
- * Fabric should be placed 3 to 4 stitch lengths behind the presser foot before sewing the reinforcement stitch.

Cancelling automatic reinforcement stitching

Touching the automatic reinforcement stitch key once again, turns off the automatic reinforcement stitch operation.

AUTOMATIC THREAD CUTTING

The thread can be cut automatically.

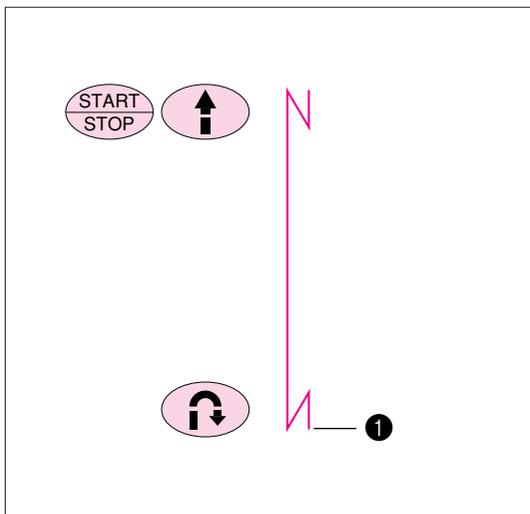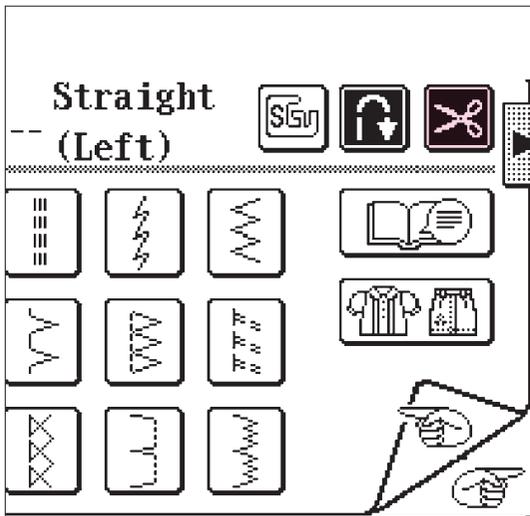

If you set programmed automatic thread cutting prior to sewing, the machine will automatically trim the thread when the pattern has been completed. (Reinforcement stitches are used at the start and finish of the pattern.)


1. Select the stitch pattern.
2. Touch the automatic thread cutting key.
 - * Automatic thread cutting and the automatic reinforcement stitch must be used together.
 - * Automatic thread cutting is convenient for use on buttonholes, bar tacking and other areas.
3. Press the “START/STOP” button. A reinforcement stitch will be sewn before sewing starts.
4. When sewing is completed, press the “REVERSE STITCH” button to sew a reinforcement stitch and trim the thread.
 - ❶ Automatically trims the thread and stops.
 - * Fabric should be placed 3 to 4 stitch lengths behind the presser foot before sewing the reinforcement stitch.

Cancelling programmed automatic thread cutting


Touching the automatic thread cutting key again turns off the automatic thread cutting function.

UTILITY STITCH SELECTION


(Example) Buttonholes

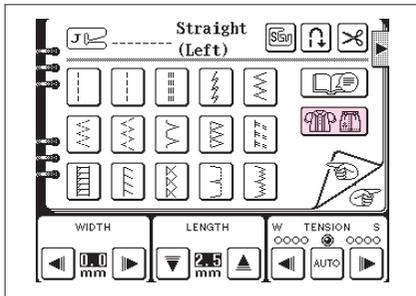


1. Touch the "UTILITY STITCH" key.
2. Touch the "UTILITY STITCH" key.

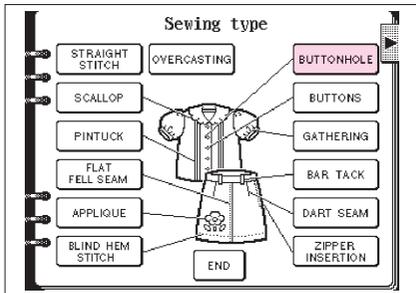

3. Touch the "BUTTONHOLE" key.

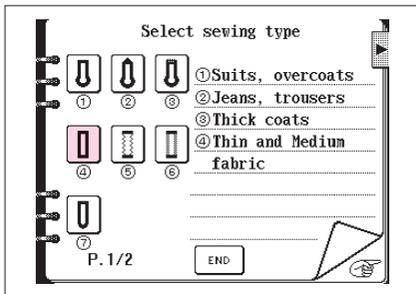


4. Select the desired application.
The stitches available and sewing procedure appears on the screen step by step.

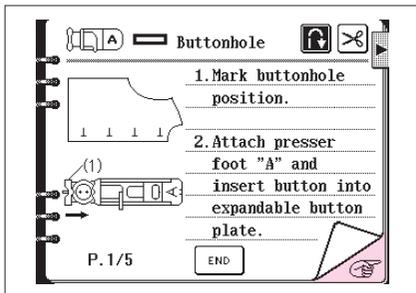


5. Touch the "NEXT" key to display the next part of the procedure.
Follow the procedure to sew the buttonhole stitches.

* Touch the "END" key to return to the original screen.

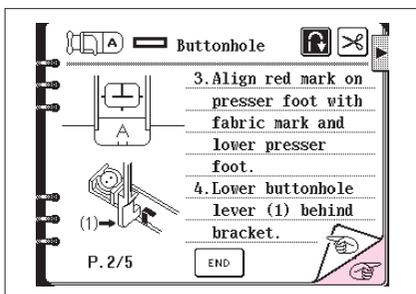


Buttonhole



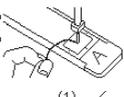

5. Sew while holding upper thread.
 *Guide fabric by hand while sewing.



6. Use a seam ripper to widen hole.

P. 3/5 END


Buttonhole



*If fabric is too thick to feed properly, touch  stitch length setting key to increase stitch length.

P. 4/5 END


Buttonhole




*If  key is preset, thread will be automatically trimmed at finish of sewing.

P. 5/5 END

WIDTH	LENGTH	W TENSION S
 5.0 mm	 0.4 mm	 AUTO 

USEFUL SKILLS

The “” key


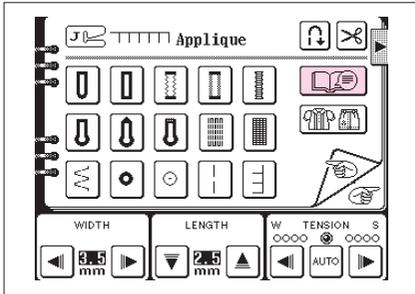


1. Touch the “” key. If the “” key is touched while the “” stitch is selected, the following screen will be displayed.




2. Touch the “” key to display the next part of the procedure.


* Touch the “CLOSE” key to return to the original screen.

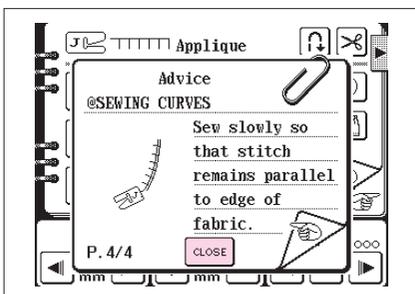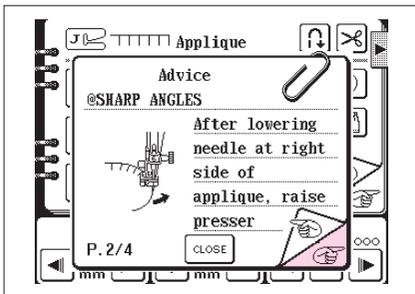

Sewing corners

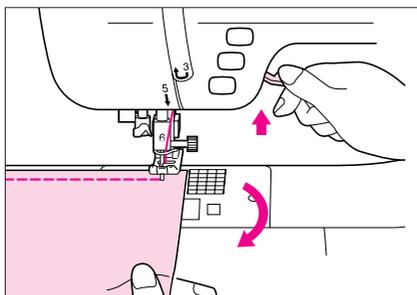


Keep the needle at the corner of the fabric, then raise the presser foot and turn the fabric.

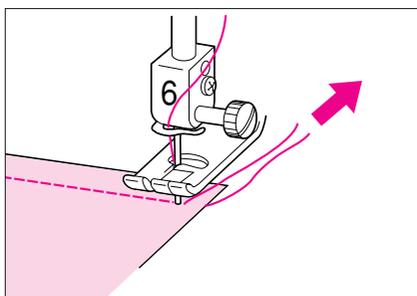

For short stitches which are less than 0.5 cm (3/16")


Before you begin to sew, set a basting thread at the corner point. When you change direction at the corner, start sewing as you pull the basting thread backward.

Sewing thick seams

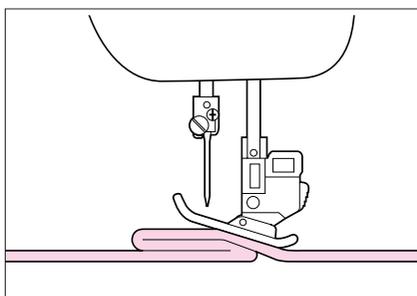


When the foot angles up at the approach of a thick seam, lower the needle and raise the presser foot. Level the presser foot by placing a "shim" (folded fabric or cardboard) under the back of the presser foot. Lower presser foot and continue stitching.

Sewing curves

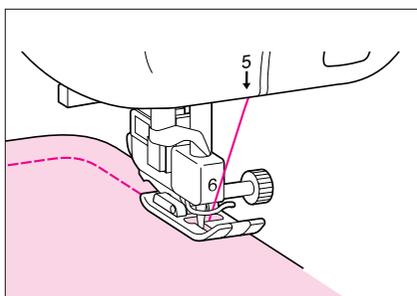

Sewing a curve with a straight stitch

Sew slowly, while keeping the seams parallel with the fabric edge as you guide the fabric around the curve.

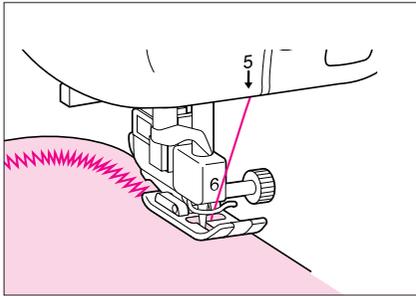


Sewing a curve with a zigzag stitch


Set the stitch length short in order to obtain a fine stitch. Sew slowly while keeping the seams parallel with the fabric edge as you guide the fabric around the curve.

- * For sharp corners, temporarily stop sewing while keeping the needle in the material, then raise the presser foot and carefully turn the fabric while keeping it level with the presser foot. Lower the presser foot and continue sewing.

Sewing thick fabric

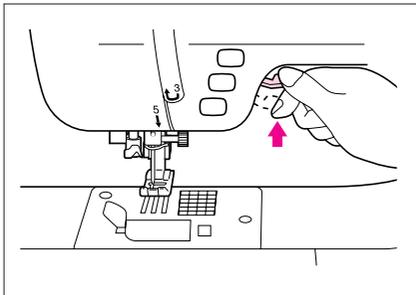


1. When you raise the presser foot lever further, the presser foot is raised to a higher position to handle thicker fabrics. With the presser foot in the up position, raise the presser foot lever higher to make room for thicker fabrics.

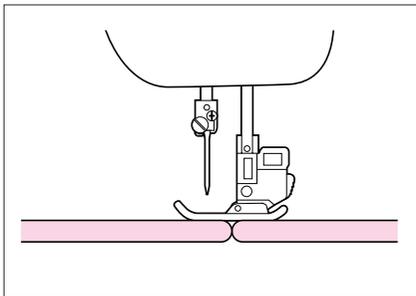

2. If the fabric will not feed at the beginning of sewing, place another piece of fabric with the same thickness at the back of the material.

- * Using a straight stitch foot (optional accessory item SA108 or X80823001) will stop the fabric lifting up and down as the needle pierces very thick fabrics.

Sewing thin fabric

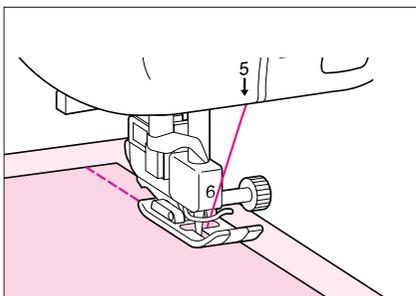

Place thin paper or stabilizer material under the fabric, and then start sewing.

- * Use a straight stitch foot (optional accessory item SA108 or X80823001) to eliminate any puckering. Remember to select the center needle position. Additional adjustment of stitch length and tension may be necessary.

2. UTILITY STITCHES

STRAIGHT STITCHES



1



2




3



4


- ① Normal sewing
- ② Normal sewing
- ③ Reinforced sewing
- ④ Stretch fabric sewing

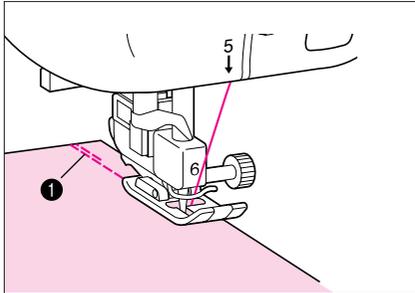


1. Baste the fabric or set a pin, sew a reverse stitch at the start, then start sewing.

- ① Reverse stitch at start

* Place the fabric under presser foot while keeping space from the edge for reverse sewing.

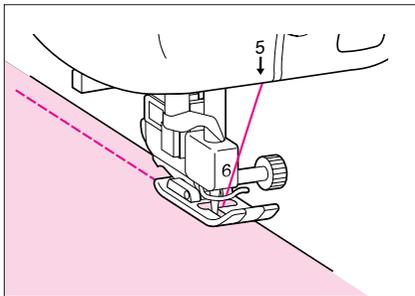


2. Sew at slow speed near the end and then press the "REVERSE STITCH" button to sew a reinforcement stitch and stop.

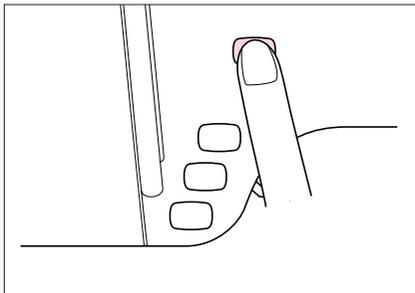

3. Cut the thread by pressing the "THREAD CUTTER" button.

* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the "REVERSE STITCH" button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

For reinforcement or stretch fabric

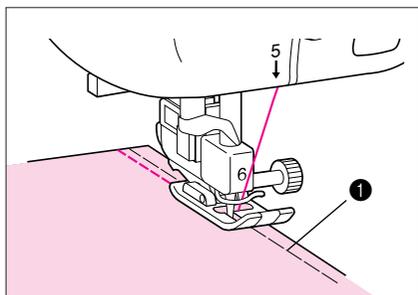


Baste the fabric beforehand and sew along to the basting using a stretch stitch.

* Do not pull the fabric during sewing.

① Basting

Changing the stitch length

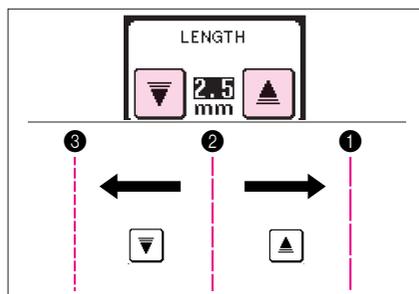


Touch the “▲” and “▼” stitch length setting keys to adjust the stitch length.

- ① Longer
- ② Original length: 2.5 mm (1")
- ③ Shorter

* For thin material which is less than 1 mm (1/16"), the stitch length will be set to 4.0 mm (3/16") automatically during sewing even if you set the length to 5.0 mm (3/16").

Changing the needle position

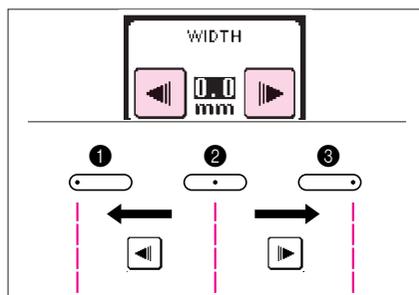


Touch the “◀” and “▶” stitch width setting keys to adjust the needle position.

- ① Left needle position: 0 mm (0")
- ② Center needle position: 3.5 mm (1/8")
- ③ Right needle position: 7.0 mm (1/4")


* The needle position cannot be changed for the straight stitch/center position selection “□”.

ZIGZAG STITCHES

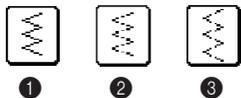

- 1 Zigzag stitch
- 2 Elastic zigzag stitch
- 3 Elastic zigzag stitch


Overcasting (using a zigzag stitch)

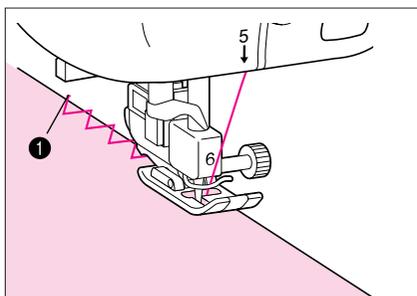

Sew the overcasting along the edge of the fabric so that the right hand side needle drop point is over the edge of the fabric.

- 1 Needle drop point


Applique (using a zigzag stitch)

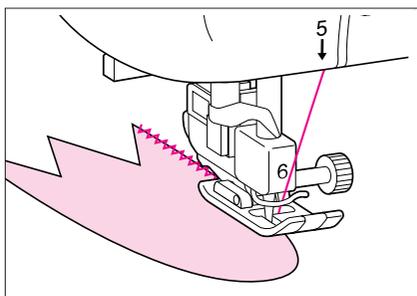

Attach the applique using adhesive or basting, then sew it.

- * Sew a zigzag stitch, while positioning the right hand needle drop point just outside the edge of the fabric.


Patchwork (for crazy quilt)

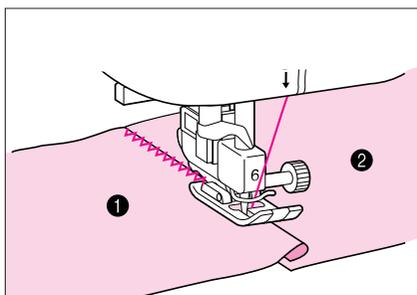

Turn back the desired width of fabric and position it over the lower fabric, then sew so that the stitch bridges both pieces of fabric.


- 1 Upper fabric
- 2 Lower fabric

OVERCASTING

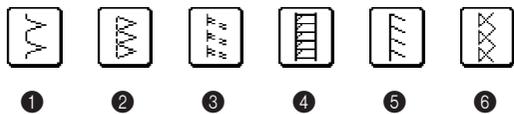

- ① Thin and medium fabrics
- ② Thick fabric
- ③ Thick and medium stretch fabric
- ④ Medium stretch fabric
- ⑤ Stretch fabric
- ⑥ Stretch fabric

When using , or stitches

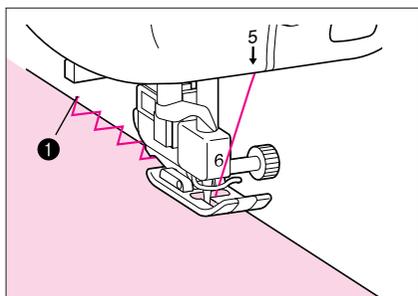

Sew the fabric while placing fabric edge against the guide of presser foot “G”.


① Guide

* When the automatic thread cutting and automatic reinforcement stitch are preset, a reinforcement stitch will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.


CAUTION

After the stitch width has been adjusted, turn the balance wheel by hand and check that the needle does not touch the presser foot.

If it does touch, the needle may break and injury could result.

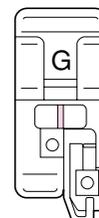

When using , or stitches

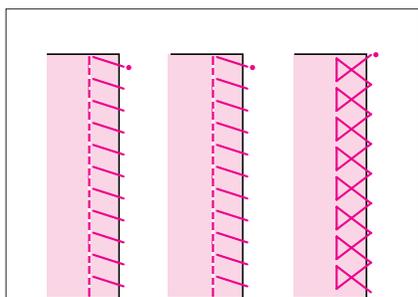

Attach presser foot “J” and let the needle drop slightly past the edge of the fabric before starting sewing.

* When the automatic thread cutting and automatic reinforcement stitch are preset, a reinforcement stitch will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.


OVERCASTING (When using the side cutter)



- ① Thin and medium fabrics
- ② Thick fabric
- ③ Thick and medium stretch fabric
- ④ Normal sewing
- ⑤ Zigzag stitch

By using the side cutter, you can do overcasting while cutting the fabric.


If using the side cutter, select the pattern and then touch the “” key.

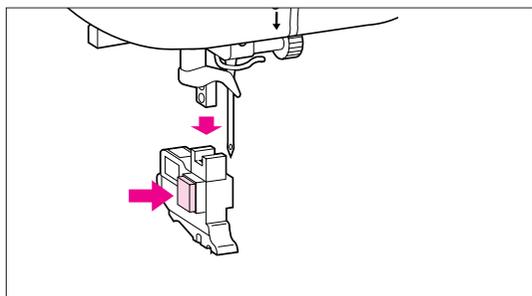

1. Push the “NEEDLE POSITION” button to raise the needle, and then turn off the power.

2. Raise the presser foot lever.


3. While pressing the black button to the left of the presser foot holder, pull the presser foot holder downward to remove it.

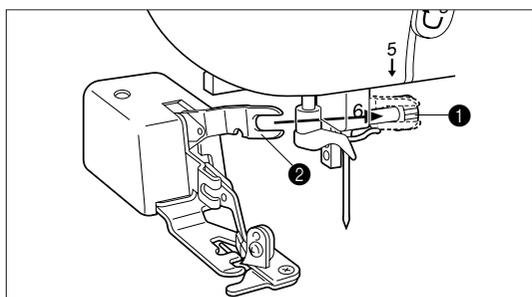


4. Set the screw of the needle into the fork of the operating lever.

- ① Screw of the needle
- ② Operating lever


* Make sure that the screw is held firmly by the fork.

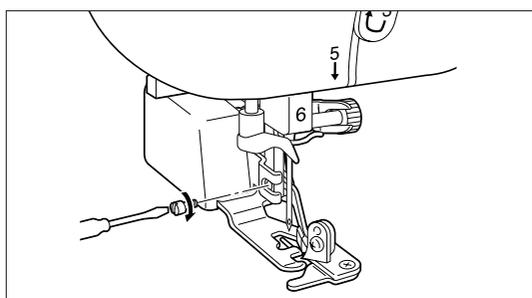

5. With the presser foot raised, align the presser foot holder screw hole directly with the notch in the side cutter, then insert the screw and lightly tighten it. Lower the presser foot lever and firmly tighten the screw.

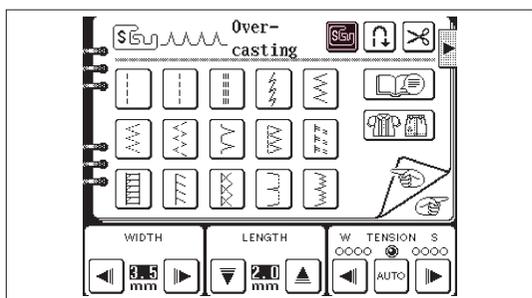


6. Select the pattern and then touch the “” key. The necessary adjustment for the side cutter will be carried out automatically.

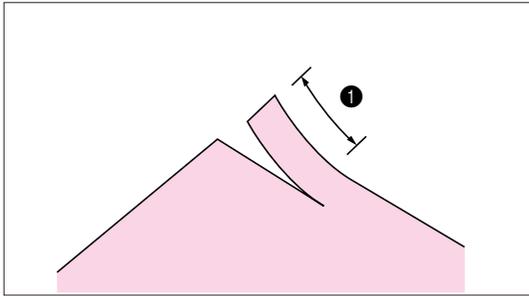

7. Make a cut of about 2 cm in the fabric.

① 2 cm

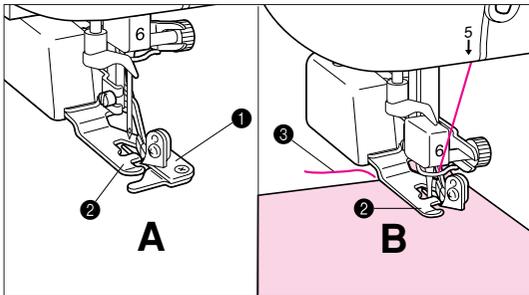

8. Place the fabric as shown left figure B.
 –Right side of cut: on top of the guide plate
 –Left side of cut: underneath of the presser foot


① Guide plate (lower knife)

② Presser foot

9. Thread the needle, and then pull out a long section of the upper thread, pass it below the presser foot and pull it out in the fabric feed direction. (See left figure B)

② Presser foot

③ Upper thread

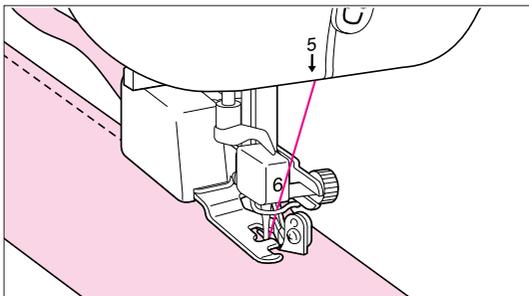

10. Lower the presser foot lever.

CAUTION


If the width has been adjusted, turn the balance wheel by hand to check that the needle does not touch the side cutter. If the needle touches the side cutter, it may cause the needle to break.

When sewing straight stitches only

The seam margin should be about 0.5 cm.


① Seam margin

- * Make sure that you touch the “” key when using the side cutter.
- * Clean the side cutter after use, otherwise dust and scraps of thread will build up on it.
- * Add a small amount of oil as required to the cutting edge of the cutter.

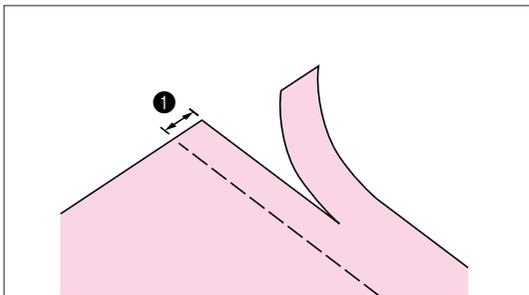


Note


- The fabric will not be cut if the whole fabric is simply spread out underneath the presser foot guide plate. Set the fabric as explained in step 8. above, and the start sewing.
- Check that the needle is raised when the presser foot lever is raised.
- One layer of 13-oz denim can be cut.

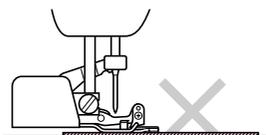

BLIND HEM STITCHES

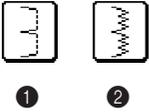


- ① Other fabric
- ② Stretch fabric

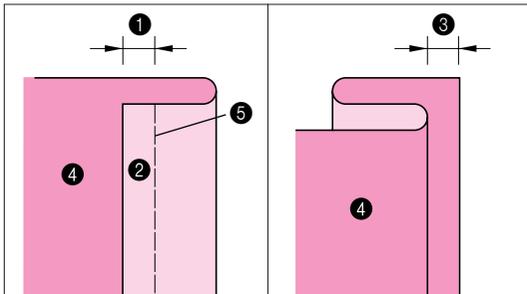


1. Fold the fabric and baste it as illustrated.

- ① 0.5 cm (3/16")
- ② Surface
- ③ 0.5 cm (3/16")
- ④ Reverse side
- ⑤ Basting stitch

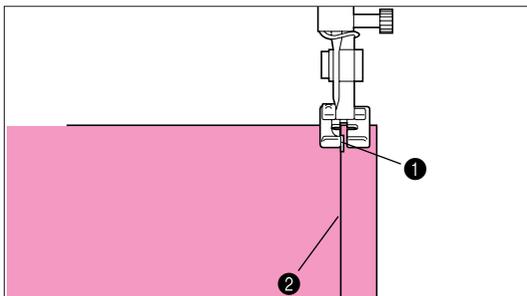

2. Attach presser foot "R". Lower the presser foot so that its guide meets the edge of the folded hem.

- ① Guide
- ② Folded hem

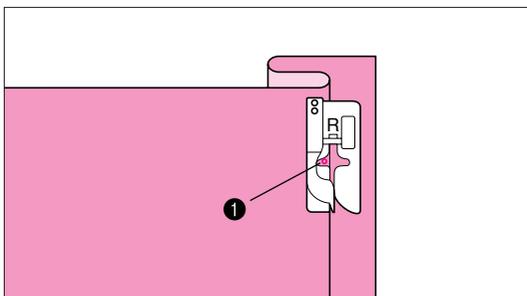


3. Adjust the needle position using the stitch width setting keys so that needle slightly catches the fold of the hem, and then sew the fabric.

- ① Needle drop position


* When the automatic thread cutting and automatic reinforcement stitch are preset, a reinforcement stitch will be sewn automatically at the start of sewing. Press the "REVERSE STITCH" button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

4. Turn over the fabric and remove the basting stitch.

- ① Reverse side
- ② Surface

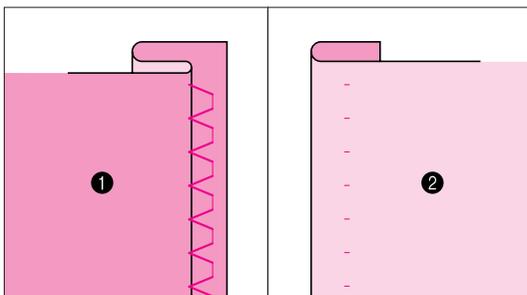

Adjusting the needle drop position

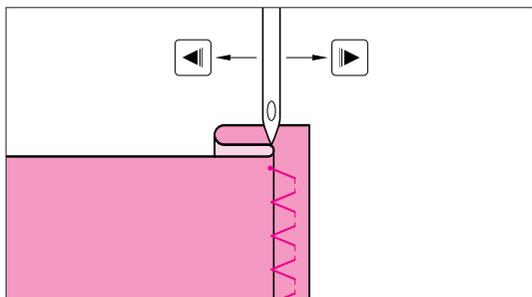


Touch the “◀” and “▶” stitch width setting keys to adjust the needle drop position so that the needle slightly catches the fold of the hem.

A- If the needle catches the fold of hem too much.

— Touch the “▶” stitch width setting key. This moves the needle away from the fold.


B- If the needle does not catch the fold of hem enough.

— Touch the “◀” stitch width setting key. This moves the needle closer to the fold.

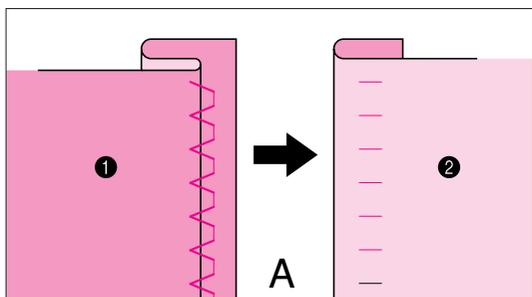

① Reverse side

② Surface

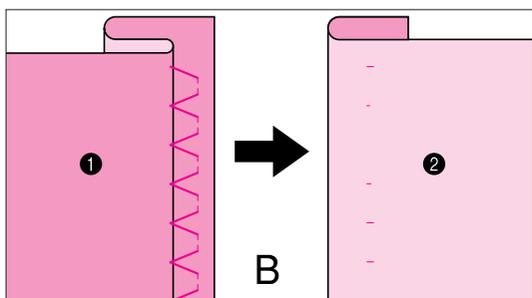

BUTTONHOLE STITCHES



1



2



3



4



5




6



7


- 1 Suits, overcoat
- 2 Jeans, trousers
- 3 Thick coats
- 4 Thin or medium fabric
- 5 Stretch fabric with coarse weaves
- 6 Stretch fabric
- 7 Thin and medium fabric (for horizontal holes)

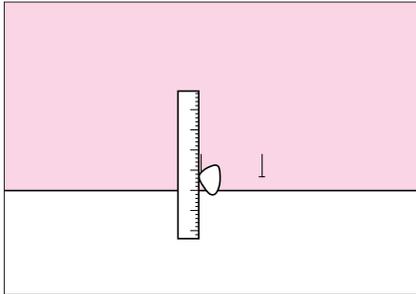

1. Mark the positions of the buttonholes on the fabric.


* The maximum buttonhole length is 3 cm (1-3/16") (total of diameter + thickness of button).

* Thick thread (#30) cannot be used in with the “” and “” patterns.

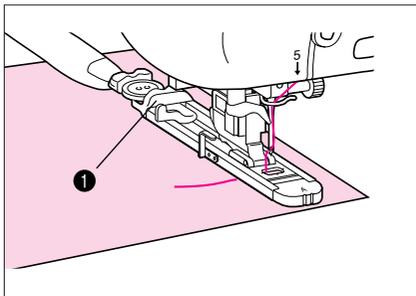

2. Draw out the button holder plate and insert the button.

1 Button holder plate

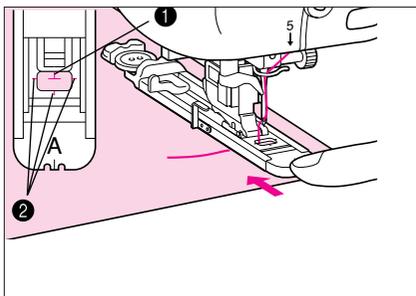


3. Raise the presser foot and adjust the fabric so that the red mark on the foot is over the starting mark of your buttonhole. Lower the presser foot into position.


1 Mark on fabric for buttonhole position

2 Red mark on presser foot

* After the presser foot lever has been lowered, set the presser foot so that there is no gap behind the section marked with an “A”, otherwise the size of the stitch will not be correct. To do this, push the presser foot towards the back of the machine as shown in the left figure.

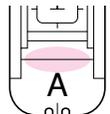



* Pass the thread underneath the presser foot.

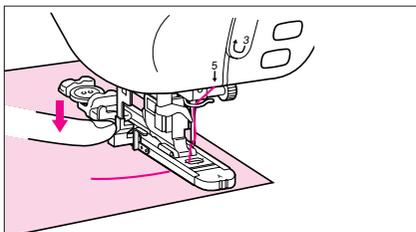

4. Lower the buttonhole lever and position it behind the metal bracket on the buttonhole foot.


1 Metal bracket on the buttonhole foot

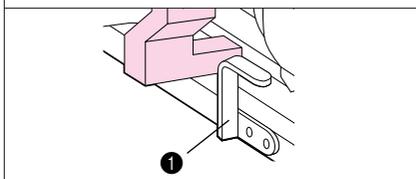

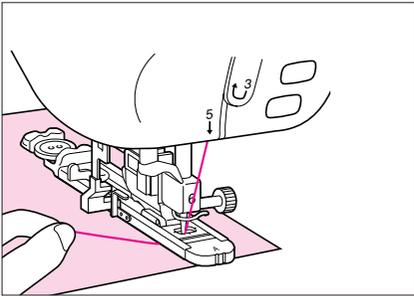

5. Press the “START/STOP” button to start the machine, while gently holding the end of the upper thread.

- * Gently, feed the fabric by hand.
- * The machine will stop with a reinforcement stitch automatically after sewing is completed.
- * If you touch the automatic thread cutting key prior to sewing, the machine cuts both threads automatically after sewing is completed.
- * If the fabric will not feed (for instance, because it is too thick), touch the “▲” stitch length setting key to increase the stitch length.

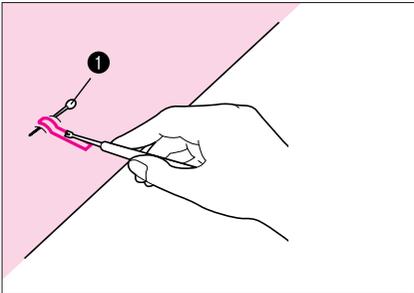


6. Open the buttonhole.

Normal buttonhole and rounded buttonhole

Insert a pin in front of the inside edge of both bar tacks. Insert the seam ripper into center of buttonhole. Cut towards the first pin. Then cut toward the other pin.

- ① Pin

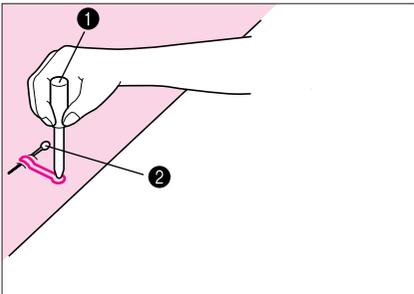


Keyhole buttonhole


Make a hole using the small eyelet punch in the key end, insert a pin into the inside edge of the bar tack. Insert a seam ripper into the hole made with the eyelet punch and cut towards the pin.

- ① Small eyelet punch (accessory #7 on page 7)
- ② Pin

Order of one cycle

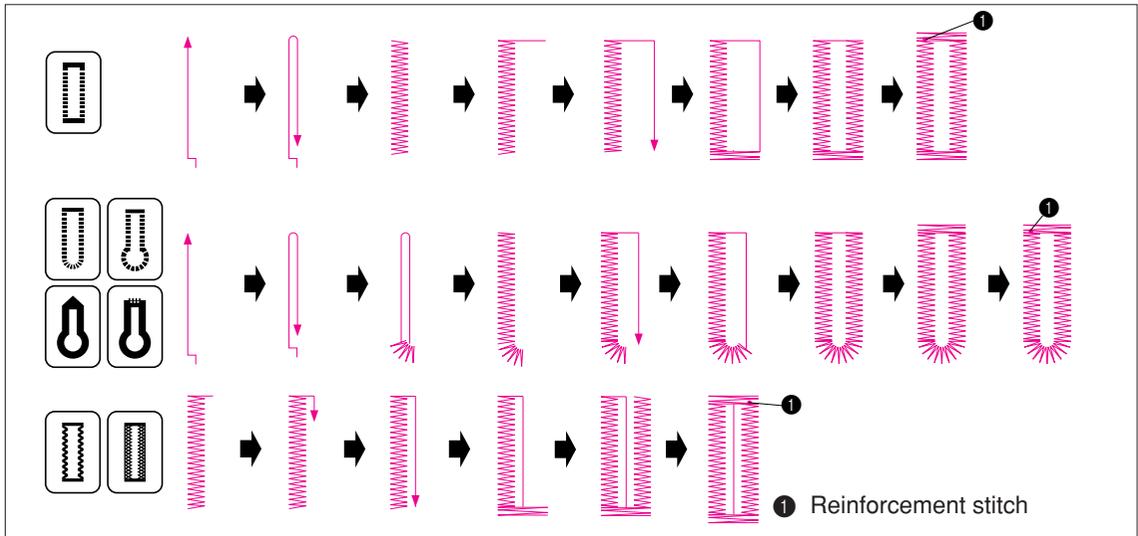


Sewing stretch fabrics

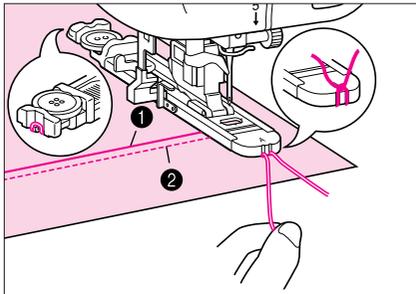

When sewing buttonholes onto stretch fabric, insert a gimp thread into the buttonhole seam (“” buttonholes only).


1. Hook the gimp thread onto the end of presser foot “A”, insert it into the groove at the front of the presser foot and temporarily tie it there.

- ① Upper thread
- ② Bobbin thread

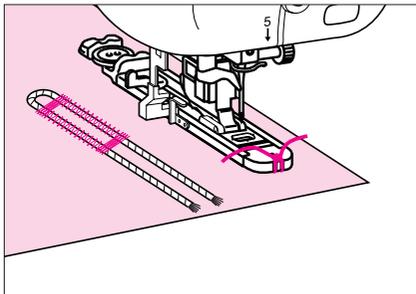


2. Lower the presser foot and start sewing.

* Set the stitch width to match the diameter of the gimp thread.

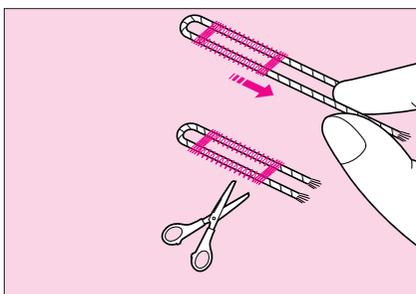

3. Once sewing is completed, pull the gimp thread gently to remove any slack, and trim any surplus length.

Buttons that do not fit into the guide plate (Odd-shaped buttons)

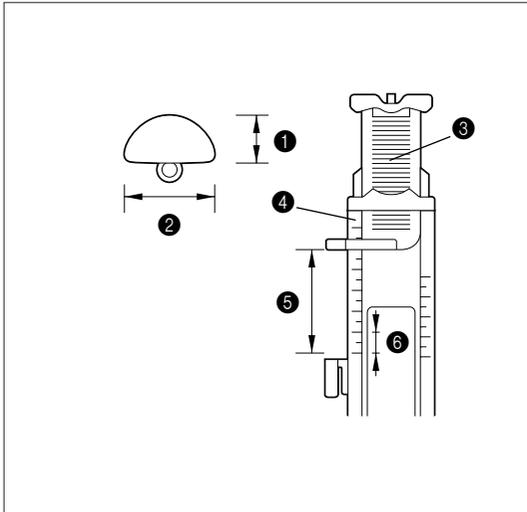


Measure the button diameter + thickness to set the plate.

Example: For a button with a diameter of 1.5 cm (9/16") and a thickness of 1 cm (3/8"), the scale should be set at 2.5 cm (1")

- ① Thickness [1 cm (3/8")]
- ② Diameter [1.5 cm (9/16")]
- ③ Button holder plate
- ④ Scale
- ⑤ Diameter + thickness [2.5 cm (1")]
[0.5 cm (3/16") in one scale.]
- ⑥ 0.5 cm (3/16")

Changing the stitch length

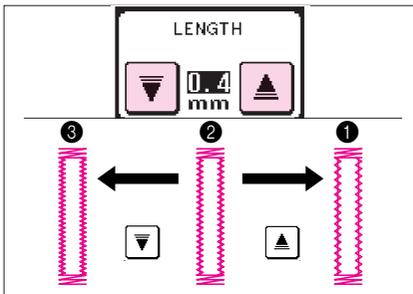


Touch the "▲" and "▼" stitch length setting keys to adjust the stitch length.

- ① "▲": Longer
- ② Normal length 0.4 mm (1/64")
- ③ "▼": Shorter

* If the fabric will not feed (for instance, because it is too thick), touch the "▲" stitch length setting key to increase the stitch length.

Changing the stitch width

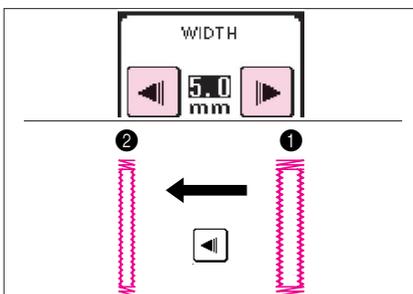


Touch the "◀" and "▶" stitch width setting keys to adjust the stitch width.

- ① "AUTO" width 5.0 mm (3/16")
- ② "◀": Narrower




Use for reinforcing the openings of pockets, etc.

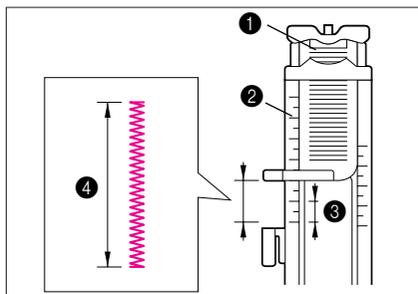

1. Attach presser foot “A” and set the size by measuring the area to be bar tacked.

- ❶ Button holder plate
- ❷ Scale
- ❸ 0.5 cm (3/16”)
- ❹ Length of bar tack



* 0.5 to 3 cm (3/16” to 1/2”) is suitable for bar tacking. 0.5 to 1 cm (3/16” to 3/8”) is the normal size.

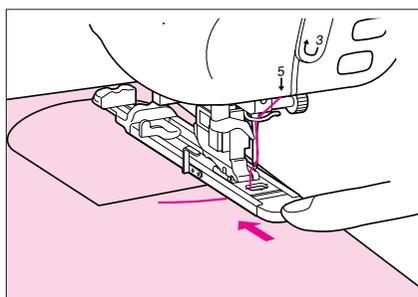

2. Position the pocket as illustrated with the top of the pocket facing you. Align the needle drop point with the corner of the pocket to be stitched and move the pocket back 2 mm (1/16”) as shown below.


* After the presser foot lever has been lowered, set the presser foot so that there is no gap behind the section marked with an “A”, otherwise the size of the stitch will not be correct. To do this, push the presser foot towards the back of the machine as shown in the figure.

* Pass the thread underneath the presser foot.

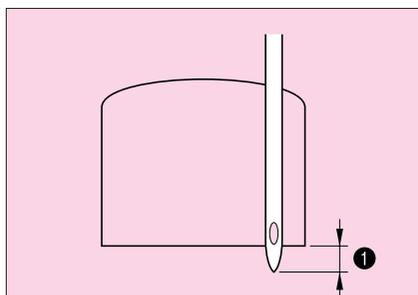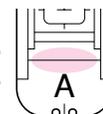


3. Check the first needle drop point and lower the presser foot.


- ❶ 2 mm (1/16”)

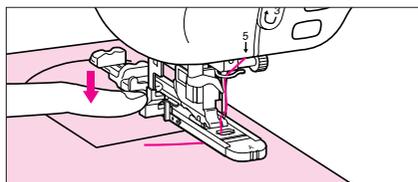

4. Lower the buttonhole lever and position it behind the metal bracket on the buttonhole foot.

- ❶ Metal bracket on buttonhole foot

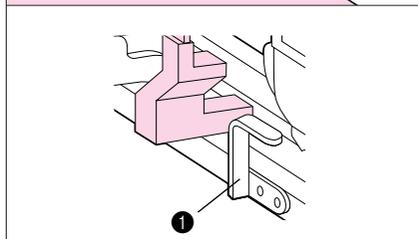


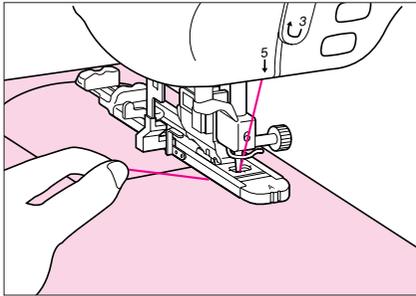

5. Start the machine while holding the end of the upper thread gently.

- * The machine will sew a reinforcement stitch and stop automatically after sewing is completed.
- * If you touch the automatic thread cutting key prior to sewing, the machine cuts both threads automatically after sewing is completed.
- * If the fabric will not feed (for instance, because it is too thick), touch the “▲” stitch length setting key to increase the stitch length.


Thick fabrics

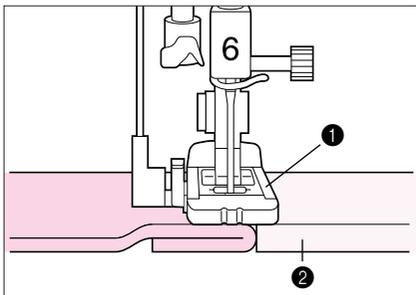

Place another piece of fabric or cardboard at the back as thick as original. This sets the presser foot to the same height and allows for easier feeding.

- ① Presser foot
- ② Cardboard

Changing the bar tack stitch length

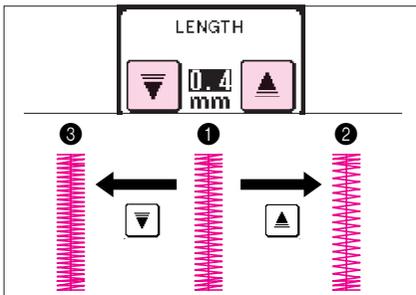


Touch the “▲” and “▼” stitch length setting keys to adjust the stitch length.

- ① “AUTO” length 0.4 mm (1/64”)
- ② “▲” : Longer
- ③ “▼” : Shorter

* If the fabric will not feed (for instance, because it is too thick), touch the “▲” stitch length setting key to increase the stitch length.

Changing the bar tack stitch width

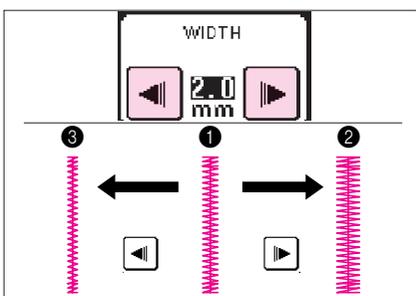


Touch the “◀” and “▶” stitch width setting keys to adjust the stitch width.

- ① “AUTO” width 2.0 mm (1/16”)
- ② “▶” : Wider
- ③ “◀” : Narrower



1 2


- 1 Medium fabric
- 2 Thick fabric

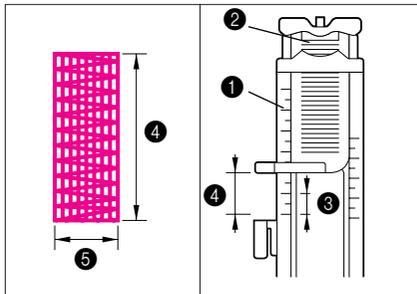

1. Set the stitch length using the scale on presser foot "A".


- 1 Scale on the presser foot
- 2 Button holder plate
- 3 5 mm (3/16") at "2" on scale
- 4 Length of darning is equal to scale setting.
- 5 Width [7 mm (1/4")]

* The maximum stitch length for darning is 3 cm (1-3/16").

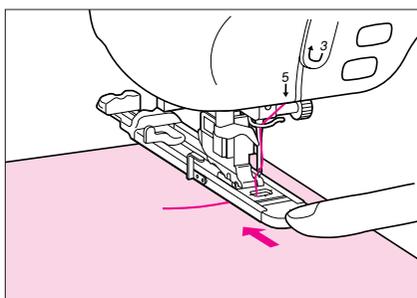


2. Check the needle drop point and then lower the presser foot.

- * After the presser foot lever has been lowered, set the presser foot so that there is no gap behind the section marked with an "A", otherwise the size of the stitch will not be correct. To do this, push the presser foot towards the back of the machine as shown in the left figure.

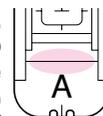


* Pass the thread underneath the presser foot.

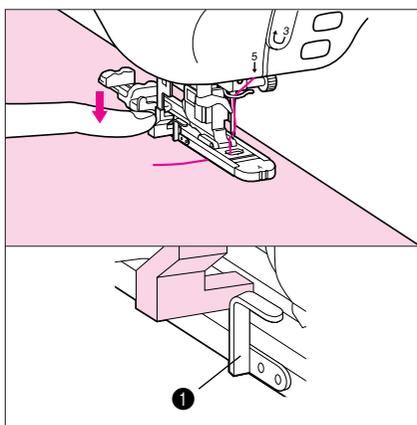

3. Lower the button hole lever to set it behind the metal bracket.


- 1 Metal bracket

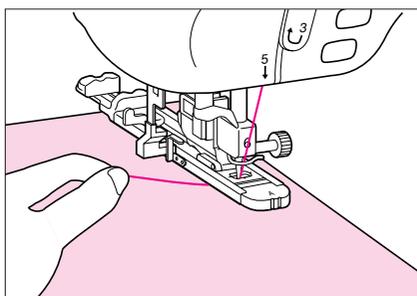

4. Start sewing while holding the upper thread by hand.

- * The machine stops automatically after sewing a reinforcement stitch.
- * When automatic thread cutting is set, the machine trims both threads automatically after sewing is completed.

Changing the length of the darning stitch

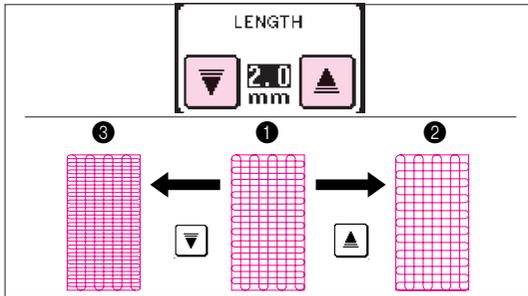


Touch the “▲” and “▼” stitch length setting keys to adjust the stitch length.

- ① “AUTO”: 2.0 mm (1/16”)
- ② “▲”: Longer (less dense)
- ③ “▼”: Shorter (more dense)

* If the fabric will not feed (for instance, because it is too thick), touch the “▲” stitch length setting key to increase the stitch length.


Changing the bar tack stitch width

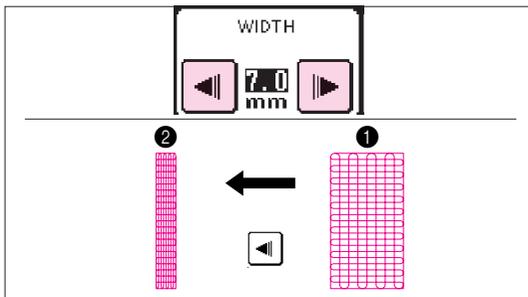

Touch the “◀” and “▶” stitch width setting keys to adjust the stitch width.

- ① “AUTO” : 7.0 mm (1/4”)
- ② “◀”: Narrower

Darning stitch cycle

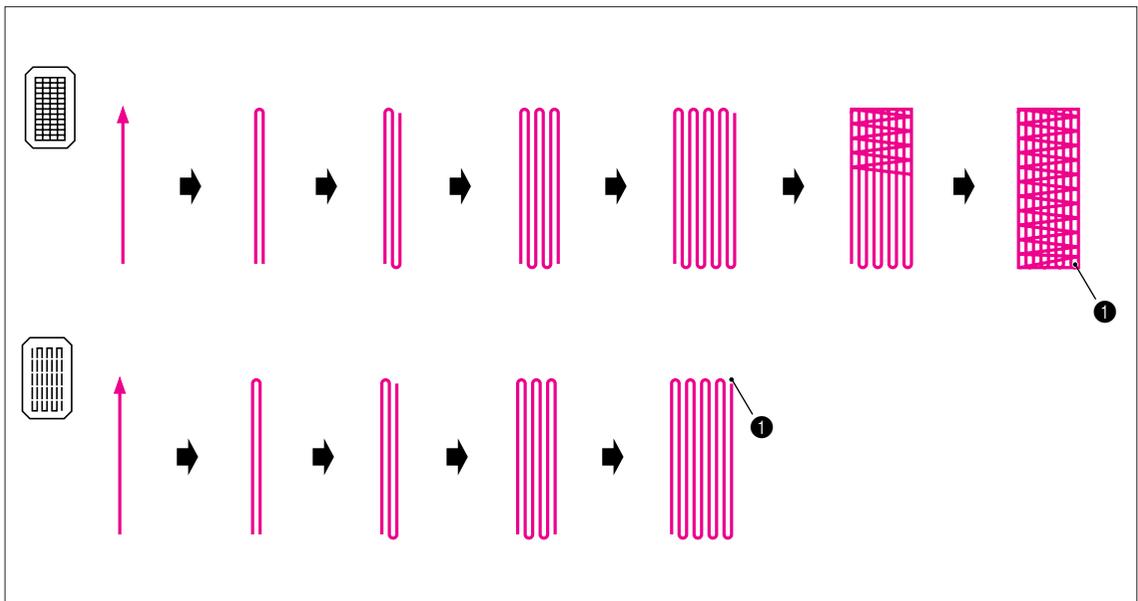

- ① Reinforcement stitch

TAPE ATTACHING



These stitches are used for attaching tape to thin and medium fabric.




①




②


- ① Patchwork stitch
- ② Elastic zigzag stitch

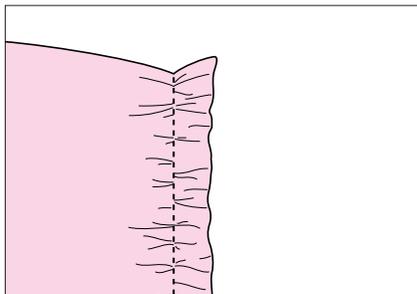


1. Attach presser foot “J”, select pattern “”, set the stitch length to 4.0 mm and set the thread tension to a weak setting. Then sew a straight stitch. Pull the bobbin thread to obtain the desired amount of gather.

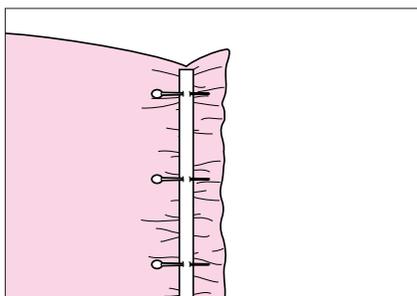

2. Place the tape on top of the seam which you have just sewn and secure it with pins.

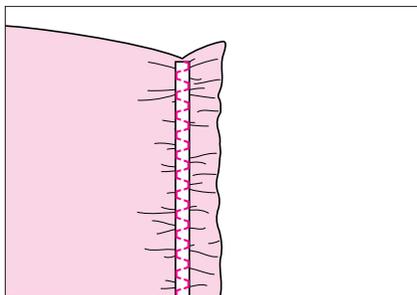

3. Select pattern “” and then sew along the top of the tape.

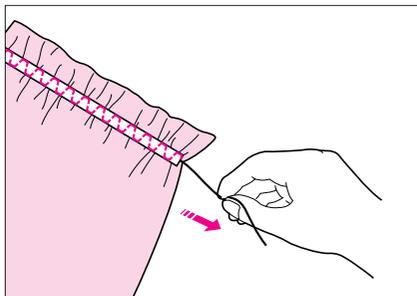


4. Pull out the straight stitch thread.


EYELET STITCH



Stitch for making eyelet on belts, etc.

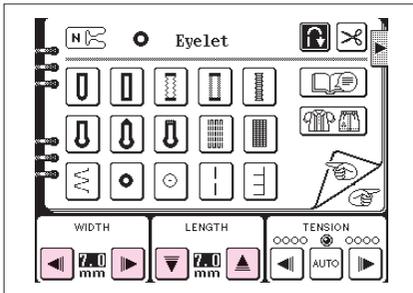


1. Touch the “▲” and “▼” stitch length setting keys and the “▶” and “◀” stitch width setting keys to set the size of the eyelet.

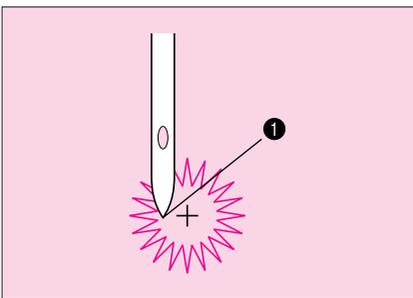

2. Attach presser foot “N”, check the needle drop point and lower the presser foot, then start sewing.


① Needle drop point

- * The machine stops automatically after sewing a reinforcement stitch.
- * When automatic thread cutting is set, the machine trims both threads automatically after sewing is completed.

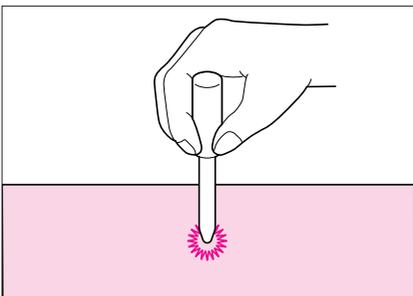

3. Make a hole at the center with an eyelet punch.

Size of eyelet (Actual size)

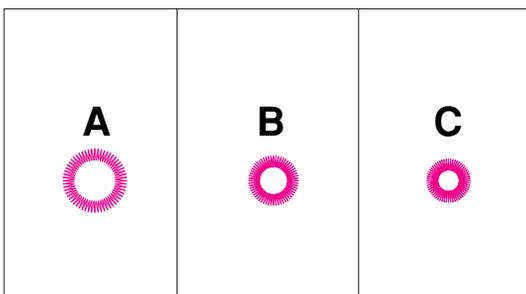


- A– Large: 7.0 mm (5/16")
- B– Medium: 6.0 mm (1/4")
- C– Small: 5.0 mm (3/16")



This stitch is used for attaching buttons.




Do not use the automatic thread cutter when attaching buttons, because the threads will become difficult to handle and tying off will not be possible.

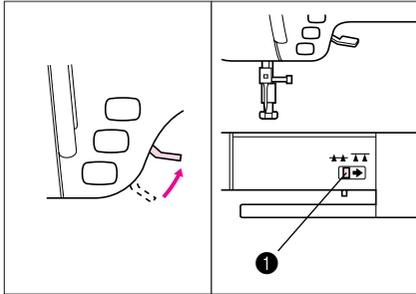


1. Raise the presser foot lever and slide the feed dog adjustment lever to the right to lower the feed dog.

① Feed dog adjustment lever

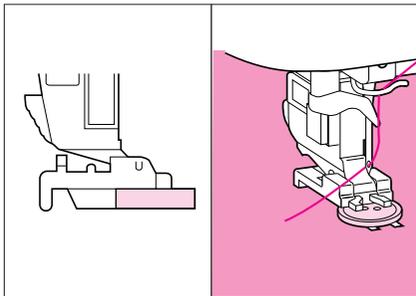


2. Attach button fitting foot "M", place the button into the presser foot and then lower the presser foot.

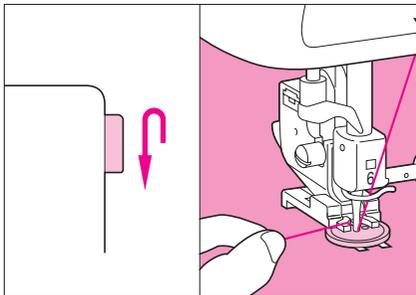


3. Turn the balance wheel to check that the needle goes into each of the holes in the button correctly, and then start sewing. Once sewing is completed, the sewing machine will stop automatically.

* If extra attachment strength is needed, carry out the button sewing operation twice.

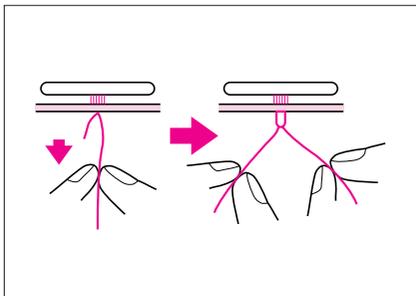


4. Once sewing is completed, return the feed dog to its original position, pull the bobbin thread at the sewing end down and pull the upper thread at the sewing end through to the reverse side of the fabric. Then tie the thread ends together and cut the threads at the sewing start.

Attaching buttons with four holes

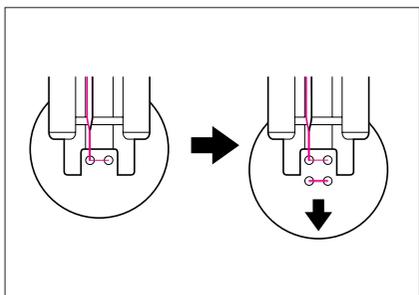


First sew the two holes which are closest to you. Once they have been sewn, raise the presser foot, move the needle to the next two holes and then sew them in the same way.

Attaching a shank to the button

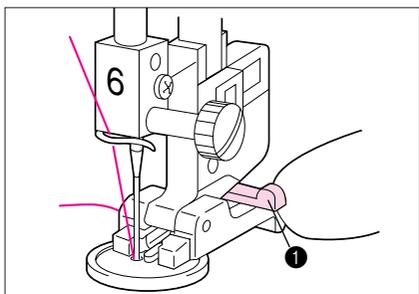


1. Pull the shank lever toward you and then start sewing.

① Shank lever

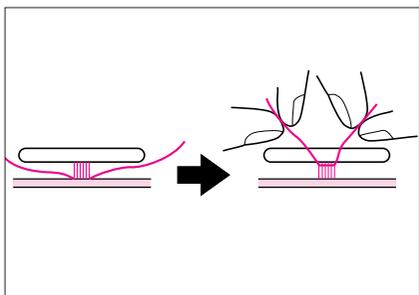

2. Hold the upper thread ends at the sewing start and sewing end which are between the button and the fabric, wind them around the shank and then tie them firmly together.


3. Tie the ends of the bobbin thread together at the reverse side of the fabric.

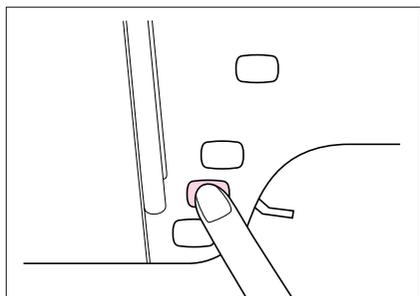

1. Attach presser foot "J". It is suggested that the basting stitch be started with a reinforcement stitch by pressing the "REVERSE STITCH" button.

* You can change the length of one stitch to between 5 mm and 30 mm (3/16" to 1-3/16").

① 5 mm to 30 mm (3/16" to 1-3/16")

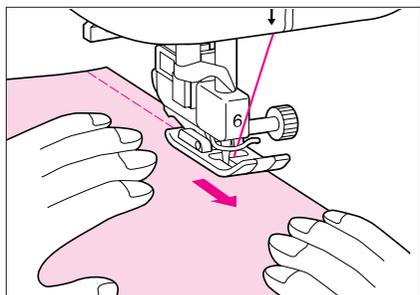

2. Sew while keeping the fabric taut.


3. End sewing with a reinforcement stitch.

ZIPPER INSERTION (CENTERED AND SIDE APPLICATION)




Select the pattern and then touch the “” key.

Centered application

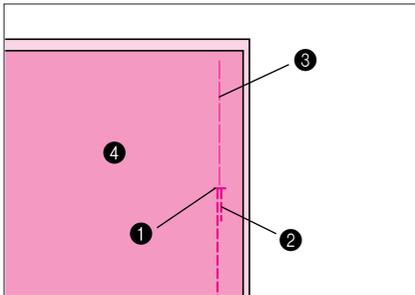


1. Attach presser foot “J” and sew straight stitches up to the crotch end. Change to a basting stitch and sew to the top of the fabric.

- ① Crotch end
- ② Reverse side
- ③ Basting stitch
- ④ Reverse side

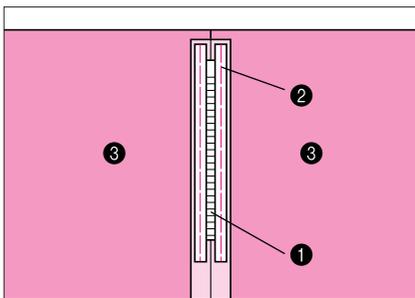


2. Press the seam allowance open and attach the zipper with a basting stitch in the middle.

- ① Zipper
- ② Basting
- ③ Reverse side

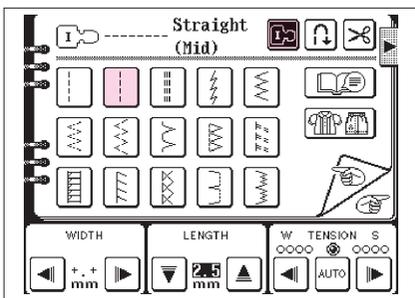


3. Select the “” stitch and then touch the “” key. The necessary adjustment for zipper insertion will be carried out automatically.

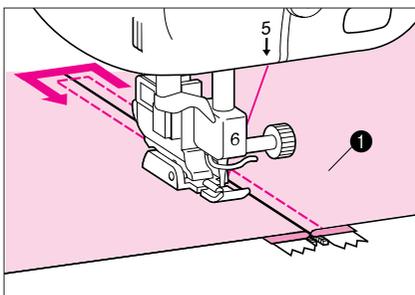

4. Put the right side of presser foot “I” into the holder. Topstitch 1 cm (3/8”) from the seamed edge of the fabric and then remove the basting.


- ① Surface

Side application

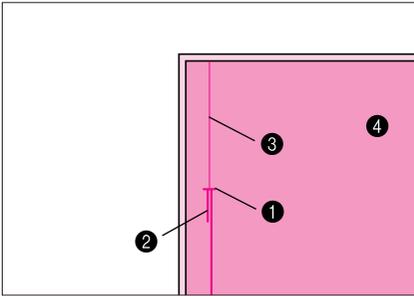


1. Attach presser foot “J” and sew straight stitches up to the crotch end. Change to a basting stitch and sew to the top of the fabric.

- ① Crotch end
- ② Reverse side
- ③ Basting stitch
- ④ Reverse side

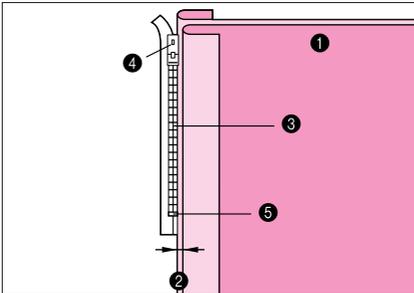


2. Press the seam allowance open and align the folded hem along the teeth of the zipper, while keeping 3 mm (1/8”) for the sewing space.

- ① Reverse side
- ② Keep 3 mm (1/8”) for sewing
- ③ Teeth of zipper
- ④ Slider on head of zipper
- ⑤ Crotch end (Base of zipper)

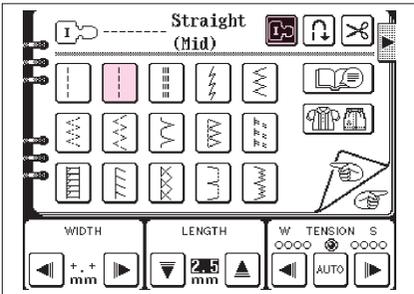


3. Select the “” stitch and then touch the “” key. The necessary adjustment for zipper insertion will be carried out automatically.

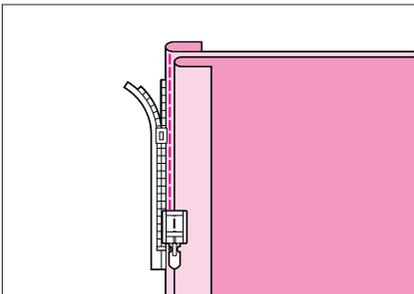


4. Put the left side of presser foot “I” into the holder, and then sew the bottom layer to the crotch end (base of zipper).

* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

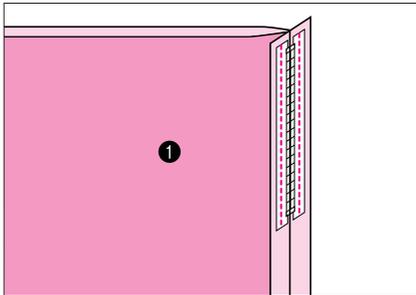


5. Close the zipper and turn over the fabric. Then attach the other side of the zipper to the fabric.

① Reverse side

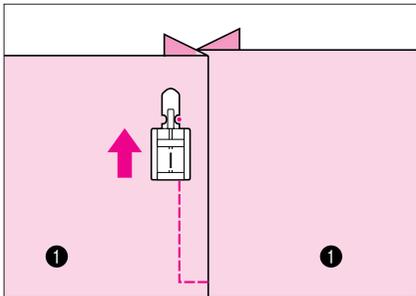


6. Turn the fabric over to the right side and sew a straight stitch 5 cm from the end, stop the machine, lower the needle, raise the presser foot and then remove the basting stitches.

① Surface

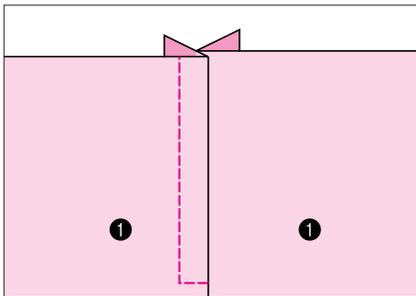

7. Move the zipper pull and sew the remaining part.


① Surface

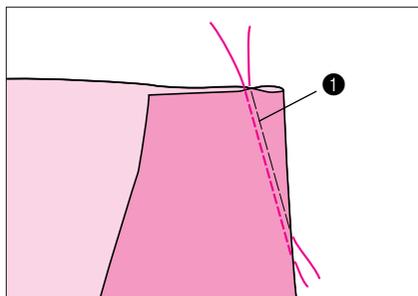


1. Attach presser foot "J". Sew a reverse stitch at the beginning of the dart and then sew from the wide end to the other end without stretching the fabric.

① Basting


- * If automatic reinforcement stitching is preset, a reinforcement stitch will automatically be sewn at the sewing start.

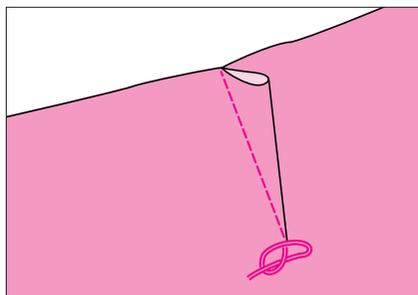

2. Do not sew a reverse stitch at end. Cut the thread at the end leaving 5 cm (1-15/16"), and then tie both ends together.

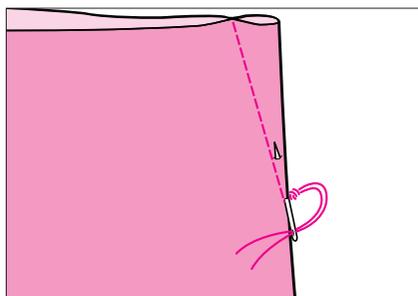


3. Insert the ends of the thread into the dart with a needle.

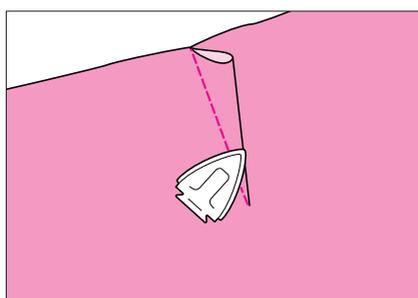

4. Iron the dart to one side so that it is flat.




Use on waists of skirts, the sleeves of shirts, etc.

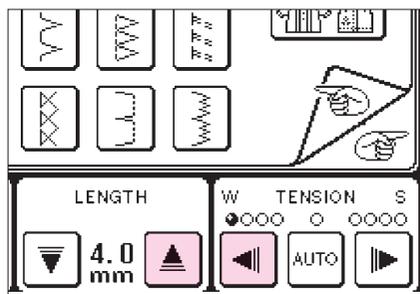


1. Set the stitch length to 4.0 mm (3/16") and the thread tension to weak.

* If you touch the "GATHERING" key after touching the "GATHERING" key, the stitch length will be set automatically to 4.0 mm (3/16") and the thread tension will be set automatically to weak.

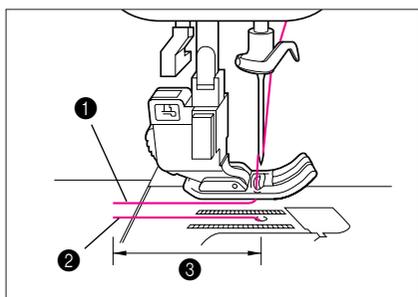


2. Attach presser foot "J". Pull out the bobbin and upper threads by 5 cm (1-15/16").

- ① Upper thread
- ② Bobbin thread
- ③ About 5 cm (1-15/16")

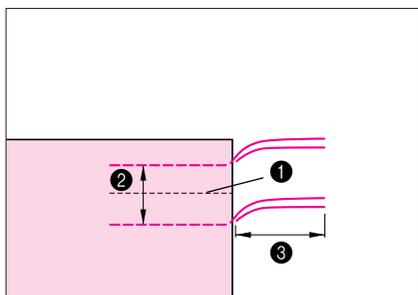


3. Sew two rows of straight stitches parallel to the seam line, then trim excess thread leaving 5 cm (1-15/16").

- ① Seam line
- ② 1.0 to 1.5 cm (3/8" to 9/16")
- ③ About 5 cm (1-15/16")

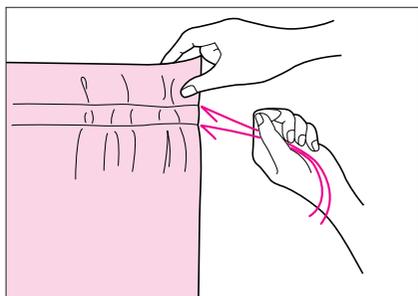


4. Pull the bobbin threads to obtain the desired amount of gather, then tie the threads.

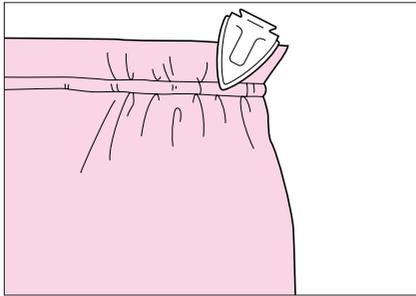

5. Smooth the gathers by ironing them.


Pulling out the bobbin thread

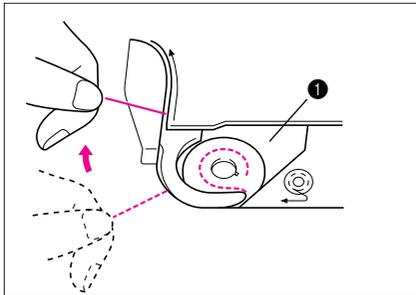

1. Thread the thread along the groove in the direction of the arrow, and leave it there without cutting it.

① Shuttle

* The bobbin cover should still be removed.

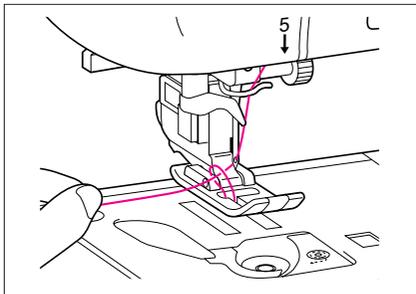


2. While holding the upper thread, press the “NEEDLE POSITION” button twice and then pull out the bobbin thread.

3. Replace the bobbin cover.




Select the “” stitch and then touch the “” key.

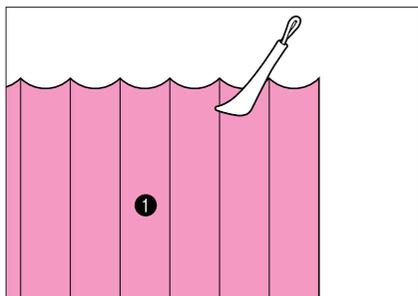


1. Mark along the folds on the reverse side of the fabric.

① Reverse side

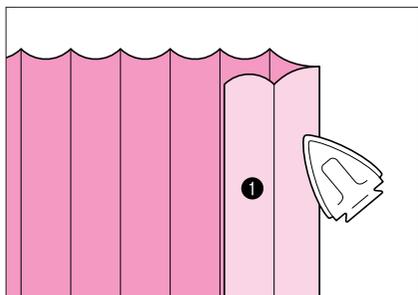


2. Turn the fabric and iron the folded parts only.

① Surface

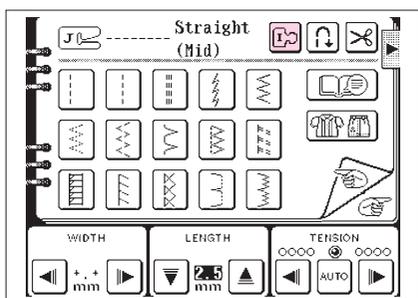

3. Select the “” stitch and then touch the “” key.


* It will not be necessary to adjust the thread tension if pintucking is selected by pressing the “” key.

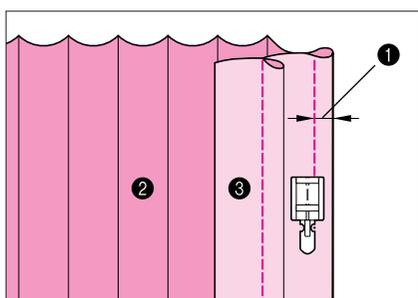

4. Put the right end of presser foot “1” into the holder, and sew a straight stitch along the fold.

① Width for pintuck
② Reverse side
③ Surface


* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

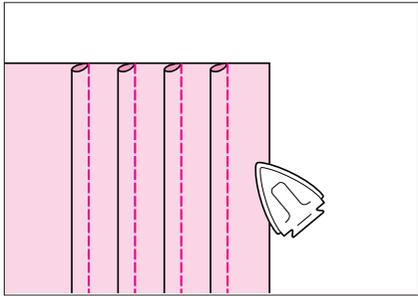

5. Iron the folds toward the same direction.




Use for reinforcing seams and finishing edges neatly.

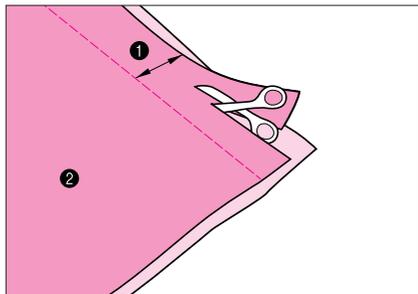

1. Attach presser foot “J”. Sew the finish line, then cut half of the seam allowance from the side that the flat fell seam will lie.


- ① About 1.2 cm (1/2")
- ② Reverse side

* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

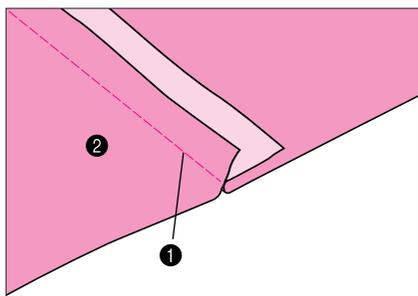


2. Spread out the fabric along the finish line.

- ① Finish line
- ② Reverse side

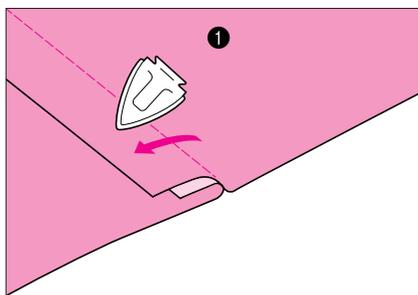

3. Lay both seam allowances to the shorter one's (cut one) side and iron them.


- ① Reverse side

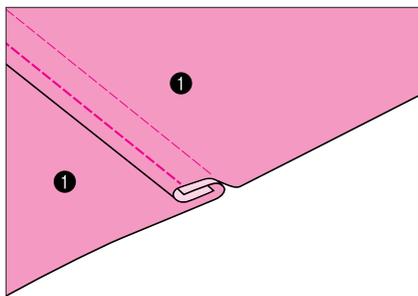


4. Fold the longer seam allowance around the shorter one, and sew the edge of the fold.

- ① Reverse side

Finished flat fell seam

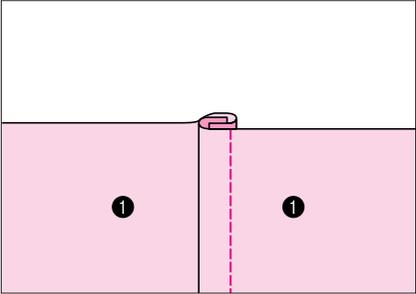


① Surface

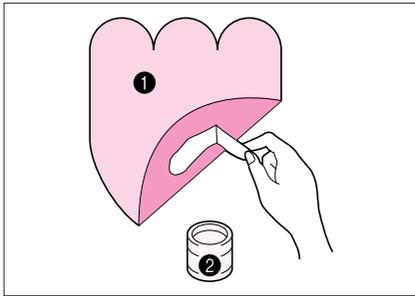

1. Attach the applique to the fabric.

- ① Applique
- ② Fabric glue


* The applique should be attached with fabric glue or a basting stitch so that it will not move during sewing.

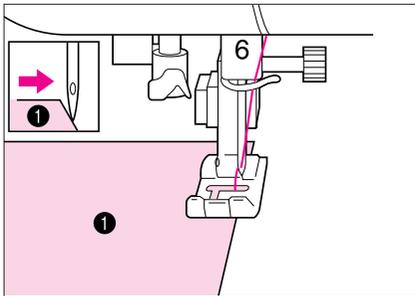

2. Attach presser foot "J". Make sure that the needle drop point is just outside the applique and then start sewing.

- ① Applique


* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the "REVERSE STITCH" button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

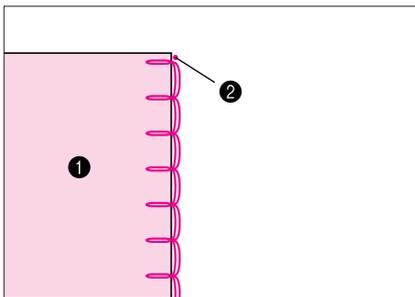

3. Finish

- ① Applique
- ② Needle drop point

Sewing the applique around corners

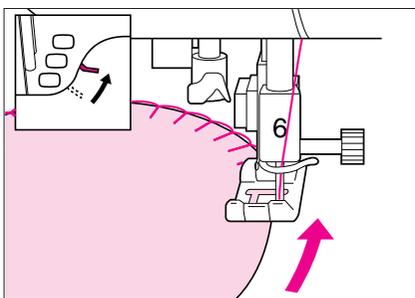


1. Stop the machine and position the needle just outside the applique.

2. Raise the presser foot and turn the fabric as needed to keep the correct needle position.




Use a blind hem stitch for applique quilts.

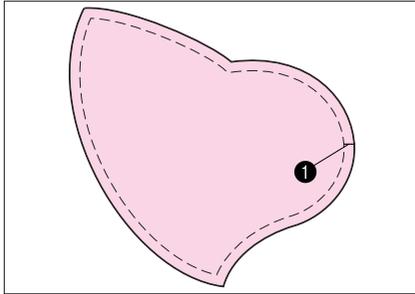


1. Trace the pattern onto the applique fabric and then cut around it.

① Seam margin (0.3 to 0.5 mm)

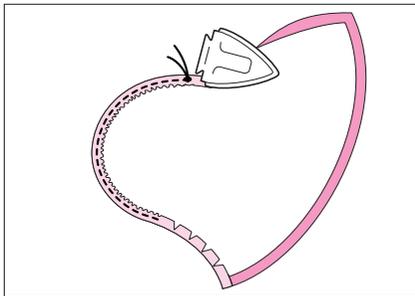


2. Place a piece of thick paper cut to the finished size onto the fabric, and then fold over the seam margin using an iron.

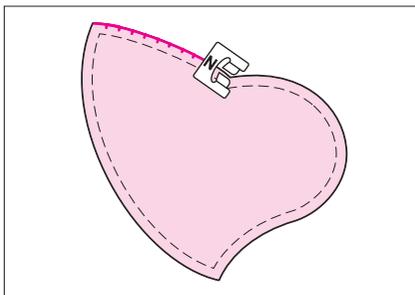

3. Turn the fabric over and sew basting stitches around the edge. Attach monogramming foot "N" and then sew around the edge, while dropping the needle as close to the edge as possible.


* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the "REVERSE STITCH" button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

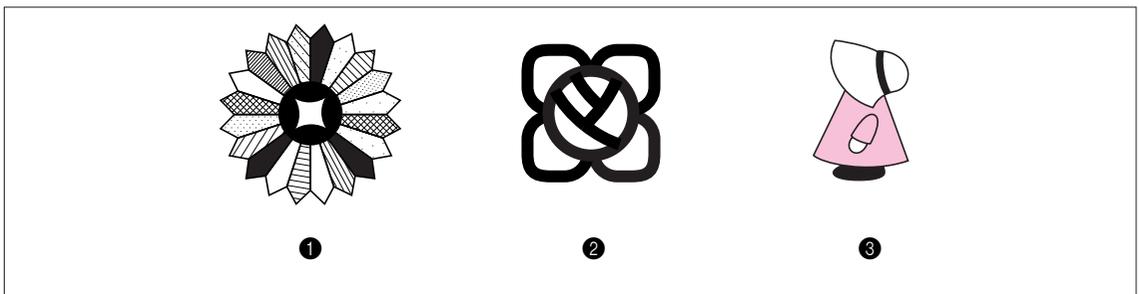

- ① Dresden Plate
- ② Stained Glass
- ③ Sunbonnet Sue

Stitch for decorating collars of blouses, edges of table cloths, etc.


3

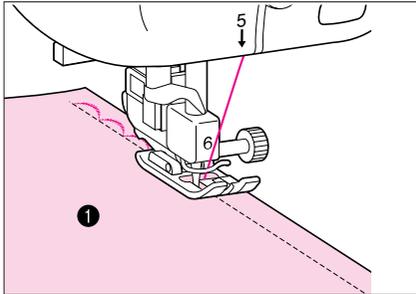

1. Attach presser foot "N". Sew the remaining edge of the fabric so that the stitch doesn't go right to the edge of the fabric.

① Surface

* When the automatic thread cutting and automatic reinforcement stitch are preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the "REVERSE STITCH" button to sew a reinforcement stitch and trim the thread automatically at the finish of sewing.

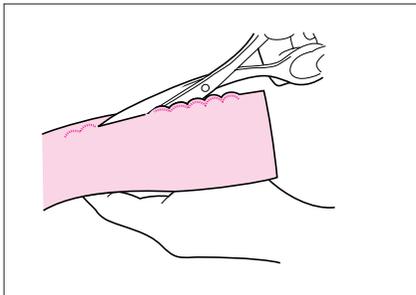


2. Trim along the stitches carefully so as not to cut the stitches.

* There are products in the marketplace that will "seal" the trimmed areas. This will give a more finished appearance.




This stitch is used for decorative stitching on clothing.

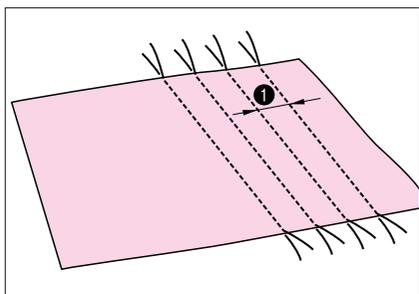


1. Select the “” stitch, set the stitch length to 4.0 mm and set the thread tension to a weak setting. Then sew straight stitches at intervals of 1 cm.


① About 1 cm (3/8”)

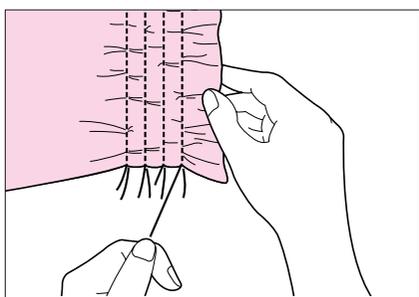


2. Pull the bobbin threads to obtain the desired amount of gather, and then smooth the gathers by ironing them.

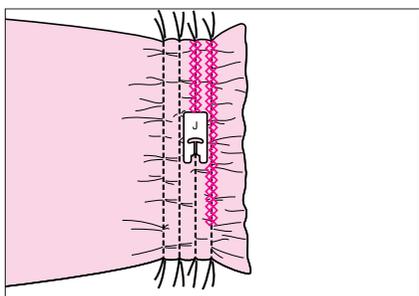

3. Attach presser foot “J” and sew over the top of the straight stitches, selecting from one of the two decorative stitches shown above.

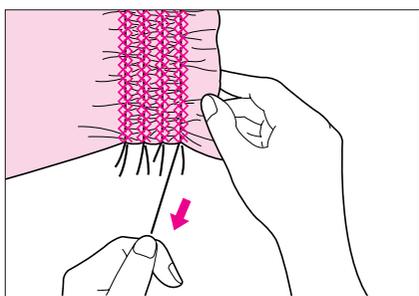


4. Pull out the straight stitch threads.

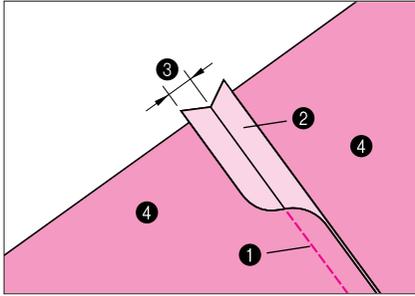

1. Match the fabric seams right sides together, join together with a straight stitch. Open seam allowance [about 1 cm (3/8")] and press flat.

- ① Straight stitch
- ② Seam allowance
- ③ 1 cm (3/8")
- ④ Reverse side

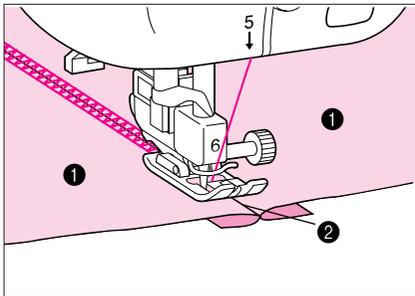


2. Attach presser foot "J". Set the center of the presser foot on the seam lines of the joined fabrics and then sew over the seam, using one of the decorative stitches shown above.

- ① Surface
- ② Seam




Stitch for fagoting, decoration, etc.

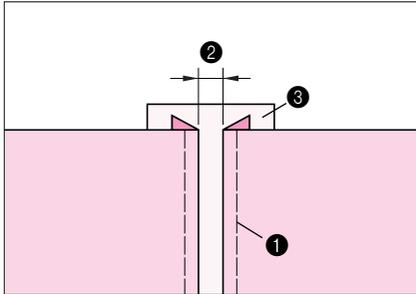

1. Baste the fabric onto thin paper or water-soluble stabilizer sheet.

- ① Basting stitch
- ② 0.4 cm (3/16")
- ③ Thin paper or stabilizer sheet

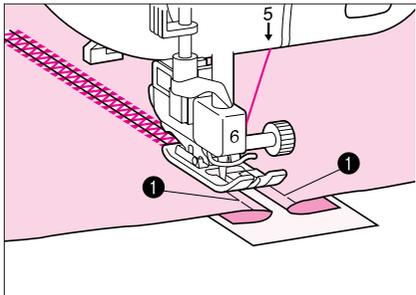

2. Attach presser foot "J". Set the center of the presser foot on the centers of both fabrics and begin sewing.

- ① Basting stitch

* Use thick thread.


* After sewing, remove the paper.



Select the stitch you would like to use.




Decorative stitching

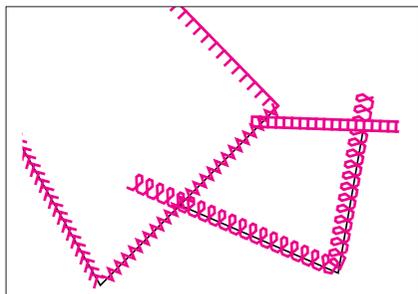


These stitches are used for sewing crazy quilts and for decorating hems.

Shell tacking

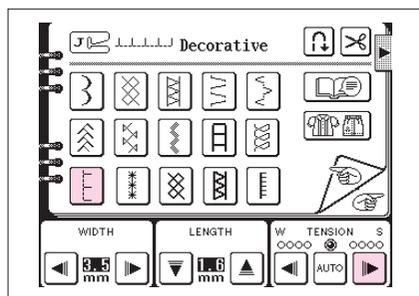


1. Attach presser foot “J”, select “” and set the thread tension to a strong setting.

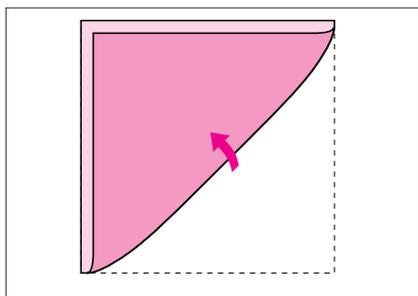

2. Fold the fabric in half diagonally.

* Use a thin fabric.

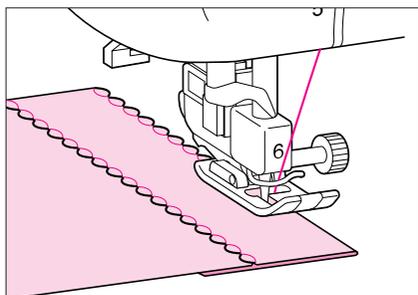

3. Drop the needle slightly to the outside of the edge of the fabric, and then start sewing.

4. Open out the fabric and iron the fold down to one side.

HEM-STITCH (HEIRLOOM STITCH)


Use for sewing tablecloths, decorative hems on clothes and decorative stitching on shirt fronts.




A more attractive finish can be obtained if you use the "130/705H Wing" needle when sewing these patterns.

If using a wing needle and the stitch width has been set to manual, check that the needle will not touch the presser foot before starting sewing.


"E" hem-stitching

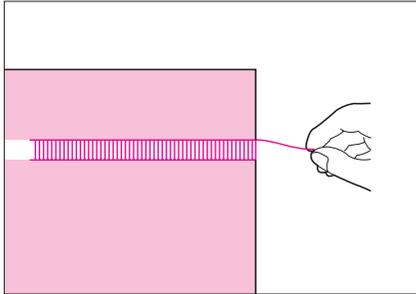


1. Pull out several threads from one area on a piece of fabric. This will leave the fabric frayed in this one area. About 5 or 6 threads will leave a 3 mm (1/8") area.

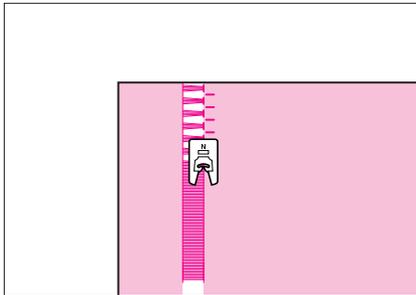

2. Attach presser foot "N". With the reverse side of the fabric facing up, sew one edge of the frayed part.

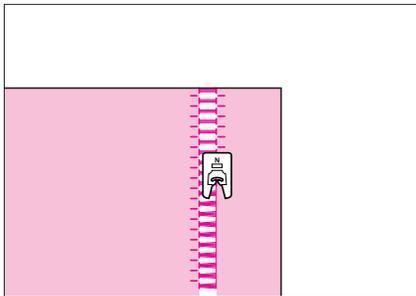


3. With the back side of the fabric continuing to face you, turn the fabric and sew the other edge of the frayed part, aligning the stitches so they are parallel.

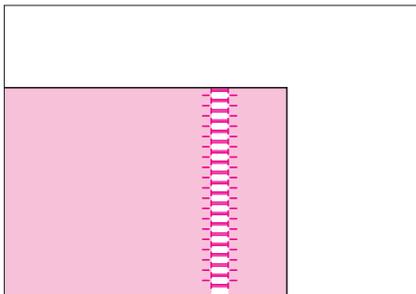


4. Illustration of finished product.

“” hem-stitching

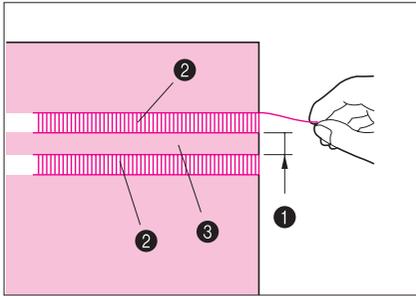


1. Pull out several threads from both sides of the 4 mm (3/16") part which is not yet frayed.
[Pull out four threads, leave five threads and then pull out four threads, the width of five threads is approximately 4mm (3/16") or less.]

- ① Approx. 4.0 mm (3/16") or less.
- ② Four threads (Pull out)
- ③ Five threads (Leave)

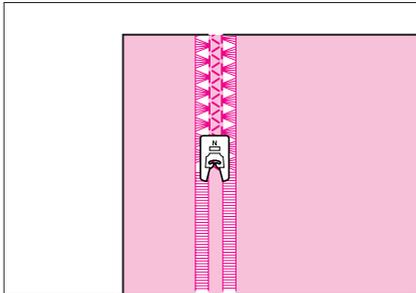

2. Sew the decorative stitch on the center of the five threads created above.



* Wing needle is a option.

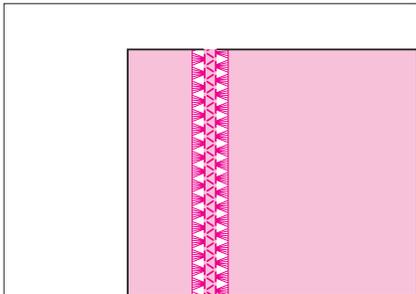



3. Illustration of finished product.



Multi-directional sewing on tubular fabrics.

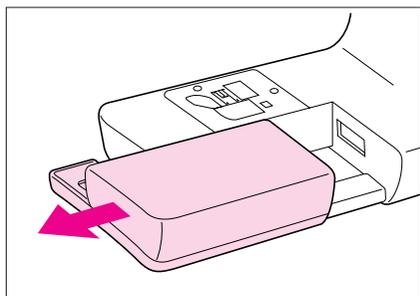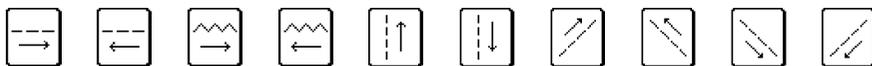


“”, “”, “” and “” can also be used to sew diagonally.
Slide the flat bed attachment off the machine to create the free arm.

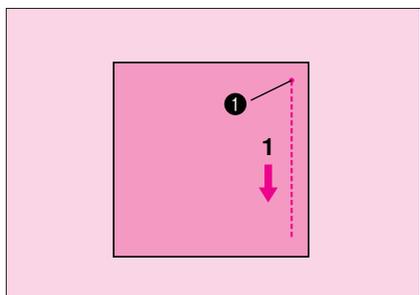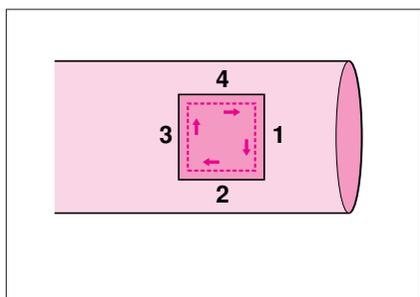


1. Attach presser foot “N”. Sew with the “” stitch to the point required.


1 Start point

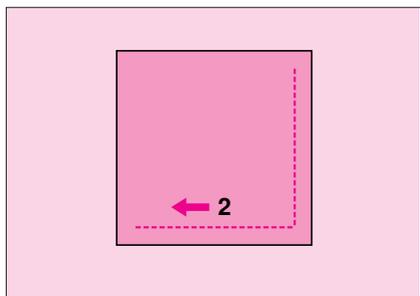

2. Select the “” stitch, and then sew until you reach the desired length.

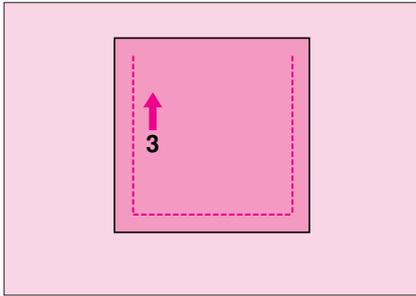

3. Select the “” stitch again, and press the “REVERSE STITCH” button.

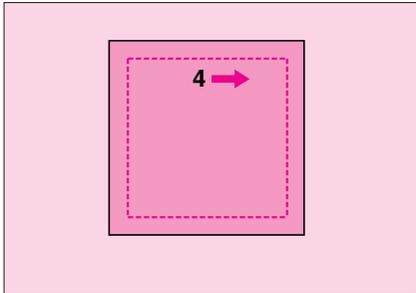


4. Select the “”stitch, and then sew until you reach the starting point.

* Lateral zigzag sewing should be carried out using the same procedure as lateral straight sewing.


3. CHARACTERS AND DECORATIVE STITCHES

CHARACTER SEWING

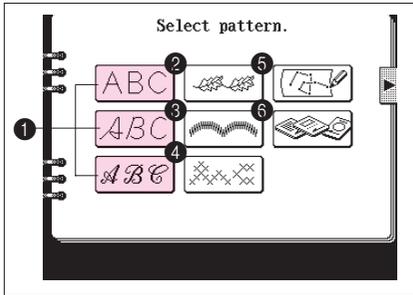


1. Touch the “CHARACTER/DECORATIVE STITCH” key.

- ❶ Alphabetical characters
- ❷ Decorative stitch
- ❸ Satin stitch
- ❹ Cross stitch
- ❺ MY CUSTOM STITCH™ (Function for making own stitch)
- ❻ Card

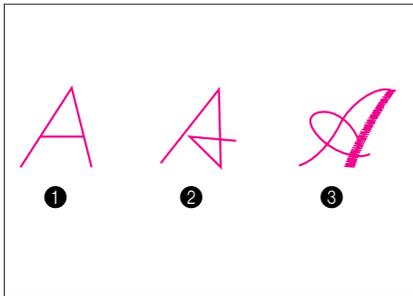

2. Select the style.

- ❶ Block style
- ❷ Alphabet
- ❸ Italic style

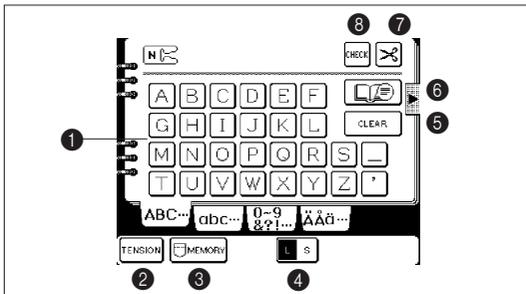


- ❶ Character selection keys
- ❷ Touch this key to change the thread tension.
- ❸ Touch this key to save a pattern combination to memory. (Refer to page 94.)
- ❹ Touch this key to change the character size. (Refer to page 89.)

“L”: Larger
“S”: Smaller

- ❺ Touch this key to cancel your last entry.
- ❻ An advice screen will appear if you touch this key while sewing. (Refer to page 39.)
- ❼ Touch this key to cut the thread automatically after sewing is completed. (Refer to page 36.)
- ❽ Touch this key to confirm your entry. (Refer to page 94.)


Combinations of characters

Try entering “Bus”.

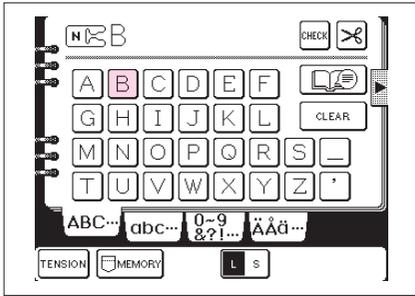


1. Touch “B”.

* If you select the wrong character by mistake, touch the “CLEAR” key to clear the character selection.

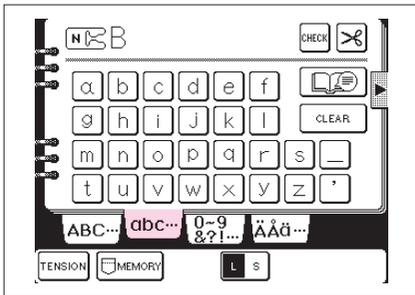

2. Touch “abc. . .” to switch to lowercase.

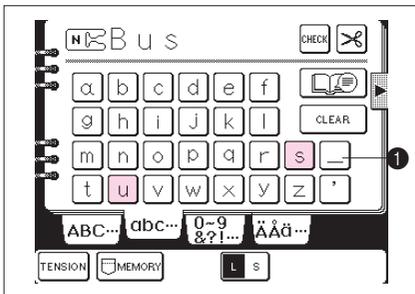


3. Touch “u” and “s”.


* Any combination of 70 characters or spaces can be accepted at one time.

① Space key


DECORATIVE STITCHES

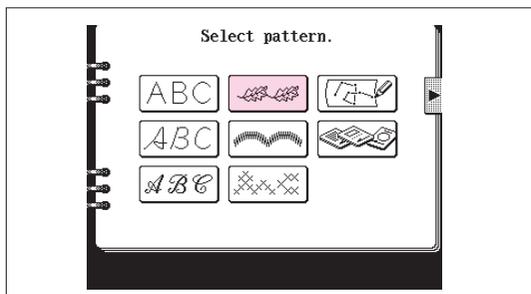

1. Touch the “CHARACTER/DECORATIVE STITCH” key.
2. Touch the “” key.
The decorative stitch pattern selection screen will be displayed.

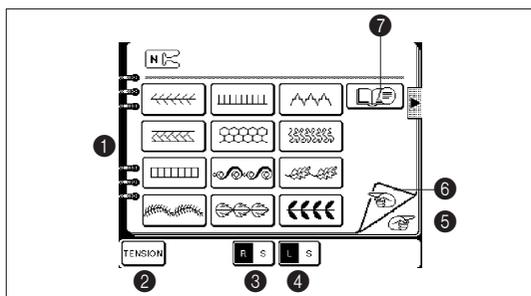


- ① Pattern selection keys
- ② Touch this key to change the thread tension.
- ③ Touch this key to select single or repeat sewing. (Refer to page 89.)
- ④ Touch this key to change the pattern size. (Refer to page 89.)
- ⑤ Touch this key to move to the next screen.
- ⑥ Touch this key to return to the previous screen.
- ⑦ An advice screen will appear if you touch this key while sewing. (Refer to page 39.)

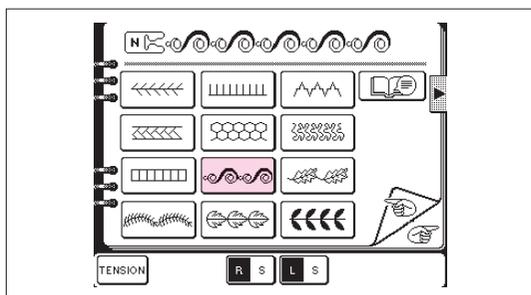

3. Select the pattern.
- * Touch the “” key to display the next decorative stitch pattern selection screen.


SATIN STITCHES

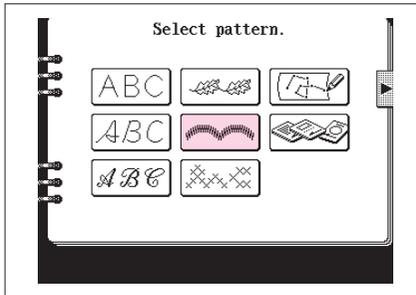

1. Touch the “CHARACTER/DECORATIVE STITCH” key.
The different types of patterns available will be displayed.

2. Touch the “” key.
The satin stitch selection screen will be displayed.

* The thread may easily become knotted when certain types of fabric or thread; therefore, the feed should be adjusted according to the application.

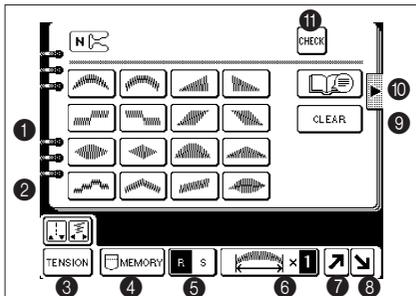

① Pattern selection keys

② Touch this key to adjust the stitch width and stitch length settings.

③ Touch this key to change the thread tension.

④ Touch this key to save a pattern combination to memory. (Refer to page 94.)

⑤ Touch this key to select single or repeat sewing. (Refer to page 89.)

⑥ Touch this key if you would like to change the pattern length without changing the stitch width or stitch length settings. (Refer to page 90.)


⑦ Touch this key to move the pattern up by about half of it's finished height when sewing. (Refer to page 92.)

⑧ Touch this key to move the pattern down by about half of it's finished height when sewing. (Refer to page 92.)

⑨ Touch this key to cancel your entry.

⑩ An advice screen will appear if you touch this key while sewing. (Refer to page 39.)

⑪ Touch this key to confirm your entry. (Refer to 94.)

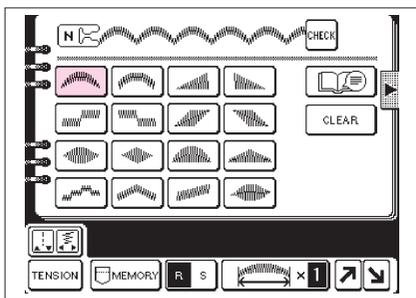


3. Touch the pattern that you would like to use. The pattern you touch will then be selected for use.


* If you select the wrong pattern by mistake, touch the “CLEAR” key to clear the pattern selection.

* Up to 70 different patterns can be combined into a single pattern.


CROSS STITCHING

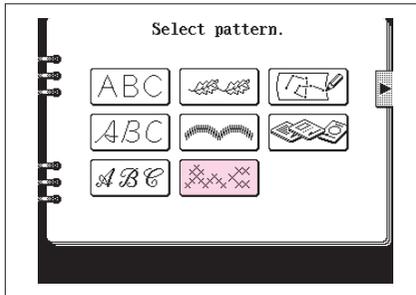

1. Touch the “CHARACTER/DECORATIVE STITCH” key.
The different types of patterns available will be displayed.
2. Touch the “” key.
The cross stitch selection screen will be displayed.

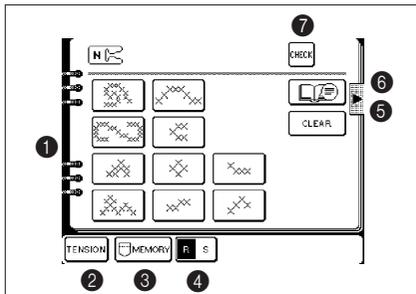

- ① Pattern selection keys
- ② Touch this key to change the thread tension.
- ③ Touch this key to save a pattern combination to memory. (Refer to page 94.)
- ④ Touch this key to select single or repeat sewing. (Refer to page 89.)
- ⑤ Touch this key to cancel your entry.
- ⑥ An advice screen will appear if you touch this key while sewing. (Refer to page 39.)
- ⑦ Touch this key to confirm your entry. (Refer to page 94.)

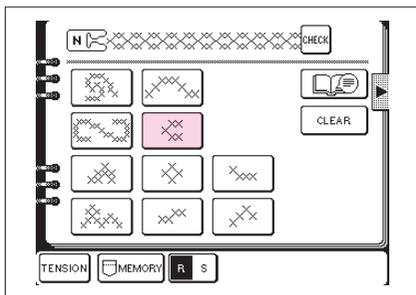

3. Touch the pattern that you would like to use. The pattern you touch will then be selected for use.



- * If you select the wrong pattern by mistake, touch the “CLEAR” key to clear the pattern selection.
- * Up to 70 different patterns can be combined into a single pattern.

CHARACTER AND DECORATIVE STITCH ADJUSTMENT


Changing the pattern size (Actual size)



Touch the “**L S**” (large/small) key to change the pattern size.

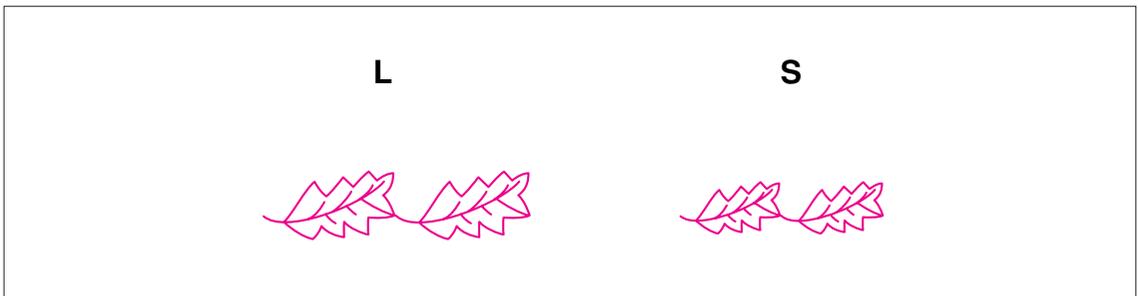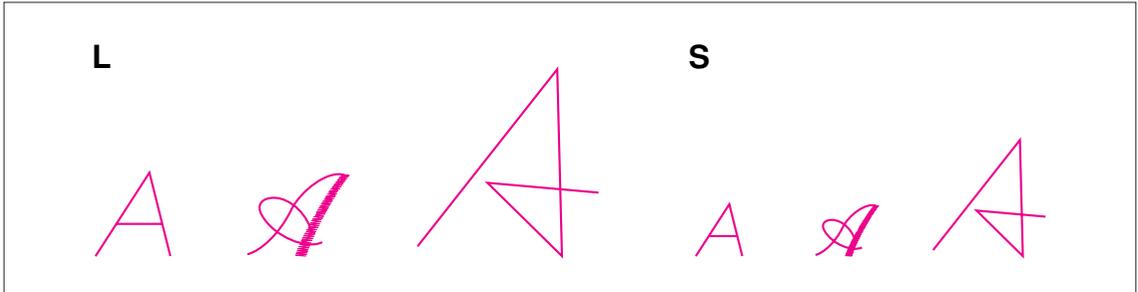


Single/repeat sewing

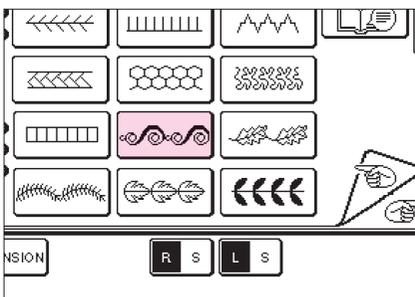


Touch the “**R S**” (repeat/single) key to sew one stitch pattern only or to repeat same stitch pattern.

1. Select the pattern.
2. Touch the “**R S**” (repeat/single) key. The selected stitch pattern will be single.

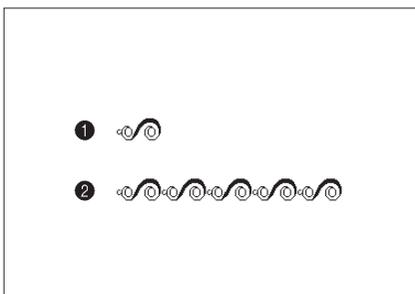


- ① Single sewing
- ② Repeat sewing


Elongation

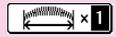

For satin stitches, it is possible to use the “” key to change the size of the pattern in five steps without changing the stitch width or stitch length.

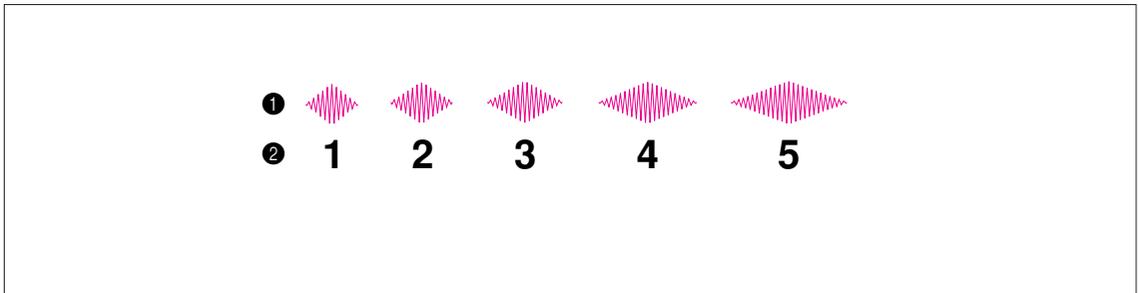


- ① Actual size
- ② Pattern length

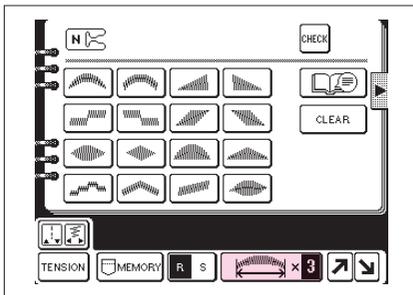



1. To change the length of the pattern, touch the “” key to change the number.


* The number shown in reverse indicates the current setting.

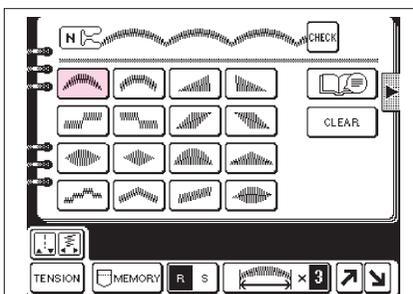


2. Select the pattern.

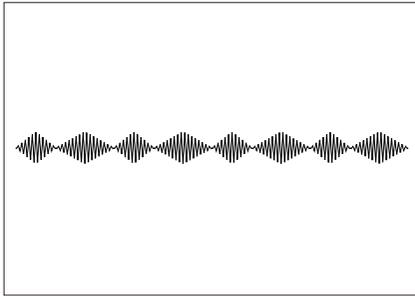


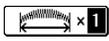Example: To combine “” and “”

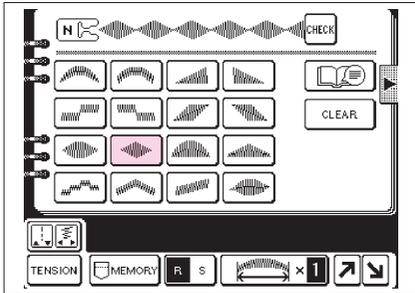

1. Select the “” stitch.

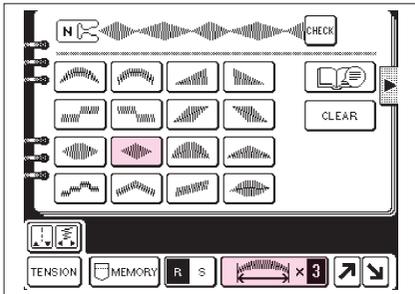


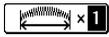2. Touch the “” key twice to switch to “”.

3. Select the “” stitch.

The thread may easily become knotted when certain types of fabric or thread are used; therefore, the upper thread tension should be adjusted according to the application.

Changing the stitch length and the stitch width 

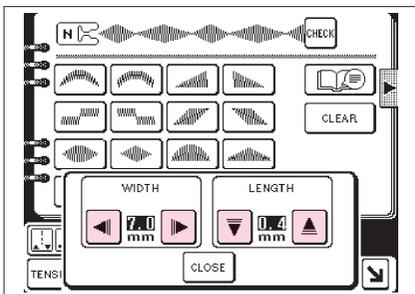

Touch the “” key.
 The stitch width and stitch length setting screen will be displayed.
 Touch the stitch width and stitch length setting keys to change the settings. (Refer to pages 22 to 24.)

The thread may easily become knotted when certain types of fabric or thread are used; therefore, the upper thread tension should be adjusted according to the application.


Customize patterns by combining satin stitches using the “↗” and “↘” keys




One touch of the “up” key will move the stitch pattern up half of it's finished height.




One touch of the “down” key will move the stitch pattern down half of it's finished height.

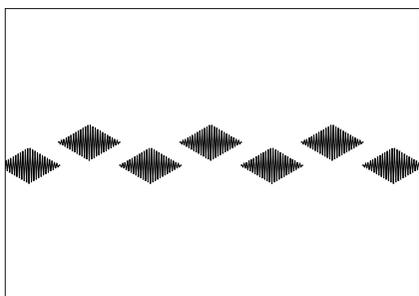


Example: Satin stitch pattern

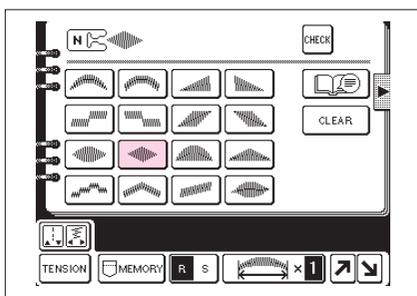


1. Select the pattern.

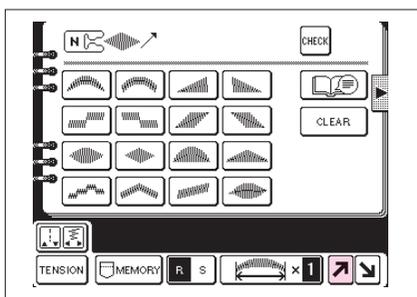

2. Touch the “↗” key. The next pattern will move up half of it's finished height.

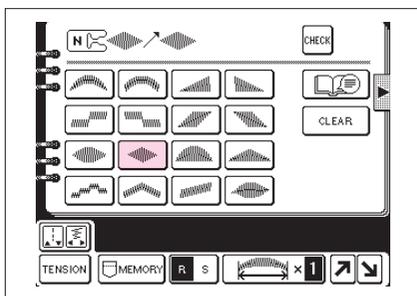


3. Select the pattern.

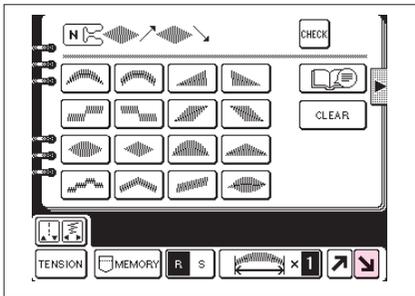


4. Touch the “” key. The next pattern will move down half of its finished height.


Making various pattern combinations

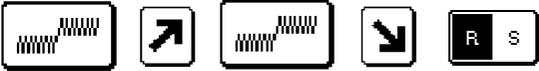Stitch pattern	Operation
	
	

Confirming entry of combined stitch patterns


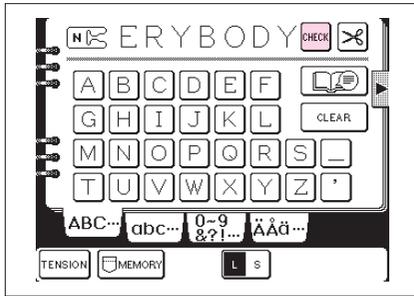


1. Touch the "CHECK" key. Stitch patterns will appear while moving on the screen.

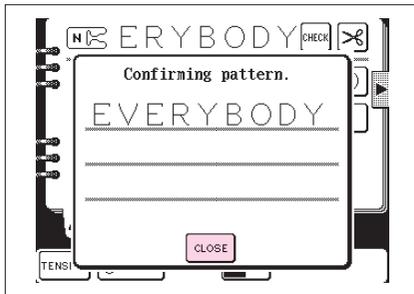


2. After checking the patterns, touch the "CLOSE" key. The display will return to the original screen.

Saving combined stitch patterns

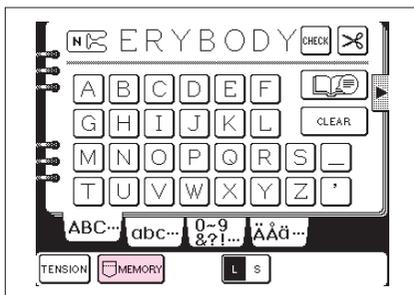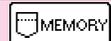

You can save words, your name for example, and patterns that you use often into the sewing machine's memory. The memory can save up to 12 such patterns.

After you have combined characters or patterns, touch the "MEMORY" key. Once the pattern has been saved, the display will return to the previous screen. Refer to page 141 for details on how to retrieve characters and patterns which have been saved in memory.

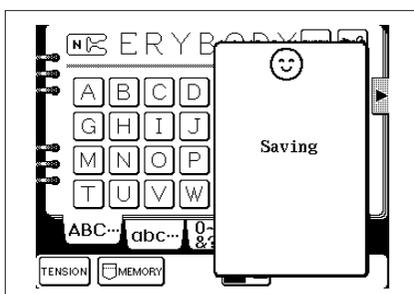

CAUTION

Do not turn off the power while the word "Saving" is displayed on the screen.


If you turn off the power during this time, the data being stored may be deleted.

- * It takes approximately 10 seconds for a pattern to be saved. For details on retrieving a pattern which has been saved, refer to page 141.



If the memory is full and no more patterns can be saved


To delete a pattern that is already saved in the memory, touch the “DELETE” key; to cancel the saving of a pattern, touch the “CANCEL” key.

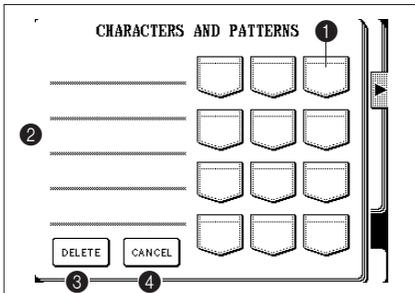


Erasing a pattern

1. Touch the “DELETE” key.

- ① This indicates a pocket which has a pattern saved in it.
- ② If you touch pockets, the pattern which is saved in that pocket will be displayed.
- ③ Touch this key to delete a saved pattern.
- ④ Touch this key to cancel the erasing of a saved pattern.

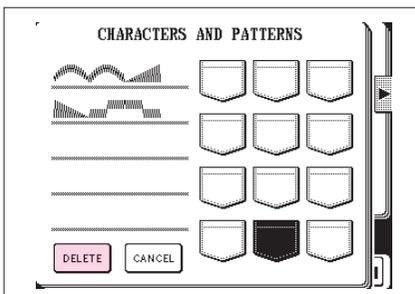


2. Touch a pocket key to select the pattern to delete, and then touch the “DELETE” key.

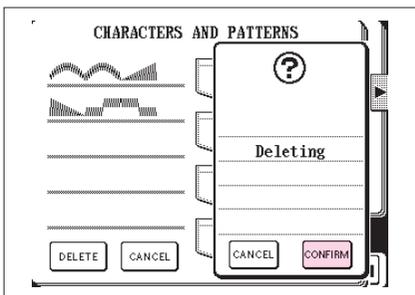

3. Touch the “CONFIRM” key.

The new pattern will then be saved automatically.

* To cancel the deleting of a pattern, touch the “CANCEL” key.

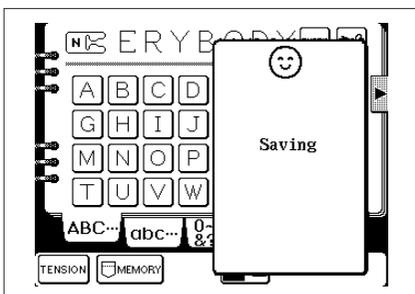


SEWING

Sewing attractive finishes


Refer to the table below and the “RELATED CHART OF SEWING FABRICS, THREADS AND NEEDLES” for recommended fabrics, threads and needles to use in order to obtain attractive sewing finishes. Furthermore, pattern slippages may occur when using different fabric thicknesses or types of stabilizers. Be sure to carry out a test sewing beforehand to check.

FABRIC	When sewing thin or stretch fabrics, fabrics with coarse weaves, or characters/decoratives stitches stored in the machine attach interfacing to the reverse side. If you do not wish to attach interfacing, place the fabric onto some thin paper such as tracing paper before starting to sew. This acts as a stabilizer.
THREAD	#50 – #60
NEEDLE	Thin and medium fabrics 75/11 (Embroidery) Thick fabrics 90/14 (Embroidery) Stretch fabrics #14 golden needle

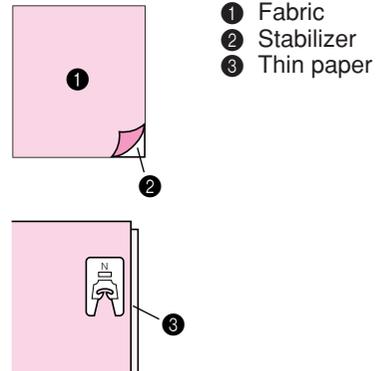

Using a pattern sheet


You can use the pattern sheet which is provided as an accessory to make marks on the material for use in positioning. This is particularly helpful when sewing large characters.

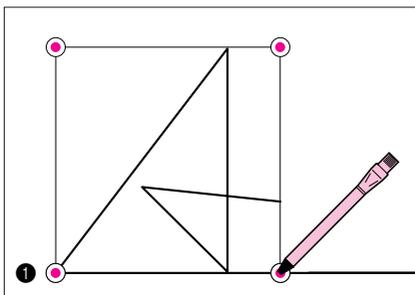

1. Align the picture on the pattern sheet with the place where the pattern is to be sewn on the fabric, and use a chalk pen to make marks on the fabric at the positions of the holes.


* When sewing patterns in mirror image, turn the pattern sheet upside-down.

- 1 Initial needle drop point

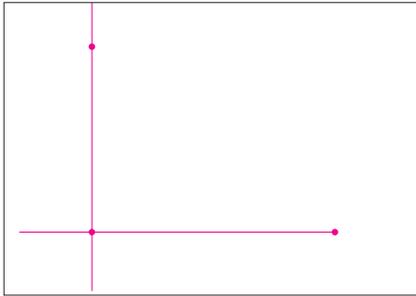


2. Draw lines to join the marks as shown in the illustration.

Sewing

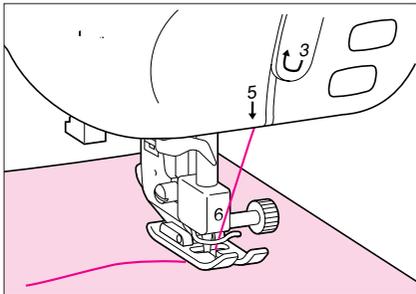


1. Attach presser foot "N".
2. Place the fabric under the presser foot, pull the upper thread out to the side and then lower the presser foot.

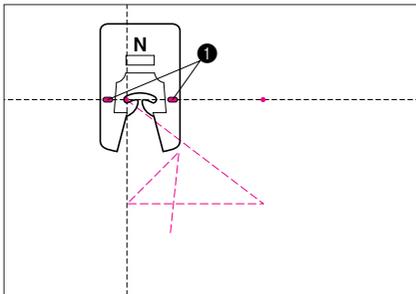


* If you used the pattern sheet to make positioning marks on the fabric, place the fabric so that the marks are aligned with the needle reference points in the presser foot and pull the upper thread out to the side before lowering the presser foot.

① Needle hole reference line

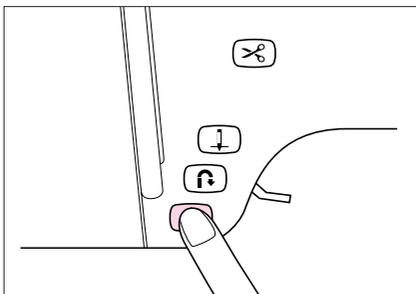


3. Press the "START/STOP" button. Sewing will then start.

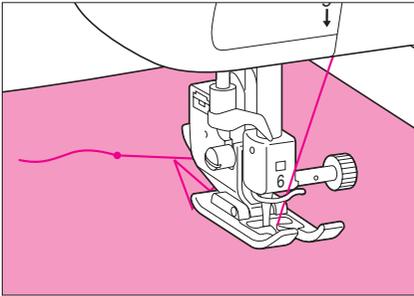

4. Once sewing of the character has been completed, the sewing machine will automatically sew a reinforcement stitch and then stop.

- * When the automatic thread cutting is set, the machine trims both threads automatically after sewing is completed, and the machine will move on to the next sewing position before stopping.
- * When sewing continuous patterns, press the “START/STOP” button to stop the sewing machine, and then press the “REVERSE STITCH” button to sew a reinforcement stitch.

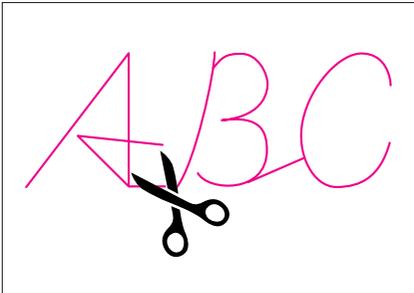

5. When sewing is completed, trim any excess thread.


CAUTION

When sewing some patterns, the needle will stop in the raised position while the fabric is fed due to the needle bar separation mechanism which is used in this sewing machine. At such times, a clicking sound which is different from the sound generated during sewing will be heard, but this sound is normal and is not the sign of a malfunction.


ADJUSTING STITCH PATTERNS



A stitch pattern may get deformed due to the thread or cloth. It is a good idea to first make a trial stitching, and then make adjustments for each stitch pattern if necessary.

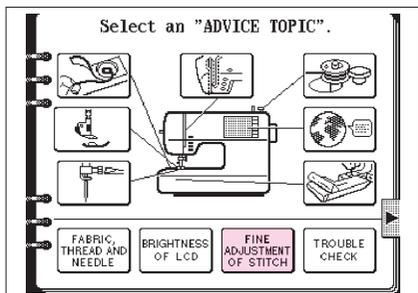

1. Touch the "OPERATION GUIDE" key.
2. Touch the "FINE ADJUSTMENT OF STITCH" key.

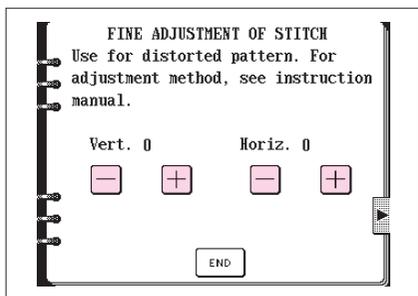

3. Attach presser foot "N" and then start embroidering. A trial pattern for adjustment purposes can then be embroidered. Adjust shape of stitch using the "+" and "-" keys.

* From -9 to +9

4. Touch the "END" key when the adjustment is finished.

Stitch pattern	Remedy
	Correct shape
	Vert. "+"
	Vert. "-"
	Horiz. "+"
	Horiz. "-"

4. EMBROIDERING

PREPARATION BEFORE SEWING



BE SURE TO ATTACH A PIECE OF STABILIZER FABRIC TO THE BACK OF THE MATERIAL BY IRONING BEFORE STARTING TO EMBROIDER

Using stabilizer fabric is an indispensable part of creating attractive embroidery. It is particularly important to attach stabilizer fabric to the back of stretch fabrics, thin fabrics and fabric with coarse weaves. If necessary, two thicknesses of stabilizer fabric can be attached. If embroidering onto fabrics which cannot be ironed, or in places where ironing is difficult, place the stabilizer fabric underneath the frame before embroidering. Use stabilizer fabric which is larger in area than the frame, and make sure that the stabilizer fabric is clamped all the way around by the frame to prevent the fabric from becoming loose.

NOTES ON THE EMBROIDERY UNIT


- (1) Always turn off the main power switch when connecting or removing the embroidery unit and embroidery card (memory card).
- (2) Connect embroidery unit firmly into the plug connector and socket of the sewing machine.
- (3) Do not touch the connector of embroidery unit.
- (4) You cannot use a foot controller when the embroidery unit is operational.
- (5) Always keep the embroidery unit and the memory card in designated case.
- (6) Do not carry the machine while the embroidery unit is connected.
- (7) Always set your machine on a level surface.

* The sewing speed is controlled by the machine automatically according to the pattern selected.


Attaching embroidery foot “Q”

CAUTION

Be sure to turn off the power before attaching the embroidery foot “Q”. If the power is left on and the “START/STOP” button is accidentally pressed, the machine will start operating, which could result in serious injury.

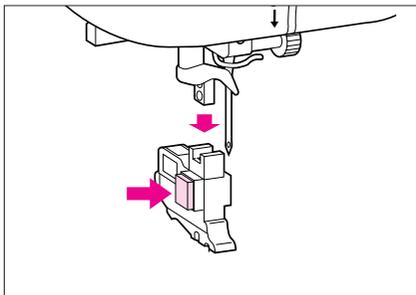

1. Press the “NEEDLE POSITION” button to raise the needle, and then turn off the power.
2. While pressing the button to the left of the presser foot holder, pull the presser foot holder downward to remove it.

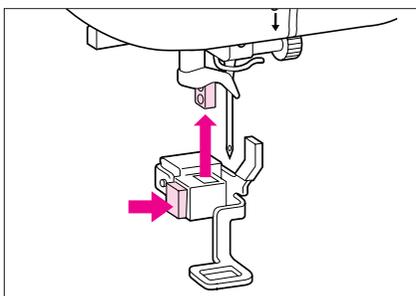


3. Raise the presser foot lever to the highest position. While pressing the button to the left of the embroidery foot “Q”, push embroidery foot “Q” firmly upward with both hands to install it.

CAUTION

Be careful not to touch the needle during this time, otherwise injury may result.

Fitting embroidery unit

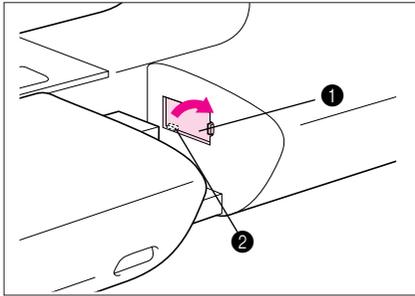


Always turn off the power supply before carrying out the procedure below.

1. Turn off the power.
2. Open the cover of the connecting slot by rotating the plastic bracket in the direction indicated by the arrow.

- ① Connecting slot
- ② Plastic bracket


* When the embroidery unit is not being used, close the cover of the connecting slot.

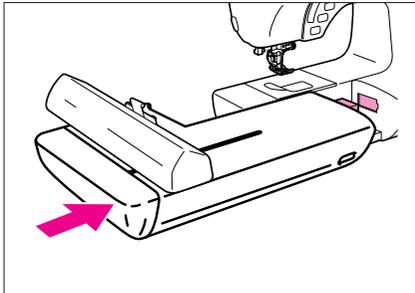

3. Insert the connector of the embroidery unit into the slot and check that it is connected properly.

* Put the machine on a flat and horizontal surface and slide the embroidery unit towards the machine.


Removing the embroidery unit

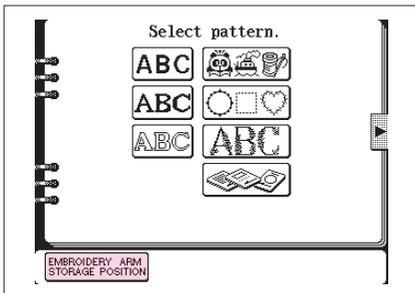

1. Make sure that the embroidery frame has been removed, touch the “EMBROIDERY” key or the “EMBROIDERY EDIT” key, and then touch the “EMBROIDERY ARM STORAGE POSITION” key. The carriage will move to the removal position.

CAUTION

If the above procedure is not carried out, the embroidery unit cannot be removed and placed in the case.

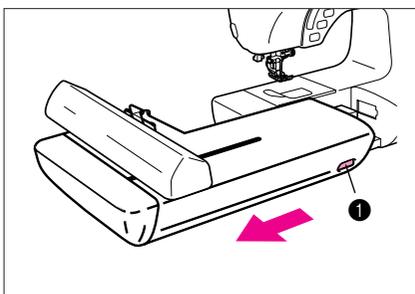


2. Turn off the power, hold the left side of the embroidery unit, and while pressing the release button, gently slide the embroidery unit away from the machine.

- ① Release button

CAUTION


Make sure that the power is turned off, otherwise damage may result.

Placing the embroidery unit into its case

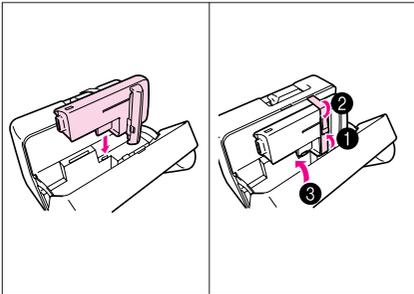


- ① Hook the embroidery unit onto the tab inside the case.
- ② Secure the embroidery unit with the band.
- ③ Close the cover.

Initializing the embroidery unit

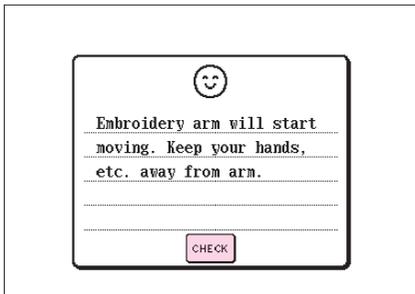

1. Turn on the power. The following display will appear on the LCD.

* When the buttonhole lever, the needle or the presser foot lever are lowered or when the bobbin winding shaft is at the right, an error message will vary depending on which of the conditions mentioned above is occurring. The display shown at left will appear after the error condition has been remedied.

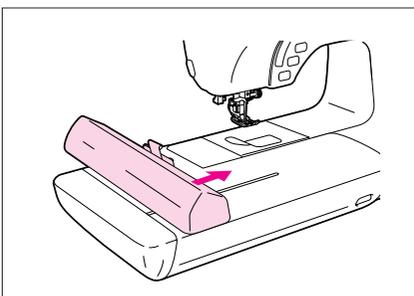


2. Touch the "CHECK" key.
The carriage will move in order to initialize the embroidery unit.

CAUTION

Do not place your hands near the embroidery arm, otherwise injury may result. Furthermore, the embroidery arm may make some noise while initialization is being carried out, but this is normal.

If the initialization could not be carried out normally, a buzzer will sound. If this occurs, make sure that the embroidery frame is not attached and try again to initialize the embroidery unit. This is not a malfunction.


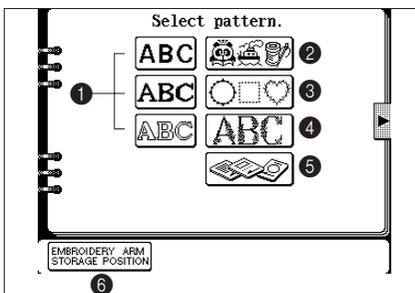


The types of patterns available will then be displayed on the LCD.

- ① Alphabetical characters
- ② One-point patterns
- ③ Frame patterns
- ④ Floral alphabets
- ⑤ Patterns on memory card (option)
- ⑥ Touch to position the embroidery arm for removing unit.

SELECTING AND SEWING PATTERNS

Selecting alphabetical characters

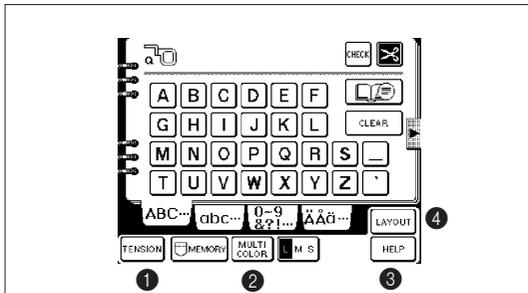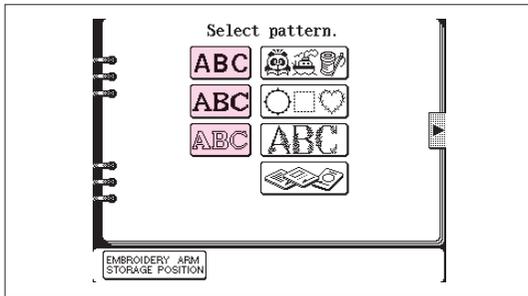

How to combine characters




1. Select the character required.

ABC ABC ABC

- * If another screen is being displayed, touch the "EMBROIDERY" key before selecting the character.
2. Combine characters. (Refer to page 85.)

- 1 Touch this key to change the thread tension and the stitch density. (Refer to page 27 and page 115.)
- 2 Touch this key when you want to change the color of each character sewn. When displayed in reverse, the machine will stop after each character is embroidered.
- 3 Touch this key if the thread breaks during sewing or if you would like to sew again from the beginning. (Refer to page 121.)
- 4 Touch this key to move the sewing position. (Refer to page 116.)

Selecting one-point patterns

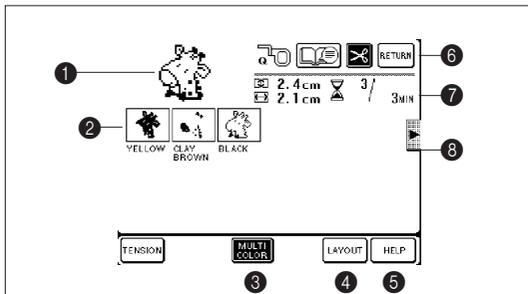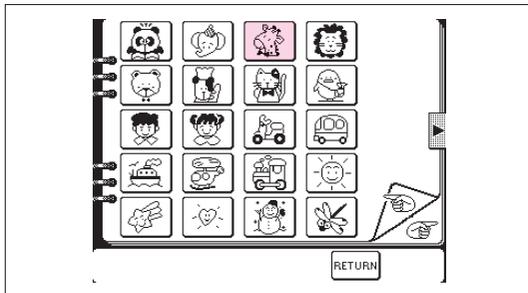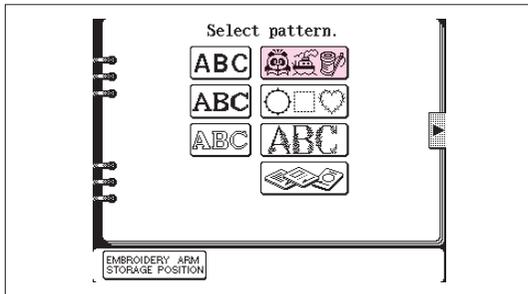

1. Touch the “” key.
The one-point pattern selection screen will be displayed.

* If another screen is being displayed, touch the “EMBROIDERY” key before touching the one-point pattern key.

2. Select the desired pattern.
The sewing screen will be displayed.




* If you touch the “” key, the next sewing screen will be displayed.

If you touch the “” key, the previous sewing screen will be displayed.

* If you touch the “RETURN” key, the pattern selection screen will be displayed.

- 1 The selected pattern will be displayed.
- 2 This indicates the order of color changes. The color displayed below each pattern is for reference. For details about the color change table, refer to page 175.
- 3 Touch this key if you would like to sew each pattern in separate parts with same color. (Refer to page 115.)
- 4 Touch this key to move the sewing position. (Refer to page 116.)
- 5 Touch this key if the thread breaks during sewing or if you would like to sew again from the beginning. (Refer to page 121.)
- 6 Touch this key to return to the previous screen (pattern selection screen).
- 7 This shows the amount of time required to embroider the pattern and the total amount of time remaining. It does not include the time needed to change colors. (The totals are calculated and displayed after a pattern is selected.)
- 8 This shows the size of the pattern.


Selecting frame patterns

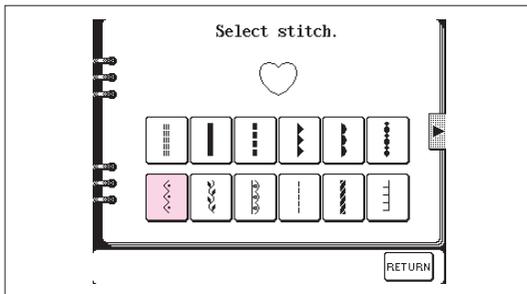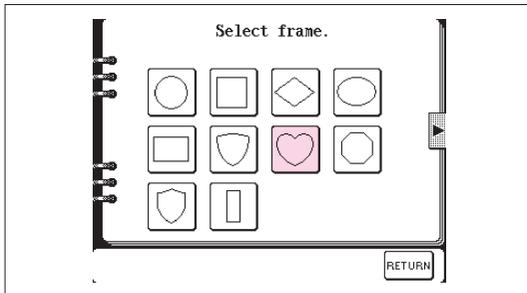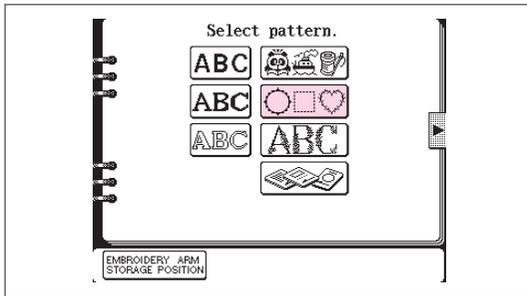

Frame patterns are created by combining the desired frame and type of stitch.


1. Touch the " " key. The frame pattern selection screen will be displayed.
 - * If another type of pattern such as characters was selected previously or if a memory card has been inserted, touch the "EMBROIDERY" key first and then touch the frame pattern key.
2. Select the desired shape for the frame. The frame pattern will be selected and the stitch pattern selection screen will be displayed.
 - * If you touch the "RETURN" key, the previous screen will be displayed.
3. Select the desired type of stitch to form the frame. The combined pattern is then shown on the LCD screen.

The selected pattern can be changed with the options shown on screen.

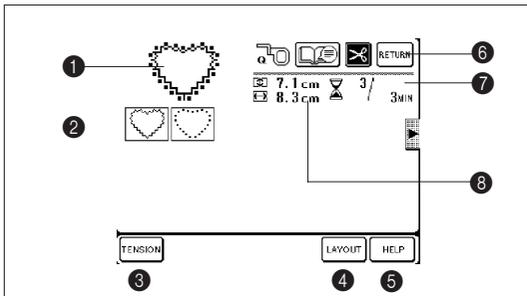


- ❶ Indicates the stitch selected for the frame pattern.
- ❷ This indicates the order of color changes.
- ❸ Touch this key to change the thread tension and the stitch density. (Refer to page 27 and page 115.)
- ❹ Touch this key to move the sewing position. (Refer to page 116.)
- ❺ Touch this key if the thread breaks during sewing or if you would like to sew again from the beginning. (Refer to page 121.)
- ❻ Touch this key to return to the previous screen (pattern selection screen).
- ❼ This shows the amount of time required to embroider the pattern and the total amount of time remaining. It does not include the time needed to change colors. (The totals are calculated and displayed after a pattern is selected.)
- ❽ Indicates the current pattern size.


Selecting floral alphabets

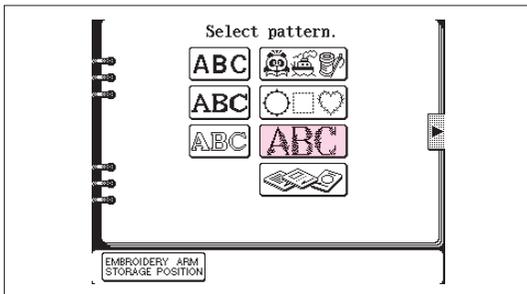

1. Touch the "ABC" key.
- * If another screen is being displayed, touch the "EMBROIDERY" key before touching the "ABC" key.


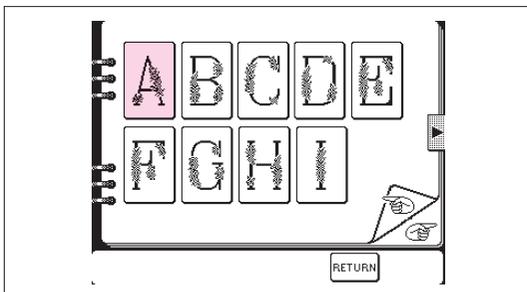


2. Select the pattern you require.
3. The sewing screen will be displayed.
- * These patterns can also be used to embroider alphabetical characters without embroidering the flowers.

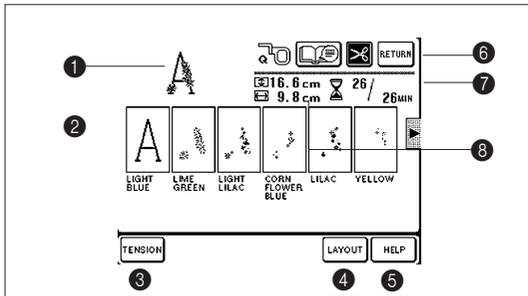

- ① Indicates the pattern selected.
 - ② This indicates the order of color changes. The color displayed below each pattern is for reference. For details about the color change table, refer to page 175.
- * If you would like to embroider just the alphabetical characters, embroider the color of the alphabetical characters only.
- ③ Touch this key to change the thread tension.
 - ④ Touch this key to move the sewing position. (Refer to page 116.)
 - ⑤ Touch this key if the thread breaks during sewing or if you would like to sew again from the beginning. (Refer to page 121.)
 - ⑥ Touch this key to return to the previous screen (pattern selection screen).
 - ⑦ This shows the amount of time required to embroider the pattern and the total amount of time remaining. It does not include the time needed to change colors. (The totals are calculated and displayed after a pattern is selected.)
 - ⑧ This shows the size of the pattern.




Selecting patterns from a memory card

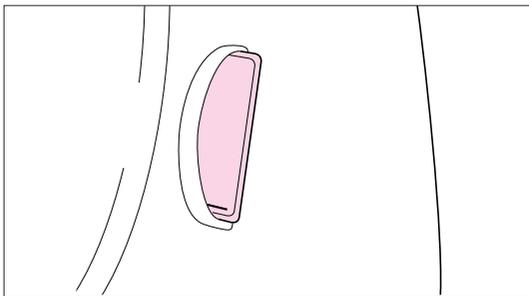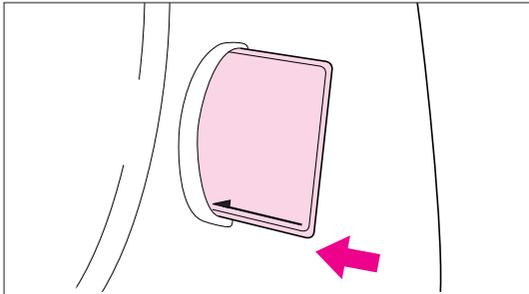

1. Hold the memory card so that the arrow is facing toward you, and then insert it all the way into the slot on the right side of the sewing machine.

CAUTION

- Be sure to insert and remove the memory card only while “” is being displayed or while the power is turned off.
- Do not insert the card in any direction other than that described above, and do not force it into the slot, otherwise the card or the slot may become damaged.
- Insert so that the card appears as shown in the illustration at left. If you try to push the card in any further, the connector will become damaged.

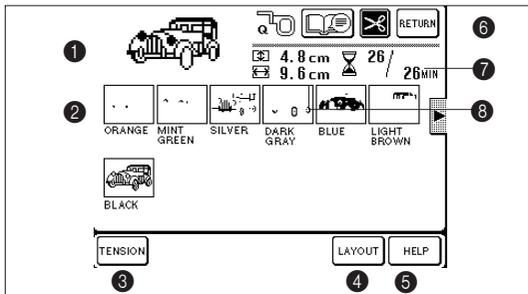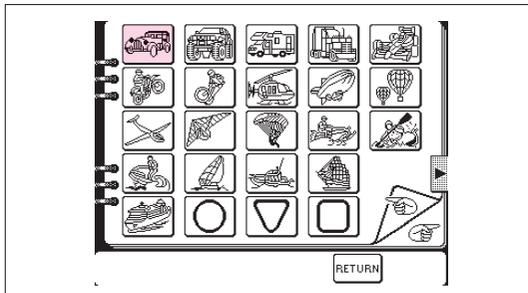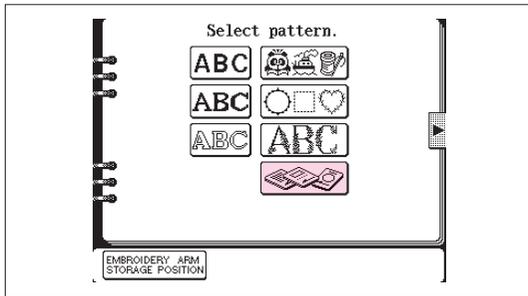

2. Touch the “” key.

3. The memory card pattern selection screen will be displayed. (The illustration at left shows the Transportation card No.12 (SA312, XA0275-001) (option).)

* If another screen is being displayed, touch the “EMBROIDERY” key before touching the “” key.

4. Select the desired pattern.


* If you touch the “RETURN” key, the previous screen will be displayed.

- ① Indicates the selected pattern.
- ② This indicates the order of color changes. The color displayed below each pattern is for reference.
- ③ Touch this key to change the thread tension.
- ④ Touch this key if you would like to move the sewing position. (Refer to page 116.)
- ⑤ Touch this key if the thread breaks during sewing or if you would like to sew again from the beginning. (Refer to page 121.)
- ⑥ Touch this key to return to the previous screen (pattern selection screen).
- ⑦ This shows the amount of time required to embroider the pattern and the total amount of time remaining. It does not include the time needed to change colors. (The totals are calculated and displayed after a pattern is selected.)
- ⑧ This shows the size of the pattern.

MEMORY

Saving a pattern combination in memory


Memorizing combined pattern in memory for later use (12 memories are available)

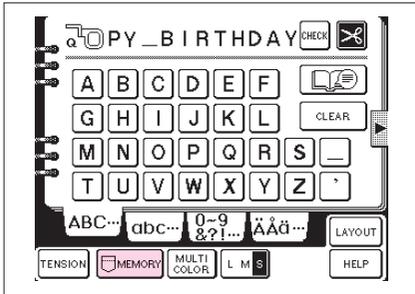

You can combine and save characters and all edited embroidery patterns.

Example: To save the “HAPPY BIRTHDAY” pattern in memory address 1.

1. Enter the characters to create the pattern.

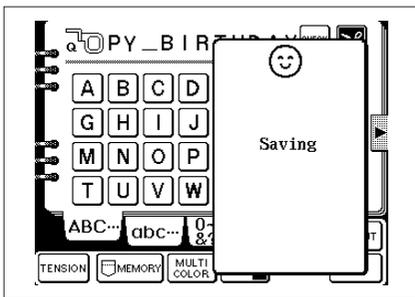

2. Touch the “MEMORY” key. Once the pattern has been saved, the display will return to the previous screen.

- * Do not turn off the power while a pattern is being saved (while “Saving” is displayed).
- * It takes approximately 10 seconds for a pattern to be saved. For details on retrieving a pattern which has been saved, refer to page 141.




If the pattern cannot be saved Refer to page 95.

EMBROIDERING

Embroidering attractive finishes

Refer to the table below and the “RELATED CHART OF SEWING FABRICS, THREADS AND NEEDLES” to use in order to obtain attractive sewing and embroidery finishes. Pattern slippages may occur when using different fabric thicknesses or types of stabilizers. Be sure to carry out a test sewing beforehand to check.

FABRIC	When embroidering fabrics, attach a non-woven type of stabilizer fabric. * It is recommended that you use a special stabilizer fabric for embroidering which can be torn off around the design when the project is finished.
THREAD	Upper thread Brother poly 40 color thread set (#50) Refer to page 8. Bobbin thread Brother poly #60 bobbin thread Refer to page 8.
NEEDLE	75/11 (Embroidery)

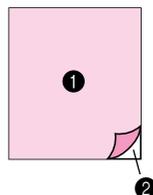

- ① Fabric
- ② Stabilizer

Setting the fabric into the embroidery frame

Three types of embroidery frames are available: Large, medium and small


Embroidering area for large frame: 18 cm (H) × 13 cm (W)

Embroidering area for medium frame: 10 cm (H) × 10 cm (W)


Embroidering area for small frame: 2 cm (H) × 6 cm (W) (for embroidering initials)

CAUTION

Depending on the size of the pattern and the position of the pattern to be embroidered, it may not be possible to use the medium and small frames. When using these frames, be sure to check the layout screen display (refer to page 116) before starting to embroider any patterns. If the frames are used by mistake, the presser foot may strike the frames, which could cause injury.

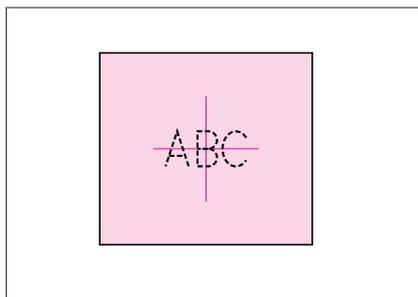


1. Mark the fabric using a chalk pen or fabric marking pen to indicate the embroidering position.

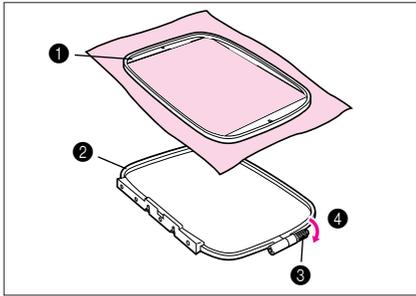


2. Loosen the adjusting screw and separate the inner and outer frames. Lay the fabric on top of the outer frame and secure it between the inner and outer frame, and tighten the adjusting screw just enough to secure the fabric. Gently remove the fabric from the frame without loosening the adjusting screw.

- ① Inner frame
- ② Outer frame
- ③ Adjusting screw
- ④ Loosen

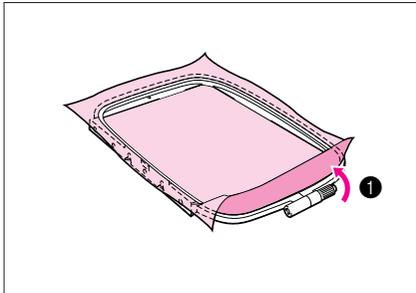

* This precautionary step will help reduce pattern distortion while embroidering.
* Be sure to align the ▲ mark on the inner frame with the ▼ mark on the outer frame.


- ① Tighten

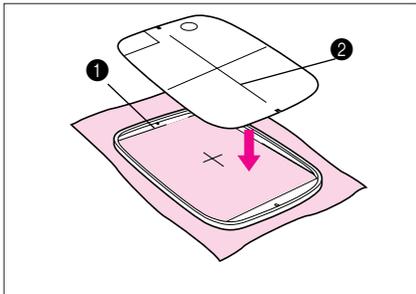

3. Place the embroidery sheet into the inner frame, while matching lines on the sheet with mark on fabric.

* For best results lay the outer frame on a flat table surface and lay the fabric on top of it.

- ① Inner frame
- ② Standard line

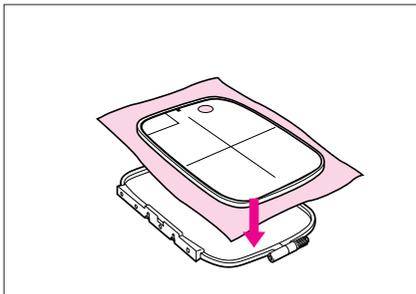


4. Press down into the outer frame so that the mark doesn't move out of place.

- ① Outer frame
- ② Inner frame
- ③ Surface of fabric




* Press down firmly until the outer frame and inner frame are at the same height.

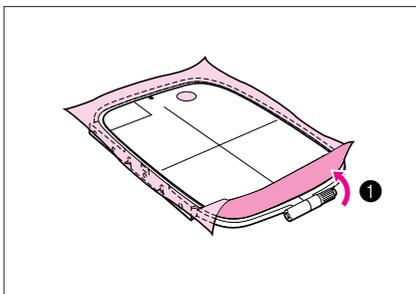

5. After the fabric is clamped between the inner and outer frame tighten the adjusting screw by hand.

- ① Tighten

* To avoid stripping the screw, do not use a screwdriver to tighten.

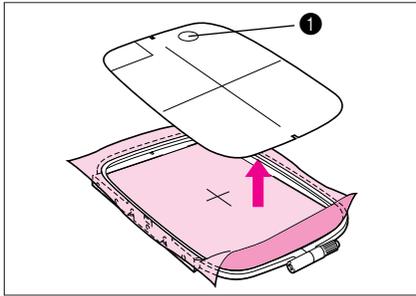


6. Remove the embroidery sheet before starting to embroider.


① Hole for removing

Fitting the embroidery frame to the embroidery unit

Be sure to wait until the embroidery unit has finished initializing before fitting the embroidery frame. (Refer to page 102.)

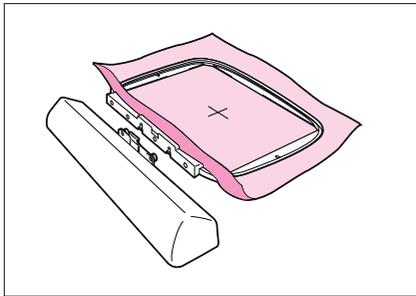

1. Raise the presser foot to its highest position. Then pass the embroidery frame under the presser foot with the mounting bracket on the left side and the fabric right side up.

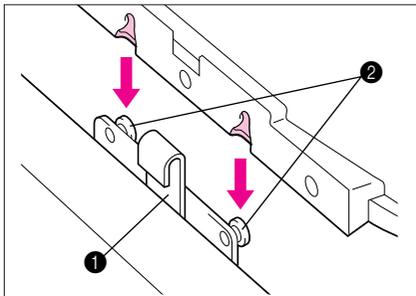


2. Align the two pins on the embroidery unit frame holder with the mounting bracket on the frame, and then press the frame into the embroidery unit frame holder until a click is heard.

① Embroidery arm frame holder

② Pins

* Be sure to insert both pins. If only the forward or the back pin is inserted, the pattern may not turn out correctly.

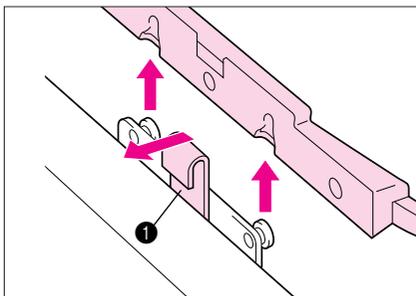


Removing the embroidery frame

While pushing the lever of the embroidery frame holder to the left, lift the embroidery frame up to remove it.

① Lever


Embroidering

Example:

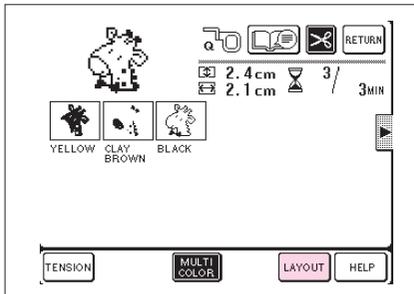


1. Select the desired pattern.
The order of sewing for each part will be displayed.

* The color displayed below each pattern is for reference. Some parts may not have a color displayed below them; you can sew these parts with any color you like.

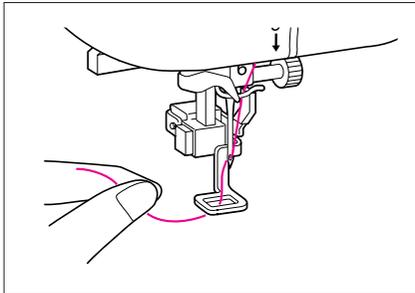

2. Thread the needle for the first color and pass it through embroidery foot "Q". Hold this thread in your left hand while leaving a certain amount of slack in the thread.


* Be sure to raise the presser foot lever before threading the needle.

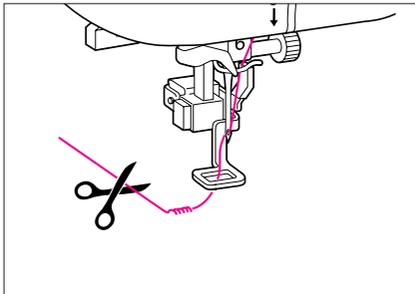


3. Lower presser foot lever and start embroidering. After 5 to 6 stitches have been sewn, stop the sewing machine and cut off any surplus thread from the end of the seam.

* If you are using the embroidery unit, the foot controller cannot be used at this time.


* Sewing can start even if "  " is being displayed.

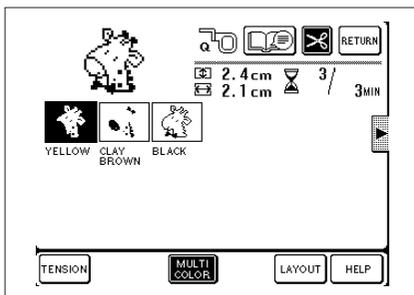

4. Start the sewing machine once more.
The part indicated by (1) in the illustration will be embroidered and the sewing machine will then stop automatically. Once embroidering is completed, the display will automatically move to the left and the next color to be embroidered will be displayed at the left edge of the screen.

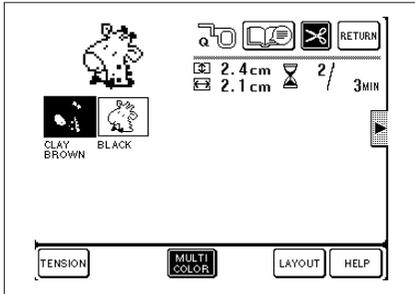


5. Replace the upper thread with the thread for the second color, and then start the sewing machine again. After the part indicated by (2) has been embroidered, the sewing machine will once more stop automatically.

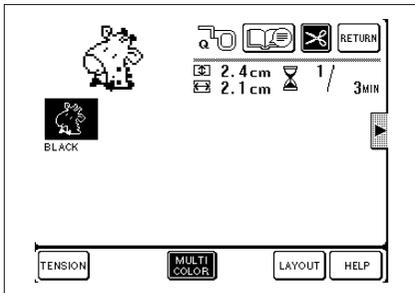


6. Replace the upper thread with the thread for the third color, and then start the sewing machine again. After the part indicated by (3) has been embroidered, the sewing machine will once more stop automatically. The display will return to the original condition.

7. Trim any excess thread.

Embroidering order for pattern parts

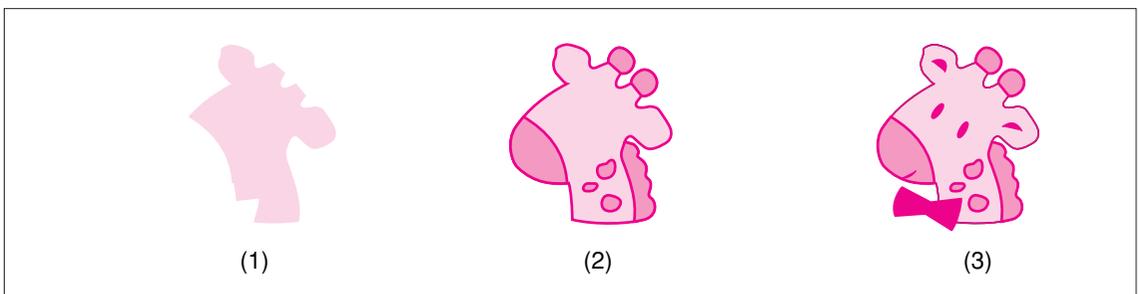


Embroidering a single color pattern when “MULTI COLOR” is displayed

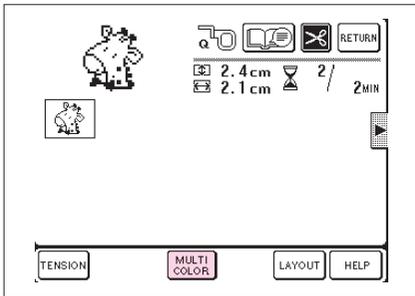


1. Touch the “MULTI COLOR” key to change to the single color mode. If the “START/STOP” button is pressed, a single color of the pattern will be embroidered and then the machine will stop automatically.
2. Trim any excess thread.

Changing the stitch density for characters and some frame patterns

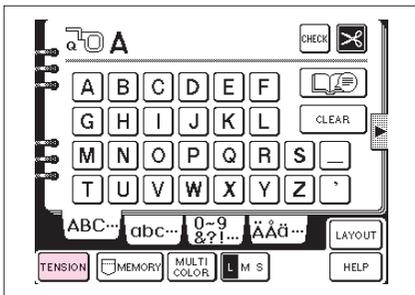

The stitch density adjustment is not available for all patterns. Patterns other than the characters and some frame patterns are not adjustable.


1. Touch the “TENSION” key.

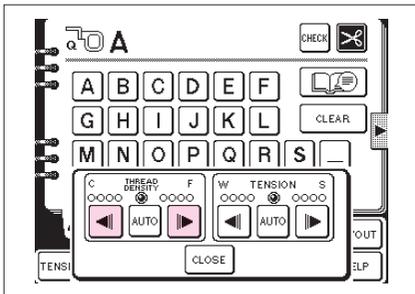


2. The stitch density will become further apart (coarser) each time the “◀” key is touched. The stitch density will become closer together (finer) each time the “▶” key is touched.

- ① AUTO
- ② Fine (stitches closer together)
- ③ Coarse (stitches farther apart)


* The normal setting is standard.

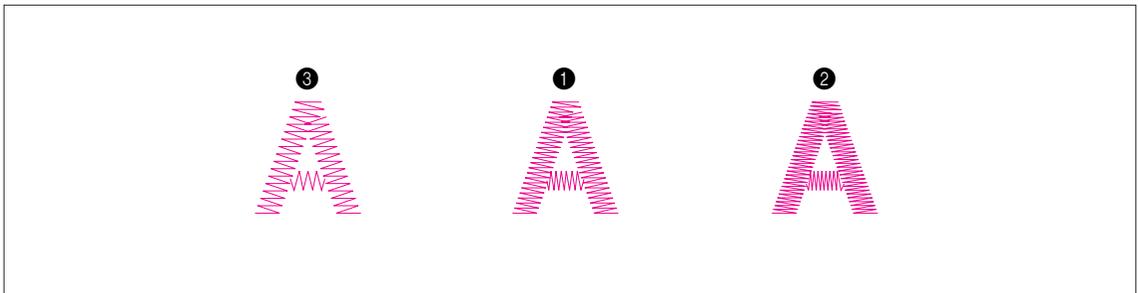

MOVING THE LOCATION (LAYOUT)

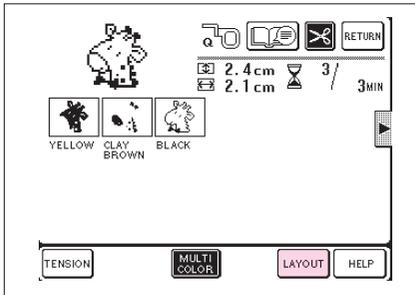

The position for embroidering the pattern can be changed by touching the “LAYOUT” key. This is useful if you want to embroider a pattern somewhere such as in the corner of the fabric or if you want to align a pattern away from the center of the embroidery area of the frame.

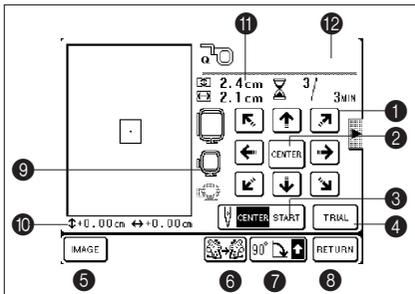

Touch the “LAYOUT” key. The layout screen will be displayed.

- ① Touch these keys to move the embroidering position within the embroidery area.
- ② If you touch this key, the embroidering position will be returned to the center of the embroidery area.
- ③ This moves the needle position to the middle of the pattern or to the sewing start position, etc. Use it when you would like to set the embroidering position.
- ④ If you touch this key, the embroidery frame will move so that you can check the embroidering position.
- ⑤ If you touch this key, the pattern image will be displayed.
- ⑥ If you touch this key, the pattern will be reversed horizontally. This function cannot be used with some patterns.
- ⑦ Touch this key to rotate the selected pattern in 90° steps.
- ⑧ If you touch this key, the display will change from the layout screen back to the original screen.
- ⑨ This displays the different types of embroidery frames that can be used. (The frames that can be used will be shown in solid color, and the frames that cannot be used will be grayed out.)

CAUTION

Do not use any embroidery frames other than those shown here, otherwise injury could result.


- ⑩ This shows the distance from the center when the embroidering position has been moved.
- ⑪ Indicates the current pattern size.
- ⑫ If a character has been selected, this shows details about the character.

Moving the embroidery location



CAUTION


After a pattern has been moved, check the display to see which embroidery frames can be used. If an embroidery frame which is not displayed is used, the embroidery foot may touch the frame, or personal injury may result.

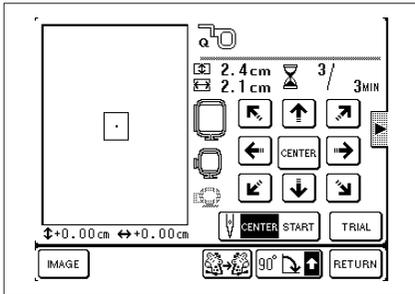

1. Touch the arrow key that for the direction in which you would like to move the pattern. The embroidering position will then move.

① Shows the distance from the center position

- * If you touch the "CENTER" key, the embroidering position will return to the center.
- * Use the hole on the embroidery foot as a guide, and never lower the needle while it is moving.

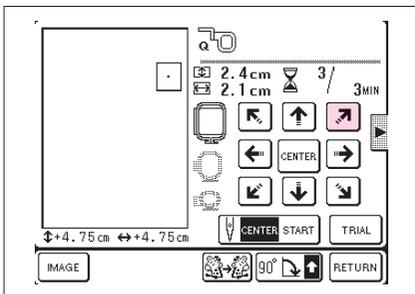


Example: To move the embroidering position to the upper right

Touch the "↗" key.

Checking the embroidering area


TRIAL

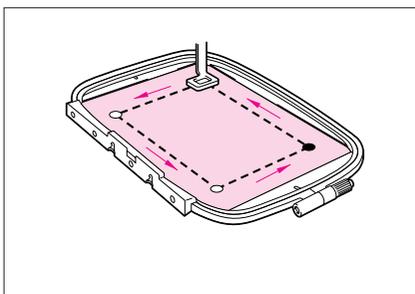

If the "TRIAL" key is touched, the embroidery frame will move and the presser foot will trace the embroidering area to be used for the currently selected pattern and size.

- * Do not lower the needle. Use the hole of the presser foot as a guide instead.



Embroidering from a specific starting point

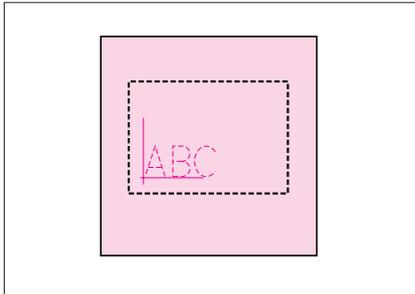

CAUTION


After a starting position has been rotated, check the display to see which embroidery frames can be used. If an embroidery frame which is not displayed is used, the embroidery foot may touch the frame, or personal injury may result.

1. Make a mark at the starting position on the fabric in the frame as shown in the illustration. The mark cannot be too close to the edge of the frame as the presser foot prevents the needle from getting very close to the frame.
2. Touch the “” key. The needle will move to the starting position. (The embroidery frame will move.)

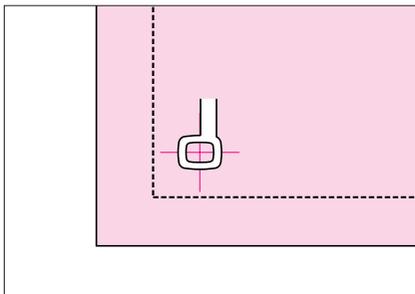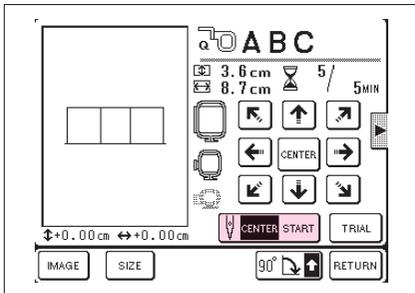

3. Use the arrow keys to align the mark with the hole in the embroidery foot, and then start embroidering.

Changing the pattern direction

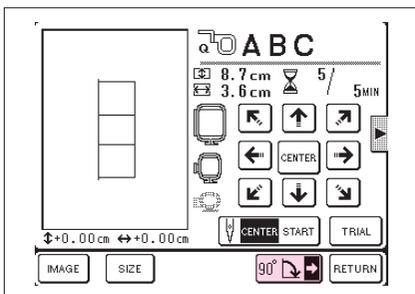


The pattern will be rotated clockwise in 90° steps as shown in the illustration at left each time the “” key is touched.


- * Some patterns may be too long to be rotated 90°. In such cases, the patterns can be rotated by 180° only.

CAUTION

After a pattern has been rotated, check the display to see which embroidery frames can be used. If an embroidery frame which is not displayed is used, the embroidery foot may touch the frame, or personal injury may result.

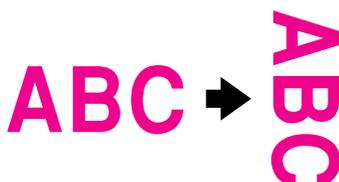

Reversing patterns

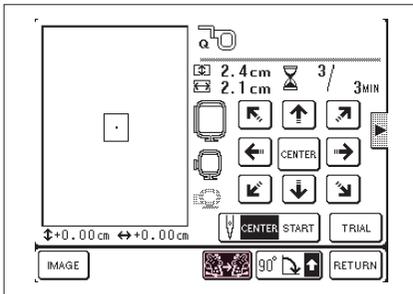


1. Touch the “” key to reverse the pattern horizontally.

- * If the “” key appears on the display in reverse mode, it indicates that the pattern has been reversed horizontally showing a mirror image.
- * The “” key will not be displayed for some patterns.

Using the “IMAGE” key


IMAGE

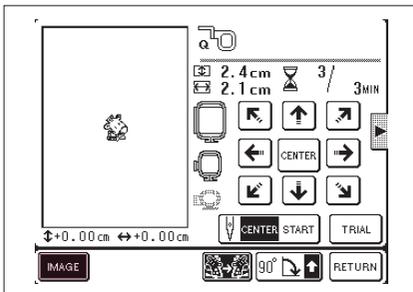


1. If you touch the “IMAGE” key, a scale showing the size of the pattern will be displayed.

- * If you touch this key once more, the display will return to the original screen.

You can change the size of character and frame patterns to any size you wish.

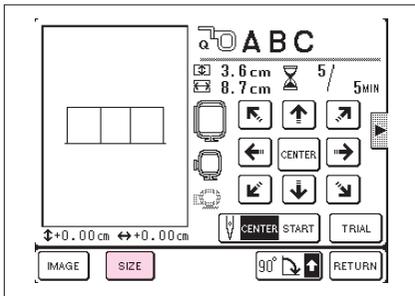


1. Touch the "SIZE" key.

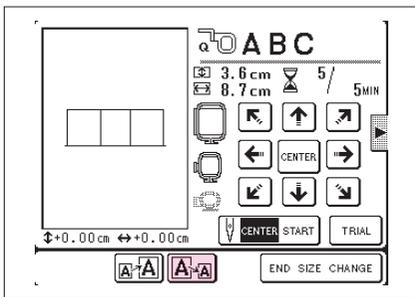

2. To increase the pattern size, touch the "**A↑A**" key; to reduce the size, touch the "**A↓A**" key. The size will change each time one of these keys is pressed.

- * The maximum frame pattern size is different for each pattern.
- * Some frame patterns can be enlarged further if they are rotated 90°.

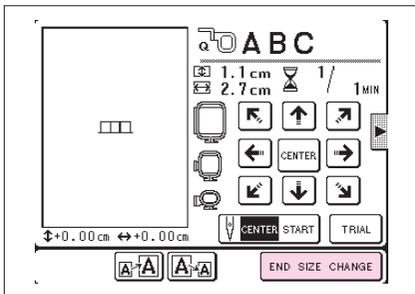

3. After adjustment is completed, touch the "END SIZE CHANGE" key.


CAUTION

After the size of a character or frame pattern has been changed, check the display to see which embroidery frames can be used. If an embroidery frame which is not displayed is used, the embroidery foot may touch the frame, or injury may result.

ADJUSTMENTS DURING THE EMBROIDERY PROCESS

If the thread breaks during embroidering


HELP

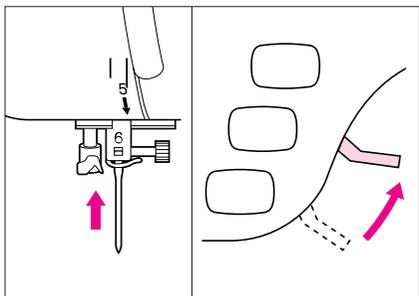

1. Stop the sewing machine, raise the needle and the presser foot lever and re-thread the upper thread.


If the bobbin thread has broken

- 1 Cut the upper thread and remove the embroidery frame.
- 2 Check the under side of the embroidery for any thread build-up, clean.
- 3 Reset the bobbin thread and re-attach the embroidery frame.

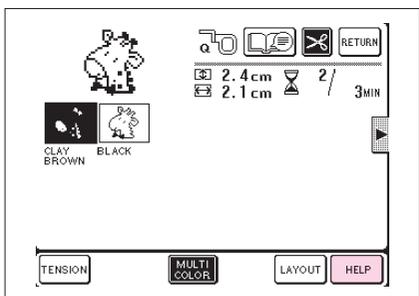

2. Touch the "HELP" key.

- ① The needle will return to the start position for the whole pattern.
- ② The needle will return to the start position for the color (or character) currently being embroidered (without embroidering).
- ③ The needle will proceed to the start position for the next color (or character) to be embroidered (without embroidering).
- ④ The needle will move back one stitch (without embroidering). If this key is touched continuously, the needle will move back in jumps of 17 stitches starting from the 6th stitch.
- ⑤ The needle will move forward one stitch (without embroidering). If this key is touched continuously, the needle will move forward in jumps of 17 stitches starting from the 6th stitch.
- ⑥ The display will return to the original screen (sewing screen).

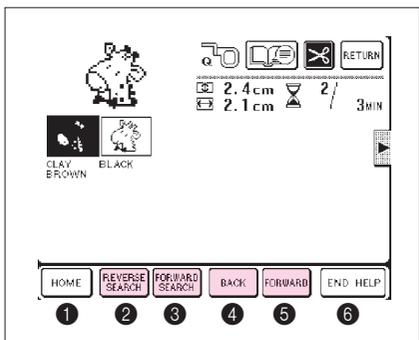

3. Touch the "BACK" key to move back a short way past the point where the thread broke.


* If the machine stops moving backward before you reach the point where you need to resume embroidering, touch the "REVERSE SEARCH" key and the "FORWARD" key. When you reach the point at which you would like to resume embroidering press the "START/STOP" button.

4. Lower the presser foot lever and start embroidering.

* The "START/ STOP" button may not function for a few seconds after the "FORWARD SEARCH" or "REVERSE SEARCH" key is touched, however this is not a sign of a malfunction.

Continuing a pattern after the power has been momentarily turned off

HELP

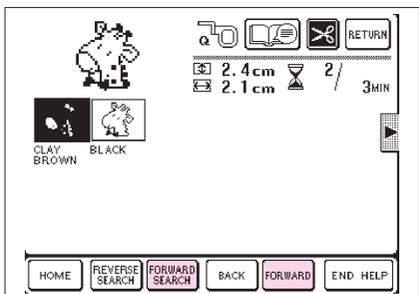


Example: Continuing to embroider halfway through the second color

1. Select the pattern and then touch the "HELP" key.
2. Touch the "FORWARD SEARCH" key to move to the start of the second color.
3. Touch the "FORWARD" key to move forward to a position slightly before the point where embroidering is to continue.
4. Lower the presser foot and start embroidering.

* When moving the embroidering position on the layout screen before continuing to embroider the pattern, move the position on the layout screen by the same amount before carrying out the above procedure.

When sewing again from the beginning

HOME

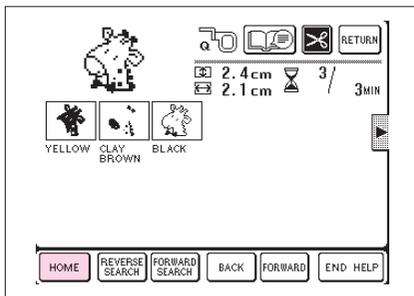


1. Touch the “HOME” key. The needle will return to the embroidery start position.
2. Lower the presser foot lever and start embroidering.

EMBROIDERY APPLICATIONS


Linking characters

Use this feature when the characters cannot be sewn all at once.

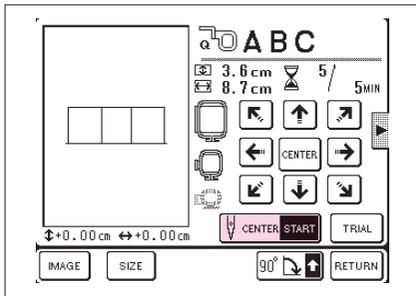

Example: Embroidering ABC, then linking DE


1. Touch “A”, “B”, and “C”, touch the “LAYOUT” key to move the needle to the center position, and then touch the “” key.

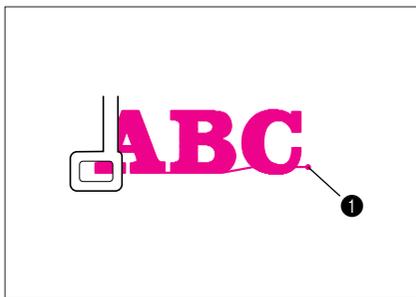


2. Press the “START/STOP” button and start embroidering. Once embroidering is completed, move the fabric to the position where “DE” is to be embroidered.

① The embroidery end position

* Match the line of embroidery with reference lines on the embroidery sheet that fits the frame you are using.

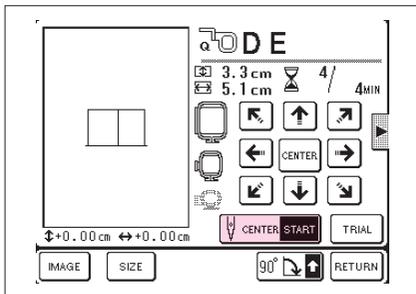


3. Select “DE”, then touch the “LAYOUT” key, and touch the “” key to highlight START.

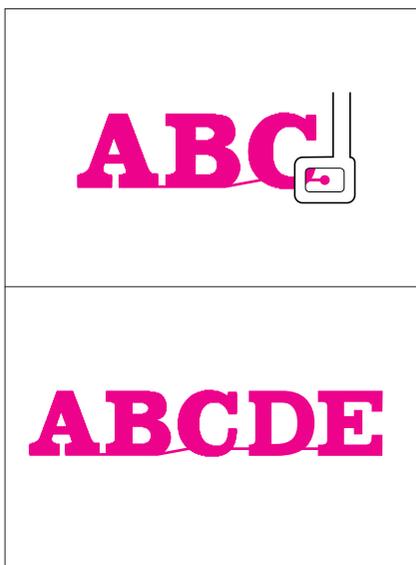

4. Use the arrow keys to move the needle to the embroidery end position for “ABC”.


5. Press the “START/STOP” button and start embroidering.

Embroidering appliques (using a frame pattern)

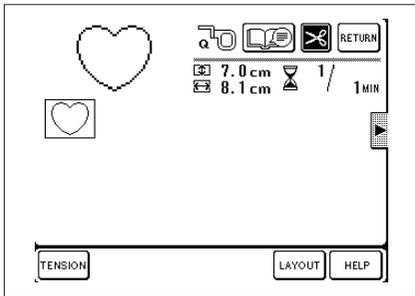


You can use frame patterns with the same shape and size to sew appliques.


1. Select the applique material for the project, attach a stabilizer material, place it into the embroidery frame and attach the embroidery frame to the machine.

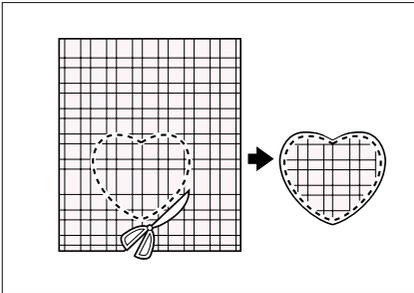

2. Select the frame shape to be embroidered and select the “” stitch. Embroider onto the applique material. Remove the fabric from the embroidery frame. Cut neatly around the outside of the shape made by the stitches.

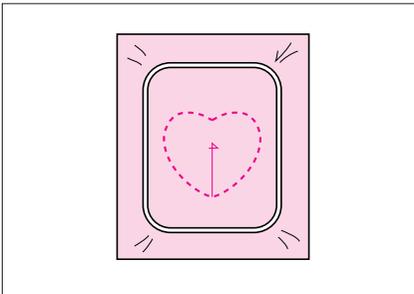


3. Embroider a base fabric in the same way using the same frame pattern shape and the “” stitch as in step 2.

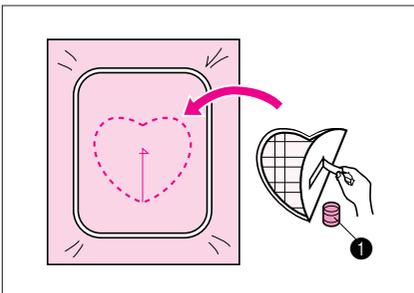


4. Apply a thin layer of fabric glue to the rear of the applique material which is created in step 2, and then attach it to the base fabric so that it follows the frame shape just stitched.


① Fabric glue

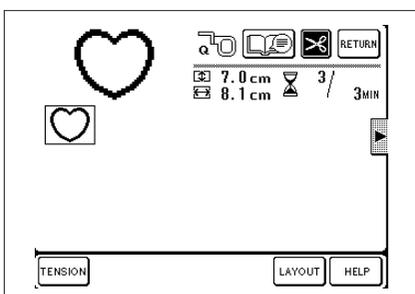

5. Without changing the frame shape or size, select the “” stitch, and use it to embroider the applique material onto the project.

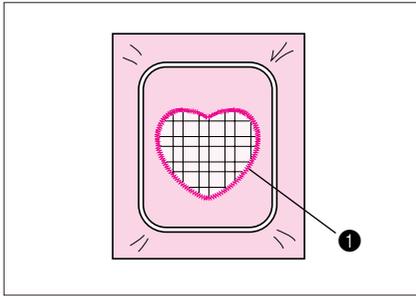


1 Satin stitch “1”

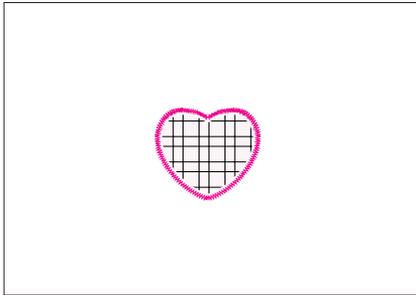

Finished applique on the project


Embroidering onto small pieces of fabric or onto corners

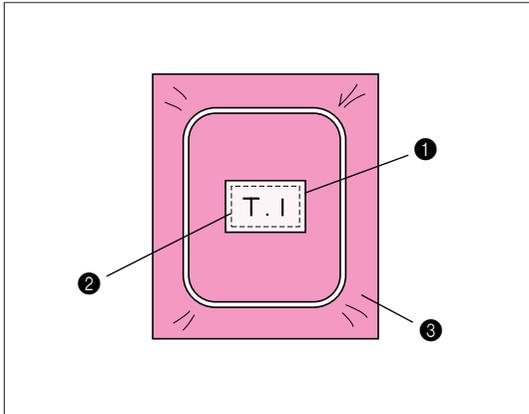

Use stabilizer fabric to provide extra support while embroidering. After embroidering is completed, remove the stabilizer fabric carefully. Use stabilizer fabric which is designed specially for embroidering.


Case A

- 1 Fabric
- 2 Attach the stabilizer fabric by ironing. (If you do not wish to iron, attach the stabilizer fabric with a basting stitch.)
- 3 Stabilizer

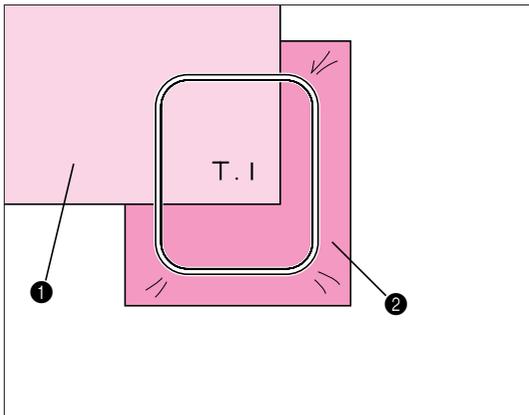

Case B

- 1 Fabric
- 2 Stabilizer

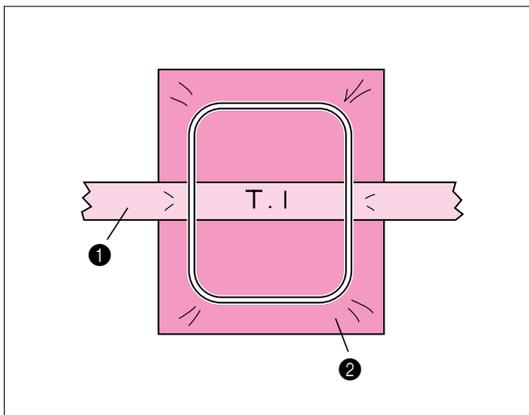

Case C

- 1 Ribbon (Secure with double-sided tape)
- 2 Stabilizer

5. EDITING EMBROIDERY PATTERNS

EDITING FUNCTION

The editing function for embroidery patterns lets you change aspects of the pattern layout by rotating and moving the pattern within an 18 cm long × 13 cm wide embroidery area.

The following pages show how you can use the “EMBROIDERY EDIT” key to combine characters and patterns and how to combine two or more patterns to create your own original patterns.

One-point pattern and frame pattern combinations



One-point pattern and character combinations



One-point pattern, frame pattern and character combinations




* You can create other interesting pattern combinations using the patterns on the embroidery cards (option).

Explanation of functions


Pattern movement

The pattern can be moved around inside an 18 cm long × 13 cm wide embroidery area.

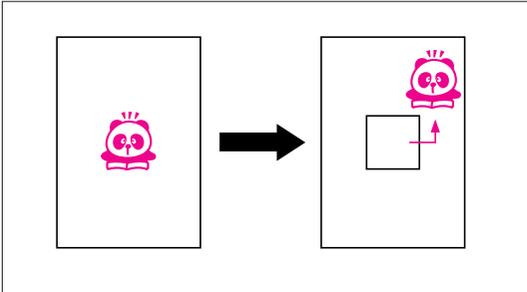


Pattern rotation

Patterns can be rotated in steps of 90°.

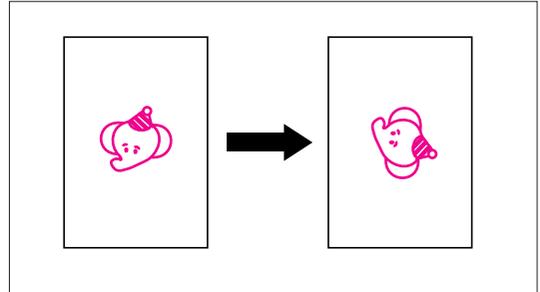


Character spacing adjustment

The spacing between characters can be increased and decreased.

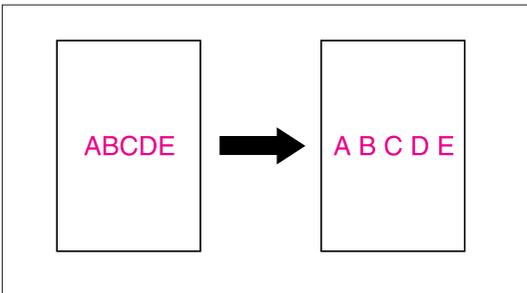


Horizontal pattern reversing

The patterns can be reversed horizontally (not applicable for all patterns).

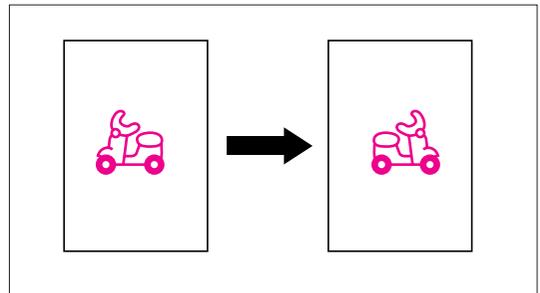


Character and frame pattern size adjustment

The sizes of characters and frame patterns can be changed.

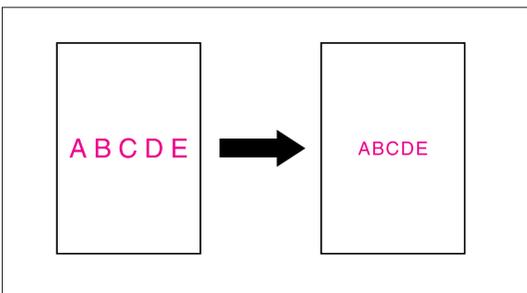


Pattern deletion

A pattern which had been edited can also be deleted.

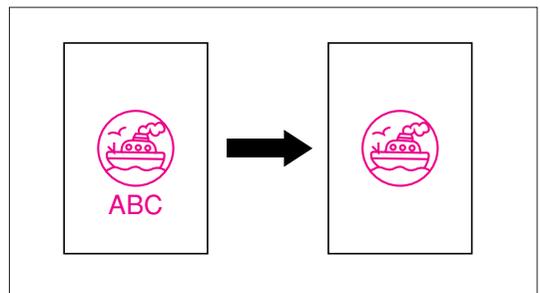


EXAMPLE OF PATTERN EDITING

The following example shows how a one-point pattern, a frame pattern and characters can be combined to create the “” pattern.


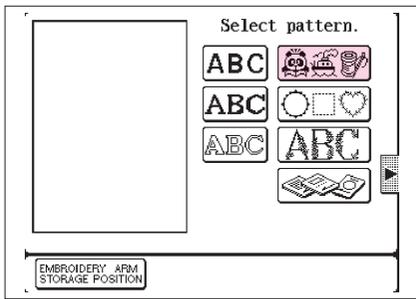


1. Attach the embroidery unit, and then carry out the preparation before sewing. (Refer to pages 100 to 102.)
2. Touch the “EMBROIDERY EDIT” key.
The types of patterns which can be edited will be displayed.
3. Touch the “” key.

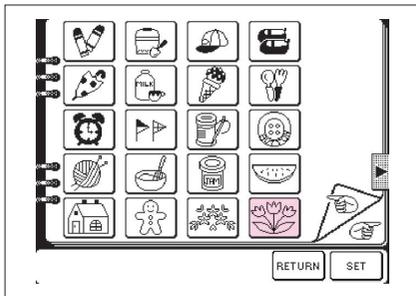


4. Touch the “” key on the second page, and then touch the “SET” key.

- 1 This moves the sewing position in the direction of the respective arrow. (Refer to page 132.)
- 2 If you touch this key, the embroidering position will be returned to the center of the embroidering area.
- 3 This key deletes the pattern which is being edited. (Refer to page 134.)
- 4 This key is used to switch to another pattern to be edited. (Refer to page 137.)
- 5 If you touch this key, the pattern will be reversed horizontally. This function cannot be used with some patterns.
- 6 This key can be used to rotate patterns clockwise in steps of 90°. (Refer to page 133.)
- 7 Touch this key to move to the next step.

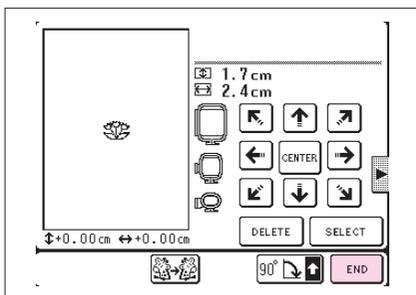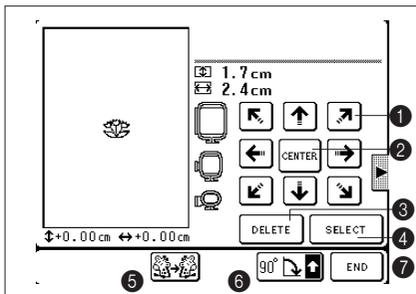


5. The pattern selected will be displayed in the center of the embroidery area.
Touch the “END” key.

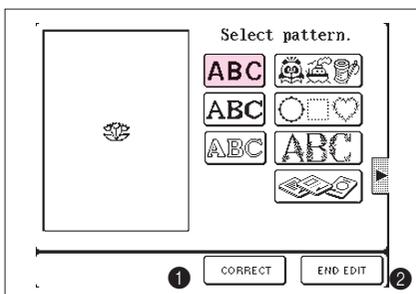


6. The pattern will stay displayed. Now select the characters.
Touch the “ABC” key.

- 1 Touch this key to correct the edited pattern.
- 2 Touch this key after editing has been completed.

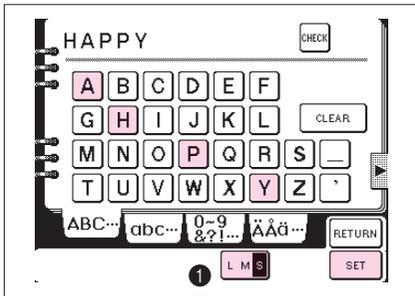


7. Touch the “**L M S**” key so that the “S” is selected to set the character size, and then touch the “H”, “A”, “P”, “P” and “Y” keys followed by the “SET” key.

① Changes the size of patterns.

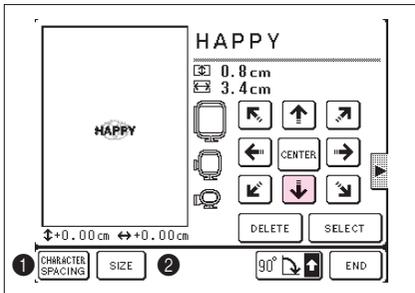


8. Touch the “**↓**” key to move the word “HAPPY” down so that it is in balance with the flower.

① Increases or decreases the spacing between characters.
 ② Changes the size of characters.

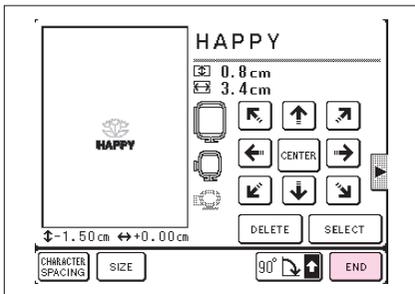


9. Once you have finished moving the word “HAPPY”, touch the “END” key.

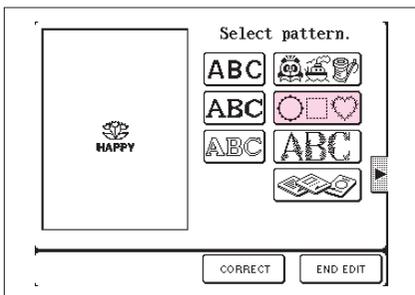


10. Select the frame pattern.


Touch the “**□○♥**” key.

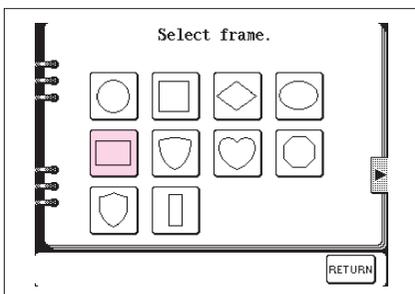


11. Select the frame pattern.

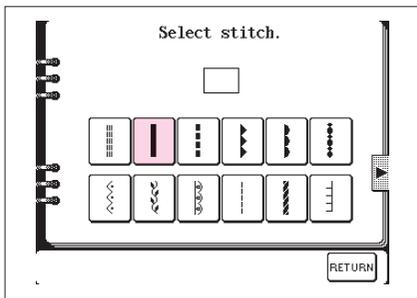


12. Touch the stitch key. The “” will be appeared.

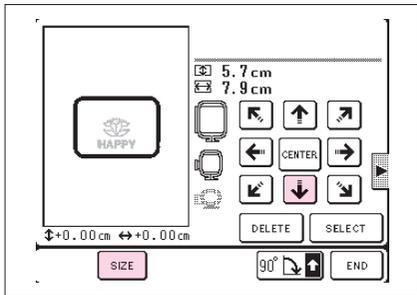


13. Touch the “SIZE” key and then decrease the size of the frame so that it encloses the pattern. Move the pattern with the “” key.

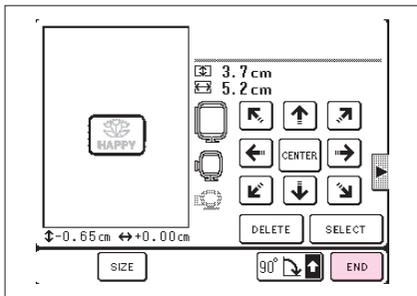

14. Touch the “END” key.

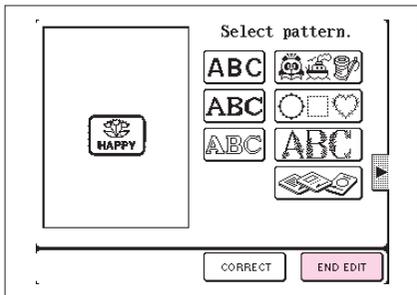


15. This completes the editing. So now touch the “END EDIT” key. The display will then return to the sewing screen.

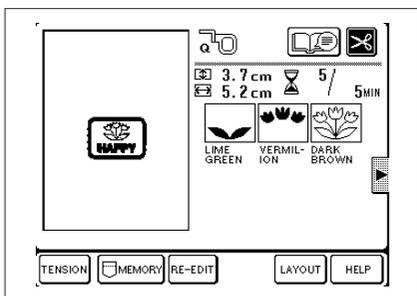

* Refer to page 136 for details on sewing patterns.


Moving the sewing position

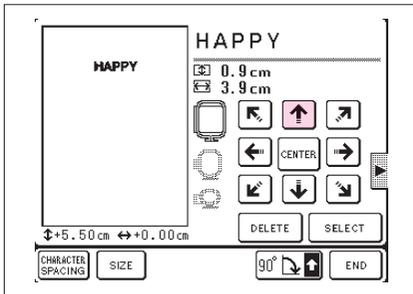


Touch the arrow key which points in the direction in which you would like to move the sewing position. The arrow will move on the screen.

Changing the character spacing

CHARACTER SPACING

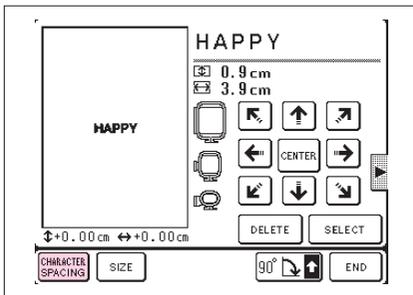


1. Touch the "CHARACTER SPACING" key.

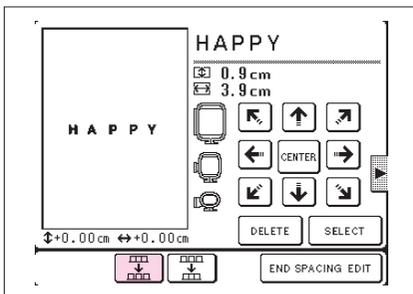


2. Touch the "END SPACING EDIT" key if you would like to increase the character spacing. Touch the "END SPACING EDIT" key if you would like to decrease the character spacing. Once you have changed the character spacing, touch the "END SPACING EDIT" key.

Changing the sizes of characters and frame patterns

SIZE

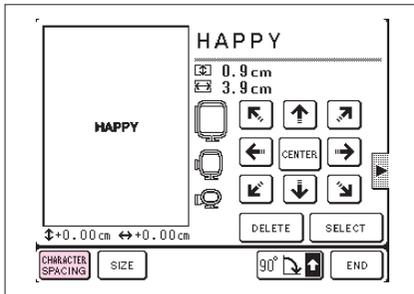


1. Touch the "SIZE" key.

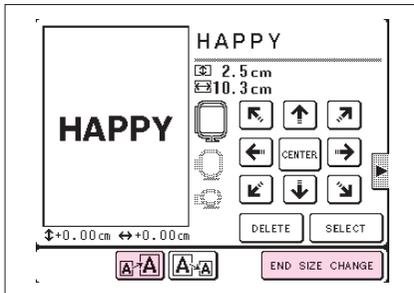

2. Touch the "A+A" key if you would like to increase the size.

Touch the "A-A" key if you would like to decrease the size. Once you have changed the size, touch the "END SIZE CHANGE" key.

Rotating patterns

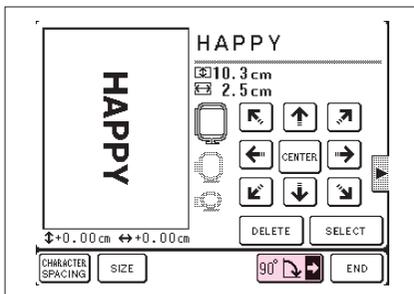


Touch the "90°" key.

The pattern will be rotated 90° clockwise. The direction of the arrow indicates the direction of rotation.

- * Some frame patterns can be enlarged further if they are rotated 90°.
- * If tall characters and patterns have been moved, they may be too long to be rotated 90°. In such cases, they can be rotated by 180° only.

Reversing patterns horizontally

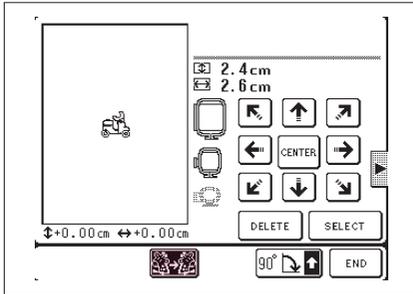


When a one-point pattern is selected, the “” key will be displayed.

Touch the “” key. The pattern will then be reversed.


* This is also known as mirror imaging. Not applicable for all patterns.

Deleting patterns


DELETE

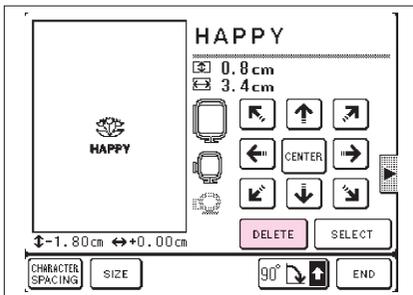

Touch the “DELETE” key.
The current pattern will then be deleted.

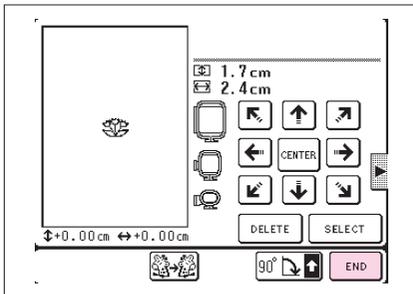


Editing a memory card pattern

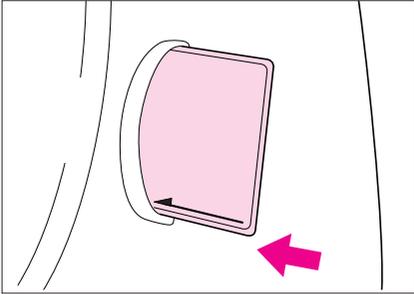

When editing a memory card pattern, be sure to insert and remove the memory card only while the “” key is being displayed.


1. Hold the memory card so that the arrow is facing toward you, and then insert it all the way into the slot on the right side of the sewing machine.

* Do not insert the card in any direction other than that described above, and do not force it into the slot, otherwise the card or the slot may become damaged (Refer to page 107).

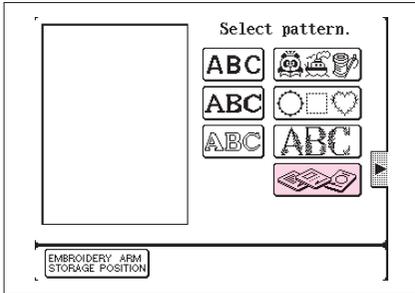


2. Touch the “” key.

The memory card pattern selection screen will be displayed. (The illustration at left shows the Transportation card No. 12 (SA312, XA00275-001) (option).)

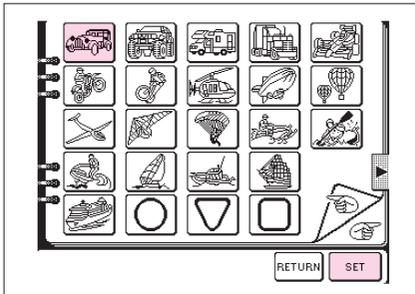

3. Select the desired pattern.

* For an example of the editing procedure, refer to pages 129 to 131.

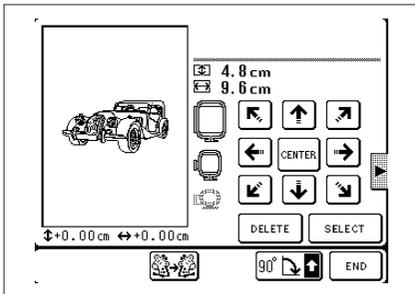


EMBROIDERING AN EDITED PATTERN

Be sure to read the “Sewing” section in the “EMBROIDERY” chapter of this manual before carrying out embroidery.

CAUTION


If using the medium or small embroidery frame, be sure to check the display on the layout screen (refer to page 116) before doing any embroidering. If an incorrect embroidery frame is used, the embroidery foot may touch the frame, or injury may result.

The pattern parts will be embroidered in the order that they were selected. Thus the order in this case will be the one-point pattern and “HAPPY”, followed by the frame pattern.

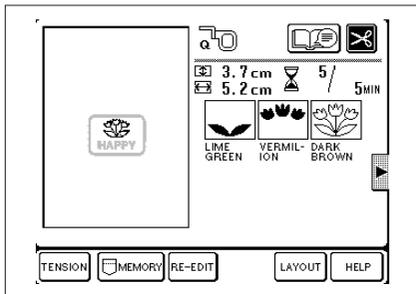


1. Touch the “END EDIT” key. A screen such as the left will be displayed. First, embroider the one-point pattern. Embroider in the order shown by the color changes.

* For details on how to carry out embroidering, refer to pages 113 to 114.

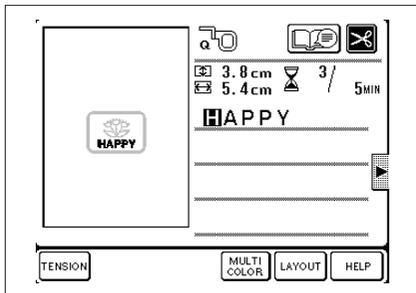

2. Once embroidering is completed, a screen such as the left will be displayed. Now embroider the word “HAPPY”.


* If the “MULTI COLOR” key is touched, the sewing machine will stop after each character is embroidered, so that you can sew each character in a different color.

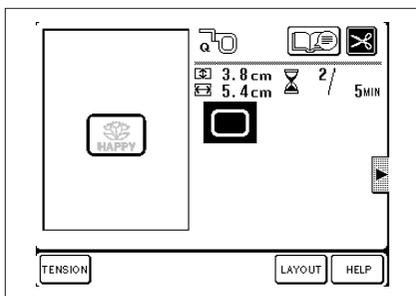


3. Once embroidering is completed, a screen such as the left will be displayed. Lastly, embroider the frame pattern.

MODIFYING AN EDITED PATTERN

Modifying one pattern while editing a different pattern

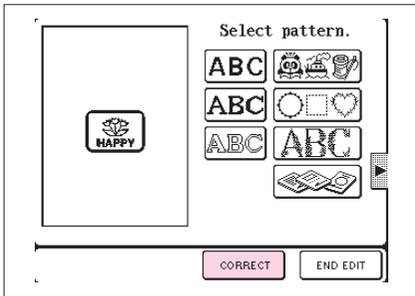


- * If the screen display is as shown at left, touch the "CORRECT" key. The display will then return to the editing screen.

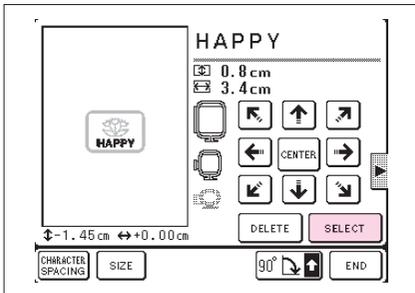

Example: Changing the size of the characters while editing the frame


1. Touch the "SELECT" key and select the characters. Refer to page 120 for details on how to change the character size.

- * The currently-selected pattern will appear darker than the other patterns.

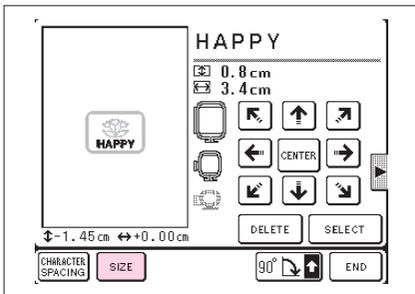

2. Touch the "SIZE" key and then change the size.

- * If you would like to continue editing other patterns, touch the "SELECT" key once more.

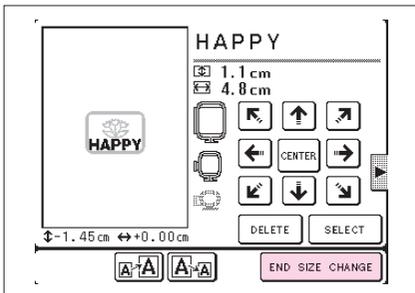


3. Once you have finished correcting the pattern, touch the "END SIZE CHANGE" key.


Correcting a pattern after editing is finished

Example: Changing the character spacing


1. Touch the “RE-EDIT” key.

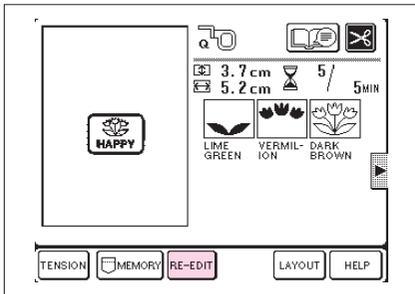

2. Touch the “CORRECT” key.
The display will return to the editing screen.

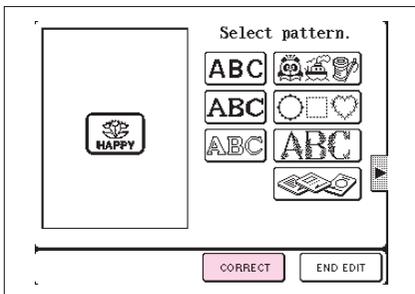


3. Touch the “SELECT” key and select the characters.

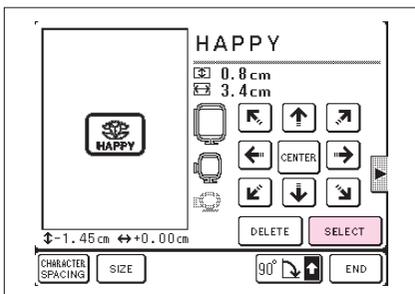


4. Touch the “CHARACTER SPACING” key and change the character spacing. Refer to page 132 for details on how to change the character spacing.


* If you would like to continue editing other patterns, touch the “SELECT” key once more.

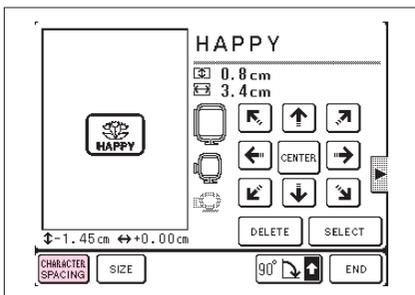

5. Once you have finished correcting the pattern, touch the “END SPACING EDIT” key.

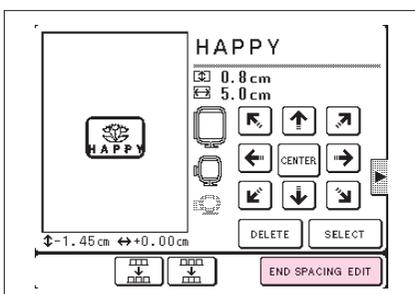


SAVING A PATTERN COMBINATION TO MEMORY

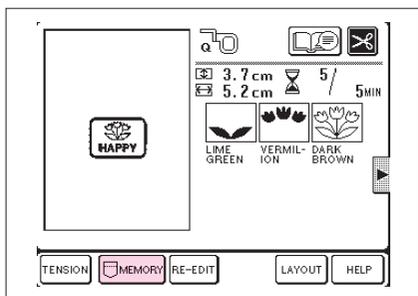

You can save up to 12 patterns in the memory. However, if some of the patterns contain large amounts of data, it may not be possible to save the whole 12 patterns.


1. Touch the “”key.

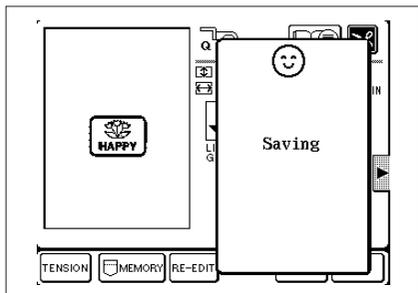

2. The word “SAVING” will appear on the screen. After the pattern is saved, the display will return to the original screen.


Refer to page 141 for details on how to retrieve characters and patterns which have been saved to memory.

* Do not turn off the power while the word “Saving” is displayed on the screen. If you turn off the power during this time, the data being saved may be deleted.

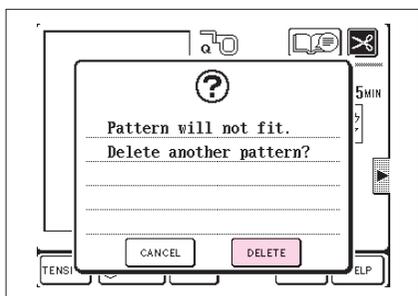

If no more patterns can be saved


There are already 12 patterns in the memory. The data currently stored has filled the entire memory area. To delete a pattern that is already saved in the memory, touch the “DELETE” key. To cancel the saving of a pattern, touch the “CANCEL” key.

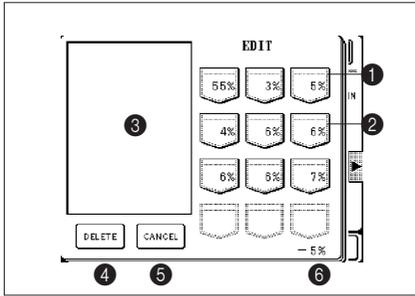


Deleting a stored pattern

1. If you touch the “DELETE” key, a screen such as the left will be displayed.

- ① This indicates a pocket which has a pattern saved in it.
- ② This indicates the amount of data in the pattern.
- ③ This displays the pattern which is saved in that pocket.
- ④ Touch this key to delete a saved pattern.
- ⑤ Touch this key to cancel the deleting of a pattern.
- ⑥ This indicates how much data space is needed.

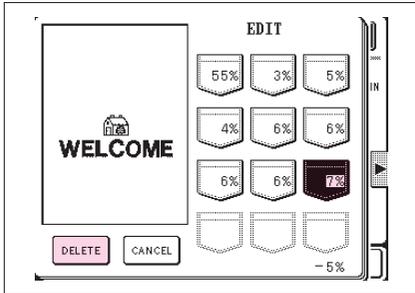


2. Touch the pocket to select the pattern to be deleted, and then touch the “DELETE” key.

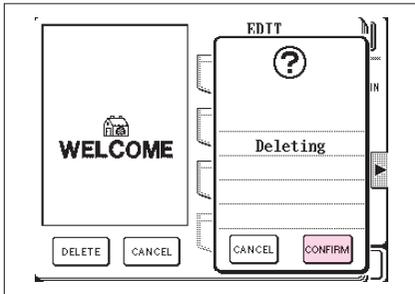

3. Touch the “CONFIRM” key.
If the amount of space needed becomes enough, then the new pattern will be saved automatically. If there still is not enough space to save the pattern, repeat the above procedure to delete another pattern.


* To cancel the deleting of a pattern, touch the “CANCEL” key.

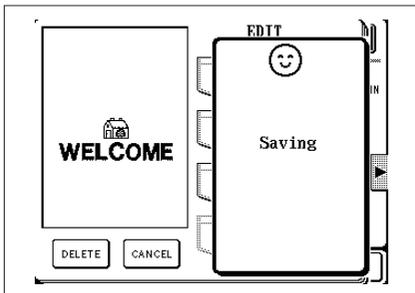

* Do not turn off the power while the word “Saving” is displayed on the screen.
If you turn off the power during this time, the data being saved may be deleted.

6. RETRIEVING

RETRIEVING CHARACTERS AND PATTERNS

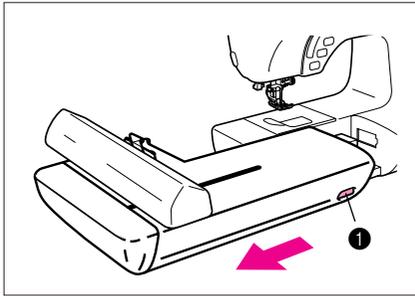

This machine has three memory function areas; one is found on the sewing side of the machine and the other two are found on the embroidery side of the machine. Sewing function: saves a variety of characters, patterns, decorative stitches and designs from MY CUSTOM STITCH™ (Function for making own stitch). Embroidery function: saves characters and memory card patterns when using the embroidery or embroidery edit function.



Preparation:

Remove the embroidery unit if retrieving patterns saved on the sewing side of the machine.

1 Release button


* Make sure that the power is turned off before doing this.

1. Touch the “MEMORY RECALL” key.
A screen such as the left will be displayed.
2. Touch the “CHARACTER DECORATIVE STITCH” key.

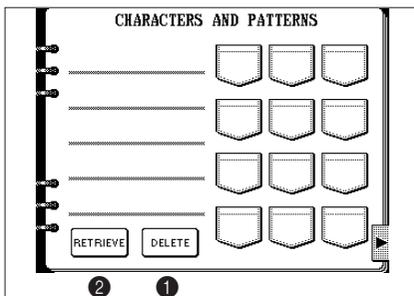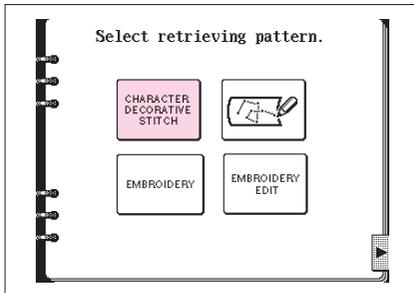


The “” symbol indicates a pocket which has a pattern saved in it. Touch the “” to display the saved pattern.

- 1 Touch this key to delete the saved pattern.
- 2 Touch this key to retrieve the saved pattern.

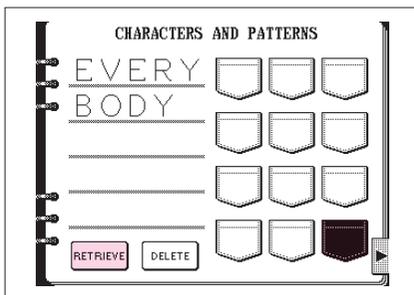


3. Touch the pocket in order to retrieve the desired patterns, and then touch the “RETRIEVE” key.

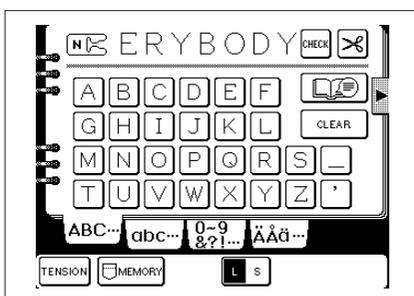

4. The patterns will then be retrieved.


RETRIEVING AN EMBROIDERY PATTERN

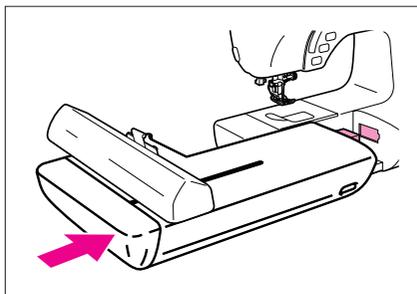


Preparation:

Attach the embroidery unit.

- * Make sure that the power is turned off before doing this.

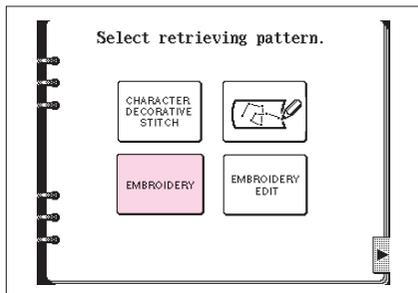


1. Touch the "MEMORY RECALL" key.
A screen such as the left will be displayed.
2. Touch the "EMBROIDERY" key.

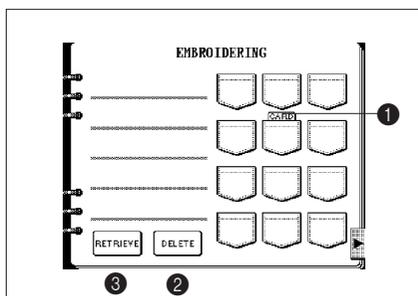

The "☐" symbol indicates a pocket which has a pattern saved in it. Touch the pocket to display the saved pattern.

- 1 The display will indicate that the patterns are saved on the memory card. Touch after inserting the memory card on which the pattern is saved.
- 2 Touch this key to delete the saved pattern.
- 3 Touch this key to retrieve the saved pattern.

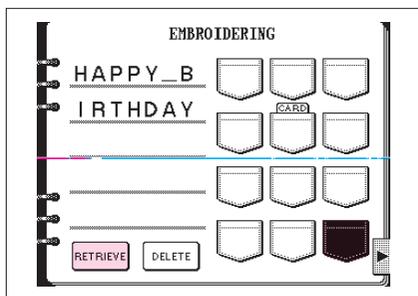


3. Touch the pockets in order to retrieve the desired patterns, and then touch the "RETRIEVE" key.



4. The characters or patterns will then be retrieved.


RETRIEVING AN EDITED PATTERN

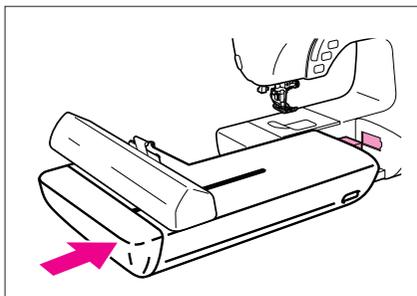


Preparation:

Attach the embroidery unit.

- * Make sure that the power is turned off before doing this.

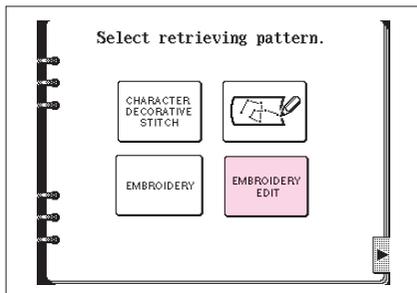


1. Touch the "MEMORY RECALL" key.
A screen such as the left will be displayed.
2. Touch the "EMBROIDERY EDIT" key.

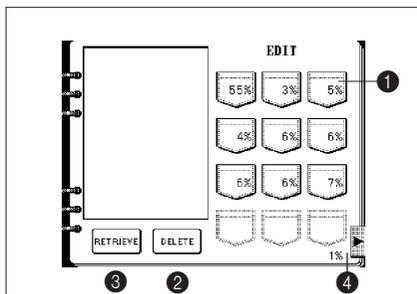


The " " symbol indicates a pocket which has a pattern saved in it. Touch the pocket to display the saved pattern.

- ① The numbers indicate the amount of data for each pattern.
- ② Touch this key to delete the saved pattern.
- ③ Touch this key to retrieve the saved pattern.
- ④ This indicates how much data space remaining.

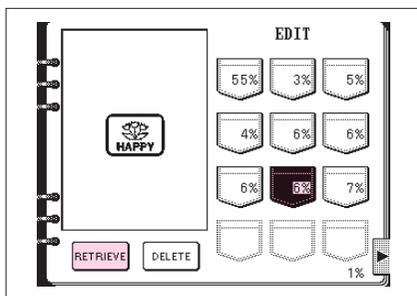


3. Touch the pocket in order to retrieve the desired patterns, and then touch the "RETRIEVE" key.

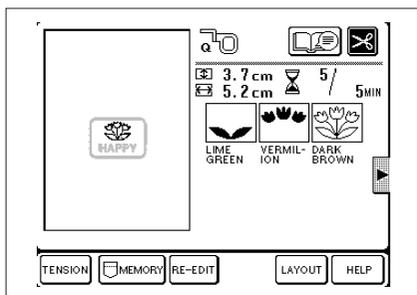

4. The patterns will then be retrieved.


- * The retrieved patterns can then be re-edited. (Refer to page 138.)

DELETING A STORED PATTERN

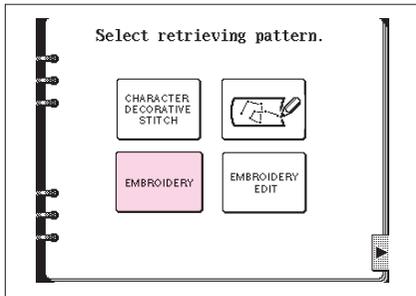


Example: Deleting an embroidery pattern

1. Press the "MEMORY RECALL" button.
2. Touch the "EMBROIDERY" key.

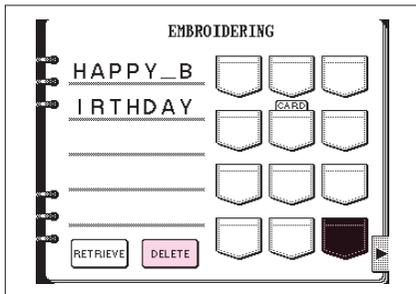


3. Touch a pocket to select the pattern to be deleted, and then touch the "DELETE" key.

* To delete a pattern which is stored inside a pocket on a memory card, that particular memory card must be inserted into the sewing machine at the time.

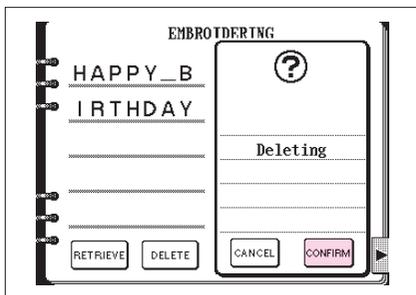


4. Touch the "CONFIRM" key.

* If you touch the "CANCEL" key, the display will return to the original screen.

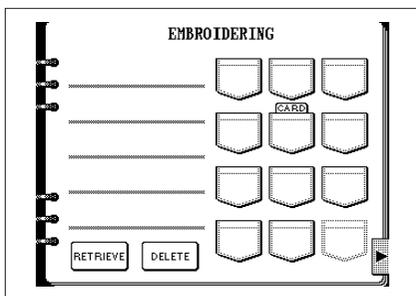

7. MY CUSTOM STITCH™ (FUNCTION FOR MAKING OWN STITCH)

MAKING THE ILLUSTRATION

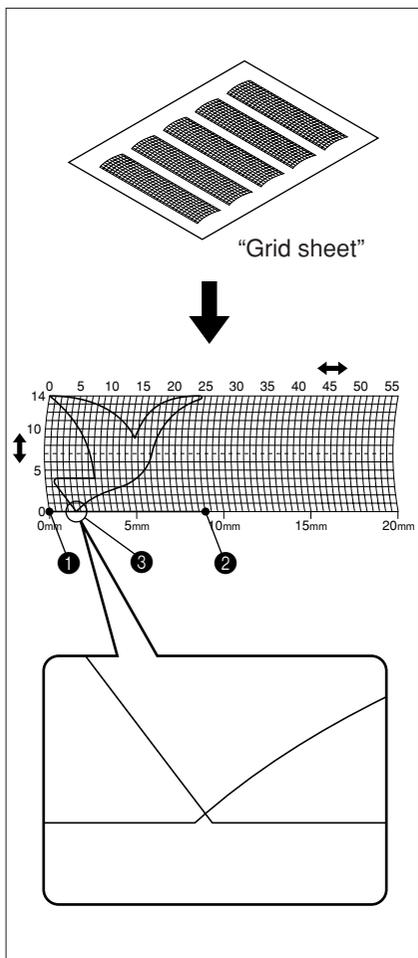


You can use the “MY CUSTOM STITCH™” (function for making own stitch) to sew patterns that you have drawn yourself.

- * Illustrations that are to be used with the “MY CUSTOM STITCH™” (function for making own stitch) can be a maximum of 7 mm wide and 33 mm long.
- * Patterns for the “MY CUSTOM STITCH™” (function for making own stitch) can be drawn more easily if you use the included grid sheet.

1. Draw the illustration onto the grid sheet (SA500, X80948-001).

- ① Start point
- ② End point
- ③ Intersection


- * Simplify the drawing so that it can be drawn as a continuous line. If sewing continuous patterns, the height of the start point and end point should be the same. You can obtain a more attractive finish if you make the intersections cross over to make a closed design.

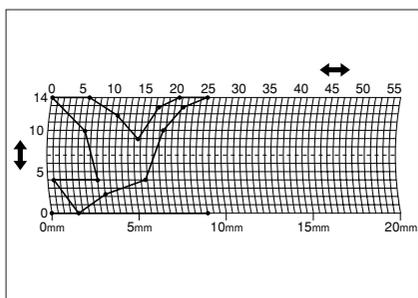


2. Mark coordinate points at each point in the pattern where the direction of the stitching changes, this will maintain the shape of the pattern as it is sewn.


	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	↔	00	12	18	22	23	21	17	14	12	09	06	03	01	03	06
	↕	00	00	03	06	10	13	14	13	11	13	14	13	10	06	03
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	↔	12	41	43	40	41	38	35	32	30	32	35	41	45	47	44
	↕	00	00	04	07	11	13	14	13	10	06	03	00	00	04	07
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	↔	45	47	50	54	56	55	51	45	70						
↕	11	13	14	13	10	06	03	00	00							

	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	↔	00	30	32	32	32	33	35	35	37	35	32	30	30	29	26
	↕	00	00	01	07	10	12	11	08	12	14	14	11	05	03	08
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	↔	24	18	13	12	13	10	12	08	12	07	12	06	10	05	10
	↕	10	13	14	14	12	11	10	09	08	06	06	03	02	00	02
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	↔	16	19	23	22	17	22	23	19	42						
↕	01	00	00	06	10	06	00	00	00							

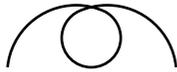	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	↔	00	03	05	08	12	17	20	24	27	29	31	32	30	27	24
	↕	00	05	08	11	13	14	14	13	12	11	09	06	03	01	00
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	↔	21	18	16	15	15	16	18	21	25	28	33	37	41	43	44
	↕	00	01	03	05	08	10	12	13	14	14	13	11	08	05	00
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	↔															
↕																

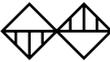	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	↔	00	05	04	05	08	07	08	11	11	11	16	11	07	04	00
	↕	07	07	03	07	07	00	07	07	03	07	07	03	00	03	07
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	↔	04	07	11	16	21	20	21	24	23	24	27	27	27	32	27
	↕	11	14	11	07	07	11	07	07	14	07	07	11	07	07	11
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	↔	23	20	16	20	23	27	32								
↕	14	11	07	03	00	03	07									

GENERATING THE DATA

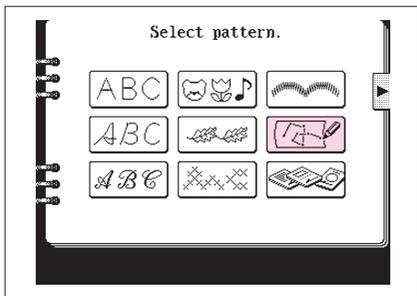


Preparation


If the embroidery unit is attached, remove.

* Turn off the power supply before removing the embroidery unit.


1. Touch the "CHARACTER/DECORATIVE STITCH" key.
2. Touch the "  " key.
The input screen will be displayed.

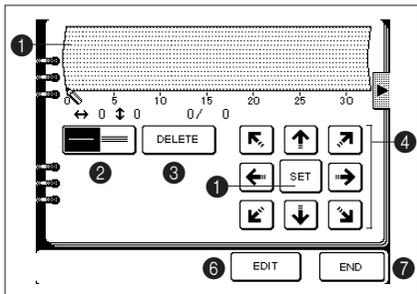


- 1 Display the pattern input area. "  " indicates the pattern width, and "  " indicates the pattern length.
- 2 Touch this key to select whether to sew one stitch or three stitches between the two points.
- 3 Touch this key to clear points which have been input.
- 4 Touch these keys to move the position to input a point.
- 5 Touch this key to set a point.
- 6 Touch this key to correct a point which has been input.
- 7 Touch this key to complete the entry and move on to the sewing screen.

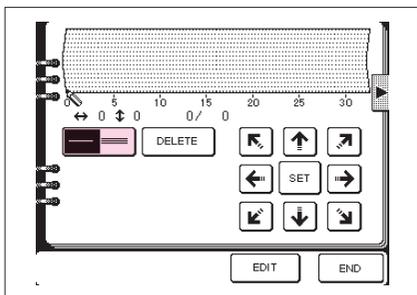


3. To input the stitch which you have drawn on the grid sheet. First, select whether to sew one stitch or three stitches with the "  " key between each point. To sew one stitch, touch the key so that it appears as "  "; to sew three stitches, touch the key so that it appears as "  ". (This can be set between each point.)
4. Use the arrow keys to set the coordinates on the input screen to the same coordinates as the points which were made on the grid sheet as described in step 2 on page 145.

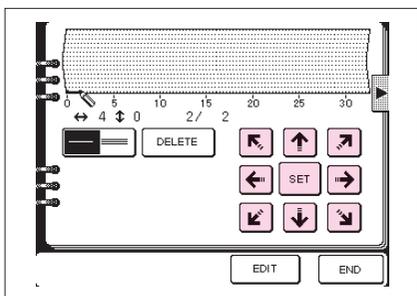

5. If you touch the arrow keys, the point indicated by the "  " will move in the direction of the arrow touched. If you touch "SET", a point will be entered. Repeat the above operation as many times as required to input the stitch you have drawn on the grid sheet onto the screen as a continuous line.
- * If you make a mistake in entering, touch the "DELETE" key to clear the last point entered.

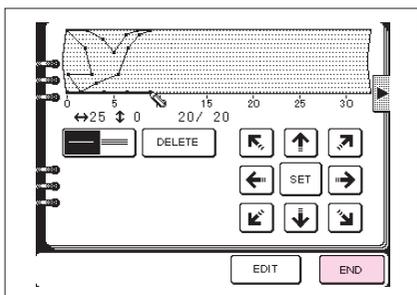

6. Once you have finished creating the stitch, touch the "END" key.

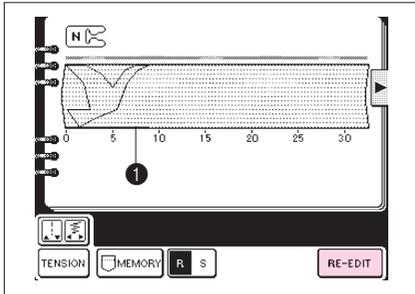


7. The sewing screen will then be displayed.


- * Touch the “RE-EDIT” key to return to the input screen and make changes to your own stitch.
- * If entering a one-point pattern and sewing the pattern continuously, make sure that you input the data for the linking stitch so that the patterns do not overlap.

① Linking stitch

- * If you have entered points which is too close together the fabric may not feed properly. Edit the points to make the space between each point larger.

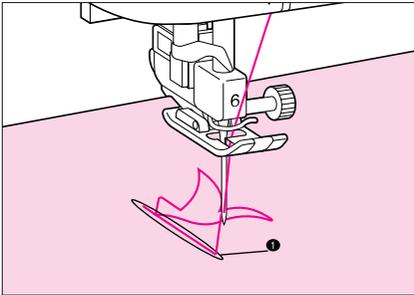


EDITING AN EXISTING “”

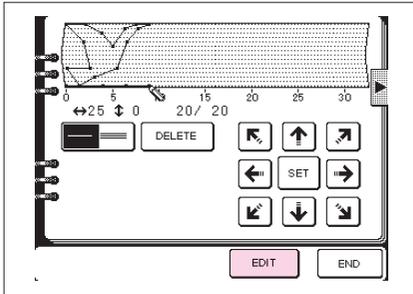


1. Touch the “EDIT” key.

The edit screen will be displayed. Move the “” to the location of the point you would like to correct and then make the correction.

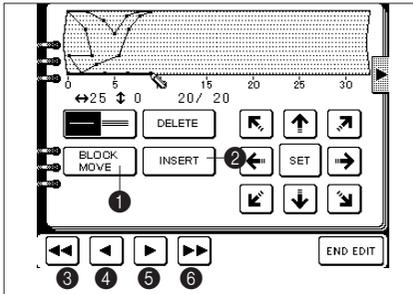


- 1 Touch this key to move part of or all of the pattern.
- 2 Touch this key if you would like to insert a point.
- 3 Touch this key to move the “” back to the starting position.
- 4 Touch this key to move the “” back one point.
- 5 Touch this key to move the “” forward one point.
- 6 Touch this key to move the “” to the last point.

Moving a point

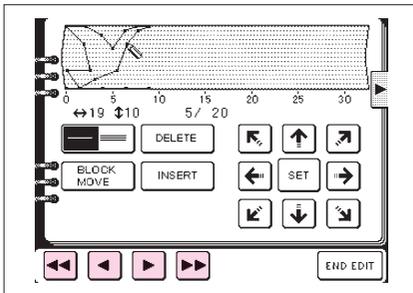


1. Touch the “”, “”, “” or “” key to move the “” to the point which you would like to move.

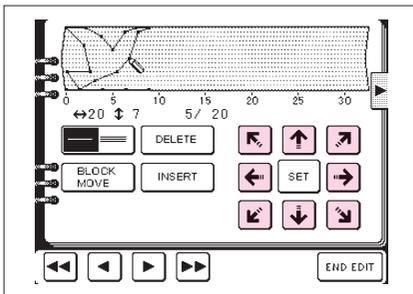


2. Touch the 8 directional arrow keys to move the point.

Moving part or all of a pattern

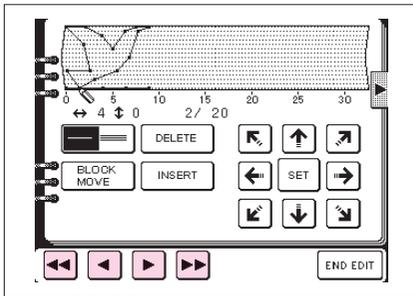


1. Touch the “”, “”, “” or “” key to move the “” to the start point which you like to move.

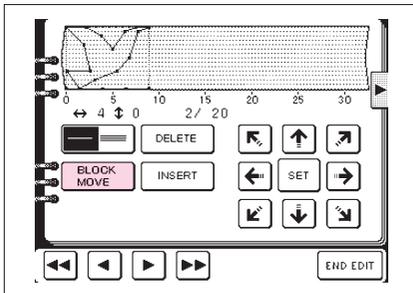


2. Touch the “BLOCK MOVE” key.

The points behind the “” will be enclosed by a “”.
(This indicates the area which are to be moved.)

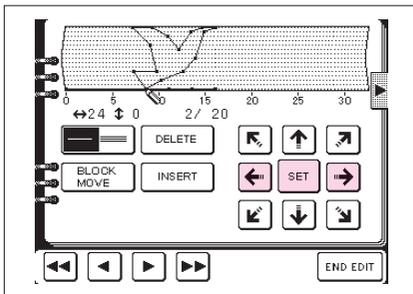


3. Touch the “” or “” key to move to the desired position, and then touch the “SET” key.

Inserting new points

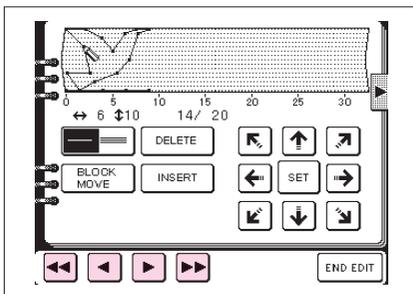


1. Touch the “”, “”, “” or “” key to move the “” to the point before the place where you would like to enter a new point.

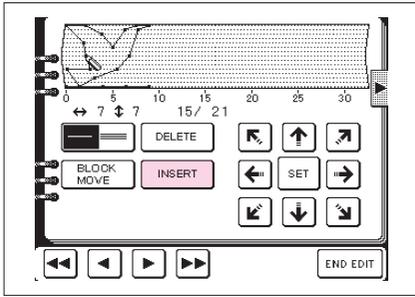

2. Touch the “INSERT” key.

A new point will be inserted and the “” will move to this newly- inserted point.

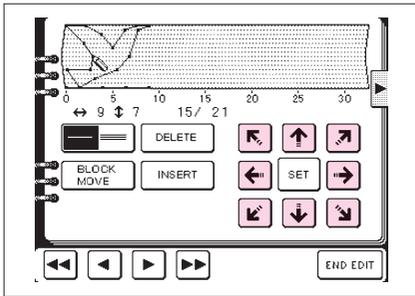


3. Use the 8 directional arrow keys to move the desired point.


4. Touch the “SET” key when you are finished making the changes at this coordinate point.

* Repeat step 1, 2, 3, 4 for additional editing.


Once you have finished editing

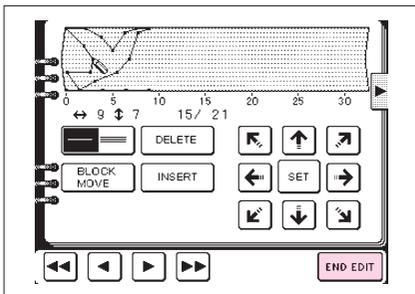

1. Touch the “END EDIT” key.
The display will return to the input screen. You can then continue to enter the pattern.

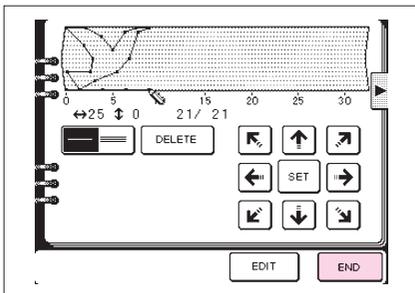


2. Touch the “END” key.

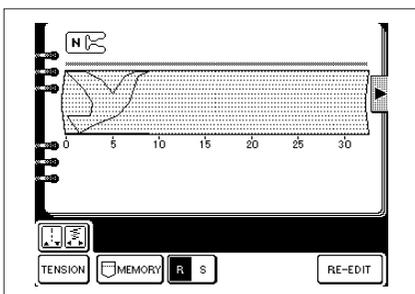


3. The sewing screen will then be displayed.

STORING THE “” WHICH YOU HAVE ENTERED

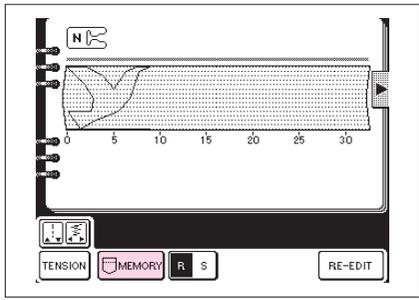


Up to five patterns can be stored, Touch the “MEMORY” key. (It will take approximately 10 seconds for the pattern to be stored.) Once the pattern has been stored, the display will return to the previous screen.

Refer to the next page for details on how to retrieve a pattern which has been stored.

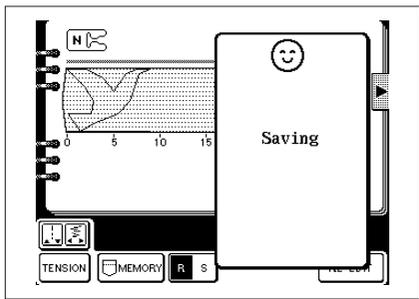


CAUTION:
Do not turn off the power while the word “Saving” is displayed. The data being stored may be deleted.

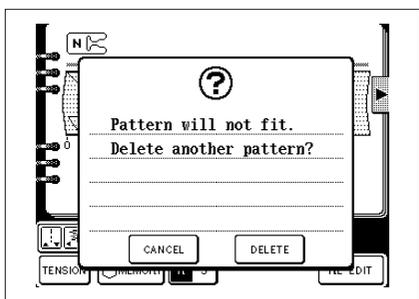

Refer to page 95 for details on what to do if the pattern cannot be stored because the memory is already full.

RETRIEVING A “”

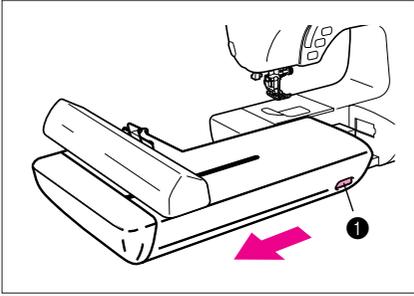


Preparation

If the embroidery unit is attached, remove it.


① Release button

* Turn off the power supply before removing the embroidery unit.

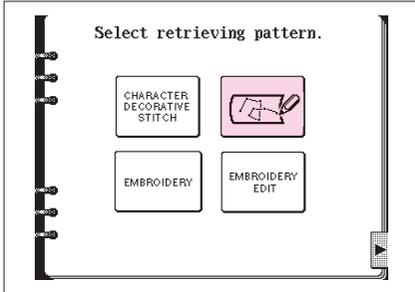

1. Touch the “MEMORY RECALL” key.

2. Touch the “” key.

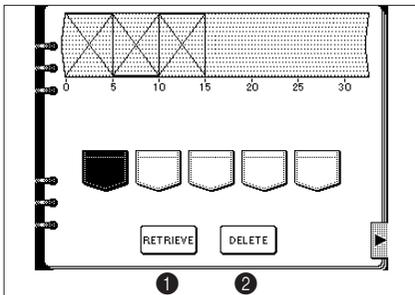


The “” indicates a pocket which has a pattern saved in it.

If you touch a “”, the pattern which is saved in that pocket will be displayed.

3. Touch a “” to select a saved pattern and have it displayed.


① Touch this key to delete a saved pattern.

② Touch this key to retrieve a saved pattern.

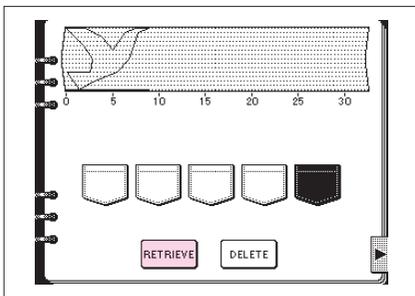

4. Touch the “RETRIEVE” key to make the selected stitch available for sewing.

* To delete a pattern touch the “DELETE” key.

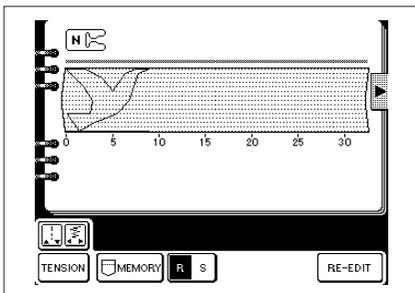

5. The sewing screen for that stitch will then be displayed.

MAINTENANCE

CLEANING

Cleaning the screen

CAUTION

Disconnect the power cord from the wall socket before cleaning the screen, otherwise injury and electric shocks may result.

If the front panel is dirty, wipe it gently with a soft, dry cloth. Do not use any organic solvents or detergents.

Cleaning the sewing machine surface

CAUTION

Disconnect the power cord from the wall socket before cleaning the sewing machine surface, otherwise injury and electric shocks may result.


If the surface of the sewing machine is dirty, lightly soak a cloth in neutral detergent, squeeze it out firmly and then wipe the surface. After cleaning it once in this way, wipe it again with a dry cloth.

Cleaning the shuttle

CAUTION


Disconnect the power cord from the wall socket before cleaning the shuttle, otherwise injury and electric shocks may result.

Sewing performance will suffer and bobbin thread detection will become unreliable if dust collects in the shuttle. It should be kept clean at all times.

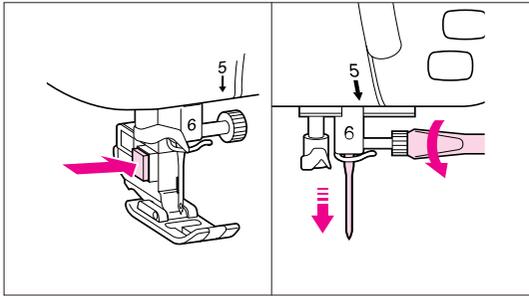


Always keep the machine clean.

1. Turn off the power and remove the presser foot holder and the needle.

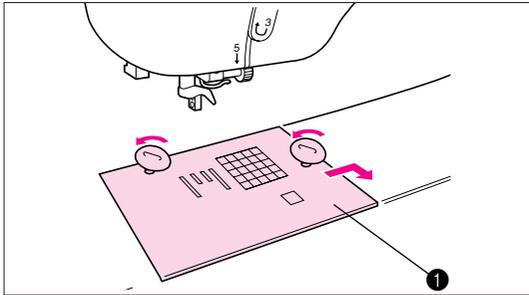


2. Loosen the screws.
3. Remove the needle plate.

① Needle plate

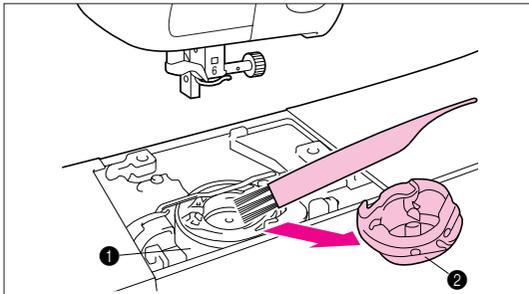

4. Take out the shuttle.
5. Remove accumulated lint and thread from the inner shuttle and race with a brush or a vacuum cleaner.

① Race
② Shuttle

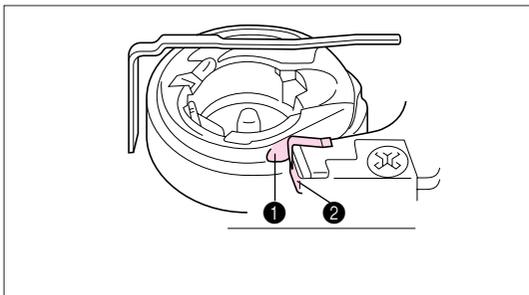


6. Set the shuttle by aligning the shuttle projection with spring of the stopper.

① Projection
② Spring

* Lint and dust accumulated in the race will sometimes cause poor stitching or malfunction of bobbin thread sensor.

CHANGING THE LIGHT BULB


When replacing the light bulb

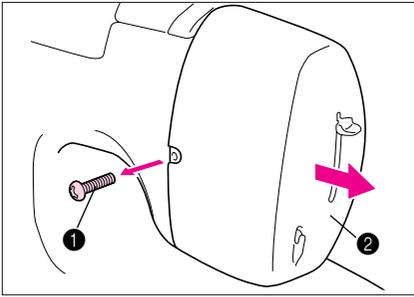

1. Turn the power off.
- * The power cord plug must be removed from the electric outlet prior to changing the bulb.

2. Loosen the screw on the reverse side of sewing head.
3. Remove the end cap.


- ① Screw
- ② End cap

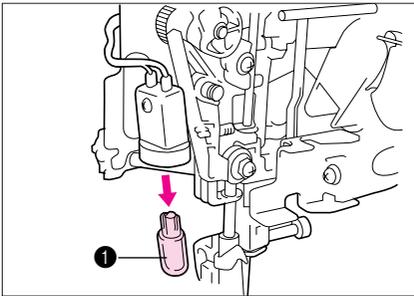

4. Replace the snap in the light bulb with a new one.

- ① Light bulb

- * Light bulbs are available through your dealer. (12V, 5W/
Parts code XA2037001)

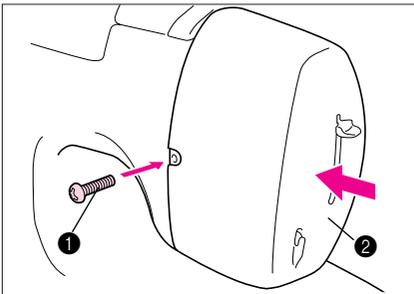

5. Set the end cap.

6. Tighten the screw.

- ① Screw
- ② End cap

RELATED CHART OF SEWING FABRICS, THREAD AND NEEDLE


Sewing fabrics		Thread		Size of needle
		Type	Size	
Medium	Broad cloth	Cotton	60-80	11-14
	Taffeta	Synthetic mercerized	60-80	
	Flannel, Gabardine	Silk	50-80	
Thin	Lawn	Cotton	60-80	9-11
	Georgette	Synthetic mercerized	60-80	
	Challis, Satin	Silk	50-80	
Thick	Denim	Cotton	30-50	14-16
	Corduroy	Synthetic mercerized	50	
	Tweed	Silk	50	
Stretch	Jersey	Thread for knit		Golden needle 11-14
	Tricot			
In case of top stitch thread		Synthetic mercerized	30	14-16
		Silk	30	

- * For sewing on the popular stretch variety of fabrics, embroidery and decorative stitch sewing, “Golden needle” should be used.
- * Today there are many different types of needles to suit a variety of sewing needs. Be sure to select the correct needle for a specific sewing project. For example, there are needles for denim material or needles for sewing with metallic threads.

ERROR MESSAGES

If the machine is not properly set and the “START/STOP” button is pressed, or a correction of your operating procedure is required, the machine will not start and it will instruct you with an alarm and warning message on LCD.


Warning messages

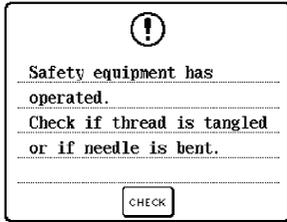


This message is displayed motor is locked.



This message is displayed when the machine finds that the upper thread is cut.

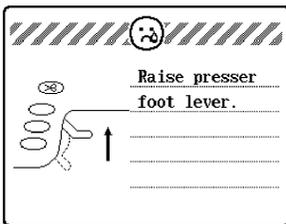

This message is displayed when the embroidering unit is trying to initialize while the embroidery foot is lowered.

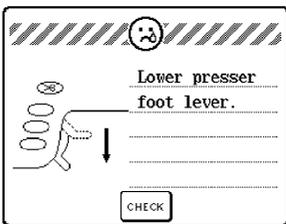


This message is displayed when the “START/STOP” or “AUTOMATIC THREAD CUTTER” button is pressed while the presser foot or embroidery foot is raised.



This message is displayed if the “CARD” key is touched while there is no memory card inserted into the slot.




This message is displayed when trying to retrieve a pattern from a memory card and that memory card is not inserted.

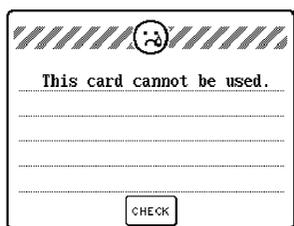


This message is displayed when the "CARD" key is touched while a memory card that cannot be read by this machine is inserted.




This message is displayed when you tried to retrieve a pattern from one memory card while a different memory card was inserted into the slot.

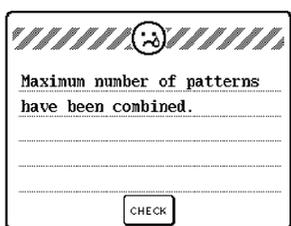


This message is displayed when you tried to combine more than 71 patterns.

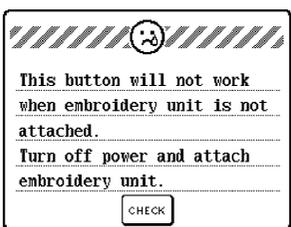


This message is displayed when the "EMBROIDERY" key or "BASIC SEWING" key is pressed when in utility stitch mode.

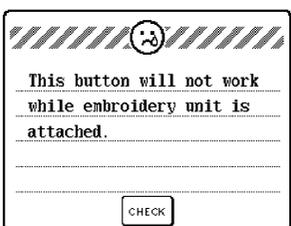

When "REVERSE STITCH" button is pressed in embroidery mode.

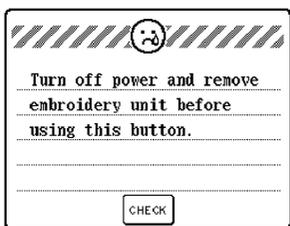


This message is displayed if the “UTILITY STITCH” or “CHARACTER/DECORATIVE STITCH” keys are touched while in embroidering mode.

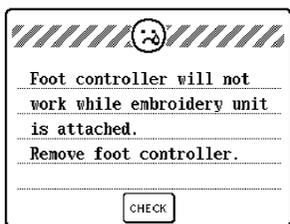


This message is displayed when the foot controller is used while the embroidery unit is connected.




This message is displayed when the “NEEDLE POSITION” or “AUTOMATIC THREAD CUTTER” button is pressed while the bobbin winding shaft is pushed to the right.

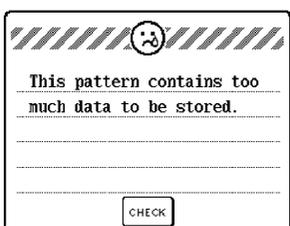


This message is displayed if the sizes of the patterns you are editing exceed the maximum size limit.

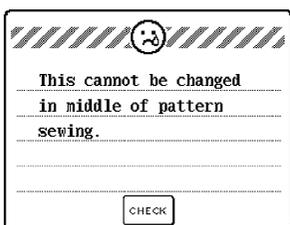

This message is displayed when the “MULTI COLOR” or “LAYOUT” key is touched during embroidering or if the machine is stopped between color changes.

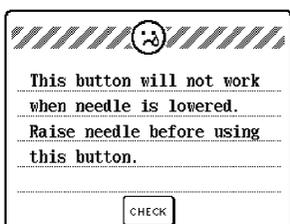


This message is displayed when a key on the screen is touched while the needle is down.

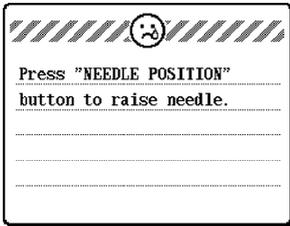


This message is displayed when the embroidery unit is attached while the needle is lowered.




This message is displayed if the “START/STOP” button is pressed while the foot controller is still connected.

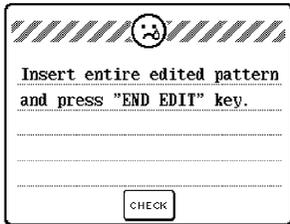


This message is displayed if the “START/STOP” button is touched when in editing mode.

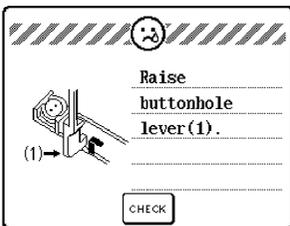


This message is displayed if a non-buttonhole pattern is selected and the “START/STOP” button or “REVERSE STITCH” button is pressed while the buttonhole lever is lowered.

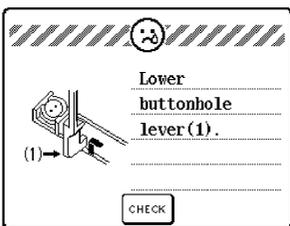


This message is displayed if a buttonhole pattern is selected and the “START/STOP” button or “REVERSE STITCH” button is pressed while the buttonhole lever is raised.

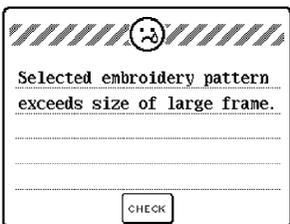

This message is displayed when the embroidery pattern is larger than the embroidery frame.

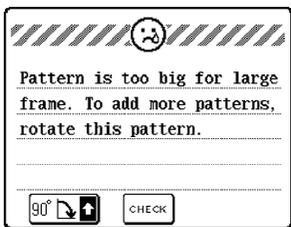


This message is displayed in embroidery mode when the combination of characters is too big to fit within the embroidery frame. You can continue to add characters if you rotate the pattern 90°.

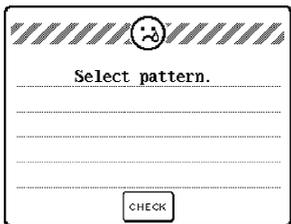


This message is displayed when any of the following are pressed, while no pattern has been selected.

- "START/STOP" button
- "REVERSE STITCH" button
- " " key
- "TENSION" key
- " " key
- "SET" key

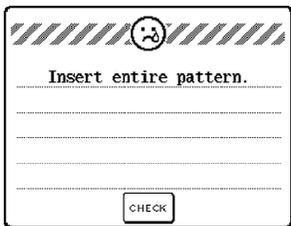

This message is displayed if the frame pattern for embroidering has not been completely input, and when the "START/STOP" button is pressed when in editing mode.


Instruction messages

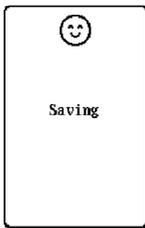


This message is displayed while a pattern is being saved into memory.



This message is displayed when the machine detects that the bobbin thread is running out.

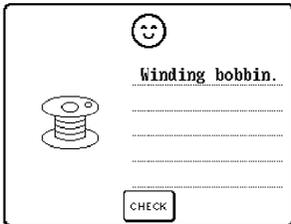


This message is displayed during bobbin winding.

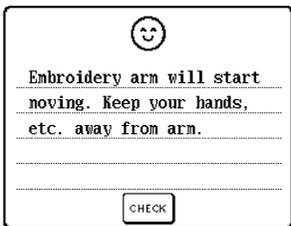


This message is displayed while the embroidery unit is initializing.



This message is displayed when a pattern which is stored in memory is deleted.

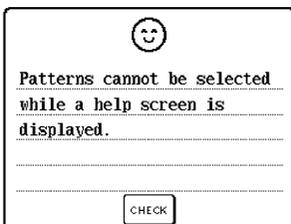

This message is displayed if a pattern is selected while a help topic is being displayed.

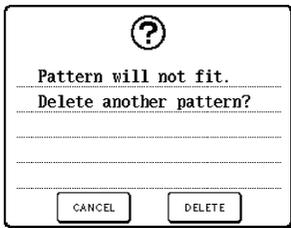

This message is displayed when the memory is full and no more patterns can be stored.



This message is displayed when a pattern is being retrieved in embroidery mode.

Alarms


- Proper operation: One beep
Incorrect operation: Two or four beeps

TROUBLESHOOTING


USING THE “OPERATION GUIDE” KEY

This sewing machine is equipped with an easy to use trouble check function which provides assistance when there is a problem with sewing.


Touch the applicable heading and check the cause of the problem.

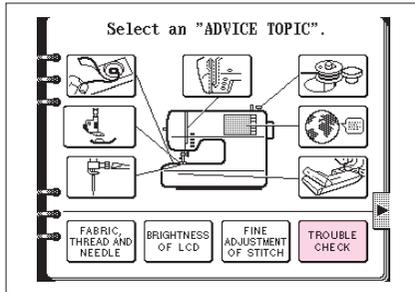


1. Touch the “OPERATION GUIDE” key and then touch the “TROUBLE CHECK” key.

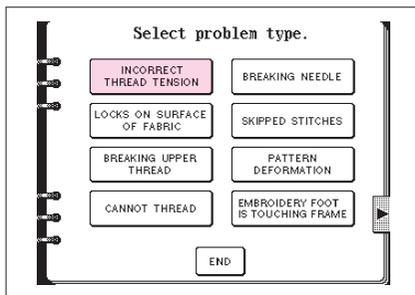

2. Select the heading which corresponds to the problem you are having.

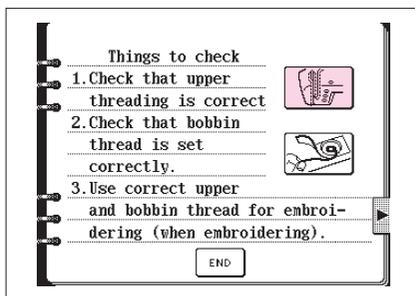

3. Check the information displayed. If you are not sure of the correct method of operation, touch the “ ” key beside the check heading. The method of operation will then be displayed in steps.

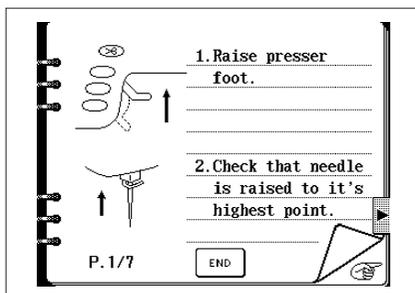

Example:

If you touch the “ ” key, the upper threading method is explained.

- * Touch the “END” key to return to the original screen.

Trouble with threads and stitches

Before calling for service, check the following items. If the problem still persists, contact the place of purchase or your nearest Brother dealer.

Symptom	Probable cause	Remedy
1. Upper thread breaks	1. Upper threading is not correct.	1. Re-thread upper thread.
	2. Upper thread is entangled.	2. Remove thread ends in the race or shuttle.
	3. Spool of thread is not correctly set.	3. Set spool of thread correctly.
	4. Correct needle is not used.	4. Change to proper needle.
	5. Shuttle is damaged.	5. Contact service center.
2. Bobbin thread breaks	1. Upper thread is entangled.	1. Remove thread ends in the race or inner shuttle.
	2. Bobbin is not threaded properly in the shuttle.	2. Set bobbin properly and pull out the bobbin thread.
3. Skipped stitches	1. Needle is not correctly inserted.	1. Insert needle properly.
	2. Correct needle is not used.	2. Change to proper needle.
	3. The combination of fabric, thread and needle is not correct.	3. Check the "RELATED CHART OF SEWING FABRICS, THREAD AND NEEDLE" on page 157.
	4. Dust is clinging under the needle plate.	4. Remove dust by cleaning with a brush.
	5. Upper threading is not correct.	5. Re-thread upper thread.
4. Fabric puckers	1. Threading is not correct	1. Re-thread upper and bobbin thread correctly.
	2. Correct needle is not used.	2. Change to proper needle.
	3. Combination of fabric, thread and needle is not correct.	3. Check "RELATED CHART OF SEWING FABRICS, THREAD AND NEEDLE" on page 157.
	4. Check if thread tension is set at "AUTO" position,	4. Refer to "THREAD TENSION" on page 27.
5. Inability to thread needle	1. Needle position is not collect.	1. Set needle at proper position using "NEEDLE POSITION" button.
	2. Hook of needle threader does not fit into the eye of the needle.	2. Set needle at proper position using "NEEDLE POSITION" button.
6. Inability for thread tension control	1. Upper threading is not correct.	1. Re-thread upper thread.
	2. Set of bobbin thread is not correct.	2. Set bobbin properly and pull out the bobbin thread.
	3. Combination of fabric, thread and needle is not correct.	3. Check "RELATED CHART OF SEWING FABRICS, THREAD AND NEEDLE" on page 157.
	4. Check if the thread tension is set at "AUTO" position.	4. Refer to "THREAD TENSION" on page 27.

Mechanical trouble

Symptom	Probable cause	Remedy
1. Fabric is not fed properly	1. Stitch length is set at no feeding.	1. Set stitch length properly.
	2. The combination of selected stitch and presser foot is not correct.	2. Change presser foot to correct one.
	3. Correct needle is not being used.	3. Change to proper needle.
	4. Thread is entangled.	4. Remove thread-ends in the race or inner shuttle.
2. Needle breaks	1. Needle is not correctly inserted.	1. Set needle properly.
	2. Correct needle is not used.	2. Change to proper needle.
	3. The combination of fabric, thread and needle is not correct.	3. Check the "RELATED CHART OF SEWING FABRICS, THREAD AND NEEDLE" on page 157.
	4. The fabric is pulled too much.	4. Sew without pulling but just guide the fabric.
3. Machine is noisy, slow speed, thread trimming is not good	1. Dust is clinging under the needle plate.	1. Remove dust by cleaning with a brush.
4. Machine does not start	1. "START/STOP" button is not pressed.	1. Press "START/STOP" button.
	2. Main power switch is in the off position.	2. Turn the power on.
	3. Presser foot is not lowered.	3. Lower the presser foot.
	4. Check error messages.	4. Refer to "ERROR MESSAGES" on page 158.
5. Embroidery unit does not work	1. Power switch is in the off position.	1. Turn the power on.
	2. Embroidery unit is not correctly connected to the machine.	2. Connect embroidery unit properly to the machine.
	3. Memory card is not inserted.	3. Turn off the power then insert the memory card.
	4. Check error messages.	4. Refer to "ERROR MESSAGES" on page 158.
	5. The embroidery unit was not correctly initialized.	5. Refer to page 102.

SEWING CHART

SELECT KEY	NAME OF PATTERN	PATTERN	TYPE OF PRESSER FOOT	USE	REINFORCEMENT STITCH KEY	STITCH WIDTH BY STITCH ADJUSTING KEY	STITCH LENGTH BY STITCH ADJUSTING KEY	AUTOMATIC THREAD CUTTING	AUTOMATIC REINFORCEMENT STITCHING	SELECT KEY	NAME OF PATTERN	PATTERN	TYPE OF PRESSER FOOT	USE	REINFORCEMENT STITCH KEY	STITCH WIDTH BY STITCH ADJUSTING KEY	STITCH LENGTH BY STITCH ADJUSTING KEY	AUTOMATIC THREAD CUTTING	AUTOMATIC REINFORCEMENT STITCHING																								
UTILITY STITCH	STRAIGHT			General sewing, gather, Pintuck, etc.	R	★	★	C	T	UTILITY STITCH	DARNING STITCH			Darning of medium fabric		★	★	C	T																								
					R	-	★	C	T		DARNING STITCH			Darning of thick fabric		★	★	C	T																								
	STRETCH STITCH			General sewing for reinforcement	△	★	★	C	T		TAPE ATTACHING			Attaching tape to thin and medium stretch fabric	△	★	★	C	T																								
					△	★	★	C	T		EYELET			For making eyelet on belt, etc.		L	S	C	T																								
	ZIGZAG			Overcasting, Patchwork	R	★	★	C	T		BUTTON SEWING			Attaching buttons	△	★	-	C	T																								
	ELASTIC ZIGZAG STITCH			Overcasting (medium, thick and stretch fabrics) Tape attaching, darning	△	★	★	C	T		BASTING			Basting	△	★	★	C	T																								
					△	★	★	C	T		APPLIQUE			Appliques	△	★	★	C	T																								
	OVERCASTING STITCH			Reinforcing of thin and medium fabric	△	★	★	C	T			APPLIQUE			Appliques	△	★	★	C	T																							
					△	★	★	C	T		SCALLOP				Decorating collar of blouse, edge of handkerchief	△	★	★	C	T																							
					△	★	★	C	T		SMOCKING			Smocking, decorative stitching	△	★	★	C	T																								
					△	★	★	C	T						PATCHWORK STITCH			Patchwork stitches, decorative stitching	△	★	★	C	T																				
					△	★	★	C	T										PATCHWORK STITCH			Patchwork stitches, decorative stitching	△	★	★	C	T																
					△	★	★	C	T														PATCHWORK STITCH			Patchwork stitches, decorative stitching	△	★	★	C	T												
					△	★	★	C	T						FAGOTING			Fagoting, decorative stitching	△	★	★	C					T																
	△	★	★	C	T	FAGOTING			Fagoting, decorative stitching		△	★★	★	C					T																								
	BLIND HEM STITCH			Reinforcement of skirts	△						★	★	C	T	UTILITY STITCH	FAGOTING			Fagoting, decorative stitching	△	★	★	C	T																			
					△	★	★	C	T		BLIND HEM STITCH			Reinforcement of skirts with stretch fabric						△	★	★	C	T																			
	BUTTONHOLE STITCH			Buttonholes for blouses and shirts		★	★	C	T											BUTTONHOLE STITCH				Buttonholes for blouses and shirts		★	★	C	T														
						★	★	C	T		BUTTONHOLE STITCH			Buttonholes for pajamas and shirts												★	★	C	T														
						★	★	C	T																BUTTONHOLE STITCH			Buttonholes for stretch fabric		★	★	C	T										
					★	★	C	T	BUTTONHOLE STITCH																					Buttonholes for stretch		★	★	C	T								
					★	★	C	T																							BUTTONHOLE STITCH			Buttonholes for suits and overalls		★	★	C	T				
					★	★	C	T																											BUTTONHOLE STITCH			Buttonholes for jeans and trousers		★	★	C	T
					★	★	C	T																															BUTTONHOLE STITCH			Buttonholes for thick coats	
BAR TACK			Reinforcement at opening of pocket, etc.		★	★	C	T												BAR TACK				Reinforcement at opening of pocket, etc.																			

SELECT KEY	NAME OF PATTERN	PATTERN	TYPE OF PRESSER FOOT	USE	REINFORCEMENT STITCH KEY	STITCH WIDTH BY STITCH ADJUSTING KEY	STITCH LENGTH BY STITCH ADJUSTING KEY	AUTOMATIC THREAD CUTTING	AUTOMATIC REINFORCEMENT STITCHING
UTILITY STITCH	DECORATIVE STITCH			Decorative stitching for cuffs made from stretch fabric	△	★	★	C	T
				Decorative stitching for cuffs made from stretch fabric	△	★	★	C	T
				Decorative stitching	△	★	★	C	T
				Decorative stitching of thin to medium stretch fabric	△	★	★	C	T
				Decorative stitching	△	★	★	C	T
				Decorative stitching	△	★	★	C	T
	LATERAL SEWING			For attaching applique on tubular part	△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
					△	-	-	C	T
	HEIRLOOM			Decorative hems	△	★	★	C	T
				Decorative hems	△	★	★	C	T
				Decorative hems	△	★	★	C	T
				Decorative hems	△	★	★	C	T
				Decorative hems	△	★	★	C	T

SELECT KEY	NAME OF PATTERN	TYPE OF PRESSER FOOT	USE	STITCH WIDTH BY STITCH ADJUSTING KEY	STITCH LENGTH BY STITCH ADJUSTING KEY	AUTOMATIC THREAD CUTTING	AUTOMATIC REINFORCEMENT STITCHING
CHARACTERS	ALPHABET (BLOCK)		Character sewing	L, S		C	T
	ALPHABET			L, S		C	T
	ALPHABET (Italic)			L, S		C	T
	ONE-POINT MARK		Decorative stitch	L, M, S		C	T
	DECORATIVE STITCH			L, S		-	-
	SATIN STITCH			★	★	-	-
	CROSS STITCH			-	-	-	-
EMBROIDERY	ALPHABET		Character sewing	-		C	T
	FRAME PATTERN		Frame pattern	-		C	T
	ONE-POINT PATTERN		Patterns	-		C	T
	FRAME PATTERN			-		C	T
	FLORAL ALPHABET			-		C	T
	MEMORY CARD (SOLD SEPARATELY)		Characters	-		C	T

R : Reverse sewing while the “REVERSE STITCH” button is pressed.

△ : When the “REVERSE STITCH” button is pressed, the machine will sew three reinforcement stitches and stop.

★ : Adjustable

- : Non-adjustable

L, M, S or L, S:

Pattern size can be changed

L (Large)

M (Medium)

S (Small)

T : When the automatic reinforcement stitch is preset, reinforcement stitches will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch automatically at the finish of sewing.


T : Reinforcement stitches will be sewn automatically at the start of sewing. Press the “REVERSE STITCH” button to sew a reinforcement stitch automatically at the finish of sewing.

C : Programmed automatic thread cutting is available.

C : Automatic thread cutting is available.

PATTERNS (PROGRAMMED IN MACHINE)

Utility stitches

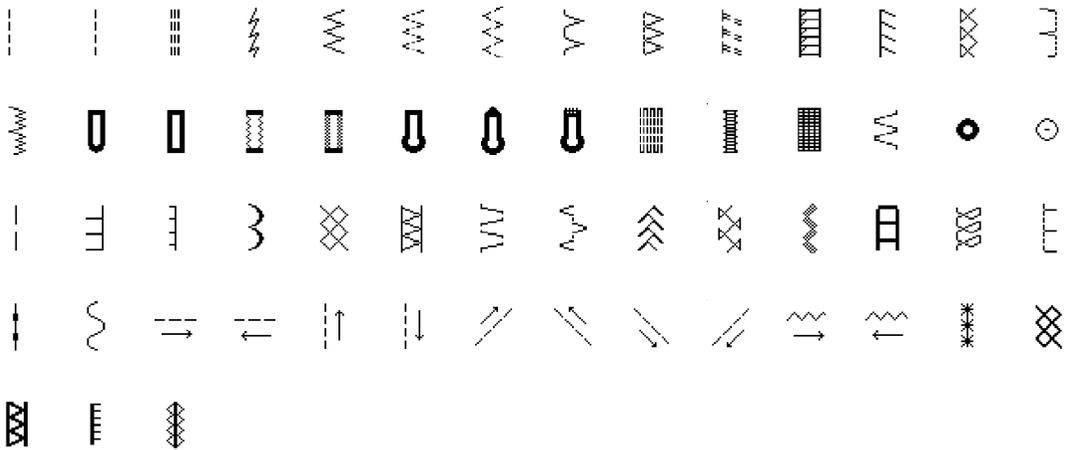

Character sewing

Alphabet (Block style)

Size "L" (Large) : 11 mm (7/16"), "S" (Small) : 7 mm (1/4")

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
 a b c d e f g h i j k l m n o p q r s t u v w x y z
 Ä Å Æ Ñ Ö Ø Ç Ü ä å æ ë è é ê ñ ö ø ì ç ü ù ß
 0 1 2 3 4 5 6 7 8 9 & ? ! □ □ □ () ' ,

Alphabet (Italic style)

Size "L" (Large) : 11 mm (7/16"), "S" (Small) : 7 mm (3/8")


*A B C D E F G H I J K L M N O P Q R S T
 U V W X Y Z
 Ä Å Æ Ñ Ö Ø Ç Ü ä å æ ë è é ê ñ ö ø ì ç ü ù ß
 a b c d e f g h i j k l m n o p q r s t u v w x y z
 0 1 2 3 4 5 6 7 8 9 & ? ! □ □ □ () ' ,*

Alphabet (Cursive hand writing style)

Size "L" (Large) : 27 mm (1"), "S" (Small) : 15 mm (3/8")


A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
a b c d e f g h i j k l m n o p q r s t u v w x y z
Ä Å Æ Ñ Ò ä å æ è é ê ñ ö ø ÿ ç ü ß
0 1 2 3 4 5 6 7 8 9 & ? ! □ □ ≡ () ' ,

Satin stitches

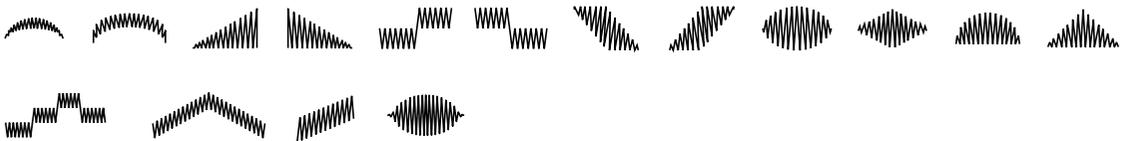

Cross stitches

Size cannot be changed.

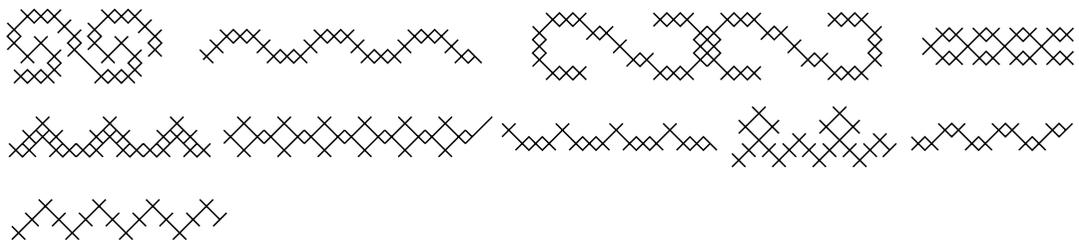

Character embroidering chart

Sizes: [L] 30 mm (1-3/16"), [M] 15 mm (9/16"), [S] 7.5 mm (1/4").


ABCDEFGHIJKLMNOPQRS
 TUVWXYZ abcdefghijklm
 nopqrstuvwxyz
 Ä Å Æ Ñ Ö Ø Ç Ü ß à á â ã ä å æ è é ê ë ñ ò ó ô õ ö ø ù
 0123456789 & ? ! . - _ () ' ,

ABCDEFGHIJKLMNOPQRS
 TUVWXYZ abcdefghijklm
 nopqrstuvwxyz
 Ä Å Æ Ñ Ö Ø Ç Ü ß à á â ã ä å æ è é ê ë ñ ò ó ô õ ö ø ù
 0123456789 & ? ! . - _ () ' ,

0123456789
 ABCDEFGHIJKLMNOP
 QRS
 TUVWXYZ

Frame pattern embroidering chart

Sizes can be enlarged or reduced.

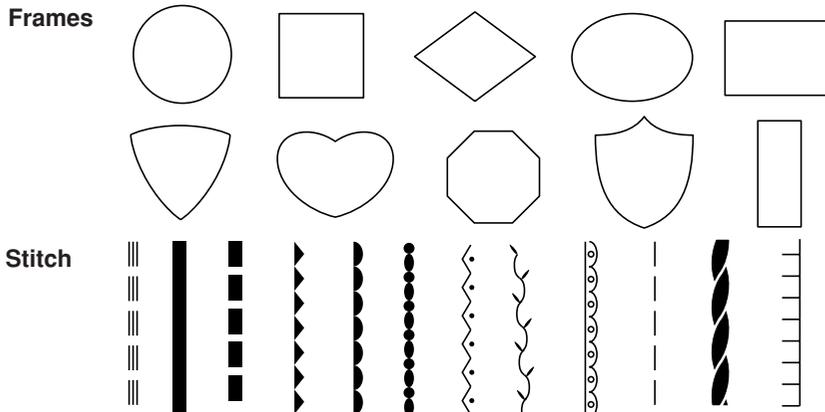

PATTERNS (MEMORY CARD)

One point mark embroidery pattern

<Embroidering times: 2 - 31 min. (It does not include the time needed to change colors.)>

									Order of sewing Embroidery thread color
1...001 2...800 3...900	1...704 2...800 3...900	1...205 2...339 3...900	1...339 2...205 3...900	1...339 2...800 3...900	1...205 2...001 3...900	1...001 2...800 3...900	1...205 2...800 3...900	1...307 2...019 3...900	
									
1...307 2...800 3...900	1...001 2...800 3...900	1...001 2...800 3...900	1...001 2...800 3...019	1...001 2...800 3...900	1...800 2...507 3...900	1...800 2...900	1...205 2...800 3...900	1...800 2...900	1...800 2...001 3...900
									
1...800 2...005 3...900	1...001 2...800 3...019	1...800 2...205 3...900	1...019 2...205 3...900	1...001 2...205 3...900	1...800 2...205 3...900	1...001 2...019 3...900	1...205 2...001 3...339	1...005 2...800 3...900	1...001 2...800 3...900
									
1...019 2...800 3...900	1...323 2...085 3...001 4...058	1...086 2...058 3...707	1...070 2...085 3...086 4...323	1...513 2...001 3...208 4...058 5...900	1...001 2...800 3...515 4...058 5...900	1...800 2...513 3...900	1...001 2...010 3...323 4...513 5...058	1...085 2...323 3...058	1...086 2...205 3...534 4...019
									
1...513 2...030 3...058	1...900	1...900 2...205 3...800 4...323 5...900	1...339 2...058 3...843 4...900	1...405 2...900 3...005 4...704	1...405 2...507 3...800 4...205	1...843 2...900 3...019	1...205 2...019 3...900	1...001 2...900	1...079 2...800 3...208 4...900
									
1...405 2...001 3...800 4...900 5...001 6...307 7...405 8...900 9...307 10...800 11...900	1...513 2...030 3...205 4...339 5...900	1...513 2...507	1...005 2...707	1...001 2...900	1...900	1...001 2...515 3...507		1...086	1...614
									
	1...513 2...328 3...515 4...085 5...086 6...079 7...515						1...515 2...513 3...001 4...208 5...205 6...513		

Patterns which are stored in the machine or memory cards are for home use only. These patterns are not to be used for any activity other than home use.

Floral alphabet



1 017
 2 513
 3 810
 4 070
 5 612
 6 205

1 017
 2 513
 3 810
 4 205
 5 070
 6 612

1 017
 2 513
 3 810
 4 205
 5 612
 6 070

1 017
 2 513
 3 205
 4 810
 5 612
 6 070

1 017
 2 513
 3 810
 4 070
 5 612
 6 205



1 017
 2 513
 3 070
 4 810
 5 205
 6 612

1 017
 2 513
 3 205
 4 612
 5 070
 6 810

1 017
 2 513
 3 612
 4 810
 5 205
 6 070

1 017
 2 513
 3 612
 4 810
 5 070
 6 205

1 017
 2 513
 3 612
 4 810
 5 070
 6 205



1 017
 2 513
 3 810
 4 612
 5 205
 6 070

1 017
 2 513
 3 810
 4 205
 5 612
 6 070

1 017
 2 513
 3 205
 4 612
 5 810
 6 070

1 017
 2 513
 3 070
 4 810
 5 612
 6 205

1 017
 2 513
 3 612
 4 810
 5 070
 6 205



1 017
 2 513
 3 810
 4 070
 5 205
 6 612

1 017
 2 513
 3 810
 4 070
 5 205
 6 070

1 017
 2 513
 3 612
 4 070
 5 810
 6 205

1 017
 2 513
 3 810
 4 612
 5 205
 6 070



1 017
 2 513
 3 810
 4 205
 5 612
 6 070

1 017
 2 513
 3 810
 4 612
 5 070
 6 205

1 017
 2 513
 3 810
 4 070
 5 612
 6 205

1 017
 2 513
 3 612
 4 810
 5 070
 6 205



1 017
 2 513
 3 070
 4 810
 5 205
 6 612

1 017
 2 513
 3 070
 4 810
 5 612
 6 205

1 017
 2 513
 3 810
 4 205
 5 612
 6 070